

18+/JEEP JL

ROCK FIGHTER FRONT BUMPER



PREPARATION

We recommend reading through the installation instructions in whole before performing the work.

- · Disconnect the negative battery terminal. Park the vehicle on level ground and set the emergency brake.
- When button head bolts are being used, install the supplied washer on the nut side. Then, hold the bolt stationary and only turn the nut to tighten. Do not turn the bolt to tighten hardware assembly, unless otherwise noted.
- Anti-seize is recommended for all fasteners.



This installation requires 2 people for best results



- 4- Hex Head Bolts (3/8-16 x 1")
- 4- Flat Washers (3/8")
- 4- U-Nuts (3/8"-16)
- 2- Button Head Bolts (1/2"-13 x 1 1/2")
- 2- Flat Washers (1/2")
- 2- Nylon Lock Nuts (1/2"-13)
- 1- Universal Light Mount Kit



- 2 hours for OEM Removal/Bumper Install
-1 Additional Hour to Wire Lights

Labor Rates are based on a vehicle with no pre-existing damage. Wiring labor is based on a standard wiring procedure with light switches installed in an easily accessible location. Custom light triggering or switch mounting location will result in a greater labor charge.



(Sockets) 9/16, 3/4, 13mm, 16mm, 18mm (Box end wrenches) 9/16, 3/4, 13mm, 16mm, 18mm (Allen wrenches) 7/32, 5/16

Fastener remover or flathead screwdriver

Zip ties

Ratchet

1/2" Drill Bit

Drill

Black Paint

Jig Saw



STEALTH FIGHTER FRONT BUMPER

REMOVAL

18+/JEEP JL



Remove the two plastic clips on the top of the bumper as shown below.





ROCK FIGHTER FRONT BUMPER


REMOVAL

18+/JEEP JL



If your Jeep has 6 additional clips on the front lip of the plastic bumper cover, remove those clips now. Once those clips are removed, you may pull the plastic cover off the vehicle. Then unplug the front bumper harness located along the passenger side frame rail as shown below.



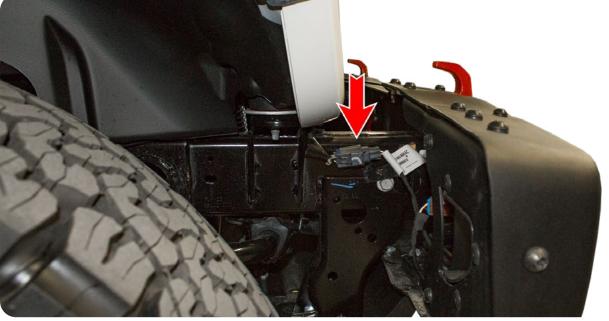




ROCK FIGHTER FRONT BUMPER


REMOVAL

18+/JEEP JL



Use a (13mm Socket) to remove both lower skid plate bolts. Then using an (18mm Socket), remove the bumper mounting bolts (4 per side). Then, remove the bumper from the vehicle.

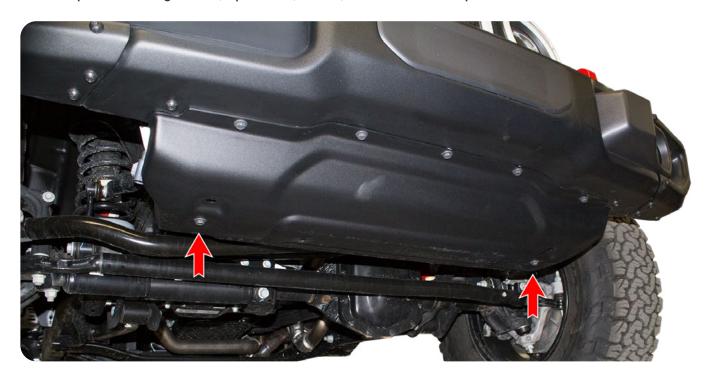

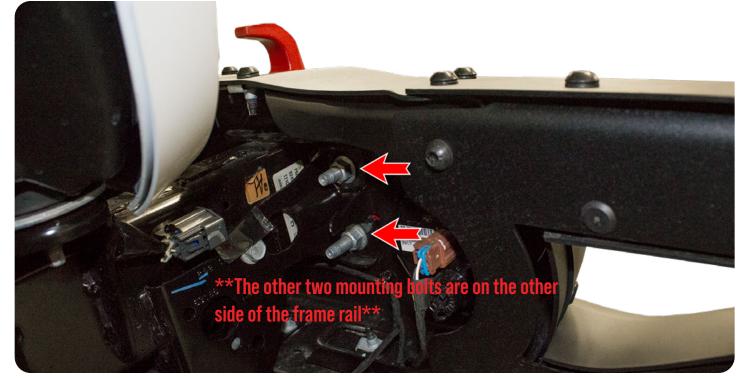

Page 4 | Addictive Desert Designs



ROCK FIGHTER FRONT BUMPER

TOOK TOTTELL THOW DOWN

REMOVAL

18+/JEEP JL ☐ STEP 4

Using a (16mm Socket), remove the bolts referenced bellow in the first picture. Then, remove the skid mounting plate. If your Jeep does not have this plate, skip this step. **The bottom two pictures are optional** Cut the frame stilts just below the sway bar mounts. Follow the line shown bellow. Make sure to paint over any bare metal when you are finished cutting.









ROCK FIGHTER FRONT BUMPER

INSTALLATION

18+/JEEP JL



If you have any lights or a winch to install on your bumper, now is a good time to do so. Please follow the light/winch manufacturer's guide for mounting/wiring information. Use the supplied Light Mount Kit that came with the bumper to mount your lights. Installation instructions for our light mount kit can be found here: https://www.addictivedesertdesigns.com/files/install/ADD-Universal-Light-Mount-Kit-Installation-Instructions.pdf





ROCK FIGHTER FRONT BUMPER

INSTALLATION

18+/JEEP JL



Set the supplied U-Nuts (x4) in place on your new bumper. Then drill the lower/outer bumper mounting holes to 1/2". Make sure to paint over any bare metal once you are finished.







ROCK FIGHTER FRONT BUMPER

INSTALLATION

18+/JEEP JL



Install the support brackets as shown below with the x8 provided 3/8" button head bolts, washers, and nylon lock nuts on top and bottom using a (7/32 allen) and a (9/16 wrench).





ROCK FIGHTER FRONT BUMPER

INSTALLATION

18+/JEEP JL



Set the bumper into place on the vehicle. Install the supplied 3/8" bolts, and washers in the 4 mounting holes located on the inside of the frame horns. Then, install the supplied 1/2" button head bolts, washers, and nylon lock nuts into the outer/lower mounting holes.





ROCK FIGHTER FRONT BUMPER 18+/JEEP JL

FINAL



Stand back and enjoy your new ADD Rock Fighter™ Front Bumper.

Check and re-tighten, if needed, all mounting bolts after 100 miles and periodically thereafter.



THIS PRODUCT IS PROTECTED BY ONE OR MORE U.S. PATENTS WWW.ADDICTIVEDESERTDESIGNS.COM/PATENTS

FOR ADDITIONAL SUPPORT OR TECHNICAL QUESTIONS, PLEASE CALL 480-671-0820 OR EMAIL INFO@ADDICTIVEDESERTDESIGNS.COM