


Polybird




ROCKER P-77


TOOLS

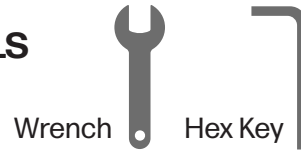

HARDWARE

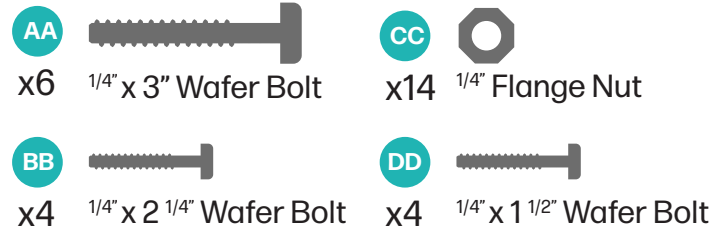


PARTS

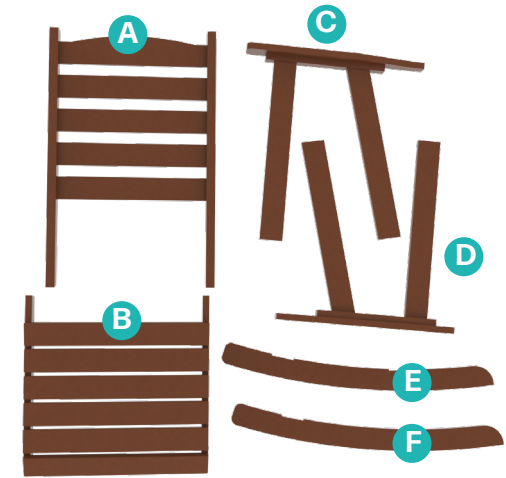


Note before starting: wait until the whole piece is assembled to tighten the bolts completely.

1

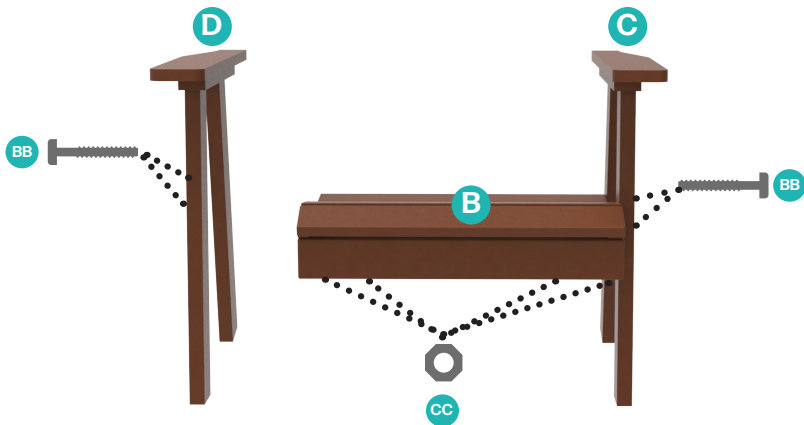


Attach arms C & D to seat B using two $\frac{1}{4}$ " x $2\frac{1}{4}$ " wafer bolts (BB) for each front leg and finishing all the bolt ends underneath the seat with eight $\frac{1}{4}$ " flange nuts (CC).

2

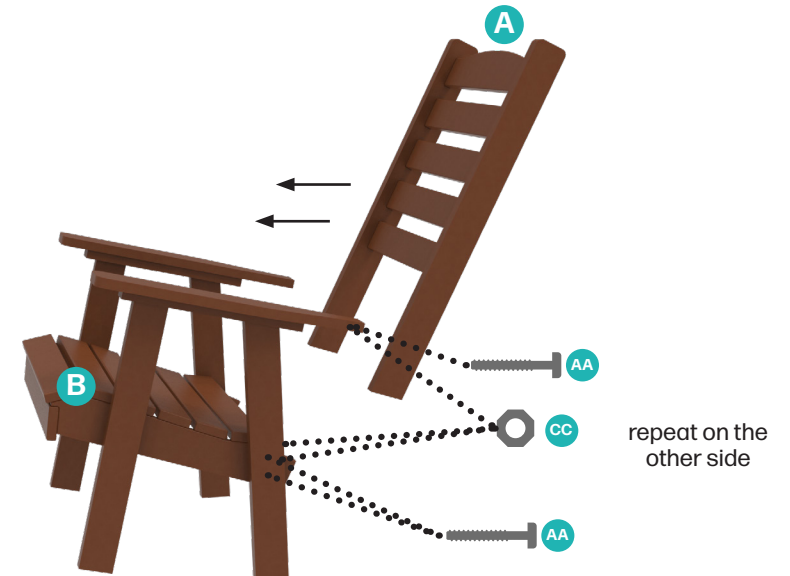

Attach seat back A to assembly from step 1. Working from the outside in, use one $\frac{1}{4}$ " x 3 " wafer bolt (AA) at each arm rest and two $\frac{1}{4}$ " x 3 " wafer bolts (AA) where A meets B on each side. Finish all bolts with a $\frac{1}{4}$ " flange nut (CC).
repeat on the other side

3

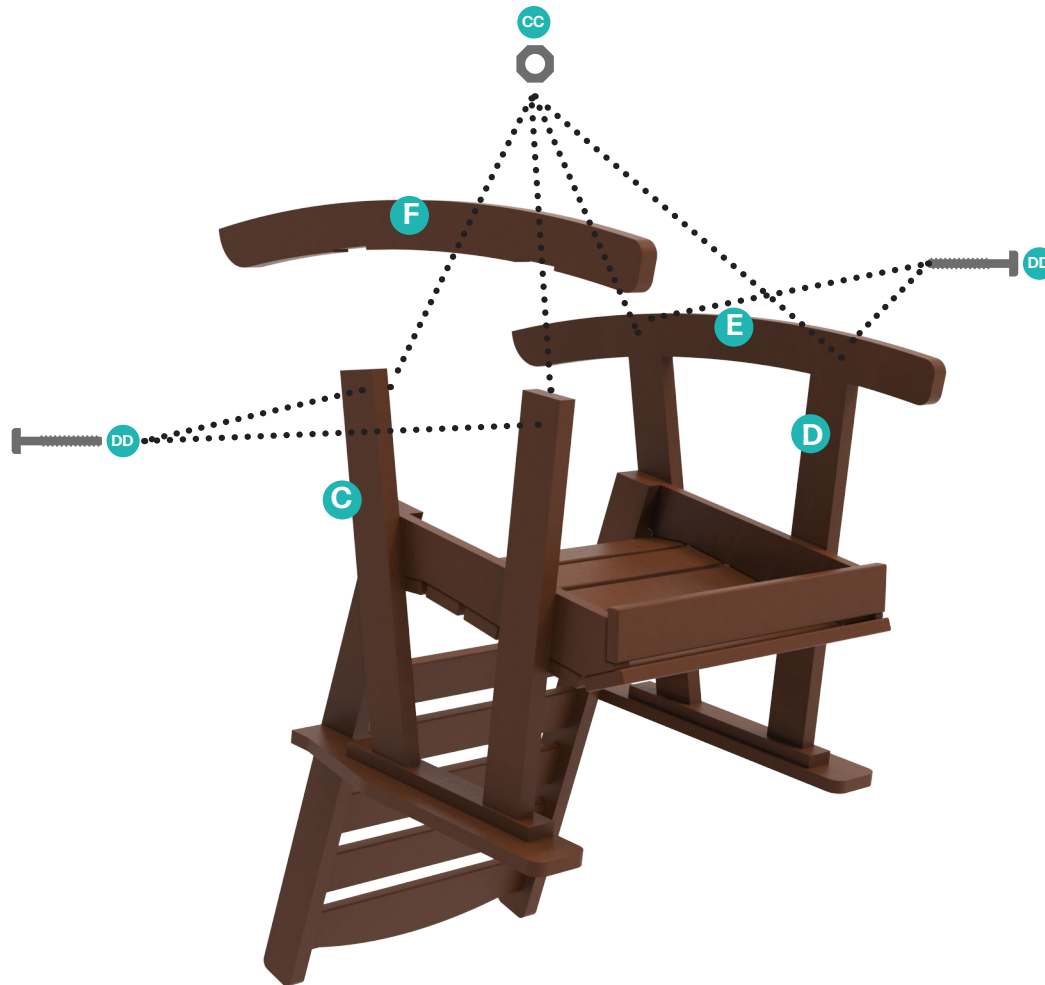

Turn assembly from step 2 upside down to attach the rockers E & F to the bottom of arms C & D. Use one $\frac{1}{4}$ " x $1\frac{1}{2}$ " wafer bolt (DD) where each leg piece meets the rocker. Finish each bolt on the inside with one $\frac{1}{4}$ " flange nut (CC).

We hope you enjoy your new piece of furniture for years to come!