

Drilling Instructions


Step 1. Attach Numbers to Plaque

Based on the number of numerals in your address, drill through the appropriate pre-punched holes using supplied drill bit. (see chart at right) Attach numbers to plaque with supplied screws.

If numbers are attached to plaque, skip to step 2.




If you have
One Numeral
in your address

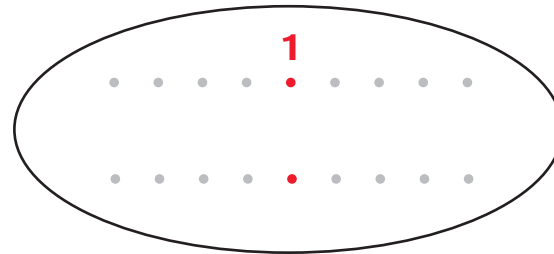


Drill holes marked
1
ONLY

If you have
Two Numerals
in your address

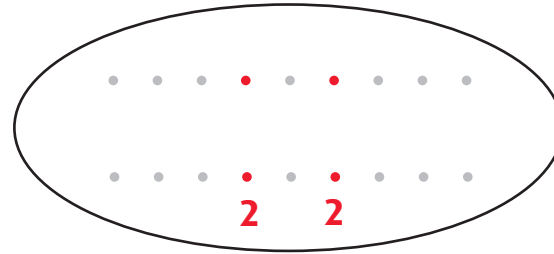


Drill holes marked
2
ONLY

If you have
Three Numerals
in your address

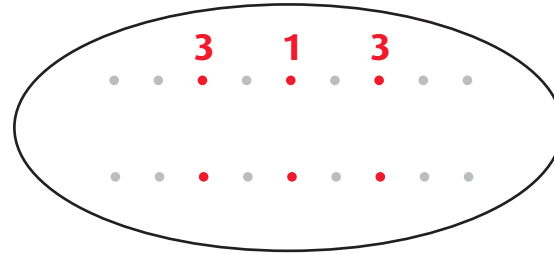


Drill holes marked
1 and 3
ONLY

If you have
Four Numerals
in your address

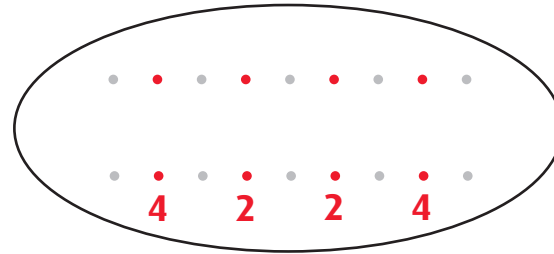

Drill holes marked
2 and 4
ONLY

If you have
Five Numerals
in your address

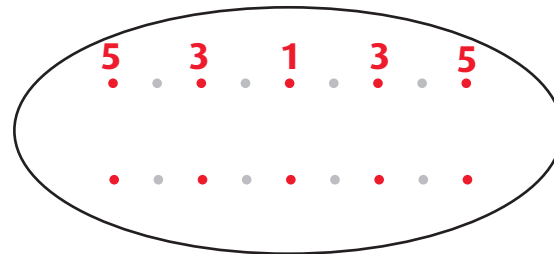

Drill holes marked
1, 3, and 5
ONLY

Step 2. Mount Plaque to Wall

Select location on wall. Level mounting template and tape to wall. Drill pilot holes through drill targets. Screw mounting screws into wall, leaving approximately 1/4" exposed. Hang plaque on wall. If desired, apply GE Clear Silicon II to back of plaque for permanent installation.

