

Drilling Instructions-Instructions de perçage

If you have
One Numeral
in your address


Drill holes marked
1
ONLY

Step 1. Attach Numbers to Plaque

Based on the number of numerals in your address, drill through the appropriate pre-punched holes using supplied drill bit (see chart at right). Attach numbers to plaque with supplied screws.


Si vous n'avez
qu'UN CHIFFRE

Percez les trous marqués
1
SEULEMENT

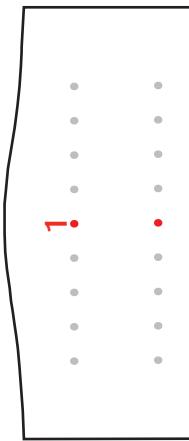

If you have
Two Numerals
in your address

Drill holes marked
2
ONLY

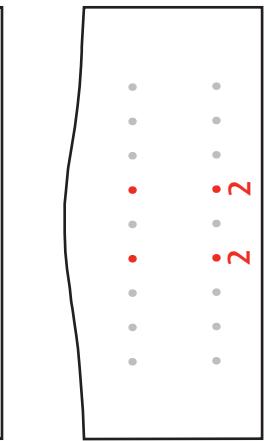

If you have
Three Numerals
in your address

Drill holes marked
1 and 3
ONLY

If you have
Four Numerals
in your address

Drill holes marked
2 and 4
ONLY

Drill holes marked
5
ONLY

Step 2. Mount Plaque to Wall

Select location on wall. Level mounting template and tape to wall. Drill pilot holes through drill targets. Screw mounting screws into wall, leaving approximately $\frac{1}{4}$ " exposed. Hang plaque on wall. If desired, apply GE Clear Silicone II to back of plaque for permanent installation.



Étape No. 1 Attachez les chiffres à la plaque

Percez dans les trous pré-poinçonnés appropriés en utilisant le foret fourni dans l'emballage (voir le schéma à gauche). Attachez les chiffres à la plaque avec les vis fournies.

Étape No. 2 Montez la plaque au mur

Selectionnez l'emplacement sur le mur. Nivelez le modèle montant et scotchez au mur. Percez les trous pilotes dans les endroits pré-percés déterminés. Vissez les vis montantes dans le mur, en laissant $\frac{1}{4}$ " exposé environ. Pendez la plaque au mur. Si désiré, appliquez le gel Silicone II de GE au dos de la plaque pour une installation permanente.

Si vous avez
CINQ CHIFFRES

Percez les trous marqués
1, 3, et 5
SEULEMENT



Si vous avez
Five Numerals
in your address

Drill holes marked
1, 3, and 5
ONLY


GAINES
MANUFACTURING, INC.®
www.gainesmfg.com

Drilling Instructions-Instrucciones de Perforación

If you have
One Numerical

in your address
Drill holes marked
1
ONLY

Based on the number of numerals in your address, drill through the appropriate pre-punched holes using supplied drill bit (see chart at right). Attach numbers to plaque with supplied screws.

Step 1. Attach Numbers to Plaque

Based on the number of numerals in your add drill through the appropriate pre-punched hole using supplied drill bit (see chart at right). Attach numbers to plaque with supplied screws.

Select location on wall. Level mounting template and tape to wall. Drill pilot holes through drill targets. Screw mounting screws into wall, leaving approximately $\frac{1}{4}$ " exposed. Hang plaque on wall. If desired, apply GE Clear Silicone II to back of plaque for permanent installation.

Step 1.

Attach Numbers to Plaque

Si tiene
Un Número
en su dirección
Perfore únicamente los
agujeros marcados con el número
1

Si tiene
Dos Números
en su dirección
Perfore únicamente los
agujeros marcados con el número
?

If you have
Three Numbers
in your address
Drill holes marked
1 and 3

If you have
Three Numbers
in your address
Drill holes marked
1 and 3

Mount Plaque to Wall

Select location on wall. Level mounting template and tape to wall. Drill pilot holes through drill targets. Screw mounting screws into wall, leaving approximately $\frac{1}{4}$ " exposed. Hang plaque on wall. If desired, apply GE Clear Silicone II to back of plaque for permanent installation.

If you have
Five Numerals
in your address
Drill holes marked
1, 3, and 5 **ONLY**

If you have
Five Numerals
in your address
Drill holes marked
1, 3, and 5 **ONLY**

Si tiene
Cinco Números
en su dirección
Perfore únicamente los
agujeros marcados con el número
1, 3, y 5

Si tiene
Cinco Números
en su dirección
Perfore únicamente los
agujeros marcados con el número
1, 3, y 5

Paso 1. **Fije los números a la plac**

Teniendo en cuenta la cantidad de números de su domicilio, utilice las brocas suministradas para perforar los correspondientes orificios pretaladrados (consulte la gráfica de la derecha). Fije los números a la placa con los tornillos en que se suministra.

Paso 2.

Seleccione la ubicación en la pared. Nivele la plantilla de montaje y fíjela en la pared con cinta. Perfore agujeros guía a través de los objetivos de perforación. Atornille los tornillos de montaje en la pared, dejándolos expuestos aproximadamente $\frac{1}{4}$ " (0.63 cm). Cuelgue la placa en la pared. Si lo desea, aplique silicona transparente GE Clear Silicone II en la parte posterior de la placa para

Monte la placa en la pared

Seleccione la ubicación en la pared. Nivele la plantilla de montaje y fíjela en la pared con cinta. Perfore agujeros guía a través de los objetivos de perforación. Atornille los tornillos de montaje en la pared, dejándolos expuestos aproximadamente $\frac{1}{4}$ " (0.63 cm). Cuelgue la placa en la pared. Si lo desea, aplique silicona transparente GE Clear Silicone II en la parte posterior de la placa para

The logo for Gaines Manufacturing, Inc. features the company name "GAINES" in large, bold, black capital letters. To the left of "GAINES" is a detailed, black and white illustration of a coiled snake, its body forming a circular pattern. To the right of "GAINES" is the phrase "MANUFACTURING, INC." in smaller, black capital letters. The entire logo is set against a background of faint, textured patterns that suggest a snakeskin or industrial material.

www.gainesmfg.com