



Splines are tight. Install with care, lots of grease, and according to install video.

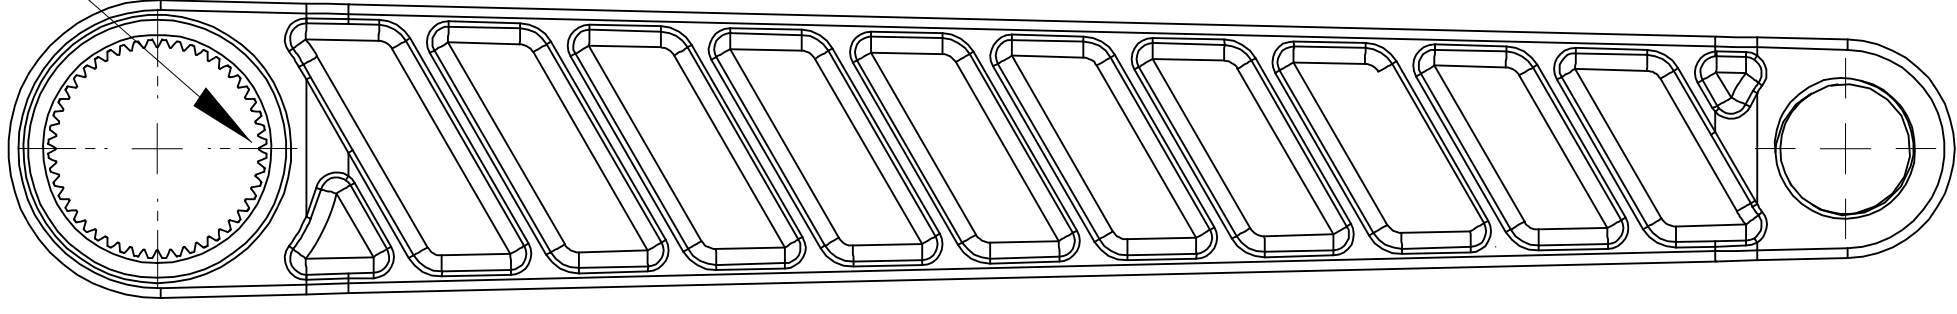


RIGHT

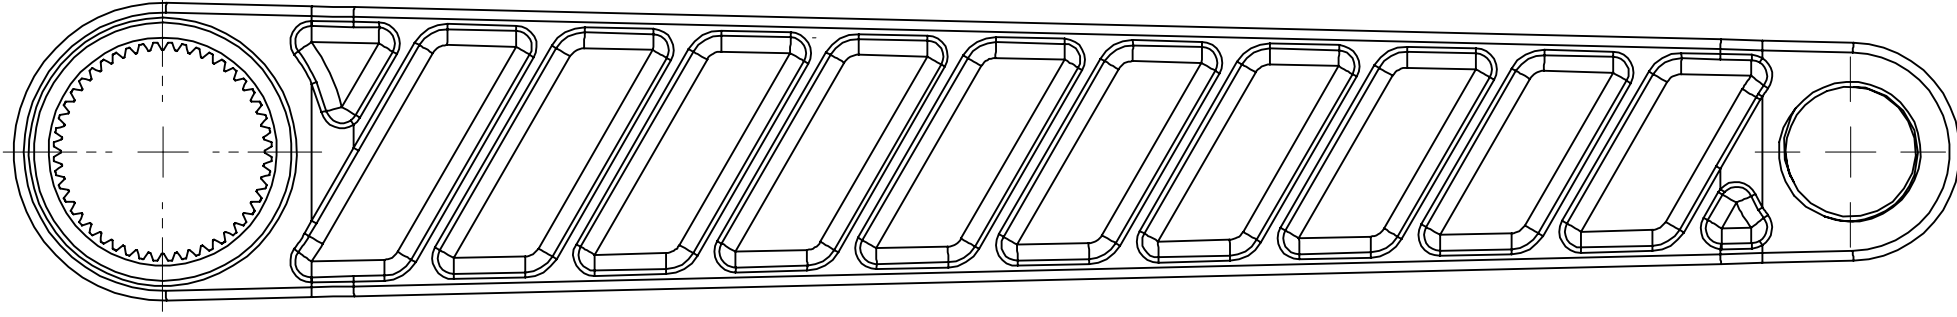


LEFT



44mm Chainline

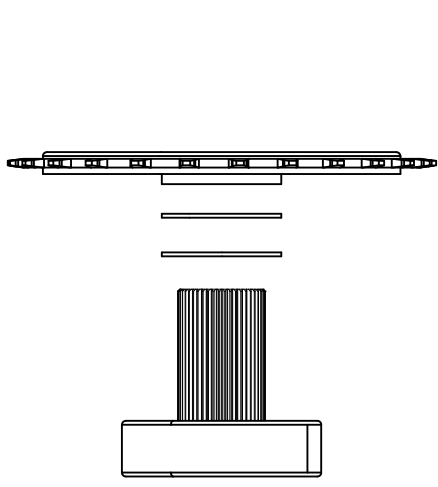

43mm Chainline

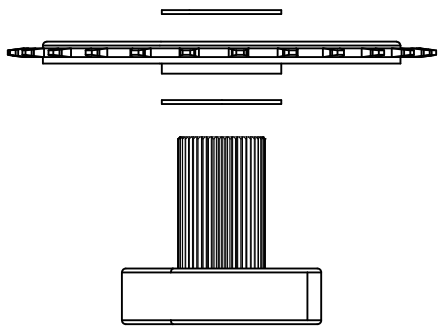

42mm Chainline

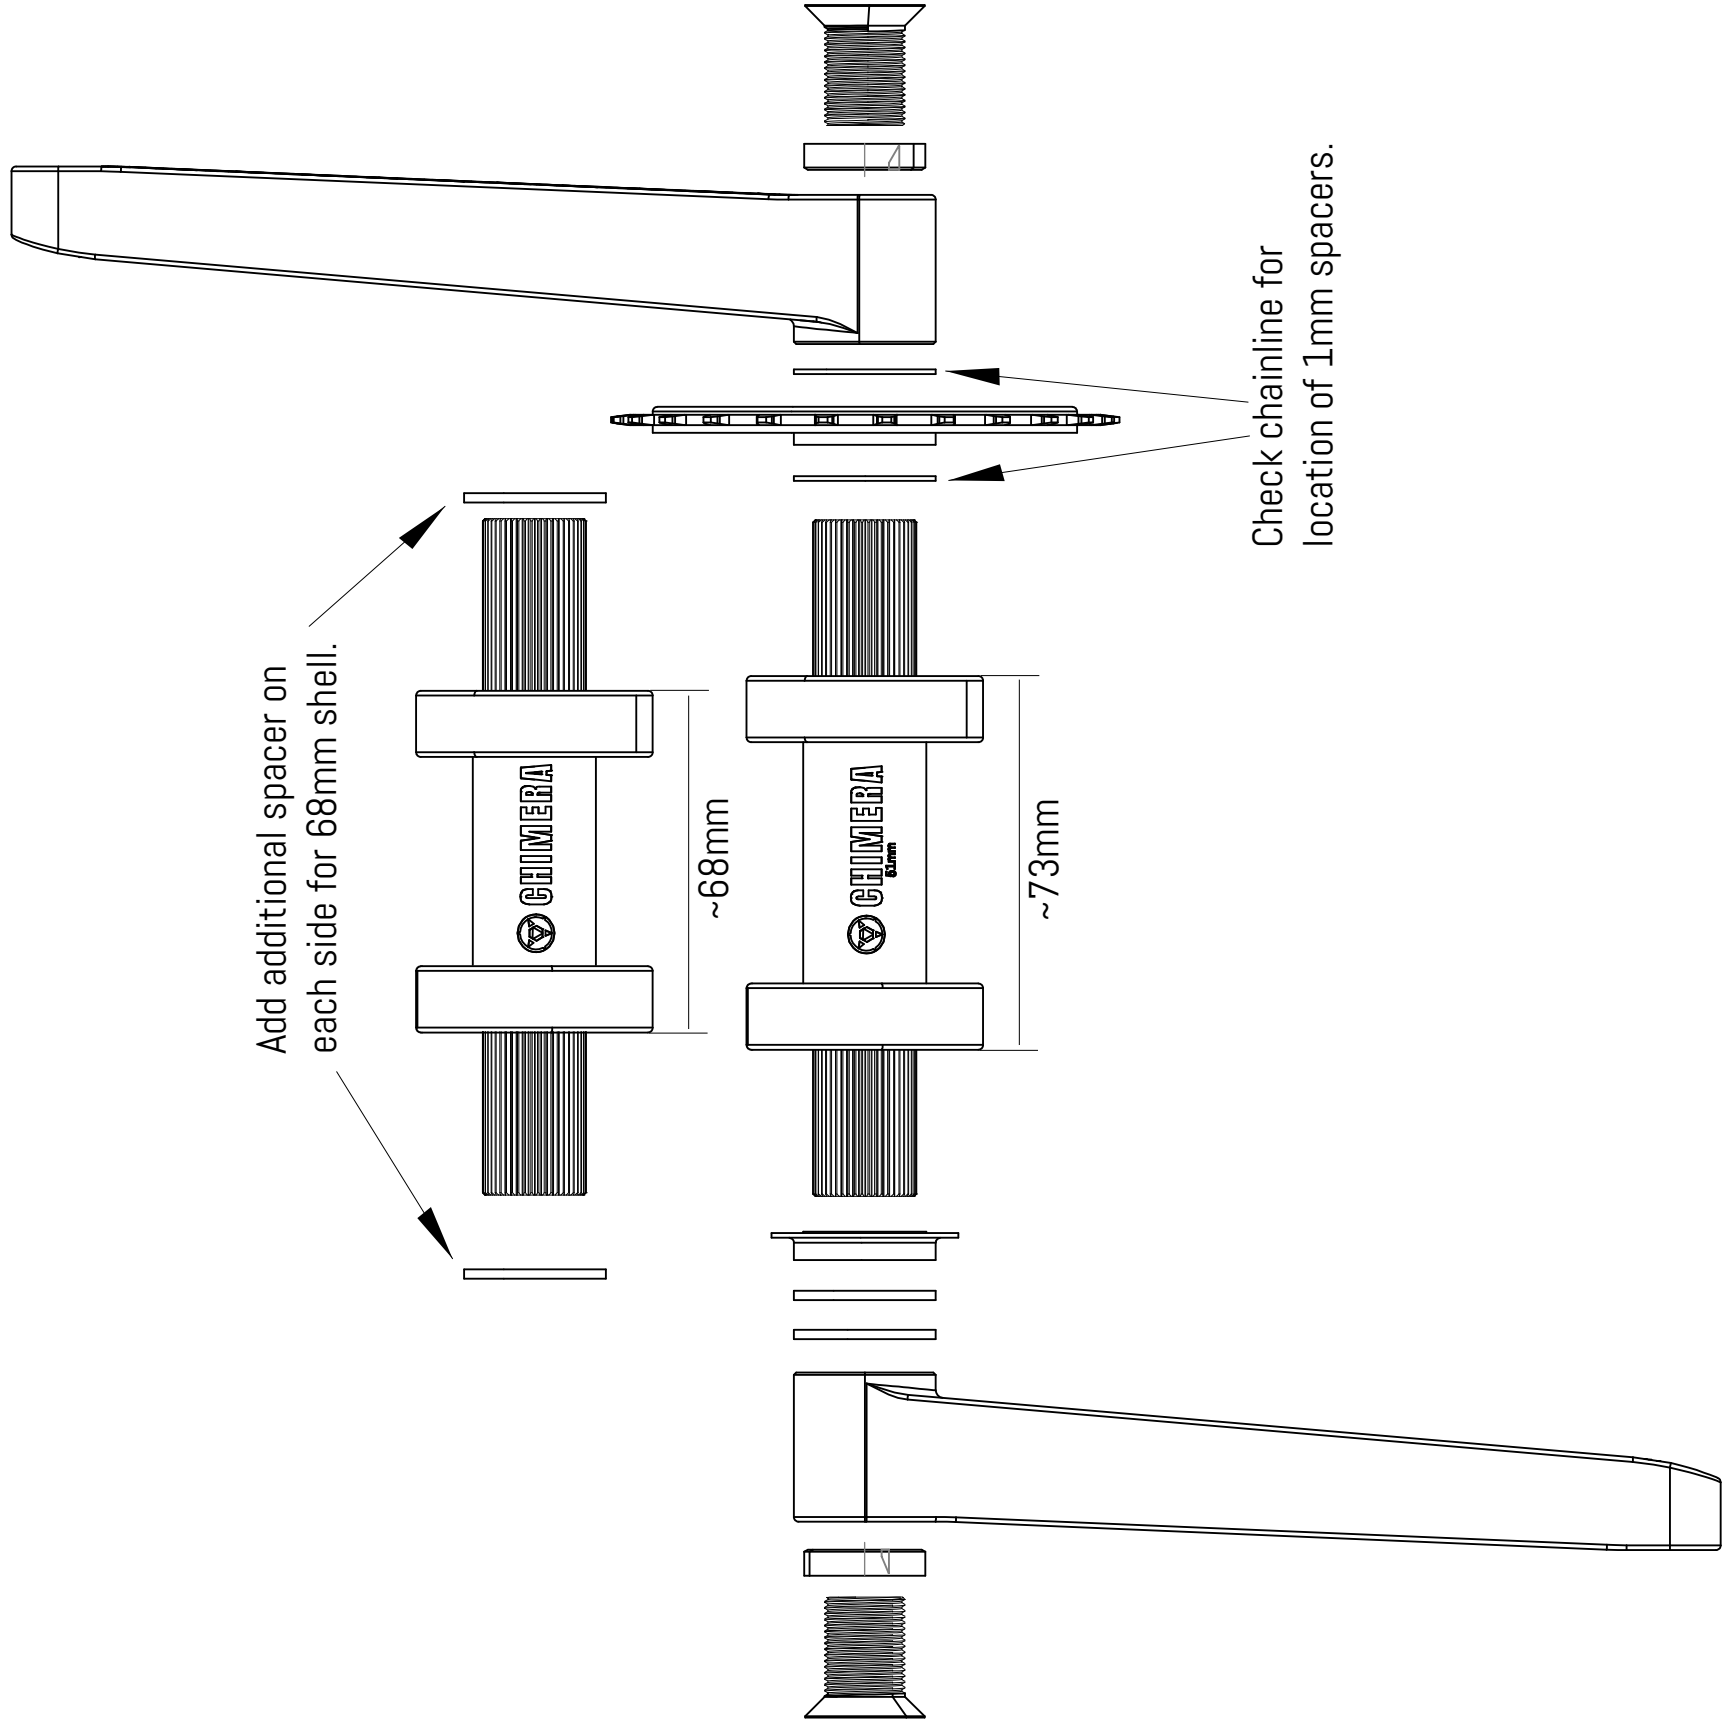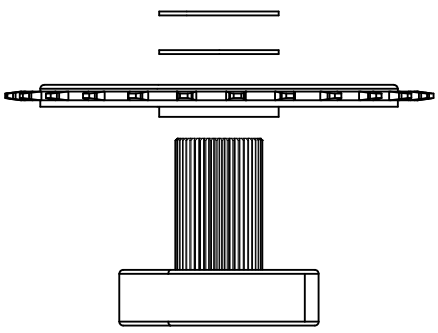

Add additional spacer on each side for 68mm shell.

Check chainline for location of 1mm spacers.