


SAFETY HOIST^{CO.}

FLAT PANEL CRADLE

Instruction Manual

SB-ASSY

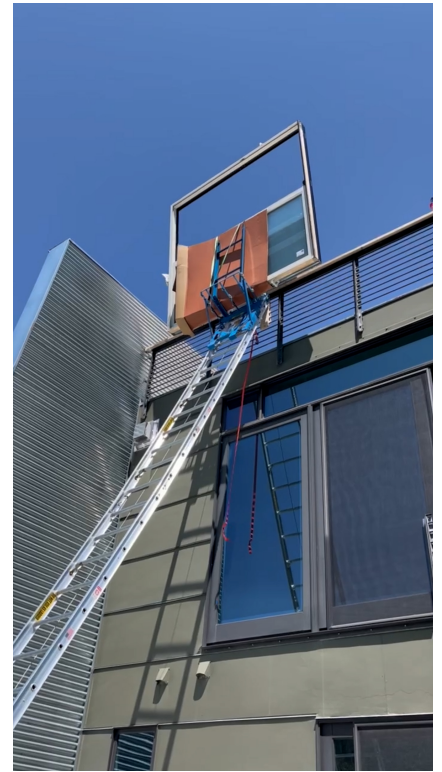

Parts list:

For attachment to CH-200, VH-300, AH-300, SPH-250, EH-250

1. Solar Panel Cradle
2. Hardware bag

Installation Instructions

1. Remove the flat panel cradle and hardware bag from the box.
2. Lift the solar panel cradle into place on the carriage [make sure the straps are facing the track and the pitch is facing you]. You will know this is correct when the holes on the Flat Panel Cradle line up with the holes on the carriage.

★ Make sure Flat Panel Cradle's holes are aligned to carriage's holes.



3. Secure each hole using the nut and bolt from the provided Flat Panel Cradle hardware bag. Tighten the hardware using a wrench.



Parts list:

For attachment to HD-400, AH-400, EH-500 & SPH-500

1. Flat Panel Cradle
2. Hardware bag

Installation Instructions

1. Remove the Flat Panel Cradle and hardware bag from the box.
2. Lift the Flat Panel Cradle onto the carriage [make sure the straps are facing the track and the pitch is facing toward you]. The holes on the Flat Panel Cradle should line up with the holes on the welded support brackets on the carriage. [Figure 1]
3. Secure each hole using the nut and bolt from the provided Flat Panel Cradle hardware bag. Tighten the hardware using a wrench. [Figure 2]

The holes from the Flat Panel Cradle must align with the holes of the support brackets.



Figure 1

Bolt down the Flat Panel Cradle once it is aligned to the support brackets.



Figure 2