

EZ-FIT[®]

Complete Brake Line Replacement Kit NiCOPP[®]
Cu-Ni-Fe ALLOY TUBING

The Solution to Rusted OE Brake Lines


Easier Install • Longer Lasting • Smaller Footprint

NiCopp[®] EZ-FIT[®] Complete Brake Line Replacement Kits are **FAST • ECONOMICAL • SUPERIOR QUALITY** solutions to replacing steel brake lines in the over 100 million popular GM, Chevy, Ford, Dodge, Jeep trucks and SUV's that experience an almost 100% failure rate in the rust belt regions of North America.

EZ-FIT[®] provides easier, longer-lasting replacement than the competition

- Highest quality machined flares for leak-proof and hassle-free connections.
- Black oxide fittings provide increased corrosion protection over standard zinc-coated fittings.
- NiCopp[®] is the ultimate corrosion-proof tubing that outlasts even stainless steel.
- EZ-Bend[®] technology makes bending, routing, and installing easier than pre-bent lines.

EZ-FIT[®] application specific kits come with all the lines for a complete job

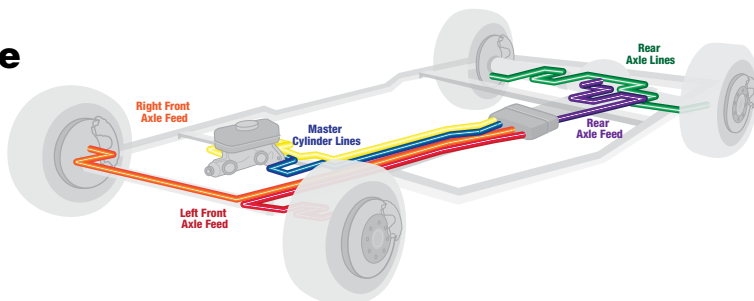

EZ-FIT [®] Kits		Other Kits
425 in ²	Box Size	6032 in ²
✓	NiCopp [®] Corrosion-Proof Line	✗
✓	Black Oxide Tube Nuts	✗
✓	Bend by Hand	✗
✓	Easily Routable	✗

EZ-FIT[®] Kits are an all-around better solution for brake line replacement



AGS Company • P.O. Box 729, Muskegon, MI 49443, U.S.A. • Local Calls 231-733-2101 • Toll Free 800-253-0403
Toll Free in Michigan & Canada 800-735-0403 • Fax 231-733-1784 • www.agscompany.com

C-1570 REV B

AGS Kit #	Coverage	Dorman #	AC Delco #
CNC-101KIT	Silverado 1500 Sierra 1500 2003-2004 Std/RWD/Long	919-101	22932587
CNC-102KIT	Silverado 1500 Sierra 1500 2003-2004 Std/RWD/Short	919-102	22933207
CNC-103KIT	Silverado 1500 Sierra 1500 2005-2007 Std/4WD/Short	919-103	22933210
CNC-104KIT	Silverado 1500 Sierra 1500 1999-2002 Std/RWD/Short	919-104	22933212
CNC-105KIT	Silverado 3500 Sierra 3500 2003-2007 Std/4WD/RWD/DRW	919-105	22933214
CNC-106KIT	Silverado 1500 Sierra 1500 2005-2007 Std/RWD/Long	919-106	22933208
CNC-107KIT	Silverado 1500 Sierra 1500 2003-2007 Crew/Short	919-107	22933211
CNC-108KIT	Silverado 3500 Sierra 3500 2001-2002 Ext/4 Door/DRW	919-108	22933213
CNC-109KIT	Avalanche 1500/2500 Escalade EXT 2002	919-109	22933215
CNC-110KIT	Silverado 2500 Sierra 2500 1999-2000 Ext/4WD/Long	919-110	22933209
CNC-111KIT	Silverado 2500 Sierra 2500 2001-2002 Crew/Short	919-111	22932583
CNC-112KIT	Silverado 2500/3500 Sierra 2500/3500 2003-2007 Crew/Long	919-112	22932584
CNC-113KIT	Silverado 1500 Sierra 1500 1999-2002 Std/4WD/Long	919-113	22932585
CNC-114KIT	Silverado 2500 Sierra 2500 1999-2002 Std/4WD/Long	919-114	22932586
CNC-115KIT	Silverado 3500 Sierra 3500 2001-2002 Std/2 Door/DRW	919-115	22932588
CNC-116KIT	Silverado 1500 Sierra 1500 1999-2002 Ext/4WD/Long	919-116	22932589
CNC-117KIT	Silverado 1500 Sierra 1500 2003-2004 Std/4WD/Long	919-117	23158907
CNC-118KIT	Silverado 1500 Sierra 1500 2006-2007 Ext/Short	919-118	22932590
CNC-119KIT	Silverado 1500 Sierra 1500 2003-2004 Ext/4WD/Long	919-119	22932609
CNC-120KIT	Silverado 1500 Sierra 1500 2005-2007 Ext/4WD/Long	919-120	22932601
CNC-121KIT	Silverado 1500 Sierra 1500 2005-2007 Crew/RWD/Short	919-121	22932596
CNC-122KIT	Silverado 2500 Sierra 2500 1999-2000 Std/RWD/Long	919-122	22932603
CNC-123KIT	Silverado 1500 Sierra 1500 2005-2007 Ext/RWD/Short	919-123	22932604
CNC-124KIT	Suburban/Avalanche 1500 Yukon XL 1500 2003-2006 Code JL4	919-124	22932597
CNC-125KIT	Silverado 2500 Sierra 2500 1999-2000 Ext/RWD/Long	919-125	22932602
CNC-126KIT	Silverado 2500/3500 Sierra 2500/3500 2001-2002 Std/Long	919-126	22932595
CNC-127KIT	Tahoe Yukon 2000-2002 2002 Escalade	919-127	22932598
CNC-128KIT	Silverado 1500 Sierra 1500 2000-2002 Ext/RWD/Long	919-128	22932599
CNC-129KIT	Silverado 2500 Sierra 2500 2001-2002 Ext/Short	919-129	22932605
CNC-130KIT	Tahoe Yukon 2002 Code JL4	919-130	22932600
CNC-131KIT	Silverado 2500 Sierra 2500 2003-2007 Crew/Short	919-131	22933202
CNC-132KIT	Suburban 2500 Yukon XL 2500 2000-2002 2002 Avalanche 2500	919-132	22933203
CNC-133KIT	Silverado 3500 Sierra 3500 2003-2007 Ext Std/DRW	919-133	22933204
CNC-134KIT	Silverado 2500/3500 Sierra 2500/3500 2003-2007 Ext/Long	919-134	22933205
CNC-135KIT	Silverado 1500 Sierra 1500 2005-2007 Std/4WD/Long	919-135	22933193
CNC-136KIT	Silverado 2500/3500 Sierra 2500/3500 2001-2002 Crew/Long	919-136	22933194
CNC-137KIT	Tahoe Yukon 2003-2006 RPO Code JL4	919-137	22933188
CNC-138KIT	Silverado 2500 Sierra 2500 2003-2004 Std/RWD/Long	919-138	22933187
CNC-139KIT	Suburban 1500 Yukon XL 1500 2000-2002	919-139	22933189
CNC-140KIT	Silverado 2500/3500 Sierra 2500/3500 2001-2002 Ext/Long	919-140	22933191
CNC-141KIT	Silverado 2500 Sierra 2500 1999-2002 Ext/4WD/Short	919-141	22933190
CNC-142KIT	Suburban/Avalanche 1500 Yukon XL 1500 2003-2006	919-142	22932579
CNC-143KIT	Silverado 1500 Sierra 1500 2005-2007 Ext/RWD/Long	919-143	22932578
CNC-144KIT	Silverado 2500 Sierra 2500 1999-2000 Ext/RWD/Short	919-144	22932574
CNC-145KIT	Silverado 1500 Sierra 1500 1999-2002 Std/4WD/Short	919-145	22932567
CNC-146KIT	Silverado 1500 Sierra 1500 2005-2007 Ext/4WD RWD/Short	919-146	22932569
CNC-147KIT	Silverado 1500 Sierra 1500 1999-2002 Std/RWD/Long	919-147	22932568
CNC-148KIT	Silverado 1500 Sierra 1500 2001-2002 Crew	919-148	22933219
CNC-149KIT	Silverado 1500 Sierra 1500 2004-2007 Crew/4WD/Short	919-149	22932594
CNC-150KIT	Silverado 1500 Sierra 1500 2003-2004 Std/4WD/Short	919-150	22932592
CNC-151KIT	Silverado 1500 Sierra 1500 2005-2007 Std/RWD/Short	919-151	22933216
CNC-152KIT	Silverado 1500 Sierra 1500 1999-2002 Ext/4WD/Short	919-152	22933217
CNC-153KIT	Silverado 1500 Sierra 1500 2005-2007 Crew/4WD RWD/Short	919-153	22932593
CNC-154KIT	Silverado 1500 Sierra 1500 2003-2007 Ext/4WD/Short	919-154	22932591
CNC-155KIT	Silverado 3500 Sierra 3500 2001-2002 Std/4WD/RWD/DRW	919-155	22933198
CNC-156KIT	Silverado 3500 Sierra 3500 2003-2007 Std/DRW	919-156	22933199
CNC-157KIT	Suburban 2500 Yukon XL 2500 2000 RWD	919-157	22933200
CNC-158KIT	Silverado 2500/3500 Sierra 2500/3500 2003-2007 Std/Long	919-158	22932576
CNC-159KIT	Silverado 2500 Sierra 2500 2003-2007 Ext/Short	919-159	22932570

AGS Kit #	Coverage	Dorman #	AC Delco #
CNC-160KIT	Suburban/Avalanche 2500 Yukon XL 2500 2003-2006	919-160	22932571
CNC-161KIT	Tahoe Yukon 2003-2006	919-161	22933206
CNC-162KIT	Silverado 1500 Sierra 1500 2003-2004 Ext/RWD/Long	919-162	22933197
CNC-163KIT	Silverado 1500 Sierra 1500 1999-2002 Ext/RWD/Short	919-163	22932582
CNC-164KIT	F-150/Lobo 2000-2004 Ext Cab 96" Bed - Under 7,700 Lb. GVW	919-164 & 919-165	N/A
CNC-166KIT	F-150/Lobo 2000-2004 Ext Cab 78" Bed & Std Cab 96" Bed - Under 7,700 Lb. GVW	919-166 & 919-167	N/A
CNC-168KIT	F-150/Lobo 1997-2000 Std Cab 78" Bed	919-168	N/A
CNC-169KIT	F-150/Lobo 2000-2004 Std Cab 78" Bed - Under 7,700 Lb. GVW	919-169	N/A
CNC-170KIT	F-150/Lobo 1997-2000 Ext Cab 78" Bed & Std Cab 96" Bed	919-170	N/A
CNC-171KIT	Ram 2500 2001-2002 Std Cab 78" Bed w/ FWD Rear Disc Brakes - Dana 60/70/80	919-171 & 919-174	N/A
CNC-172KIT	Ram 1500 2000-2001 Std Cab 78" Bed FWD - 4 Wheel ABS	919-172	N/A
CNC-173KIT	Ram 1500 2000-2001 Ext Cab 96" Bed FWD - 2 Wheel ABS	919-173	N/A
CNC-175KIT	Ram 2500 2001-2002 Ext Cab 78" Bed & Std Cab 96" Bed w/ FWD Rear Disc Brakes - Dana 60/70/80	919-175	N/A
CNC-176KIT	Ram 2500 2000-2001 Ext Cab 96" Bed RWD - 4 Wheel ABS	919-176	N/A
CNC-177KIT	Ram 2500 2001-2002 Ext Cab 96" Bed RWD w/ Rear Disc Brakes - Dana 80	919-177 & 919-178	N/A
CNC-179KIT	Ram 2500 2000-2001 Ext Cab 78" Bed FWD	919-179 & 919-182 & 919-183 & 919-186	N/A
CNC-180KIT	Ram 2500 2000-2001 Ext Cab 78" & Std Cab 96" Bed RWD - 4 Wheel ABS	919-180 & 919-184	N/A
CNC-181KIT	Ram 2500 2001-2002 Std Cab 78" Bed RWD w/ Rear Disc Brakes - Dana 80	919-181 & 919-185	N/A
CNC-187KIT	Ram 1500 2000-2001 Std Cab 78" Bed RWD - 4 Wheel ABS	919-187 & 919-190	N/A
CNC-188KIT	Ram 2500 2000-2001 Ext Cab 96" Bed FWD	919-188	N/A
CNC-189KIT	Ram 2500 2000-2001 Ext Cab 96" Bed 4WD - 2 Wheel ABS	919-189	N/A
CNC-191KIT	Ram 2500 2000-2001 Ext Cab 78" Bed & Std Cab 96" Bed 4WD - 2 Wheel ABS	919-191 & 919-194	N/A
CNC-192KIT	Ram 2500 2000-2001 Std Cab 78" Bed RWD - 4 Wheel ABS	919-192	N/A
CNC-193KIT	Ram 1500 2000-2001 Std Cab 78" Bed RWD - 2 Wheel ABS	919-193	N/A
CNC-196KIT	Ram 2500 2001-2002 Ext Cab 96" Bed w/ RWD Rear Disc Brakes - Dana 60/70	919-196	N/A
CNC-197KIT	Ram 2500 2000-2001 Ext Cab 78" Bed & Std Cab 96" Bed RWD - 2 Wheel ABS	919-197	N/A
CNC-198KIT	Ram 1500 2000-2001 Ext Cab 96" Bed RWD - 2 Wheel ABS	919-195 & 919-198 & 919-199 & 919-202	N/A
CNC-200KIT	Ram 1500 2000-2001 Ext Cab 78" & Std Cab 96" Bed RWD - 2 Wheel ABS	919-200	N/A
CNC-201KIT	Wrangler 1997-2002 Dana 44 Axle	919-201	N/A
CNC-203KIT	Ram 1500 2000-2001 Ext Cab 96" Bed RWD - 4 Wheel ABS	919-203 & 919-206	N/A
CNC-204KIT	Ram 1500 2000-2001 Ext Cab 78" & Std Cab 96" Bed RWD - 4 Wheel ABS	919-204	N/A
CNC-205KIT	Ram 1500 2000-2001 Std Cab 78" Bed FWD - 2 Wheel ABS	919-205	N/A
CNC-207KIT	Ram 2500 2001-2002 Std Cab 78" Bed w/ RWD Rear Disc Brakes - Dana 60/70	919-207 & 919-210	N/A
CNC-208KIT	Ram 1500 2000-2001 Ext Cab 78" Bed & Std Cab 96" Bed FWD - 2 Wheel ABS	919-208	N/A
CNC-209KIT	Ram 2500 2000-2001 Ext Cab 96" Bed RWD - 2 Wheel ABS	919-209	N/A
CNC-211KIT	Ram 2500 2001-2002 Ext Cab 96" Bed w/ FWD Rear Disc Brakes - Dana 60/70/80	919-211 & 919-214	N/A
CNC-212KIT	Ram 2500 2000-2001 Std Cab 78" & 96" Bed FWD	919-212	N/A
CNC-213KIT	Ram 2500 2001-2002 Ext Cab 78" & Std Cab 96" Bed w/ RWD Rear Disc Brakes - Dana 60/70/80	919-213	N/A
CNC-215KIT	Ram 2500 2000-2001 Std Cab 78" Bed 4WD - 2 Wheel ABS	919-215 & 919-218	N/A
CNC-216KIT	Wrangler 1997-2002 Dana 35 Axle	919-216	N/A
CNC-217KIT	Ram 2500 2000-2001 Std Cab 78" Bed RWD - 2 Wheel ABS	919-217	N/A
CNC-219KIT	Silverado 1500 Sierra 1500 2003-2007 Ext/RWD/Short	919-219	22932565
CNC-220KIT	Ram 1500 2000-2001 Ext Cab 78" Bed & Std Cab 96" Bed FWD - 4-Wheel ABS	919-220	N/A
CNC-221KIT	Ram 1500 2000-2001 Ext Cab 96" Bed FWD - 4 Wheel ABS	919-221	N/A