


www.caproskis.com

Hutchinson, MN 55350

## SKI INSTALLATION INSTRUCTIONS ALIGNMENT

Once the skis are installed, check the distance between the skis. To eliminate darting, we recommend the distance between the front toes of the skis to be 3/8" wider than the back of the skis. To do this, measure the two distances shown and make sure Distance #2 is 3/8" wider than Distance #1. The skis should also be parallel with the snowmobile track (within 3/8", check by taking a straight edge and align it with the track). If the skis are parallel to the track, then they will also be aligned with the straight edge.

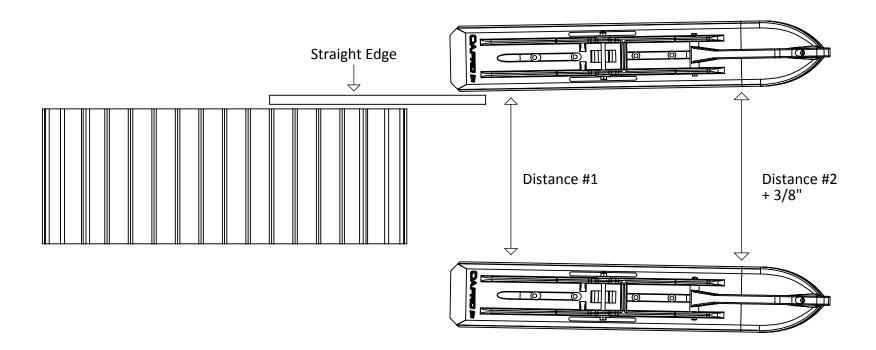

PAGE 1 OF 1 Doc #: 10139\_A