


8HP breather mod kit install

Note

We recommend removing the front cover of the transmission to make sure no debris is left inside after drilling the new breather hole into the transmission.

- Remove old breather with the use of pliers
- Drill a 5,5mm hole as level as possible (white cross)

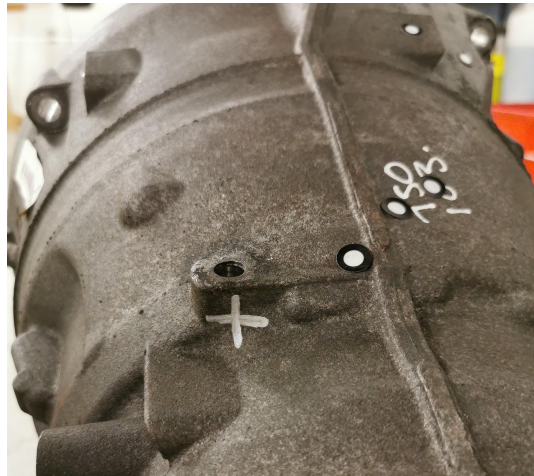

- Make sure to clean away all metal after drilling the hole.
- Tap in the SS barb fitting into the 5,5mm hole using a hammer
- Tap in the Black plug into the stock breather hole using a hammer
- Install hose and breather
- We recommend placing the breather on a taller place than the outlet.
(on top of the bellhousing)
- Use a Zip tie or clamp to secure it.
- Evaluate to round off the corner (to the left of the stock hole) in order to get better clearance.