

AFTERSALE SERVICE

Dear customer,

Thank you so much for purchasing the product from us, we really appreciate your support.

We are aimed to provide the best shopping experience to our customers. We also want to build a mutually beneficial relationship with our customers, and step further to make our brand both reliable, responsible and recommendable.

We hope that our products could meet your needs and expectations, please consider us again if you need more products for your home and kitchen.


The package would be out of our control during shipping, please contact us through your purchasing channel directly if there is anything wrong with the box or contents. We are always here offering you our service.

We will reply your messages within 24 hours, please kindly wait for the response from our professional service team.

Your comfort and contentment are of utmost importance.

Best Regards,
Customer Care Specialist

ASSEMBLY INSTRUCTION

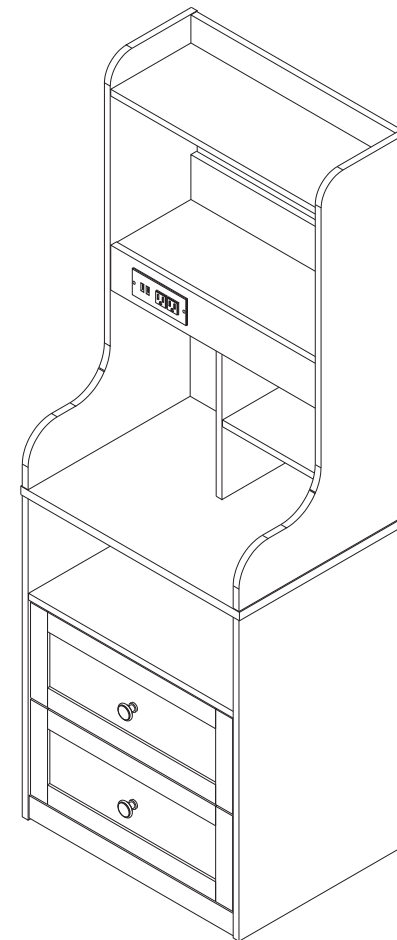




Serious or fatal crushing injuries can occur from furniture tip-over.

ALWAYS secure this furniture to the wall using tip-over restraints.

To further reduce the risk of serious injury and death from tip-overs:

- Install Anti-tip device.
- Place heavier items in the lower drawer.
- Never let children climb or hang on drawers or shelves.
- Do NOT set heavy objects on top of this product.


EXPLODED DRAWING:

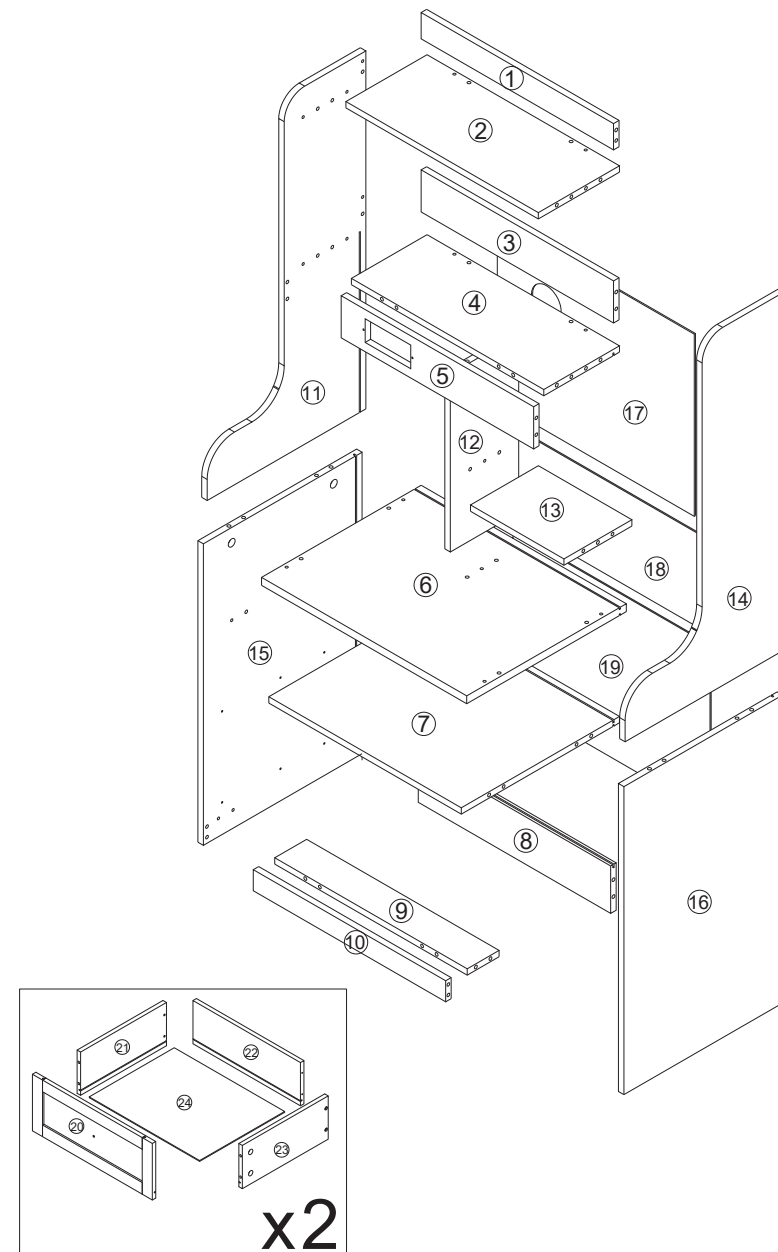

Please check all parts and accessories according to the parts list before assembling, make sure all contents are sufficient and in good condition.

If there is any parts missing or defective, please contact us immediately with purchase platform message to get replacement parts.

PARTS:

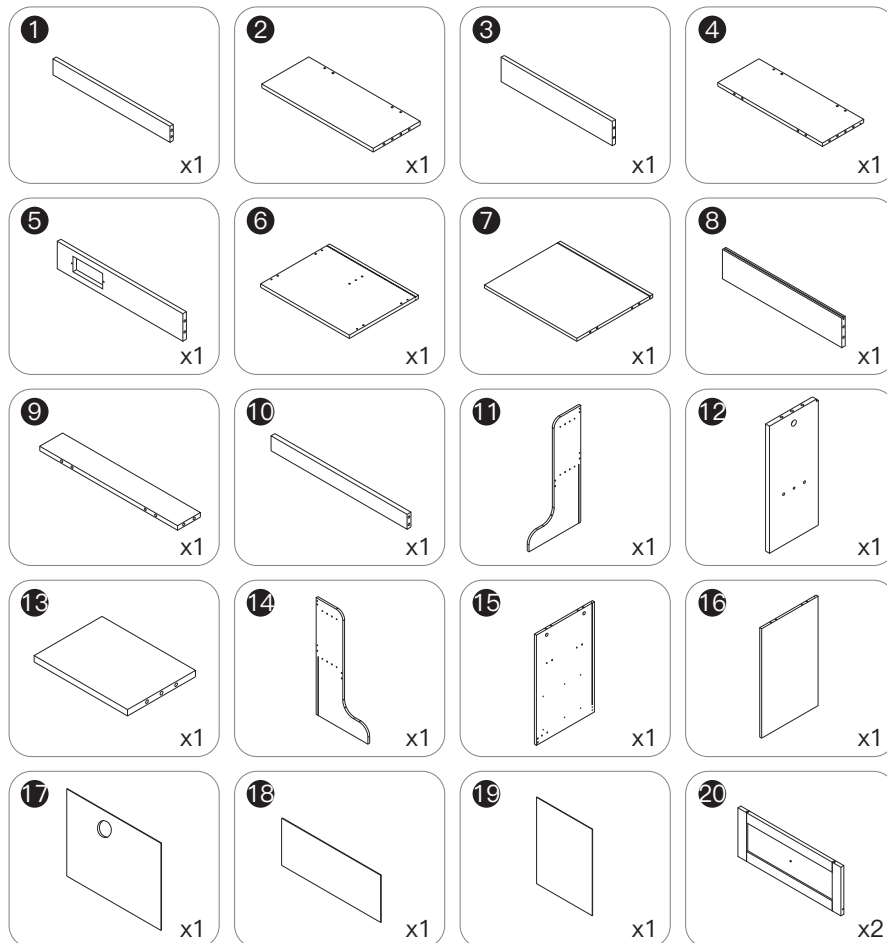


HOW TO INSTALL


NOTICE:

1. Use electric drill for easier installation experience.
2. Please drive the screws in pre-drilled holes.
3. Please strictly follow the instruction and diagram in every step.
4. Make sure every part is on the right position, otherwise it may cause unnecessary problem.
5. Select the proper component via the label on every part while assembling.


REMARK:

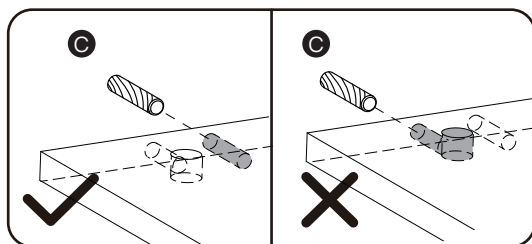


Avoid inserting part C into wrong holes.

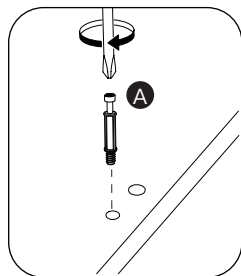

Part A must be installed into the holes with rubber nuts which are smaller than others.

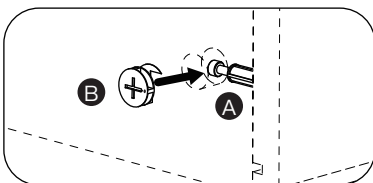


When locking part B, please make sure part A is fully inserted.


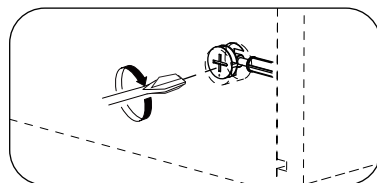


Step 1



Install part **A** on part **4** & **5** & **10** & **12**.
Install part **N** on part **4**, use part **E** & **O** to screw them.

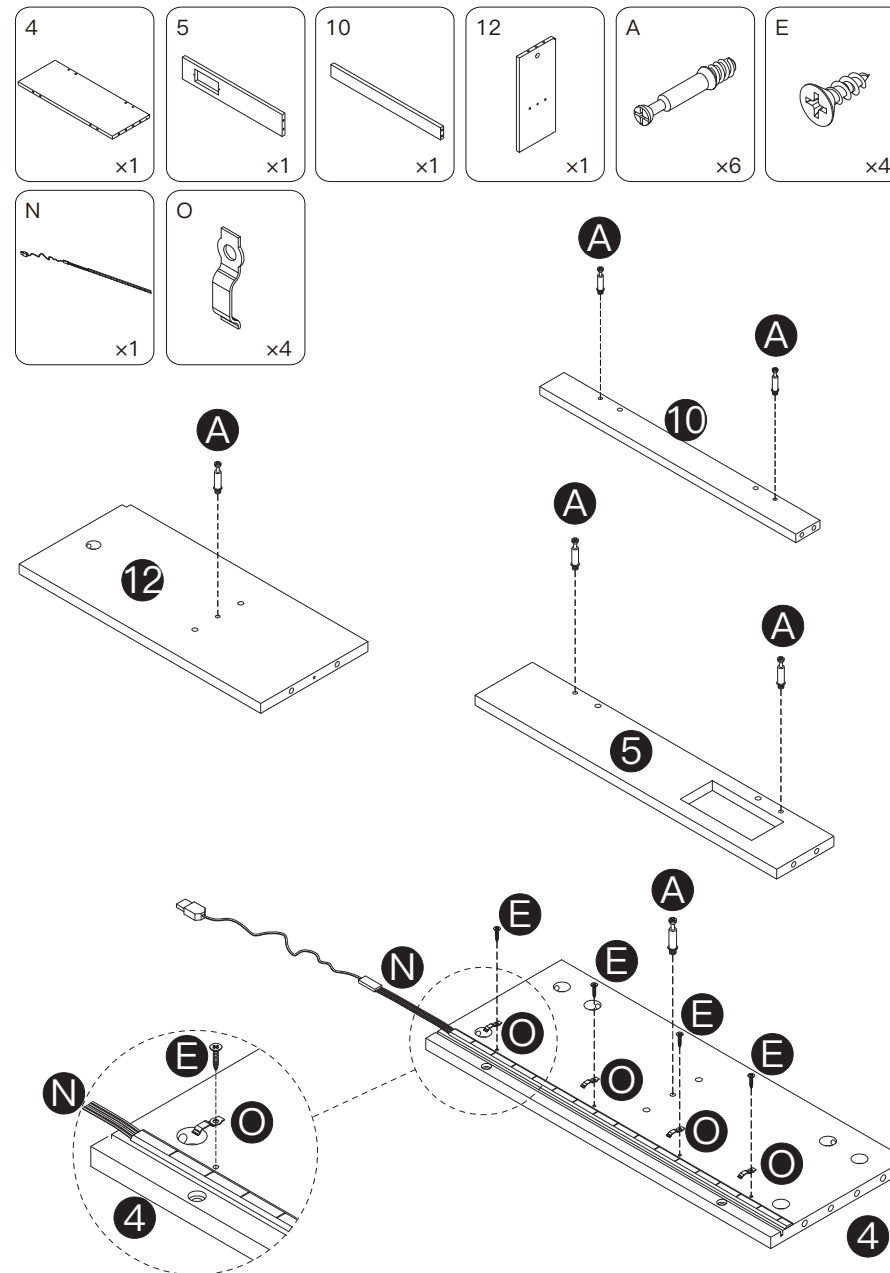

Step 2 Install part **A** on part **11** & **14**.


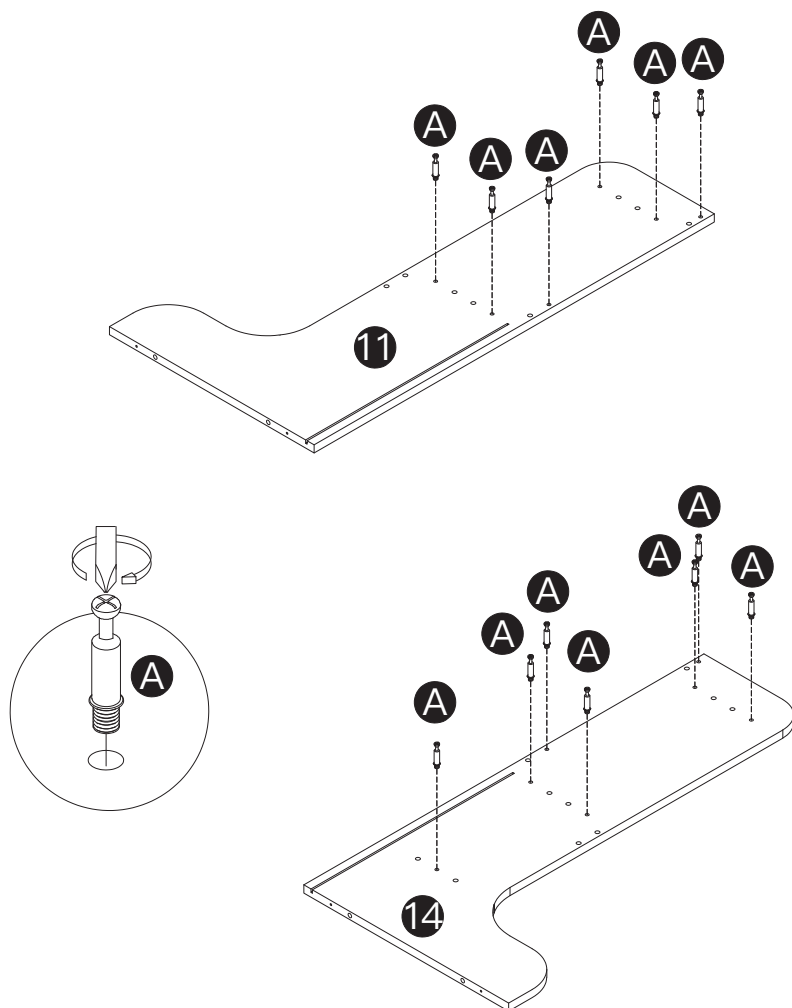
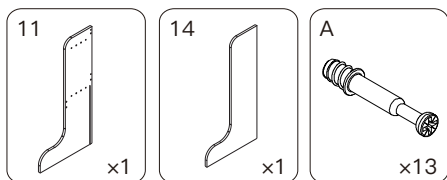


Step 3 Connect part **1** and part **2** with part **C**, use part **D** to screw them, cover the hole with part **P**.

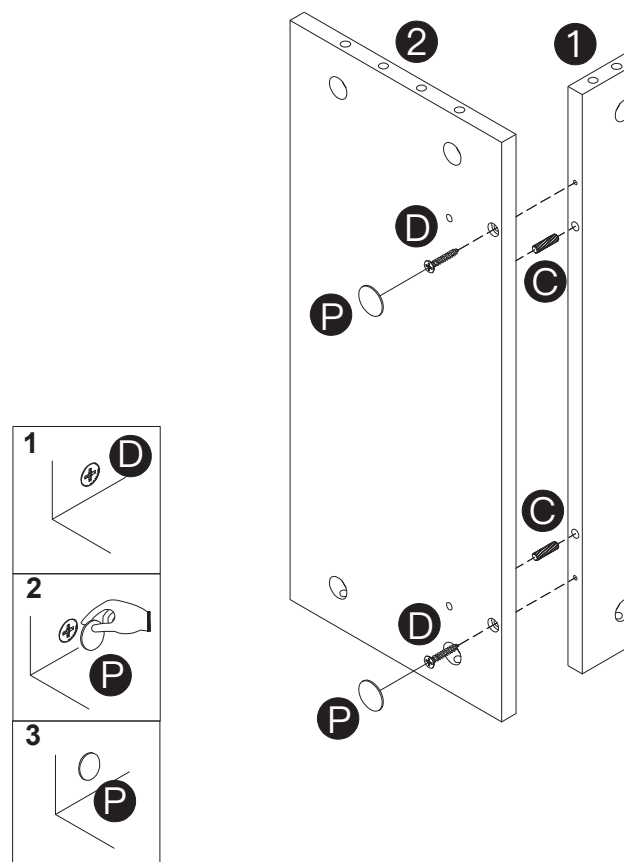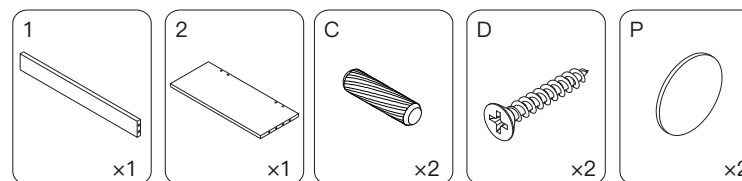




Step 4

Install part ① & ② on part ⑭, use part ③ to screw them, cover the hole with part ④.

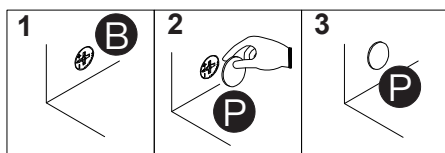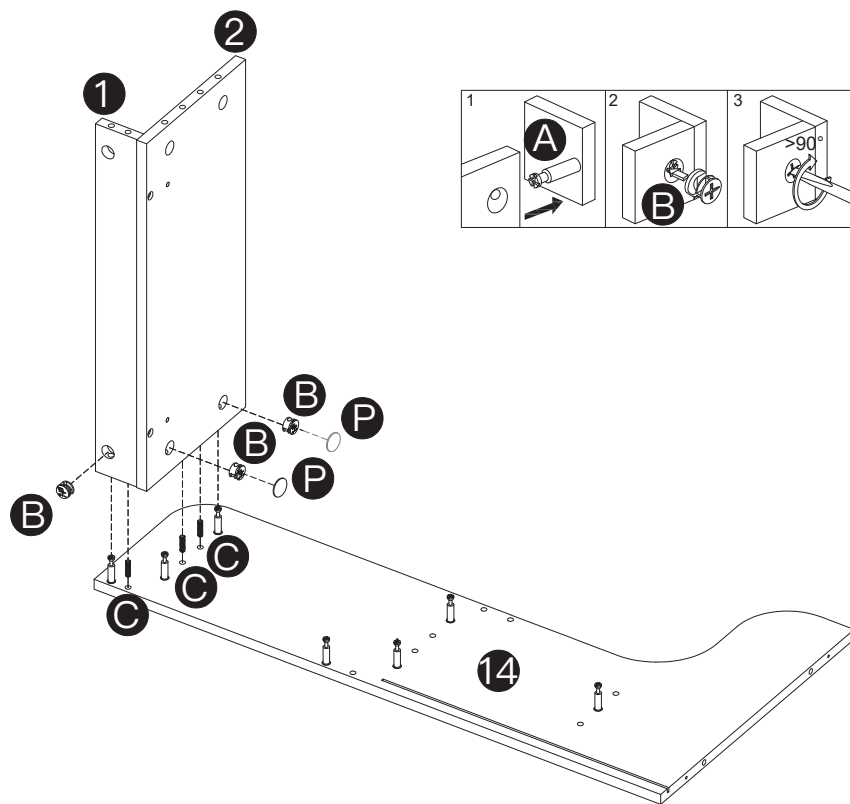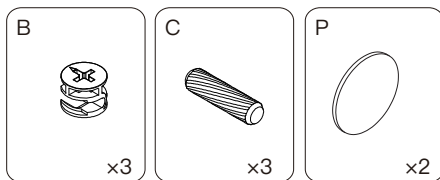




Step 5

Connect part ③ & ④ & ⑤ with part ⑥, use part ⑦ & ⑧ to screw them.

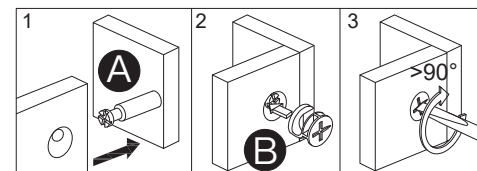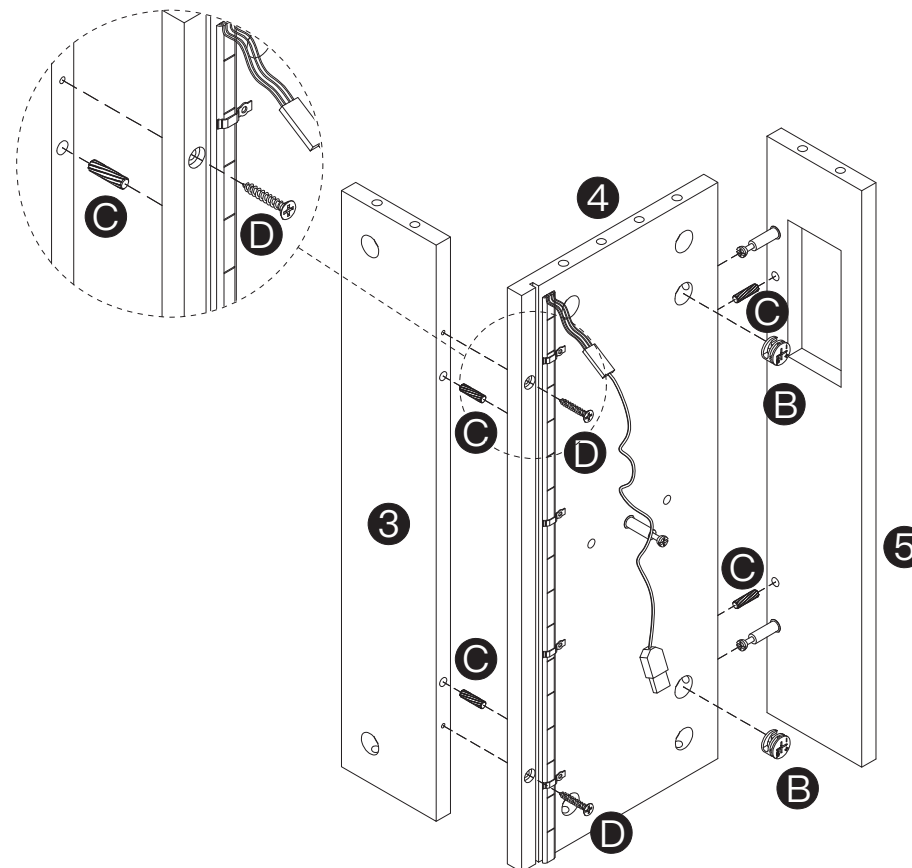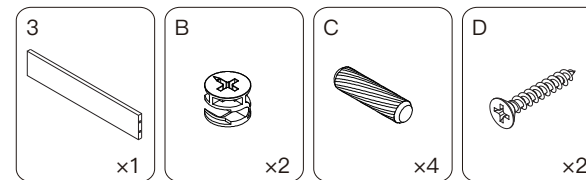




Step 6

Install part 13 on part 12 with part C, use part B to screw them.

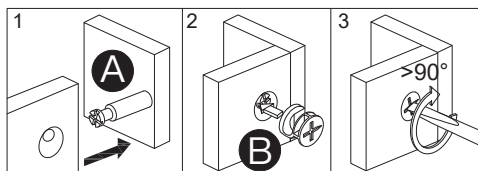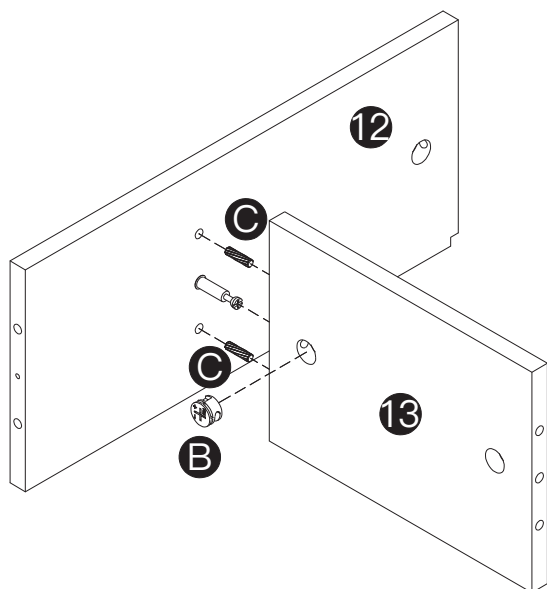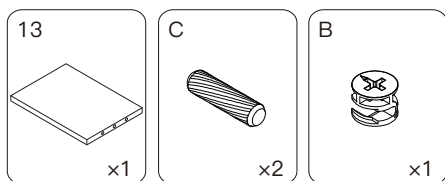




Step 7

Install part 12 on part 4 with part C, use part B to screw them.

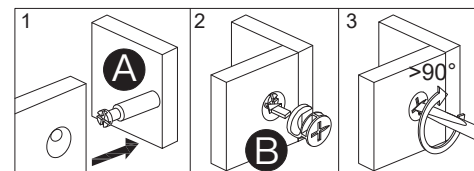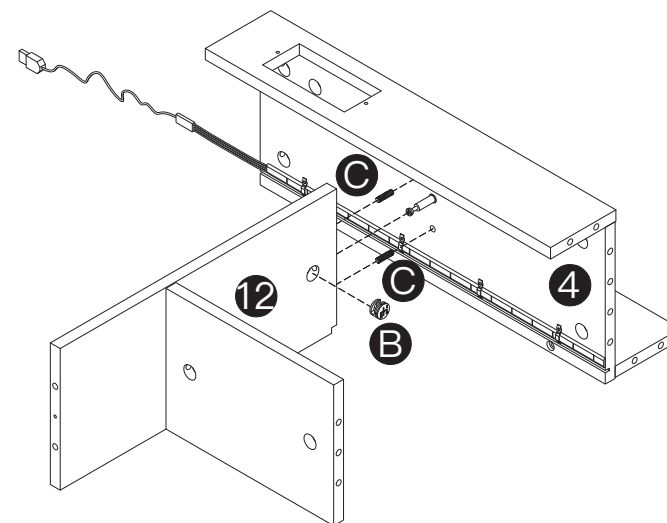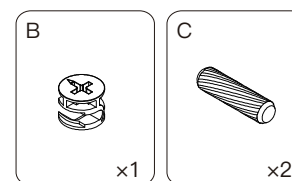



Step 8

Install the part assembled on part 14 with part C, use part B to screw them.

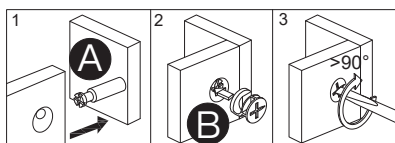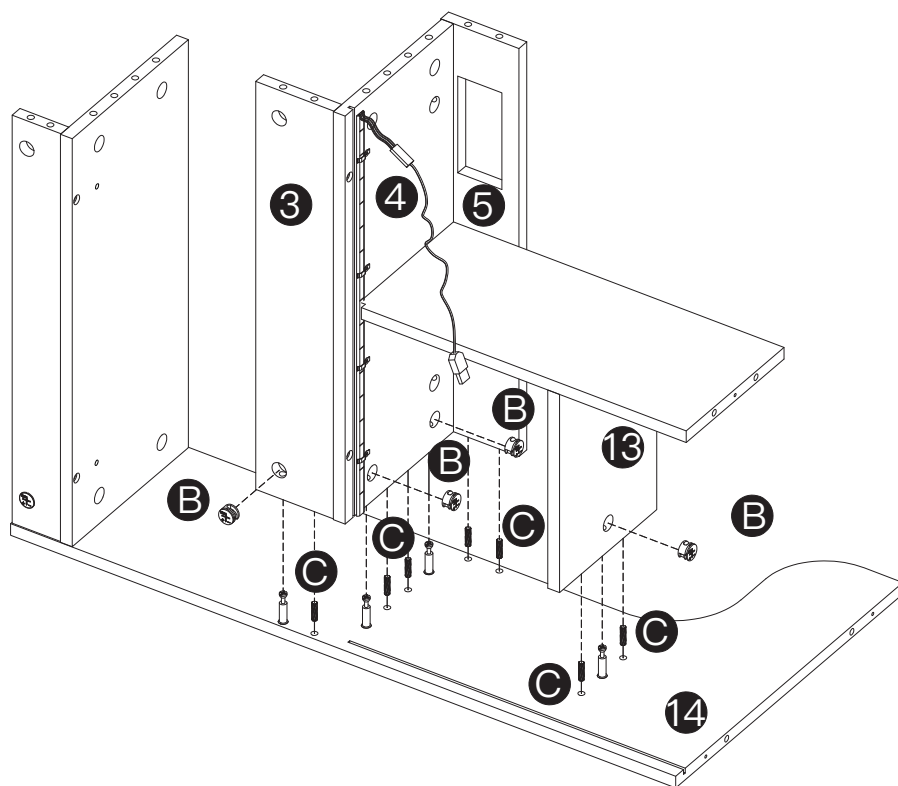
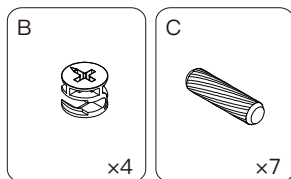


Step 9



Install part 11 on part 1 & 2 & 3 & 4 with part C, use part B to screw them, cover the hole with part P.

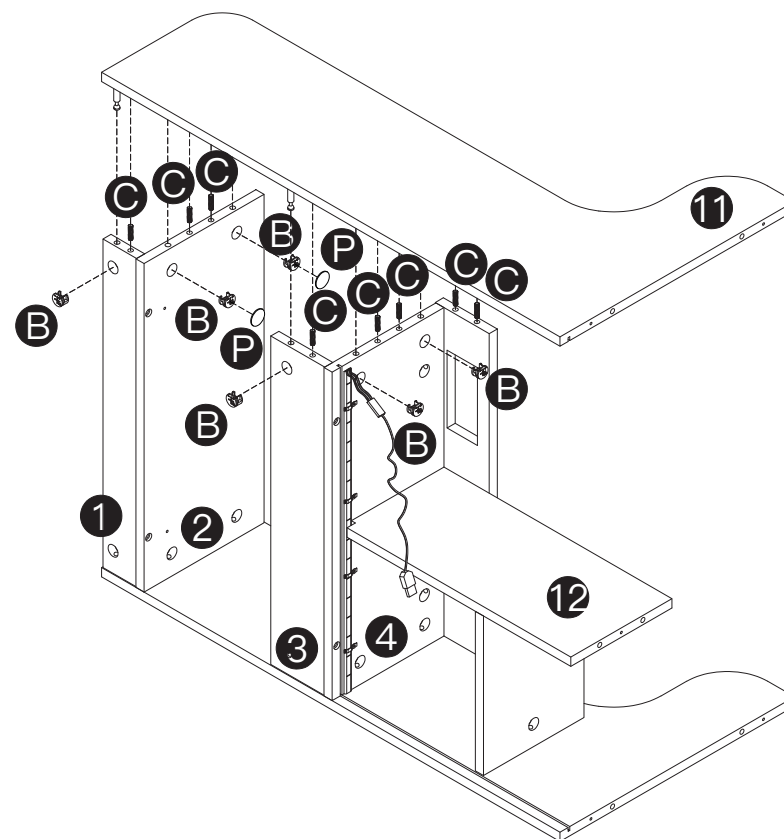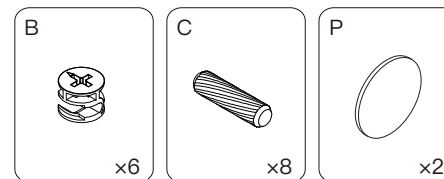




Step 10 Insert part 17 along the rabbet of part 11 & 14 .

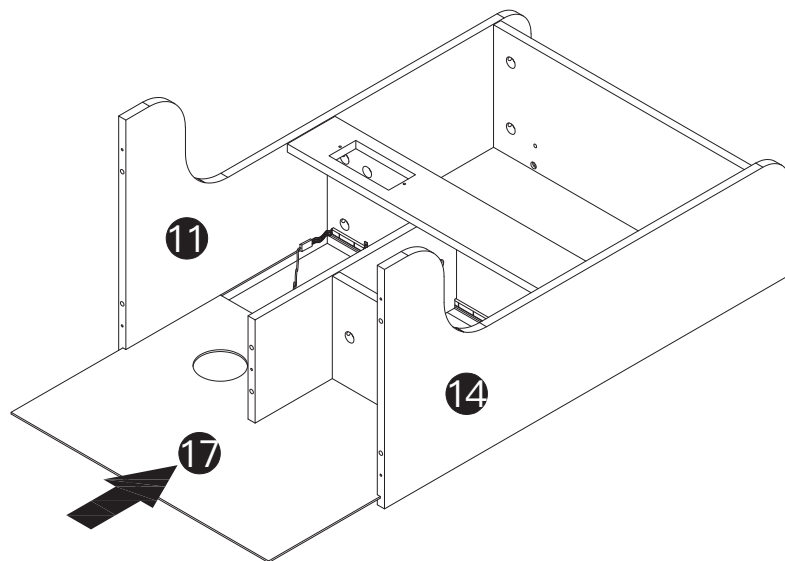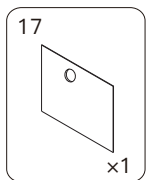







Step 11 Install part 6 on part 11 & 14 with part C , use part D to screw them.

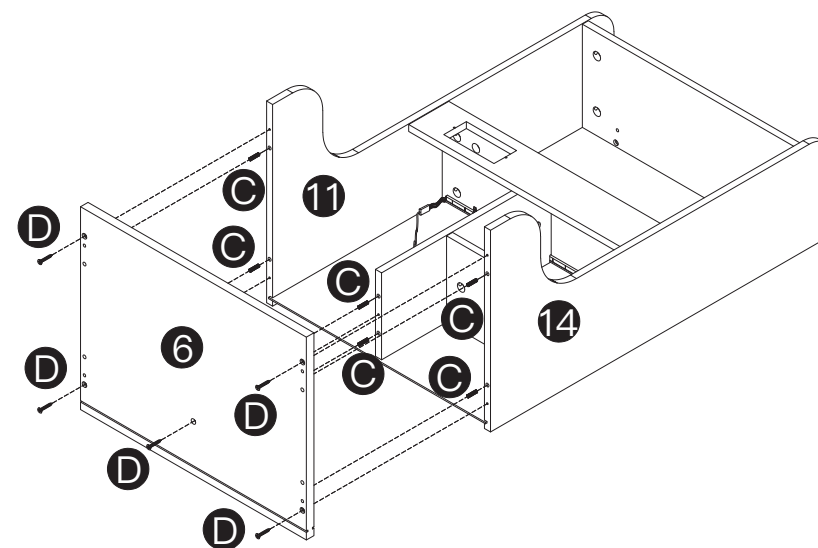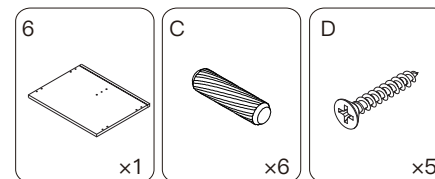



Step 12 Install part **A** on part **6**.

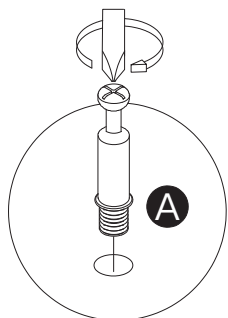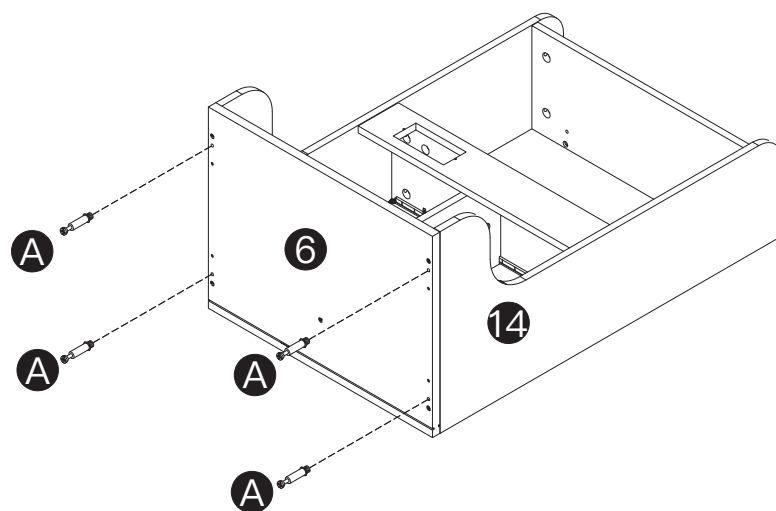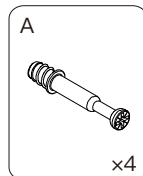



Step 13 Install part **9** on part **10** with part **C**, use part **B** to screw them.

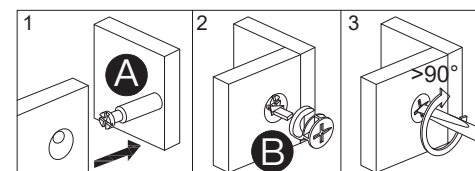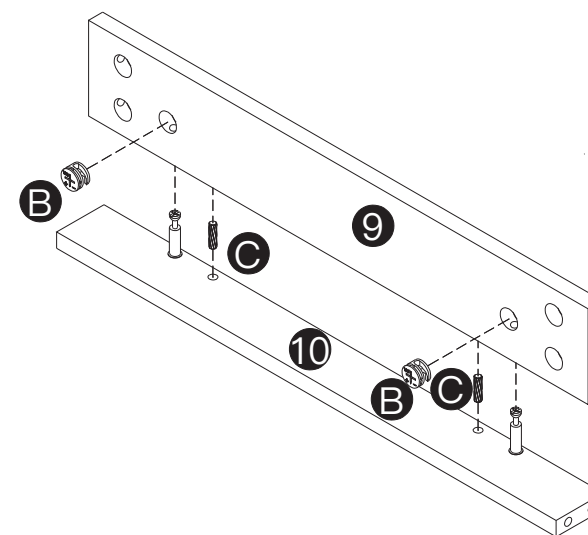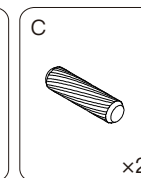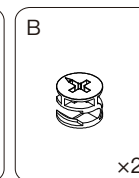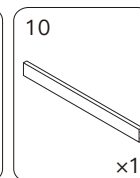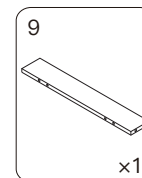


Step 14 Install part **A** on part **15** & **16**.

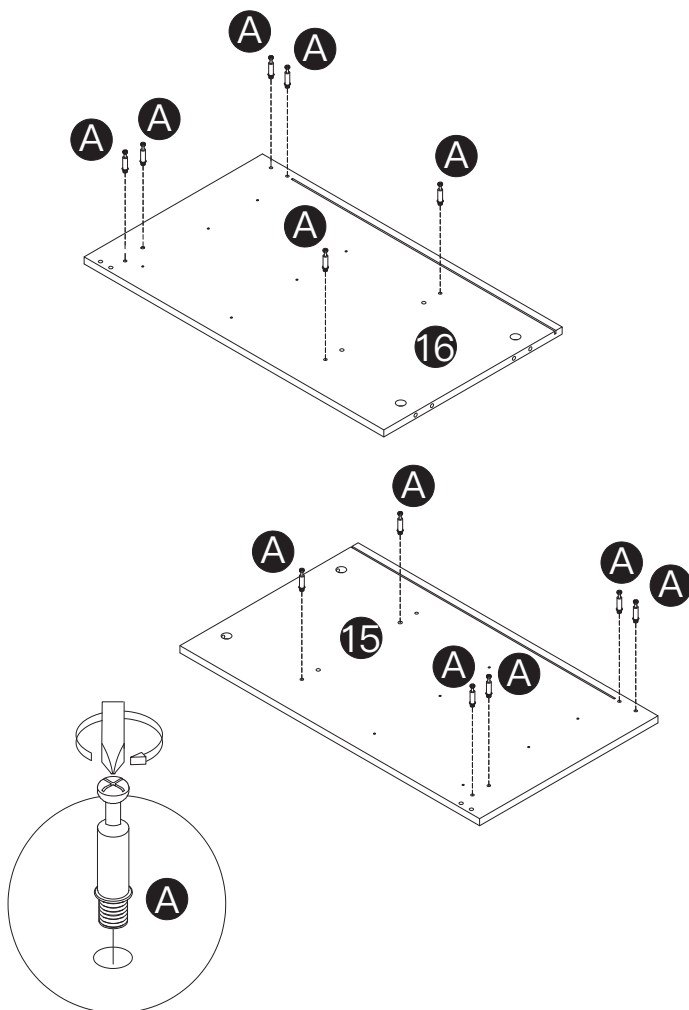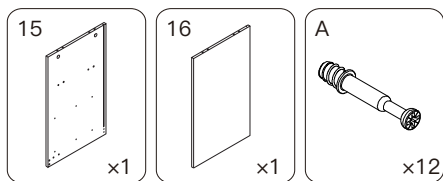



Step 15 Install part **CL** on part **15**, use part **E** to screw them.

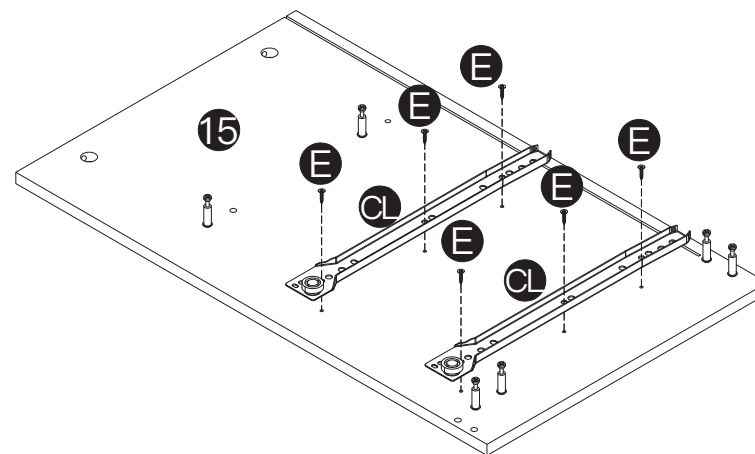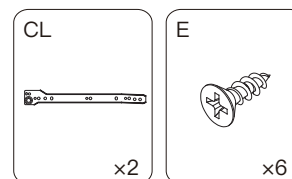


REMARK:

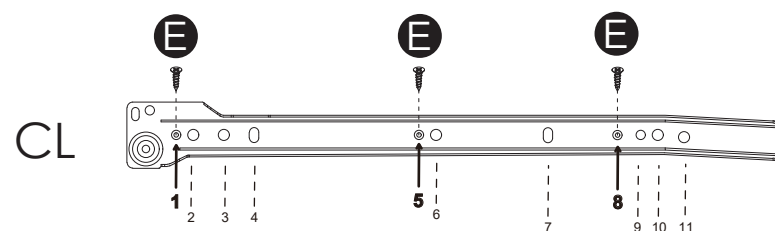




Step 16 Install part **CR** on part **16**, use part **E** to screw them.

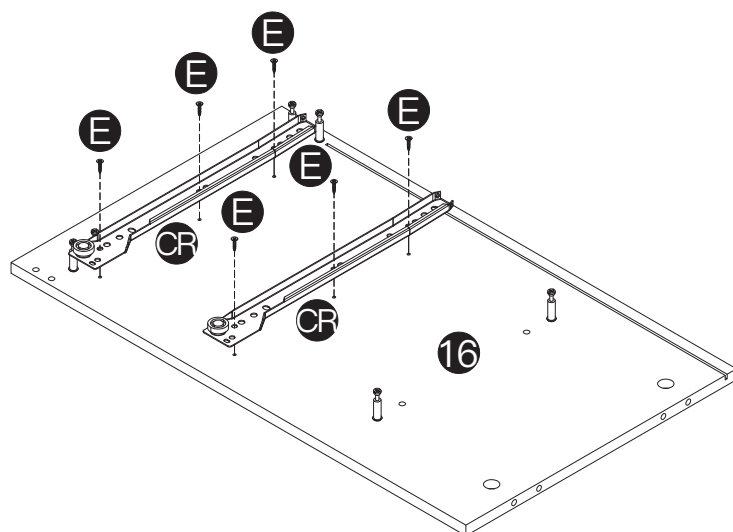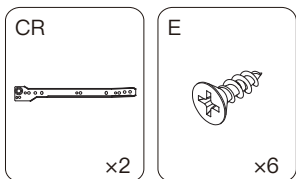



REMARK:

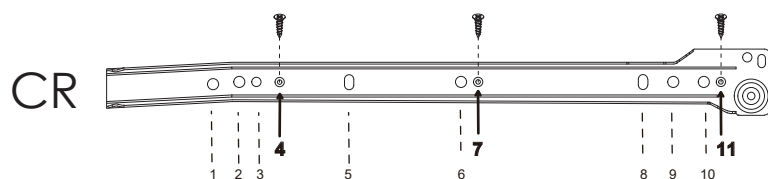





Step 17 Install part **7** & **8** & **9** & **10** on part **15** with part **C**, use part **B** to screw them.

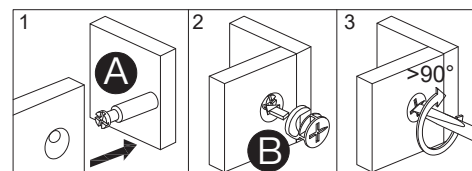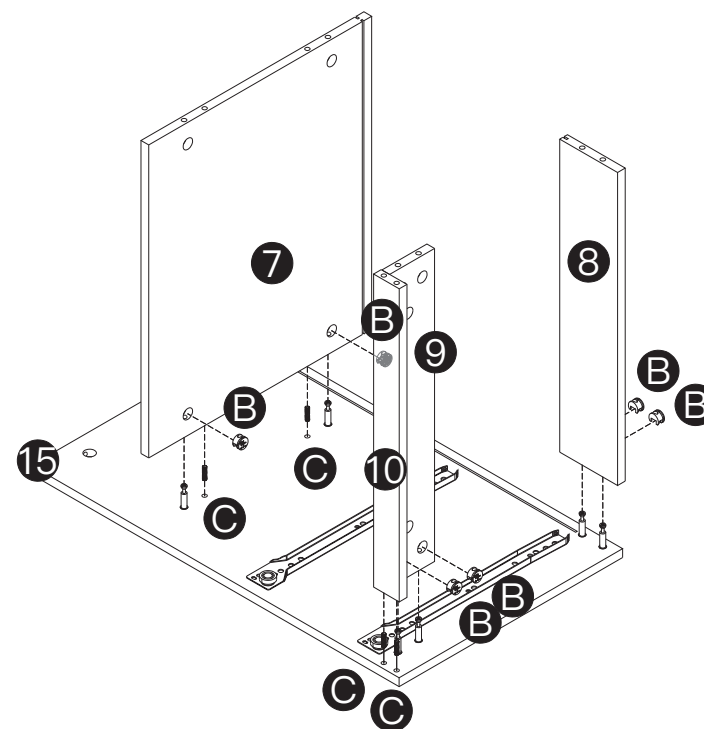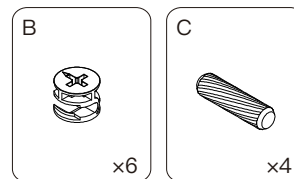



Step 18 Insert part 19 along the rabbet of part 7 & 8 .

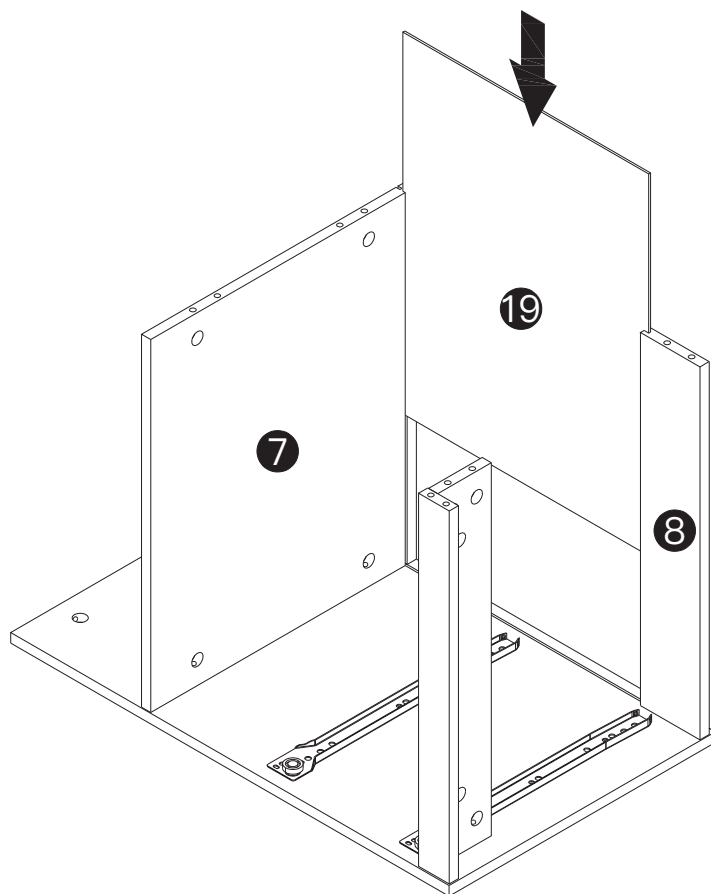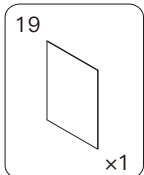







Step 19 Install part 16 on part 7 & 8 & 9 & 10 with part C , use part B to screw them.

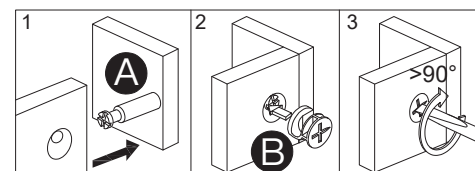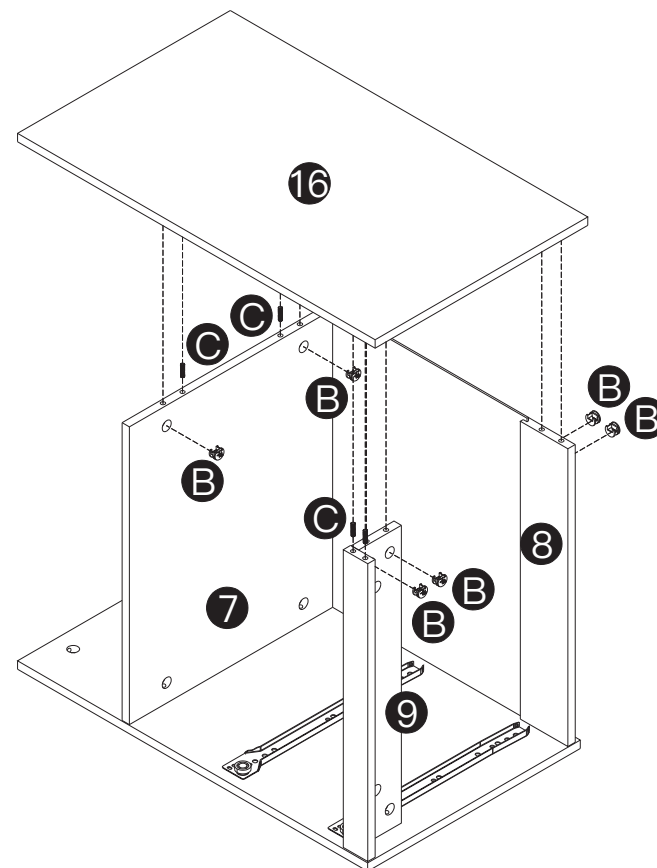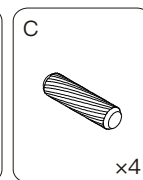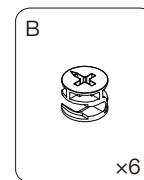

Step 20 Insert part **18** along the rabbet of part **15** & **16**.





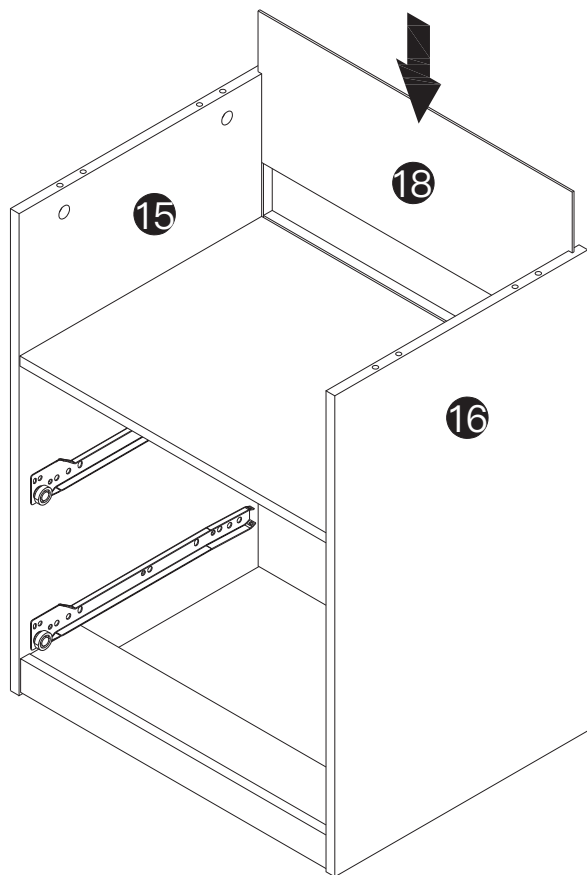
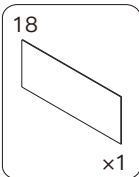


Step 21 Install part **6** on part **15** & **16** with part **C**, use part **B** to screw them, cover the hole with part **P**.

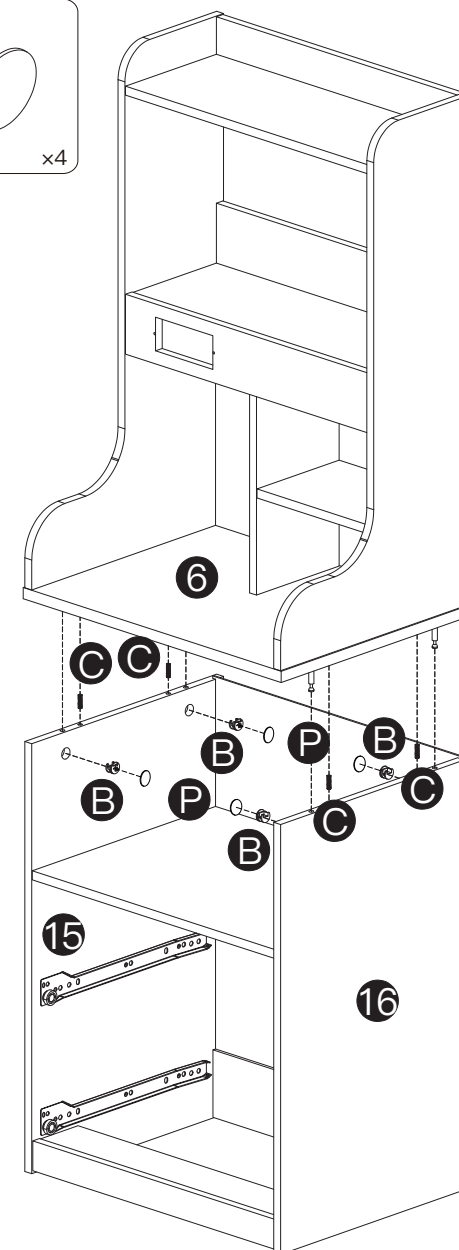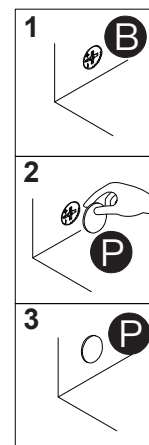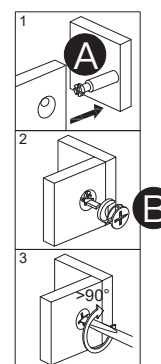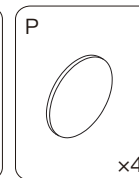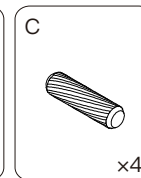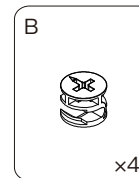




Step 22

Insert part **S** along the grooves of backboard, screw them with part **J**. Cover the holes with part **P**.

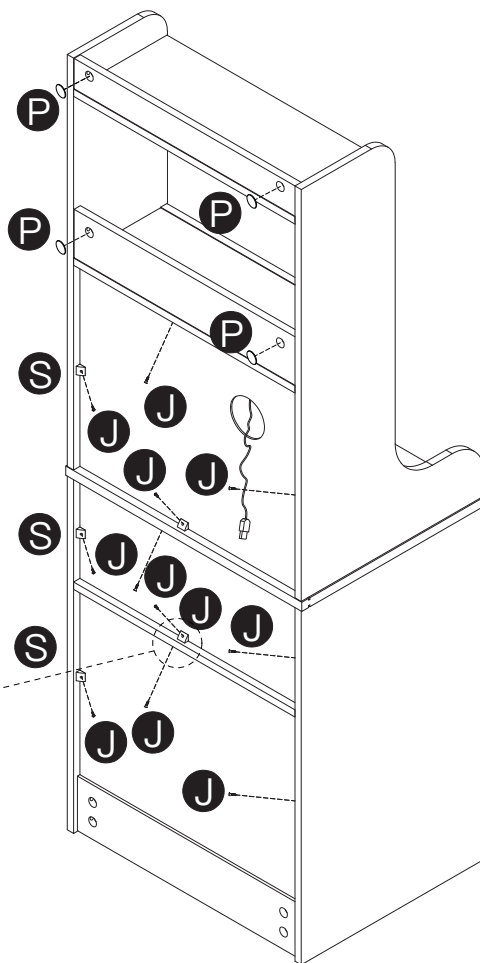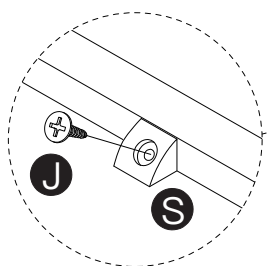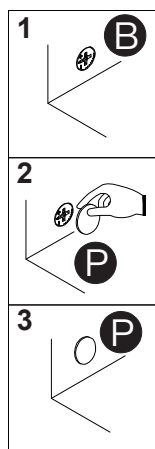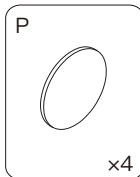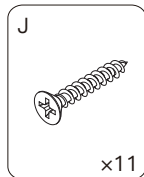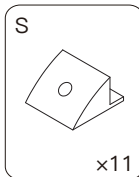



Step 23

Install part **F** on part **5**, use part **E** to screw them.

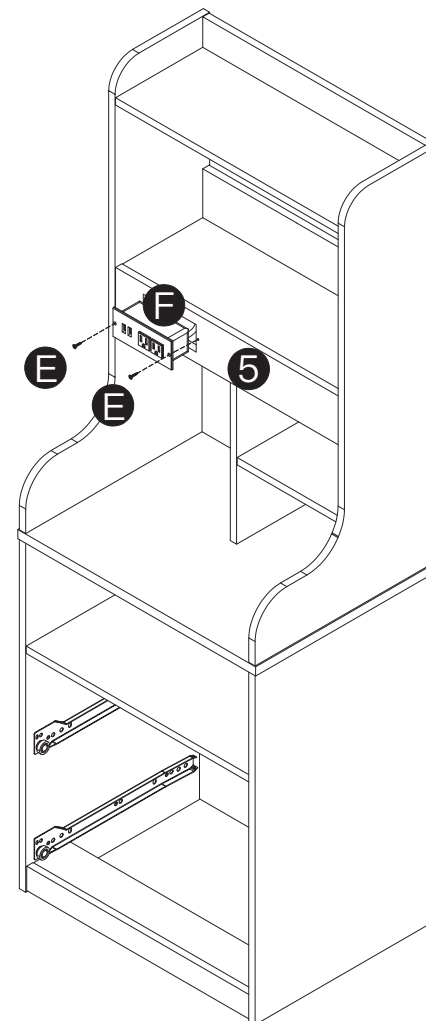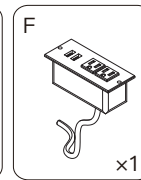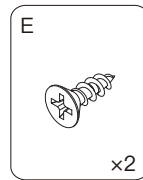

Step 24



Install part **A** on part **20**.
Install part **G** on part **20**, use part **H** to screw them.

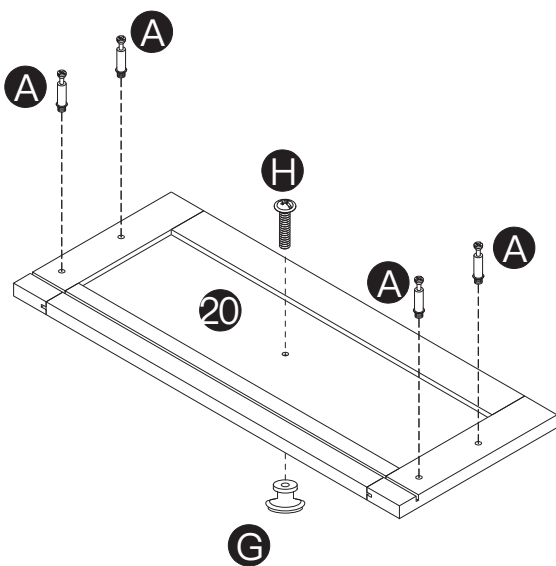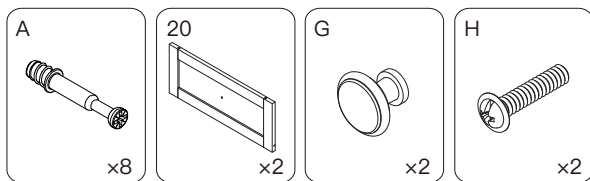

x2



Step 25

Connect part **21** and part **23** with part **22**,
use part **D** to screw them.

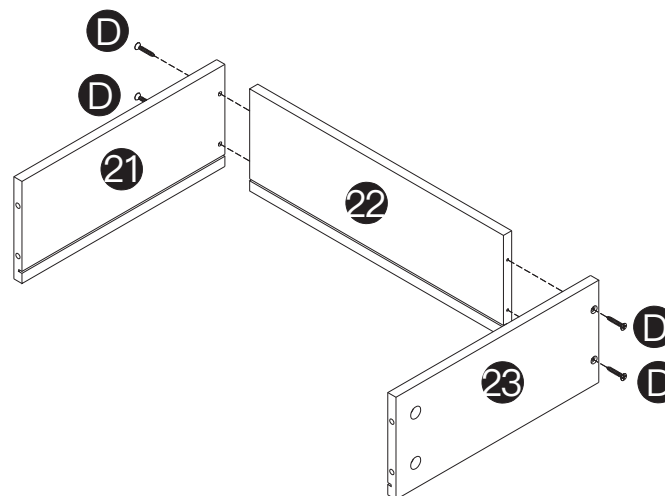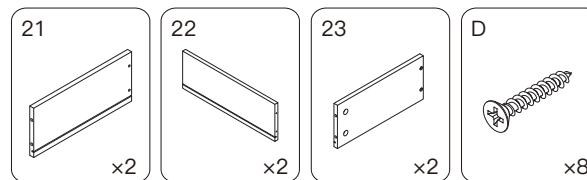




x2

Step 26 Slide part 24 into the rabbets of part 21 & 23 .

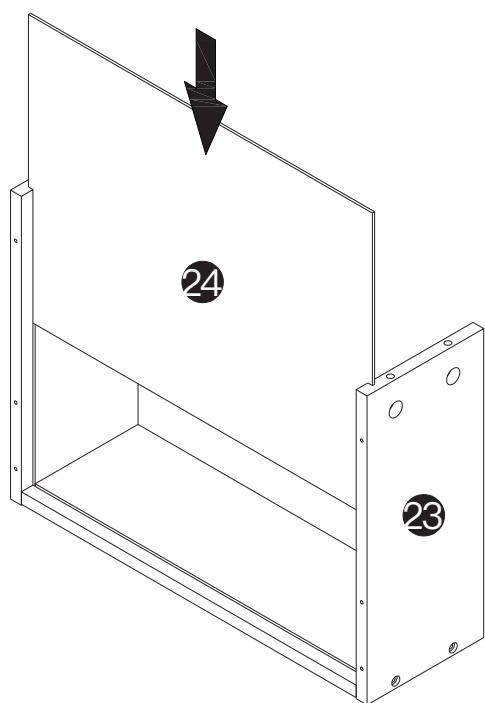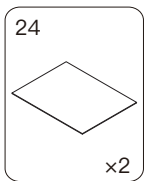

x2



Step 27 Install part 20 on part 21 & 23 , use part B to screw them.

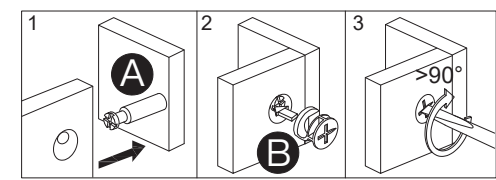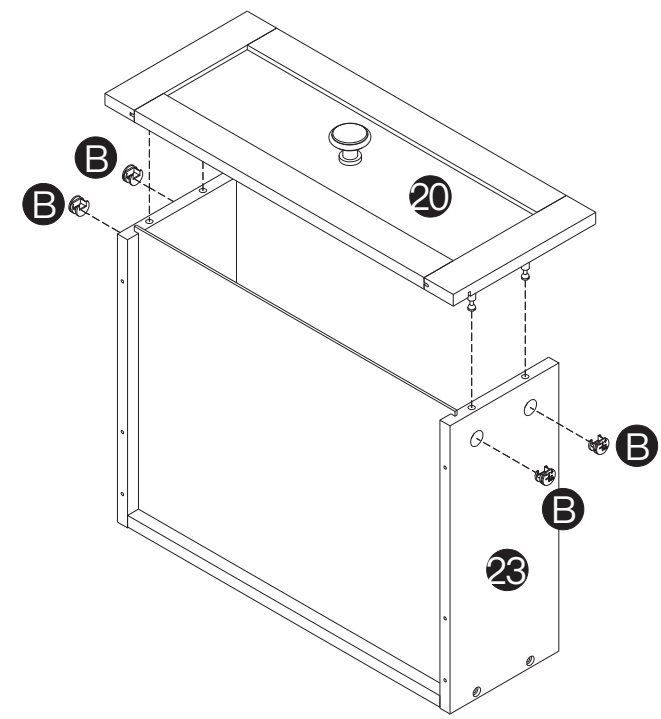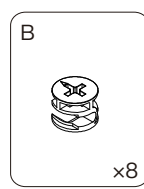

x2


Step 28

Install part **DL** on part **21**, install part **DR** on part **23**, use part **E** to screw them.

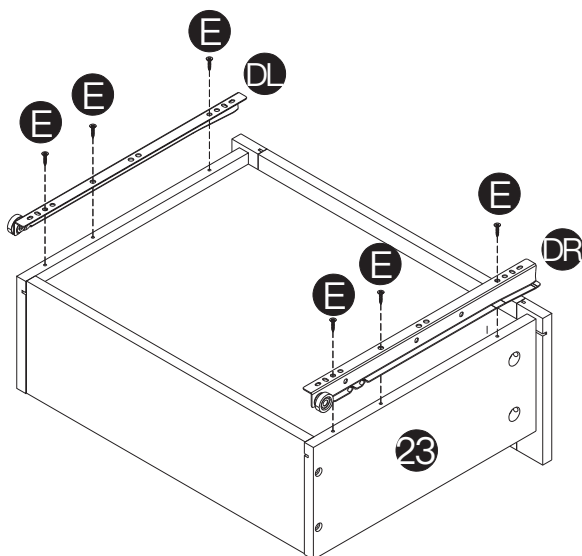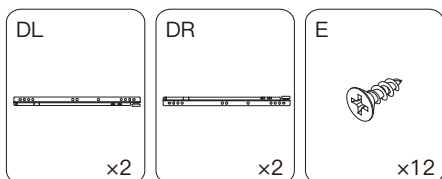


x2

REMARK:

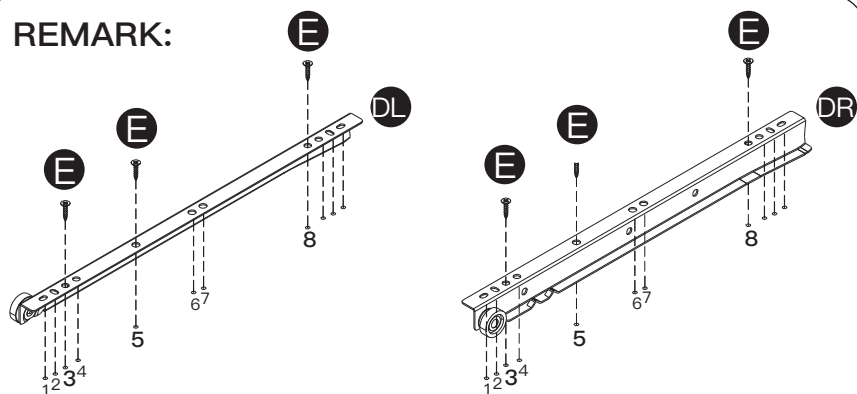


Step 29

Align and put all drawers in.

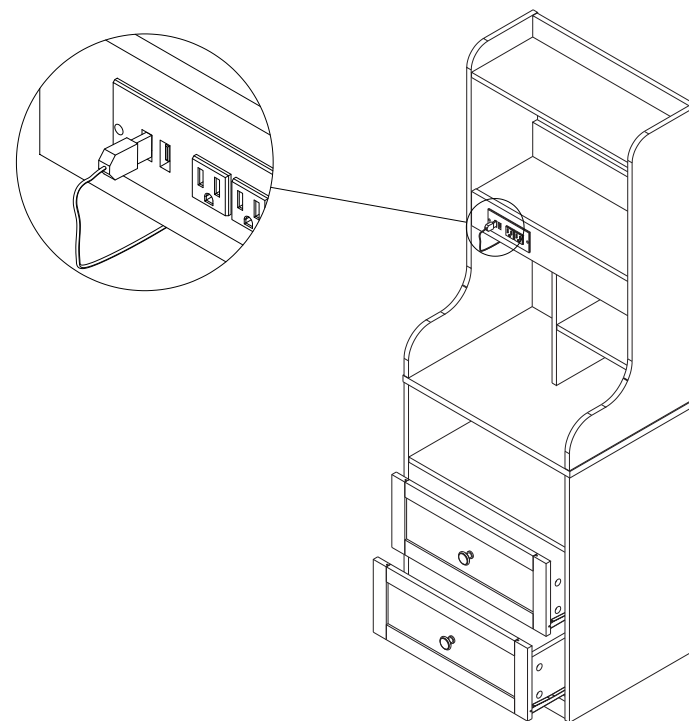

HOW DRAWER SLIDE CONNECTS THE CABINET

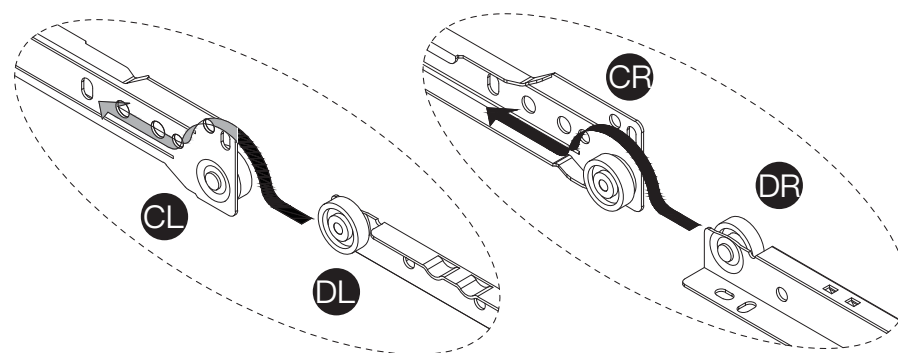


LEFT


RIGHT

Step 30

(Optional) Install the anti-tip device (part **K**) with part **D** & **L** & **M**.

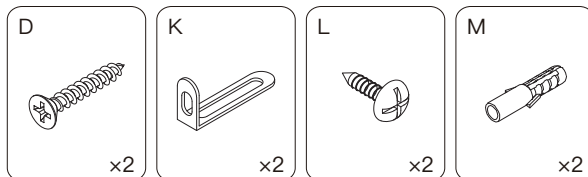

(1) Install part **K** on part **2** with part **L**.

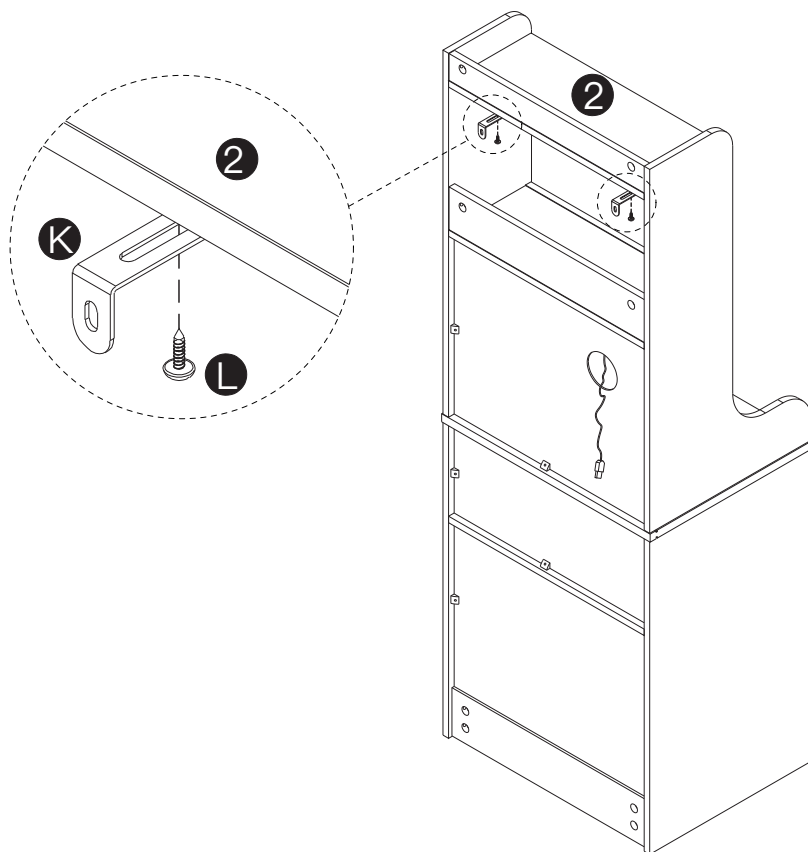

(2) Fix part **K** on the wall with part **D** & **M**.

