



# ANOOK<sup>®</sup> SHOWER NICHE

- ☑ The ultimate Space Saving bathroom accessory
- $\ensuremath{\boxtimes}$  Your home for shampoo, soap and shower essentials
- ${\ensuremath{\boxtimes}}$  The Foot Anook\* shaving and washing your legs made easy
- $\ensuremath{\boxtimes}$  Perfect in your shower, or as a bathroom shelf
- ☑ Easy installation, saving time & money
- ☑ The Waterproofer's friend with the Unique Perforated Flange for Secure Membrane Bonding
- ☑ Constructed from Hospital Grade 304 Stainless Steel
- Certified Registered Design





51101 51105 51107 Anook<sup>®</sup> Shower Niche Foot Anook<sup>®</sup> Shower Niche Anook<sup>®</sup> Shower Niche 200 x 100mm 400 x 300mm 600 x 300mm AVAILABLE **FINISHES** .39 .06 .23 51109 51111 51113 Brushed Brushed Titanium Nickel Gold Grev Anook<sup>®</sup> Shower Niche Anook<sup>®</sup> Shower Niche Anook<sup>®</sup> Shower Niche 600 x 400mm 900 x 300mm 900 x 400mm



ART INTERNATIONAL PLUMBING & BATHROOMWARE





ART PLUMBING PRODUCTS Innovative Plumbing Fittings



BOUNTY BATHROOMWARE Designer Bathroom Fittings

## **Timber Stud Wall Installation**

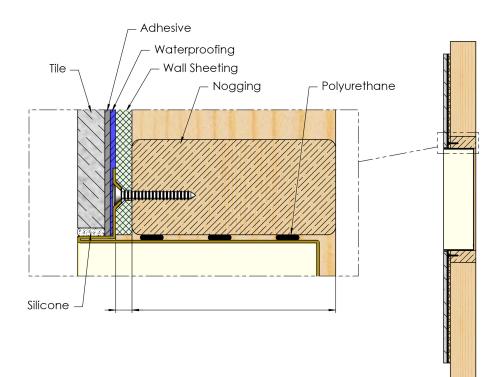

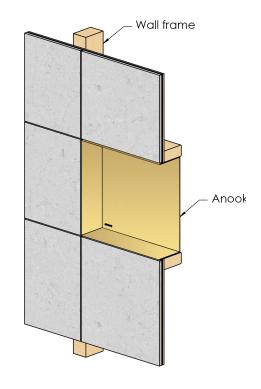

#### Installation Instructions:

- Step 1: Select location for Anook® installation.
- Step 2: Install bracing / mounting timbers as required to suit the Anook<sup>®</sup> size selected.
- Step 3: Install wall sheeting to wall frame.
- Step 4: Using Anook® as a template, mark fixings location on sheeting.
- Step 5: Drill 4mm pilot holes to a depth 30mm.
- Step 6: Countersink the wall sheeting with tool supplied, to allow flush fitment of Anook<sup>®</sup>.
- Step 7: Position the Anook<sup>®</sup> level in the opening and install supplied fixings.
- Step 8: Apply waterproofing to the perforated bonding flange and sheeting junction.
- Step 9: Ensure waterproofing has cured prior to commencing tiling.

#### Youtube Videos:

https://youtu.be/MNxaAgTn6ls https://youtu.be/-W\_KHuLPyAA

### Subscribe to our channel

https://www.youtube.com/@artplumbingandbathroomware



#### NSW, Victoria & ACT

134 Gilba Road Girraween, NSW 2145 sales@artaust.com.au | www.artaust.com.au Phone: 02 9636 2131 | Fax: 02 9636 2498







Unit 1, 10-12 Glasson Drive, Bethania QLD 4205 salesqld@artaust.com.au | www.artaust.com.au Phone: 07 3805 6664 | Fax: 07 3805 6668

BOUNTY BATHROOMWARE

\_\_\_\_\_ Designer Bathroom Fittings

**PROUDLY DISTRIBUTED BY:** 



New Zealand sales@artnz.co.nz | www.artnz.co.nz Phone: 0800 642 184



Find us on Facebook and Instagram @artplumbinginternational and @artplumbingnewzealand



Scan QR Code for Installation Instruction Animated Video