


EVRE

MIAMI RATTAN SET


ASSEMBLY INSTRUCTIONS

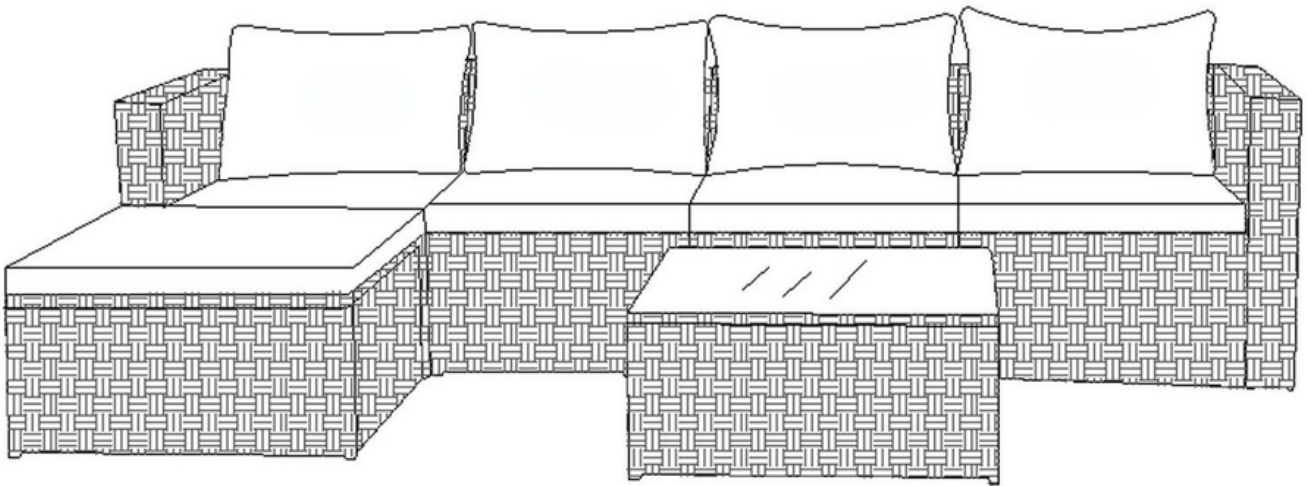


Rev: 01/2019

Assembly Instructions


Sofa - Centre Section

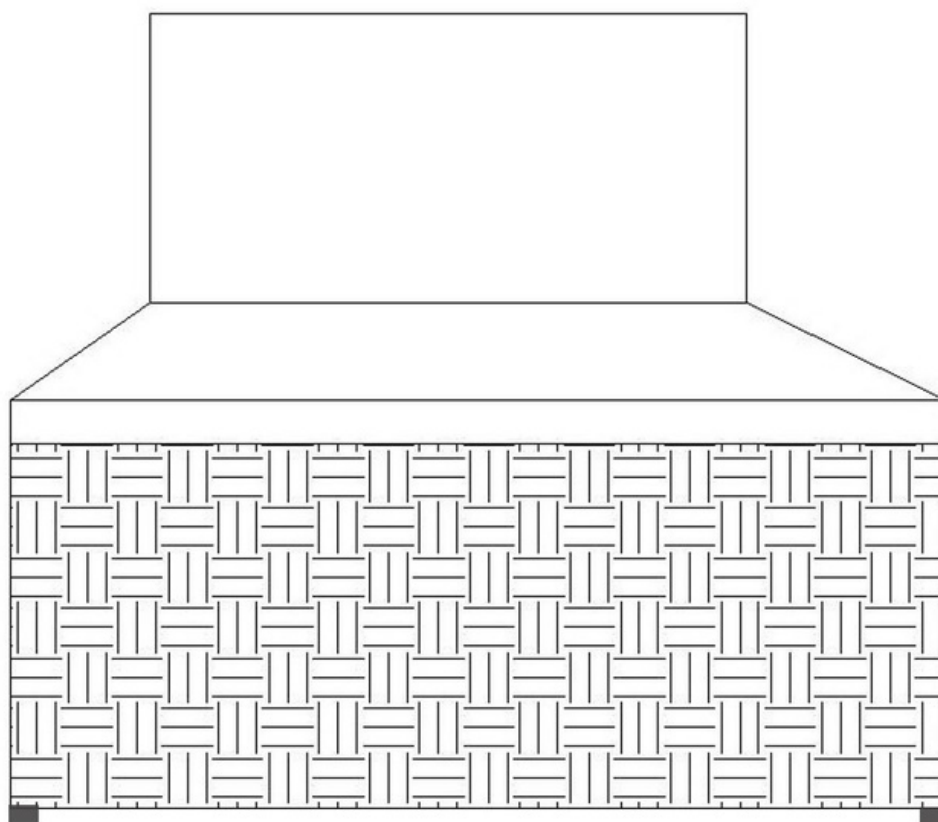


Parts list

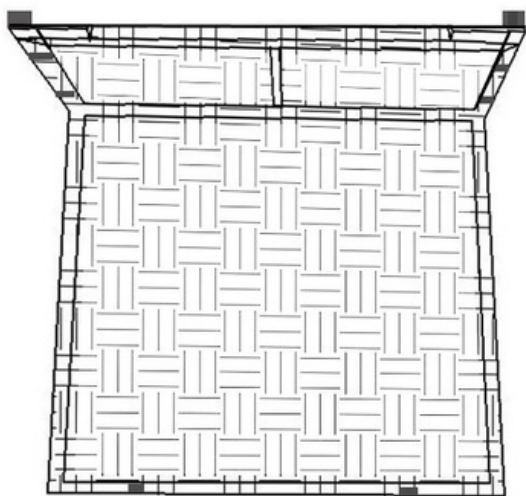


A 1PC

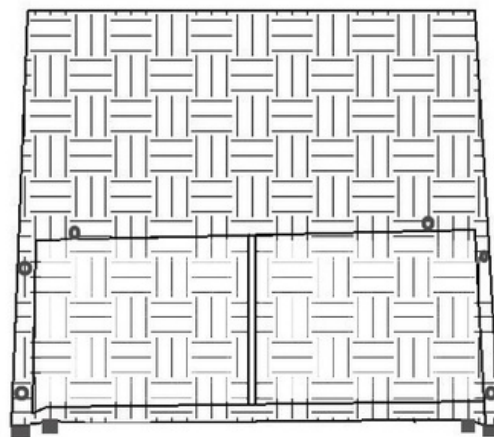

B 1PC

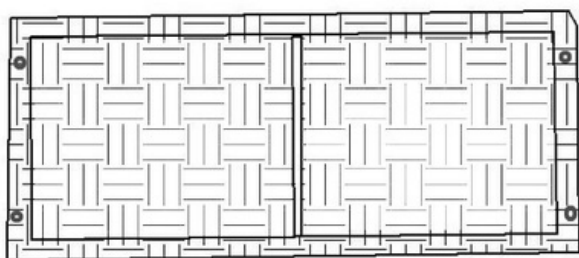


C 2PCS

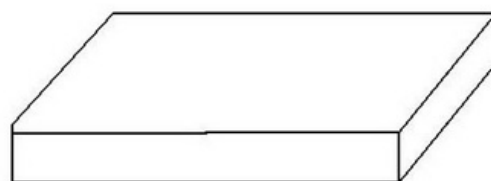


D 1PC



E 1PC



a $\text{Ø}6*35$
4 PCS



b $\text{Ø}6*45$
6 PCS




c $\text{Ø}6$
16PCS




e $\text{Ø}6$
6PCS

Installation Steps


STEP 1

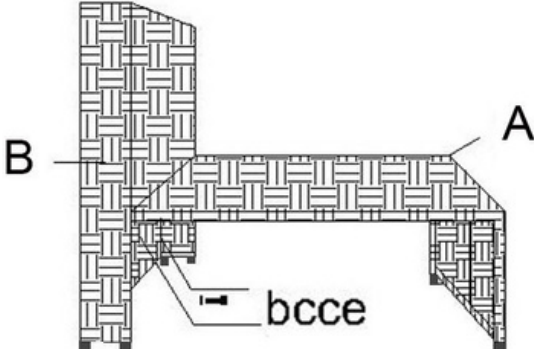


STEP 2

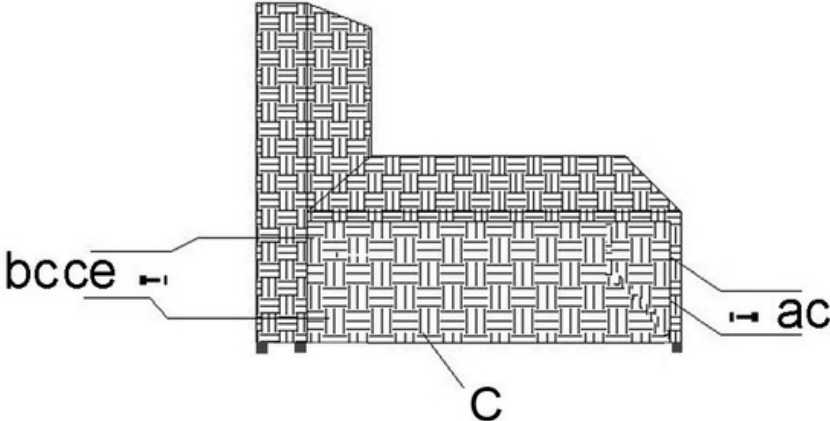

STEP 3

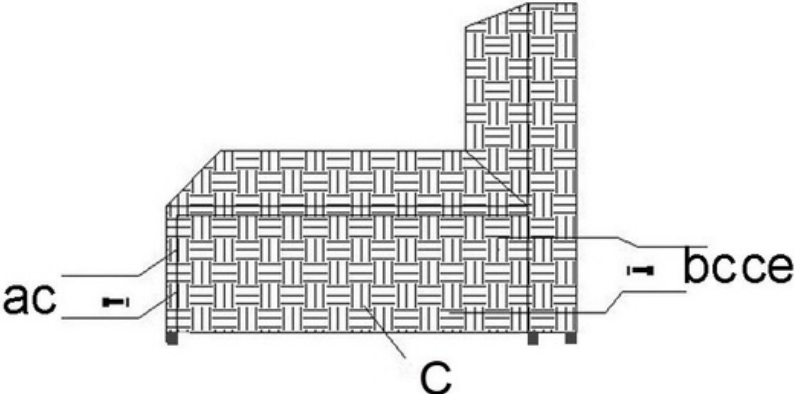


STEP 4

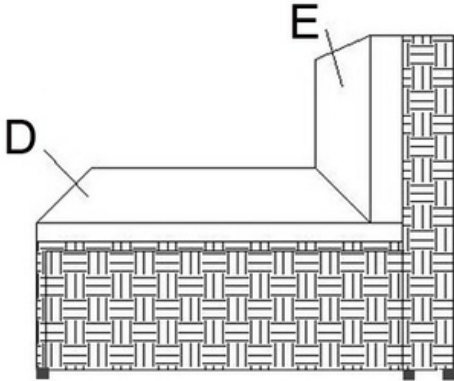


Assembly Instructions


Sofa - Right Arm Section

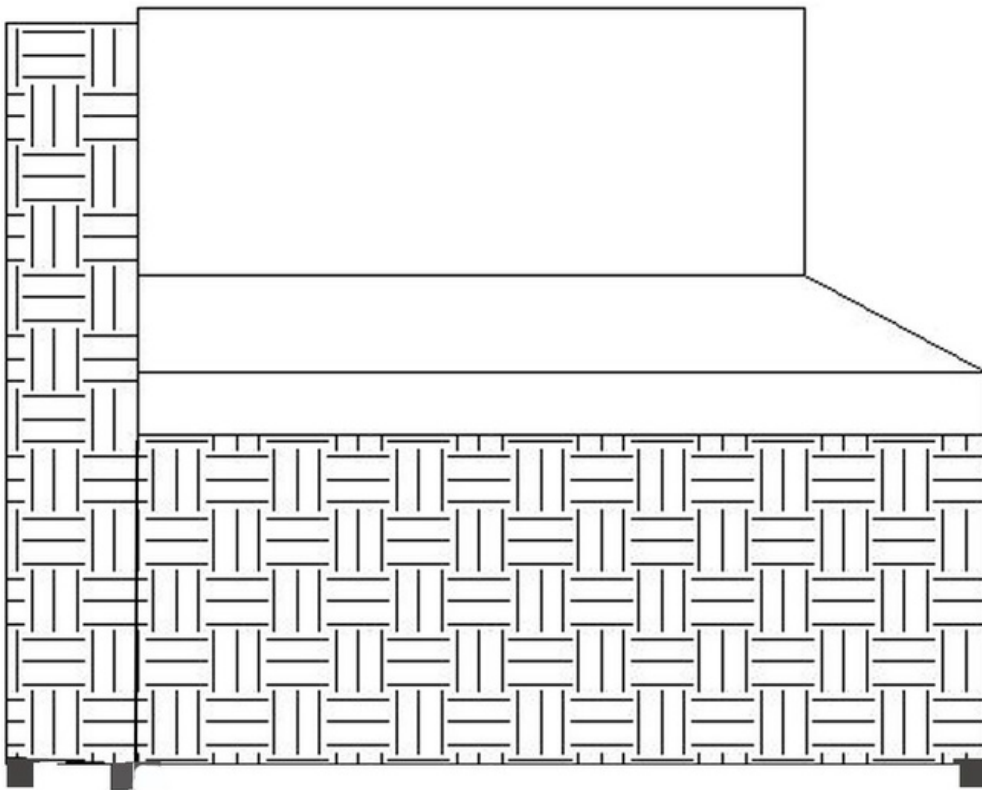


Parts list

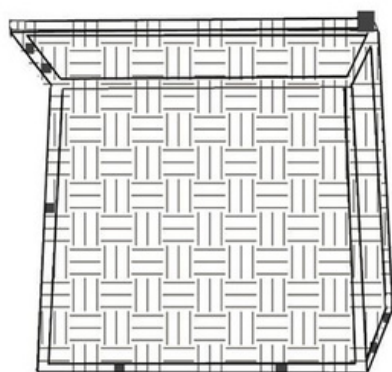


H1PC

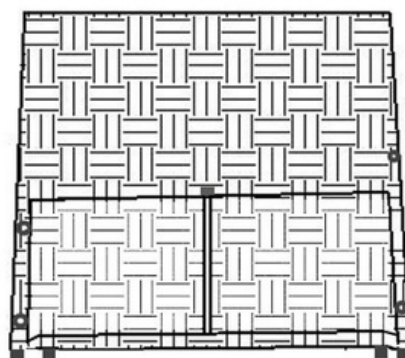


F 1PC

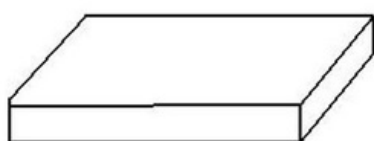

I 1PC

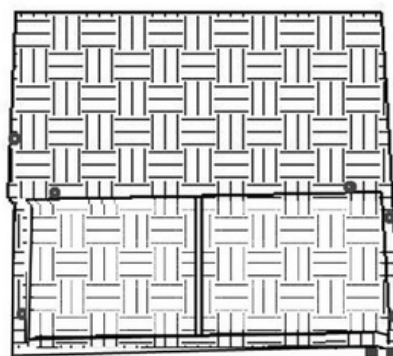


G 1PC



J 1PC



a $\text{Ø}6 \times 35$
2PCS



b $\text{Ø}6 \times 45$
7PCS




c $\text{Ø}6$
16PCS




e $\text{Ø}6$
7PCS

Installation Steps


STEP 1

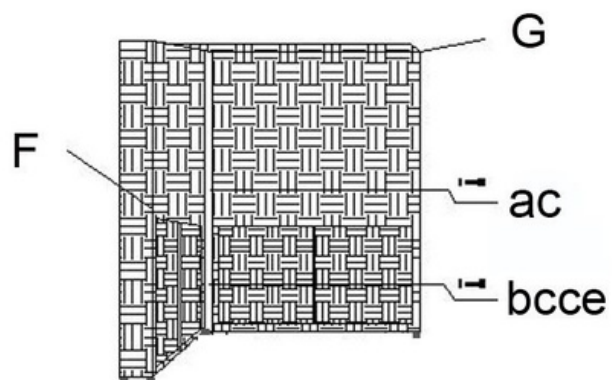


STEP 2

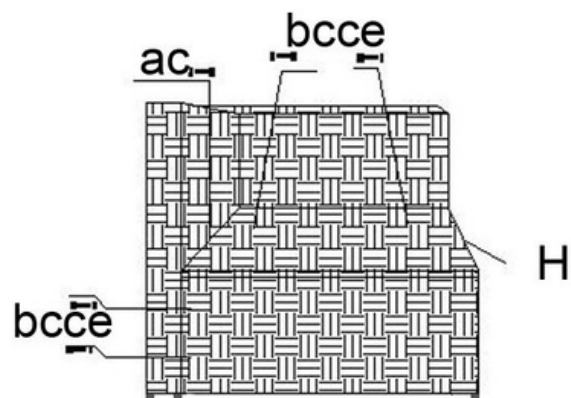

STEP 3

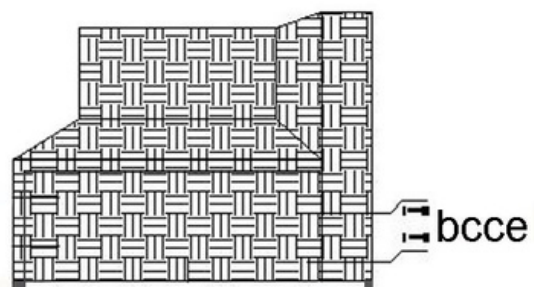


STEP 4

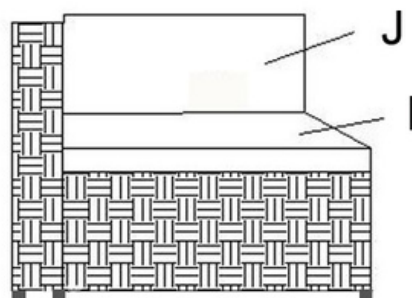


Assembly Instructions


Sofa - Left Arm Section

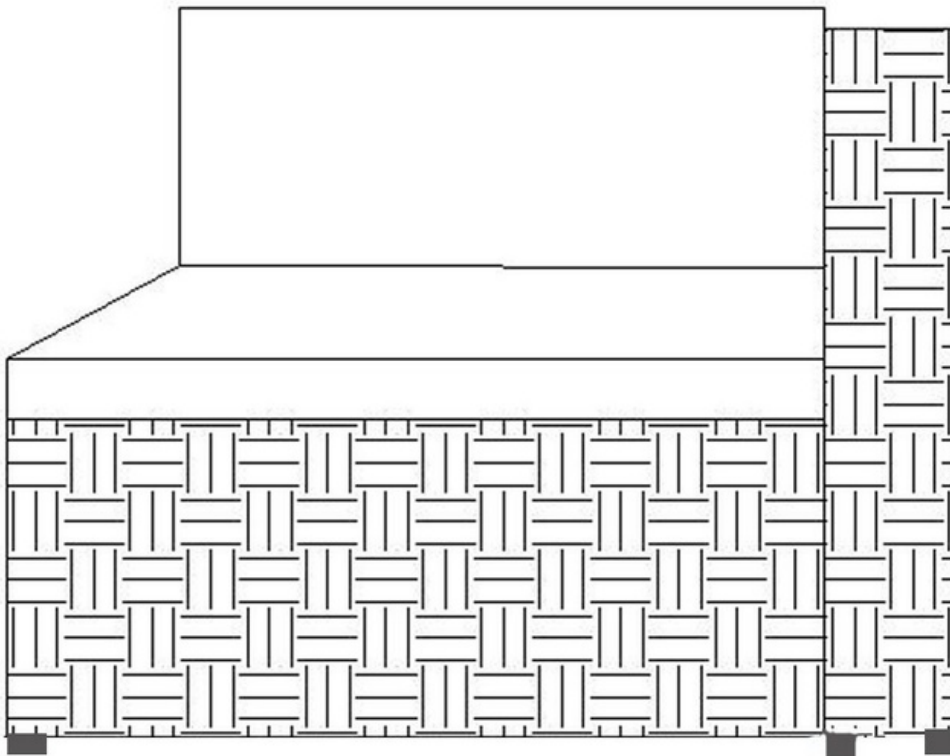


Parts list

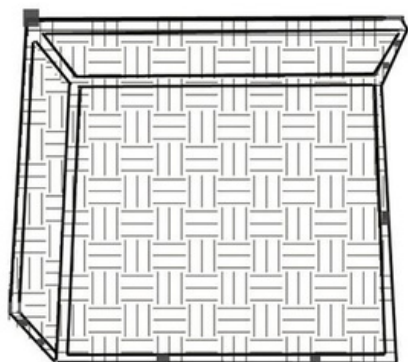


P 1PC

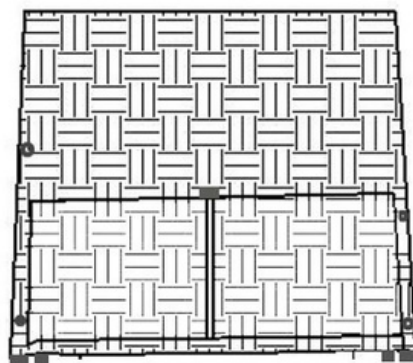


K 1PC

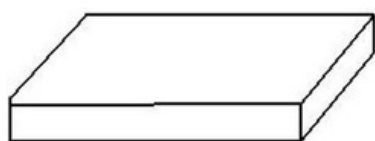


I 1PC

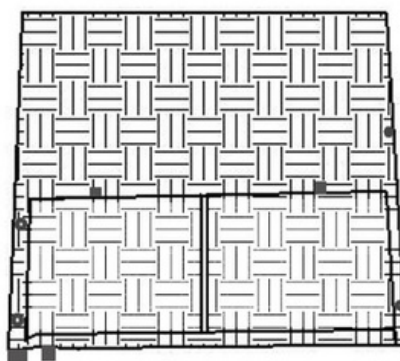


O 1PC



J 1PC



a $\text{Ø}6 \times 35$
2PCS



b $\text{Ø}6 \times 45$
7PCS




c $\text{Ø}6$
16PCS




e $\text{Ø}6$
7PCS

Installation Steps


STEP 1

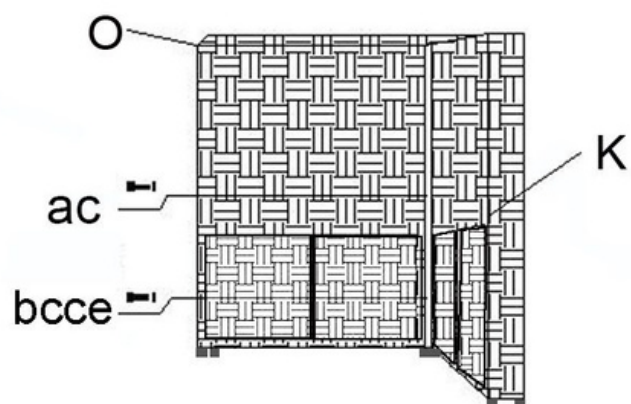


STEP 2

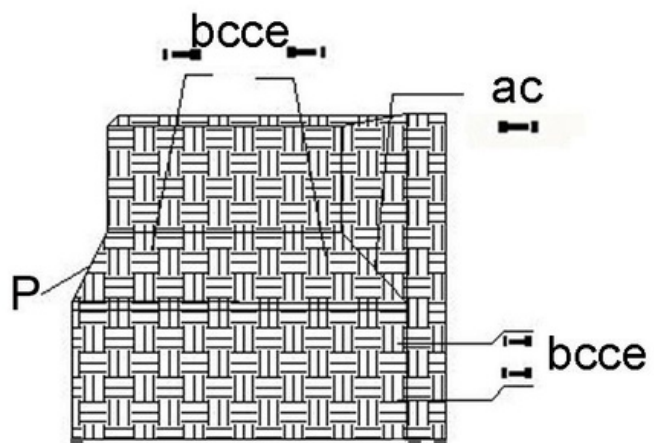

STEP 3

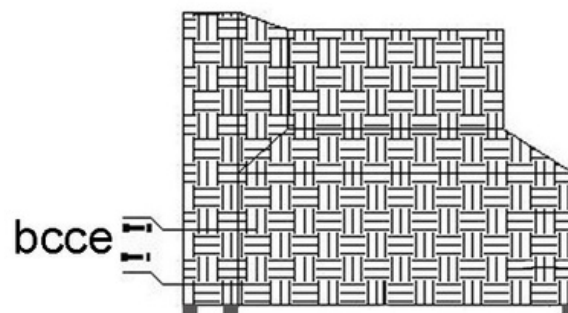

STEP 4

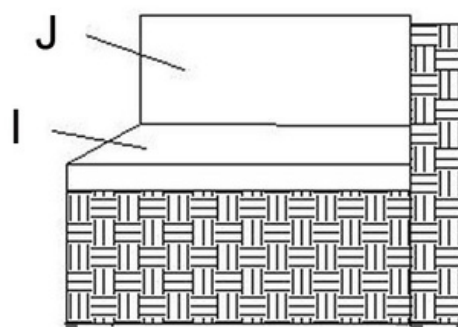

Maintenance Instructions

- After completing assembly, we recommend applying Anti Rust Spray such as Hammerite on bolts and connecting points.
- Please clean and maintain the rattan furniture with soft damp cloth or sponge to remove any dirt or residue.
- Try to keep an Outdoor furniture cover on your set when not in use. Please do not leave cushions outside without any protection.
- Never use abrasive cleaners on furniture.
- For Customer support or parts enquiries please email: Support@evre.co.uk