



HOW TO INSTALL COMPRESSION FITTINGS

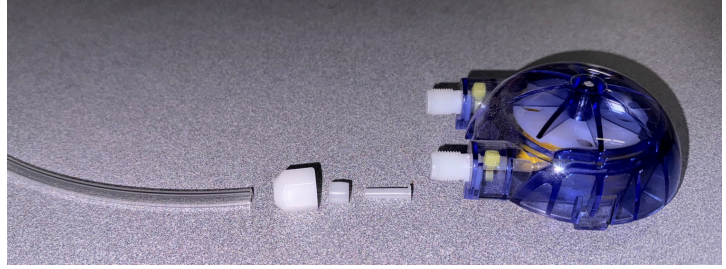


PUSH COMPRESSION NUT ONTO TUBING
WITH THREADED END OF COMPRESSION NUT
FACING CUT END OF TUBING.



PUSH COMPRESSION RING ONTO TUBING,
LEAVING A ½ INCH GAP BETWEEN THE
COMPRESSION RING AND CUT END OF TUBING.

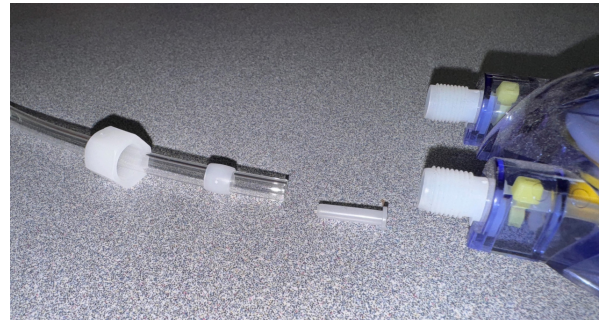


PUSH THE INSERT INTO THE CUT END OF THE TUBING
SO THAT IT IS FULLY SEATED INTO THE TUBING.

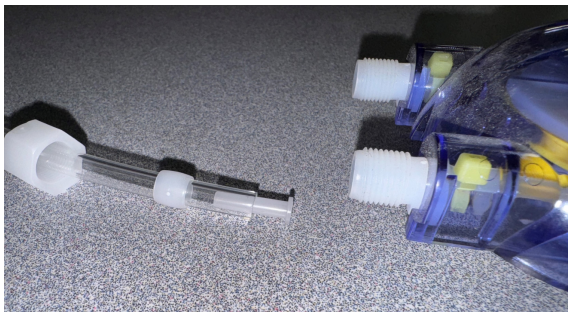


YOU ARE NOW READY TO INSTALL THE
TUBING INTO THE FITTING ON THE PUMP

MAKE SURE TO FULLY INSERT
THE TUBING INTO THE FITTING
ON THE PUMP.

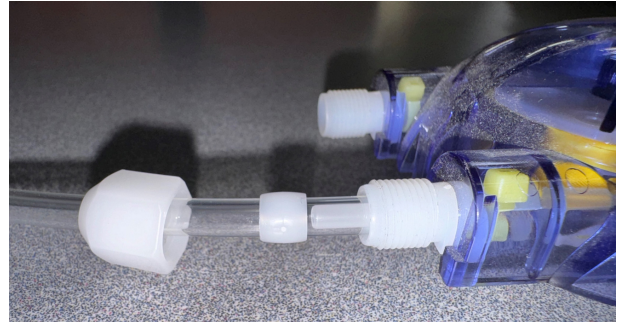

WHILE KEEPING THE TUBING FULLY
INSERTED INTO THE FITTING, PUSH THE
COMPRESSION RING ON TO THE TOP OF
THE FITTING ON THE PUMP.

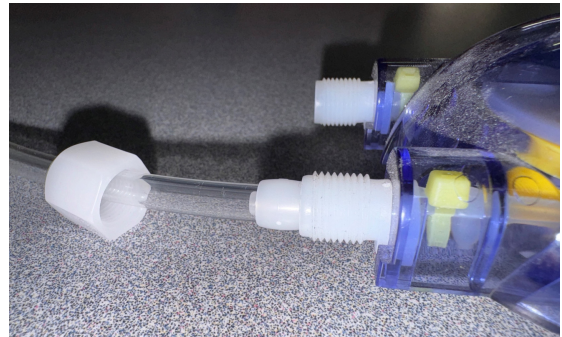

DO THE SAME WITH THE COMPRESSION
NUT AND TIGHTEN IT DOWN.

