

## MAINTENANCE RECOMMENDATIONS FOR SLIP RESISTANT SHEET

Accolade Foothold® , Accolade Safe® , Natralis™ Foothold, Safeguard®  
Ranges (Design, R10, R11, R12)



### Initial Care:

After installation is completed:

1. Remove all debris (sweep or vacuum).
2. Damp scrub (medium bristle broom/brush) using a pH 7.0-8.5 neutral cleaner (follow manufacturers instructions), rinse floor & allow to dry. Allow 48 hours before carrying out the following:
  1. Sweep or vacuum
  2. **Light soiling** — Damp scrub (medium bristle broom/brush) using a pH 7.0-8.5 neutral cleaner, rinse floor & allow to dry.
  3. **Heavy Soiling** — Wet scrub using automatic scrubbing machine or single disc polisher ≤600RPM (medium bristle brush) and a pH 7.0-8.5 neutral cleaner.



### Routine care:

Frequency and type of maintenance required depends on traffic flow, application, environmental conditions and customer requirements. **Light** and **accent colours** can require more maintenance, where practical choose darker, more camouflaging colours.

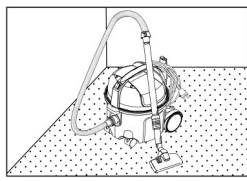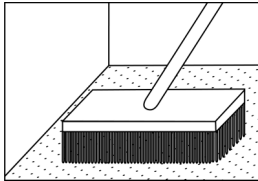

### Daily:

- Sweep, vacuum thoroughly to remove all soiling, dirt and dust.

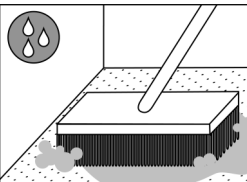
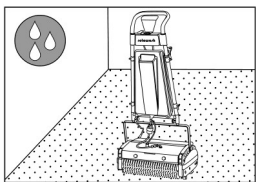


### Daily / Regular:

- Damp/Wet Scrub Auto Scrubber (Rotowash or similar) medium bristle nylon brush and a pH 7.0-8.5 neutral cleaner.

### Regular:

- Spot scrub edges & fixtures using medium bristled nylon broom/brush and a pH 7.0-8.5 neutral cleaner).

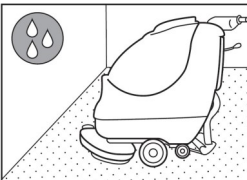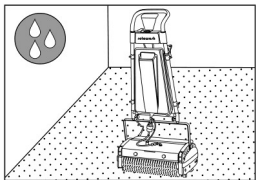

### Regular: Large & unobstructed areas,

- Wet Scrub using automatic scrubbing machine (Rotowash or similar) or single disc Auto scrubber ≤600RPM (use medium nylon brush) and a pH 7.0-8.5 neutral cleaner.

For further Armstrong Flooring information:

Free call 1800 632 624

[www.armstrongflooring.au](http://www.armstrongflooring.au)

## MAINTENANCE RECOMMENDATIONS FOR ARMSTRONG FLOORING PRODUCTS

### PROTECTING YOUR INVESTMENT

#### Protection:

All vinyl flooring should be protected during the construction period.

Armstrong Flooring **DOES NOT** recommend the use of plastic materials for the protection of vinyl floor or wall products during construction (e.g. builder's plastic, corflute®, sticky back carpet or vinyl protector or films), these materials can damage the floor/wall.

Armstrong Flooring recommends the use of the lining felt from inside the roll as surface protection.

Alternatively the use of cardboard or paper products would be acceptable.

Where additional or solid protection is required first install lining felt, cardboard or paper and then rigid material over this (plywood, hardboard, corflute® etc).

**ENSURE** surface protection is applied over clean floors only.

**DO NOT** tape/stick protection directly to the floor

**DO NOT** allow water to sit on or under the protection materials (this could damage the floor and/or cloud the protective polyurethane).

**DO** use walk-off mats that are as wide as the doorway entrances and long enough (min. 3 average paces) to trap dirt before reaching the resilient floor. Ensure that walk-off mats are cleaned frequently.

Sand and grit are abrasive and can damage floors; stopping dirt at the entrance means less dirt trafficked through the building, protecting your investment and helping keep maintenance costs down.

Ensure all furniture legs have well maintained non-abrasive feet. Exposed metal legs can damage flooring.

**DO NOT** leave rubber products such as chair feet, tyres & mats in contact with the vinyl floor, these can cause staining.

#### Stain Removal:

Treatment should be carried out when stains are fresh, immediately remove contaminant. Spot clean with a neutral floor cleaner using soft nylon brush. After stains have been removed, rinse floor with clean water and allow to dry.

#### Warnings & General Hints:

1. Follow Armstrong Flooring recommended maintenance procedures using pH (7.0-8.5) neutral cleaners (follow manufacturers instructions).
2. As with all vinyl flooring, the use of the following chemicals, highly acidic, alkali, caustic or solvent agents such as hydrochloric/sulfamic acid, paint stripper, benzene, toluol, acetone or strong scouring powders may damage floors if exposed for prolonged periods.
3. Adhesive residue may be removed using a clean white cloth dampened with small amounts of mineral turps, carefully following warnings on container, immediately rinse with clean water (test in inconspicuous area first)
4. Auto scrubbing in unobstructed areas takes approximately 20% of the time of damp mopping. For maximum efficiency use damp mopping in obstructed areas only.
5. Spot mopping / spot scrubbing should be used when necessary. **Spillages** – post wet floor signs and wipe up immediately. Allow to dry and remove signs.

Braeside Mills Operations Pty Ltd t/as

Armstrong Flooring™

#\* i \$\* > 7]d C` RUL3cRVdZUVt\$\*\* & GTè cR 2f decR]R

7` cW/cèYVcZ\_Wc^ ReZ \_ R\_U dR^ a]Vd+  
2f decR]R 7cVTR]]")!! ' \$# ' #%  
` cT` \_eRTef dgR` f ch VSdZV

h h h R^ dec` \_XV]` cZ\_XRf

M4175 OCT 2023