


Redmond Monitor Stand™ USER GUIDE

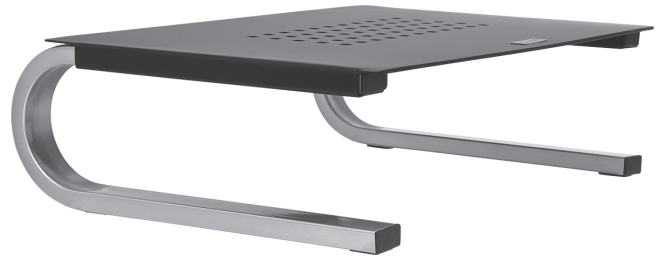

ASSEMBLY

Before the Redmond Monitor Stand is ready for use its legs need to be connected to the platform. The platform's front is the non-lip end with the Allsop logo, the back is the end with the lip pointing downward (see image 1).

Remove the thumbscrew from the leg. Insert the leg through the available slot on the underside of the platform (see image 2). The platform should be positioned so that the leg enters the slot from back to front, the 'C' of the leg should face to the front of the platform (see image 1). Line up hole in leg with hole in slot. Insert and tighten thumbscrew until secure. Now repeat this process for other leg.

NOTES

- #1 The legs will be a snug fit after assembly, so it may take some additional force to initially get the legs to slide and snap into place.
- #2 You may want to put the front of the platform against a flat, hard surface so that the platform is vertical (see image 3) and now you can easily and firmly nudge the legs into place. Once both legs are in place the stand is ready for use.

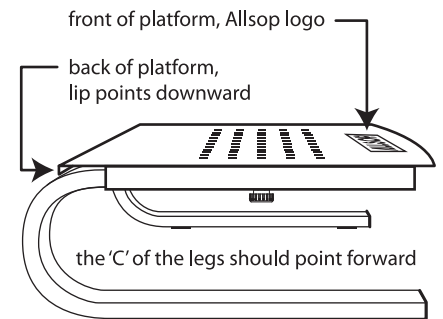


image 1

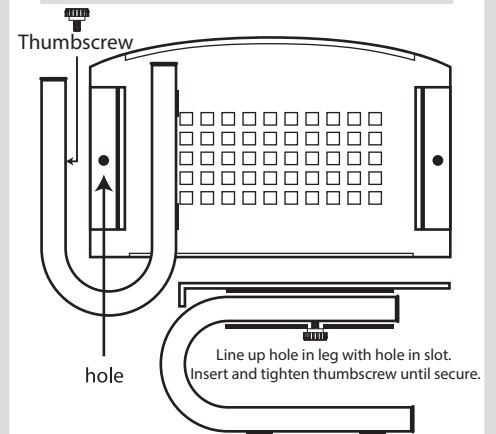


image 2


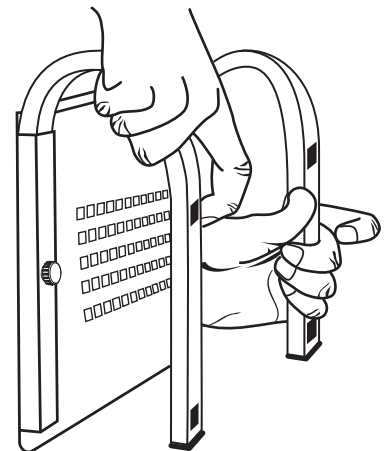


image 3

Redmond Monitor Stand™ GUIDE D'UTILISATION

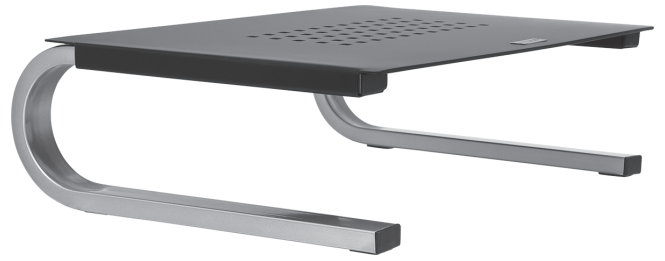


ASSEMBLAGE

Avant de pouvoir utiliser le support de moniteur de Redmond, il est nécessaire d'insérer les pattes dans la plateforme. L'avant de la plate-forme comporte le logo d'Allsop mais pas de rebord; l'arrière de la plate-forme comporte un rebord pointant vers le bas (voir l'image 1).


Retirez la vis à oreilles du pied, puis insérez la patte dans la fente disponible sur la face inférieure de la plateforme (voir l'image 2). La plateforme doit être placée de manière à ce que la patte pénètre dans la fente de l'arrière vers l'avant, la forme en « C » de la patte doit faire face à l'avant de la plateforme (voir l'image 1). Alignez le trou dans le pied avec le trou dans la fente. Insérez les vis à oreilles et serrez à fond. Répétez ensuite pour l'autre patte.

NOTES

- #1 Les pattes étant ajustées serrées après l'assemblage, il peut être nécessaire de forcer un peu pour mettre les pattes en place.
- #2 Il est suggéré d'appuyer le rebord avant de la plate-forme sur une surface plane et dure pour placer la plate-forme à la verticale (voir l'image 3); puis, vous pouvez facilement et solidement installer les pattes. Le support peut être utilisé quand les deux pattes sont en place.

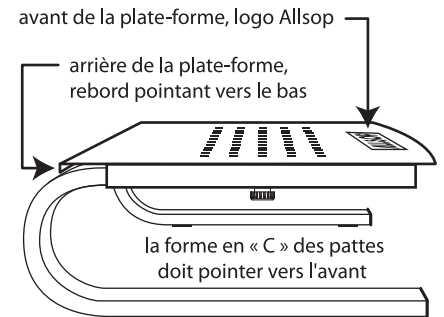


l'image 1

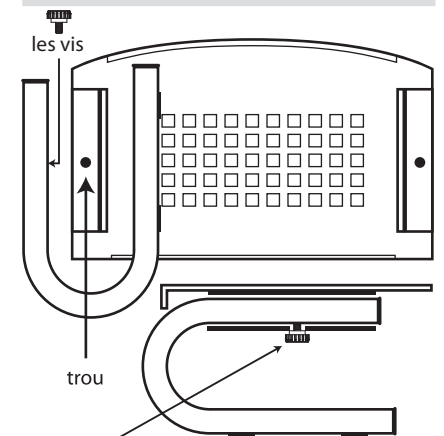

Alignez le trou dans le pied avec le trou dans la fente.
Insérez les vis à oreilles et serrez à fond.

l'image 2

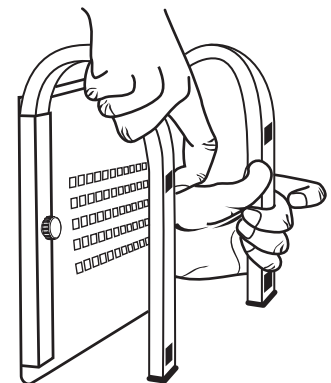

l'image 3