


INSTALLATION INSTRUCTIONS

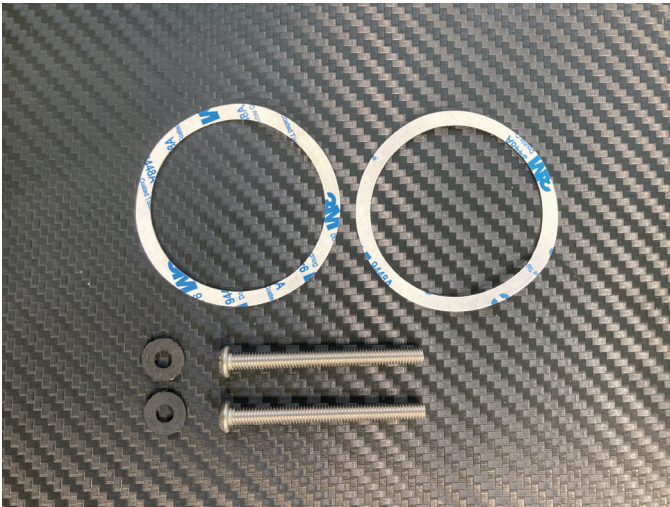

PART LIST

- Silicone Gasket with 3M adhesive *2
- M6 stainless Hex Socket Screw *2
- Rubber washer for Hex Socket Screw *2

TOOL LIST

- Phillips screwdriver
- small Flat Head Screwdriver
- M6 Hex Socket Screwdriver

1. Remove OEM screw covers and screws



Use a small flat head to open the cover on the top of the stock spoiler. There are two of these, one on each side.

After that, remove the screw on each side of it.

2. Attach Silicone Gasket



Clean the surface of the stock spoiler thoroughly. Remove the liner, and attach the silicone gasket. Make sure the opening is surrounded by the gasket as shown on the left.

The Gasket will be sandwiched by the Angel Wing and stock spoiler, keeping water and dust out.

3.Align the Angel Wing



Put the Angel Wing on top of the stock spoiler, align the scewdrive holes properly.

NOTE : There are pre-attached silicone gaskets on the Angel Wing as well. It is for the protection of the possible contacting surface of the OEM paint. Do not remove those.

4.Tighten the screws



Use the M6 Hex screws and rubber washers included as the replacement of the OEM screws. Tighten it down to complete the install.