


## **LXT-AutoDromo Hood Installation Instructions**

### **Uninstall OEM Hood**

1. Unscrew Original bolts (x4) using 13mm socket to remove OEM Hood. ( *2 person is recommended to complete the job.* )

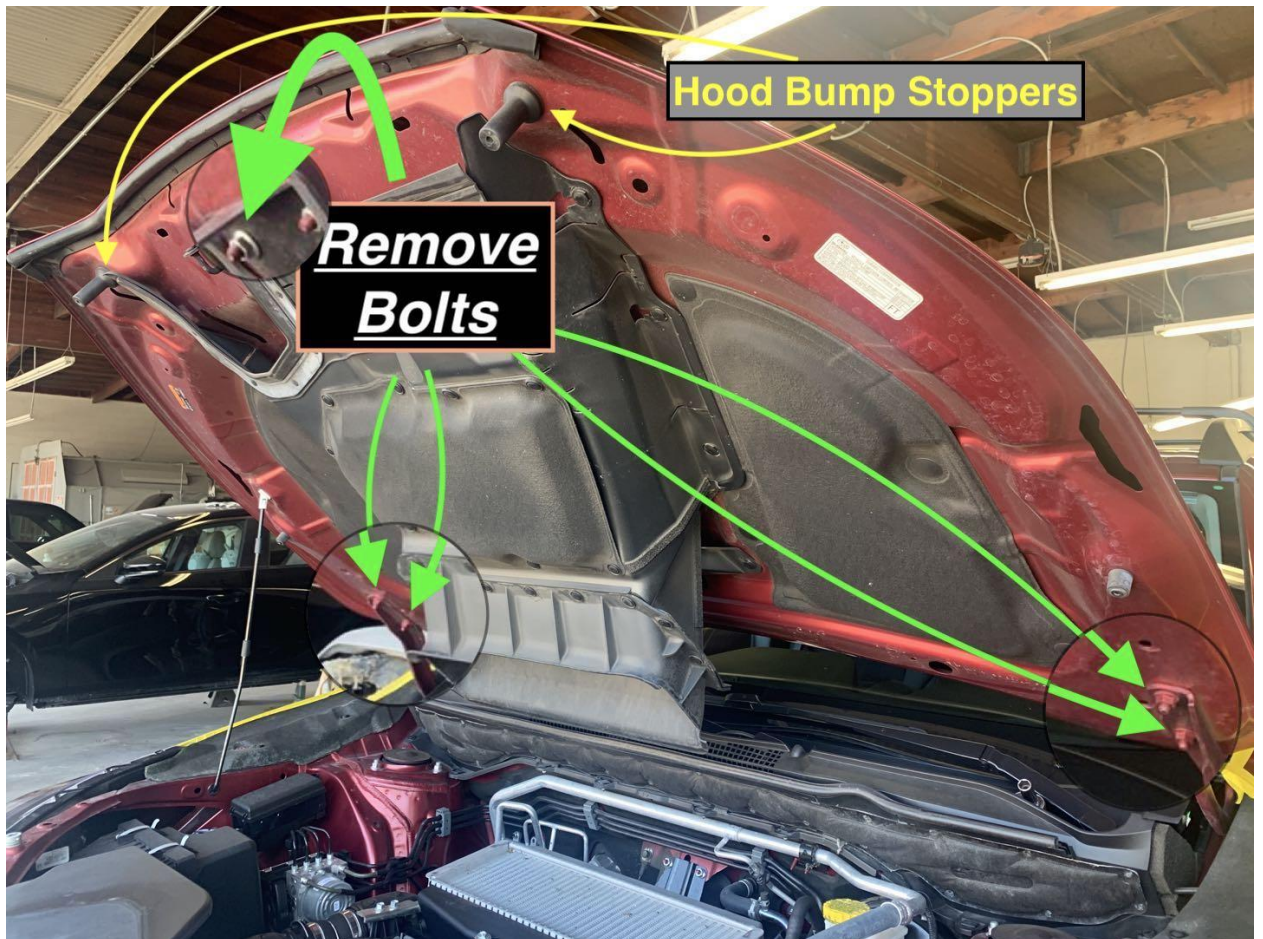


2. Remove under the hood padding clips(x8) and air duct clips(x9) using clip remover or flat head screwdriver (extra Clips provided). Remove hood bump stopper.
3. Unscrew Hood Lock bolts(x2) using 13mm socket.


## Install LXT-AutoDromo Hood

1. Install OEM under the **hood padding**, **air duct**, **hood lock** and **bump stoppers**
2. Install LXT AutoDromo Hood by using **bolt washers** (Provided), place bolt washers **between** LXT AutoDromo Hood and OEM hood hinge (**x2** on Driver side, **x1** on passenger side) and tighten the hood using OEM bolt or provided bolts.

### Driver Side Bolt Washers x2:

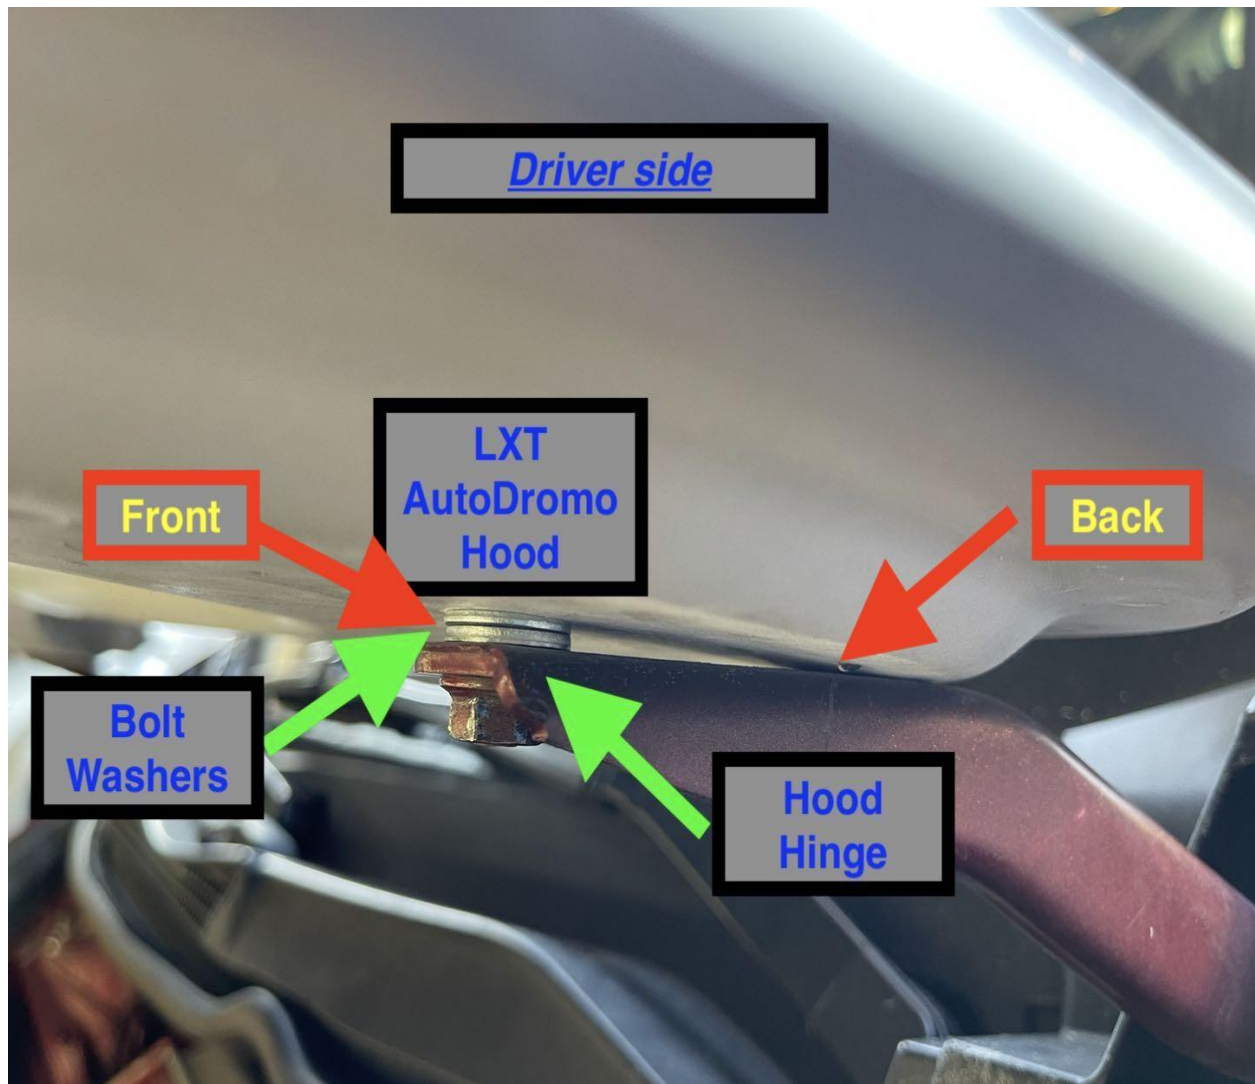

**Passenger Side Bolt Washers x1**

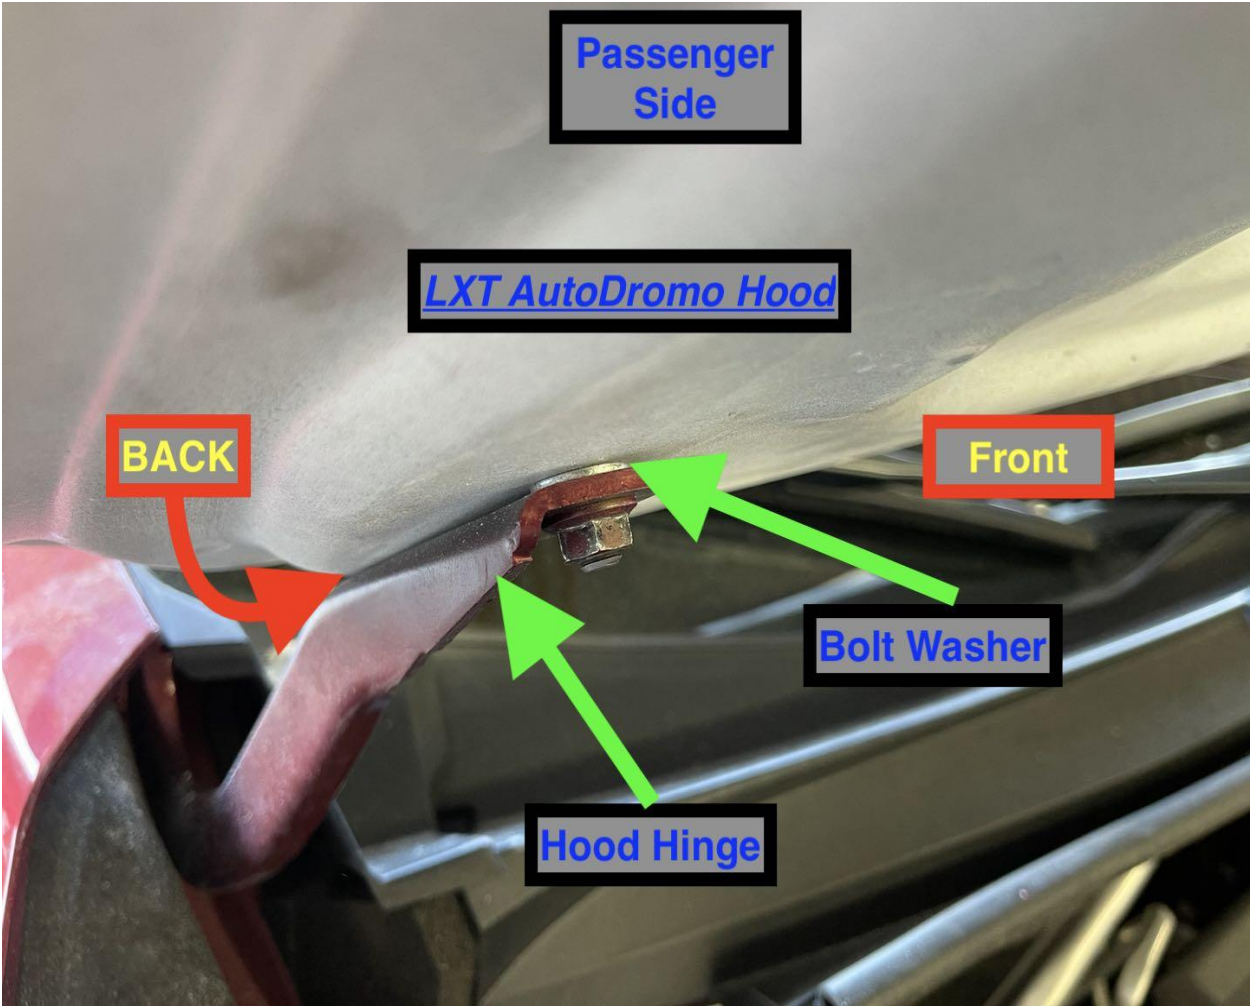

3. Installation Complete!!!