

INSTALLATION INSTRUCTIONS

PART LIST

- Fender Vent *1 pair (lef and right included)
- 3M double sided adhesive tape*4/
- Adhesion Promoter
- Cutting template*2 pages

TOOL LIST

- Drilling machine 5mm
- Cutting machine
- Tape

REMINDER


This product is required to be installed by professionals with professional machines and tools. Wear safety equipments during installation.

1. Cut out the template

Cut out the cutting template, there is one for the left and one for the right.


2. Line up template and mark the cutting area

Line up the template like below. Use the door edge and the upper edge of the fender emblem as the anchor. Use some tape to hold the template and mark the cutting area.

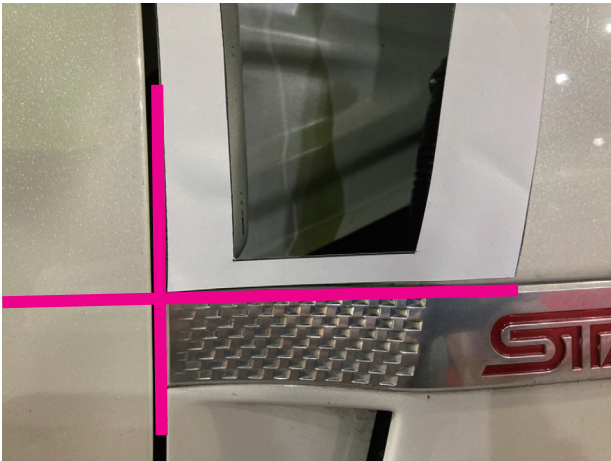

3. Drill 4 holes for cutting

Use drilling machine with 5mm drill bit and drill 4 hole on each corner of the cutting area. These holes will make the first cut easier and reduce possible errors.

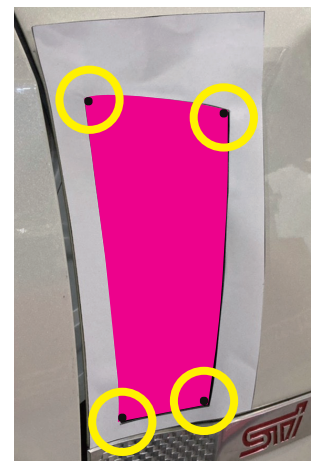

4. Make the cut

Use the cutting machine / Tool you prefer to cut. When cutting the door side, please be aware not to cut too deep to avoid damage on internal frame. There are plenty of clearance on the back side of the rest three sides.



5. Grind / Sand sharp edges

After cut, grind or sand the sharp edges, It will help to make the vent fit better when it's attached.

6. Prep the Vent kit and put 3M double-sided tape on

Clean the surface of the vent, and run the provided adhesion promoter pads over the area where the doble-sided tape would go on. The adhesion promoter should be dry before applying the tape. For best results, apply tape within one hour after applying adhesion promoter.



7. Prep the surface on the fender

run the provided adhesion promoter pads over the area where the double-sided tape would contact on the fender. The adhesion promoter should be dry before applying the tape. For best results, apply tape within one hour after applying adhesion promoter.


8. Attach the Vent to the fender

Try if the Vent could fit in the hole properly. There are some room for errors so the cut doesn't have to be super precise. Once the fitment looks fine, then we can put the Vent on the fender. Pressurize properly on the 4 edges after it's attached to the fender.

Let the adhesive to sit and bond for a couple hours. Keep it away from water for a while after installation for the best results.




LEFT SIDE

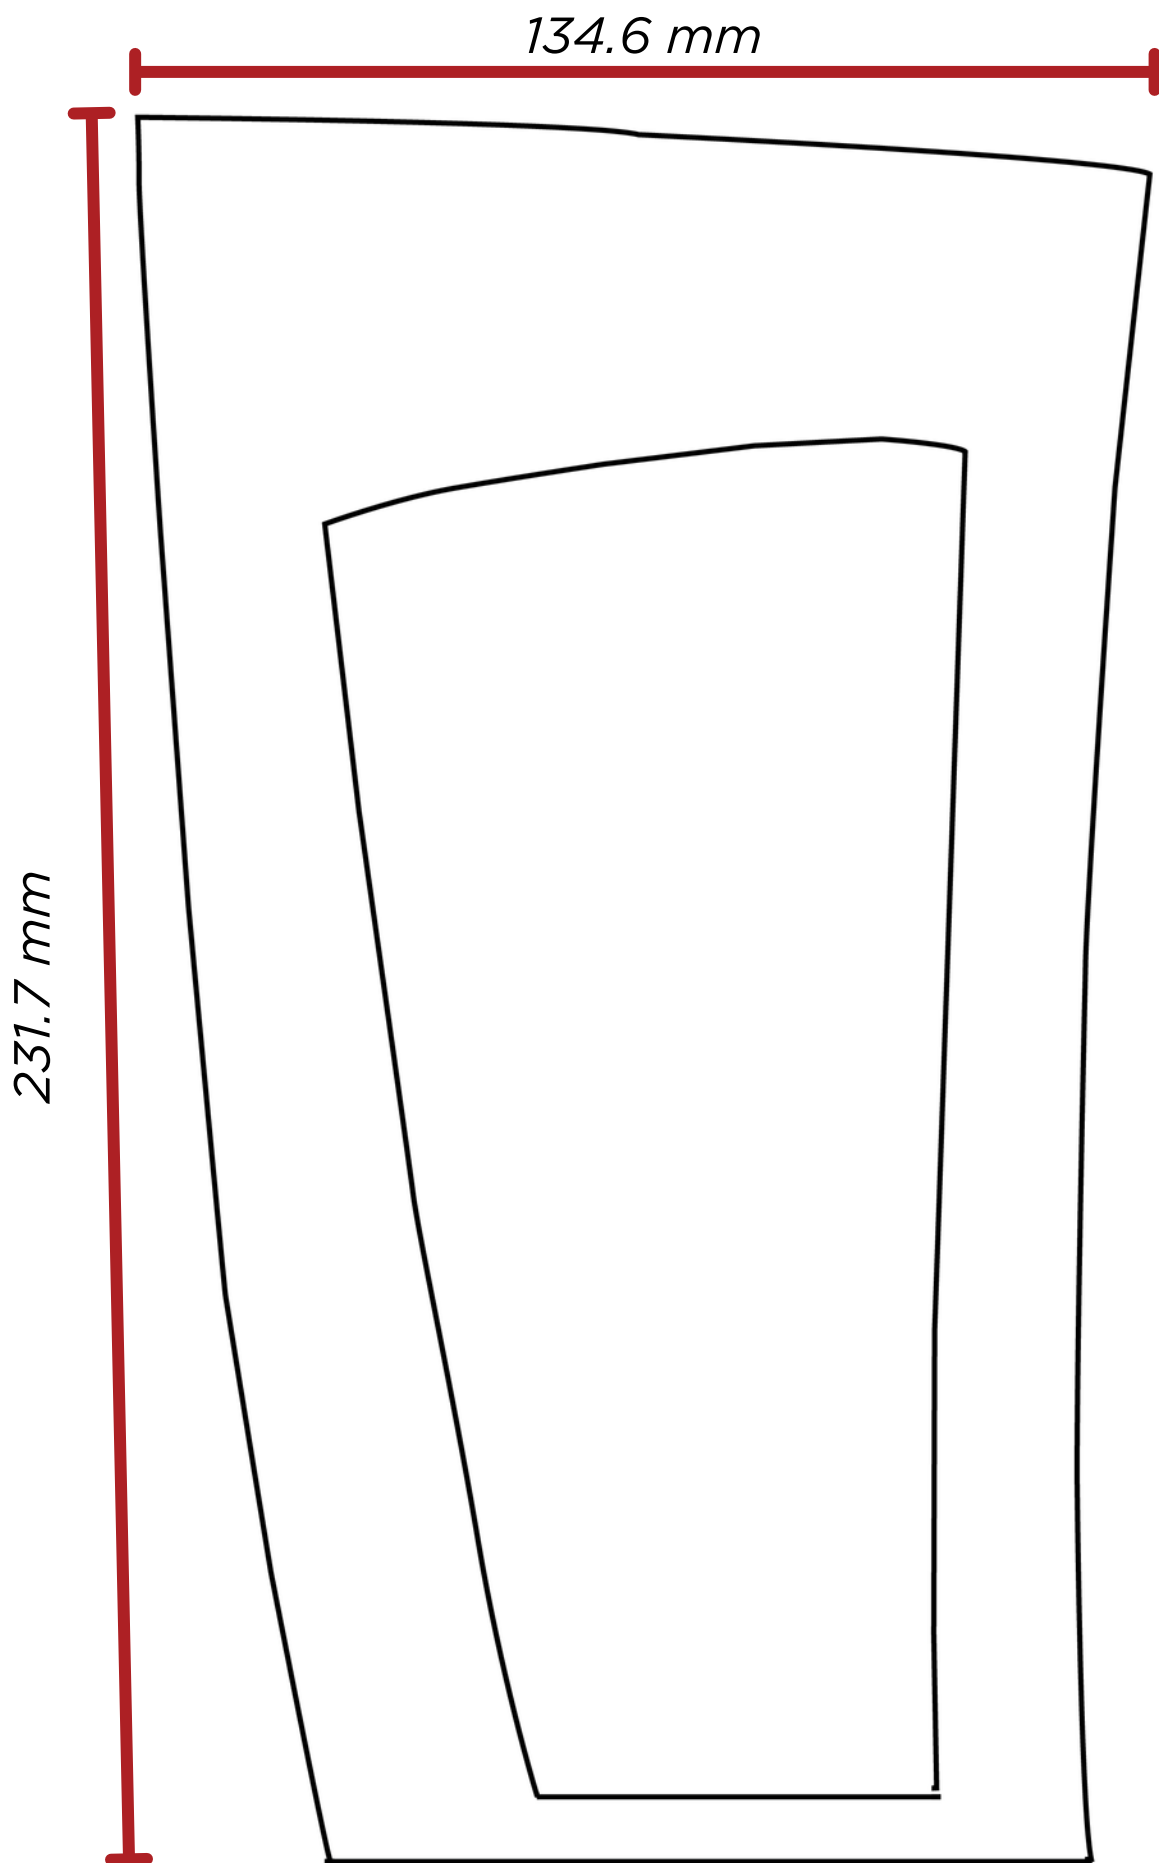

Compressive
TUNING

RIGHT SIDE

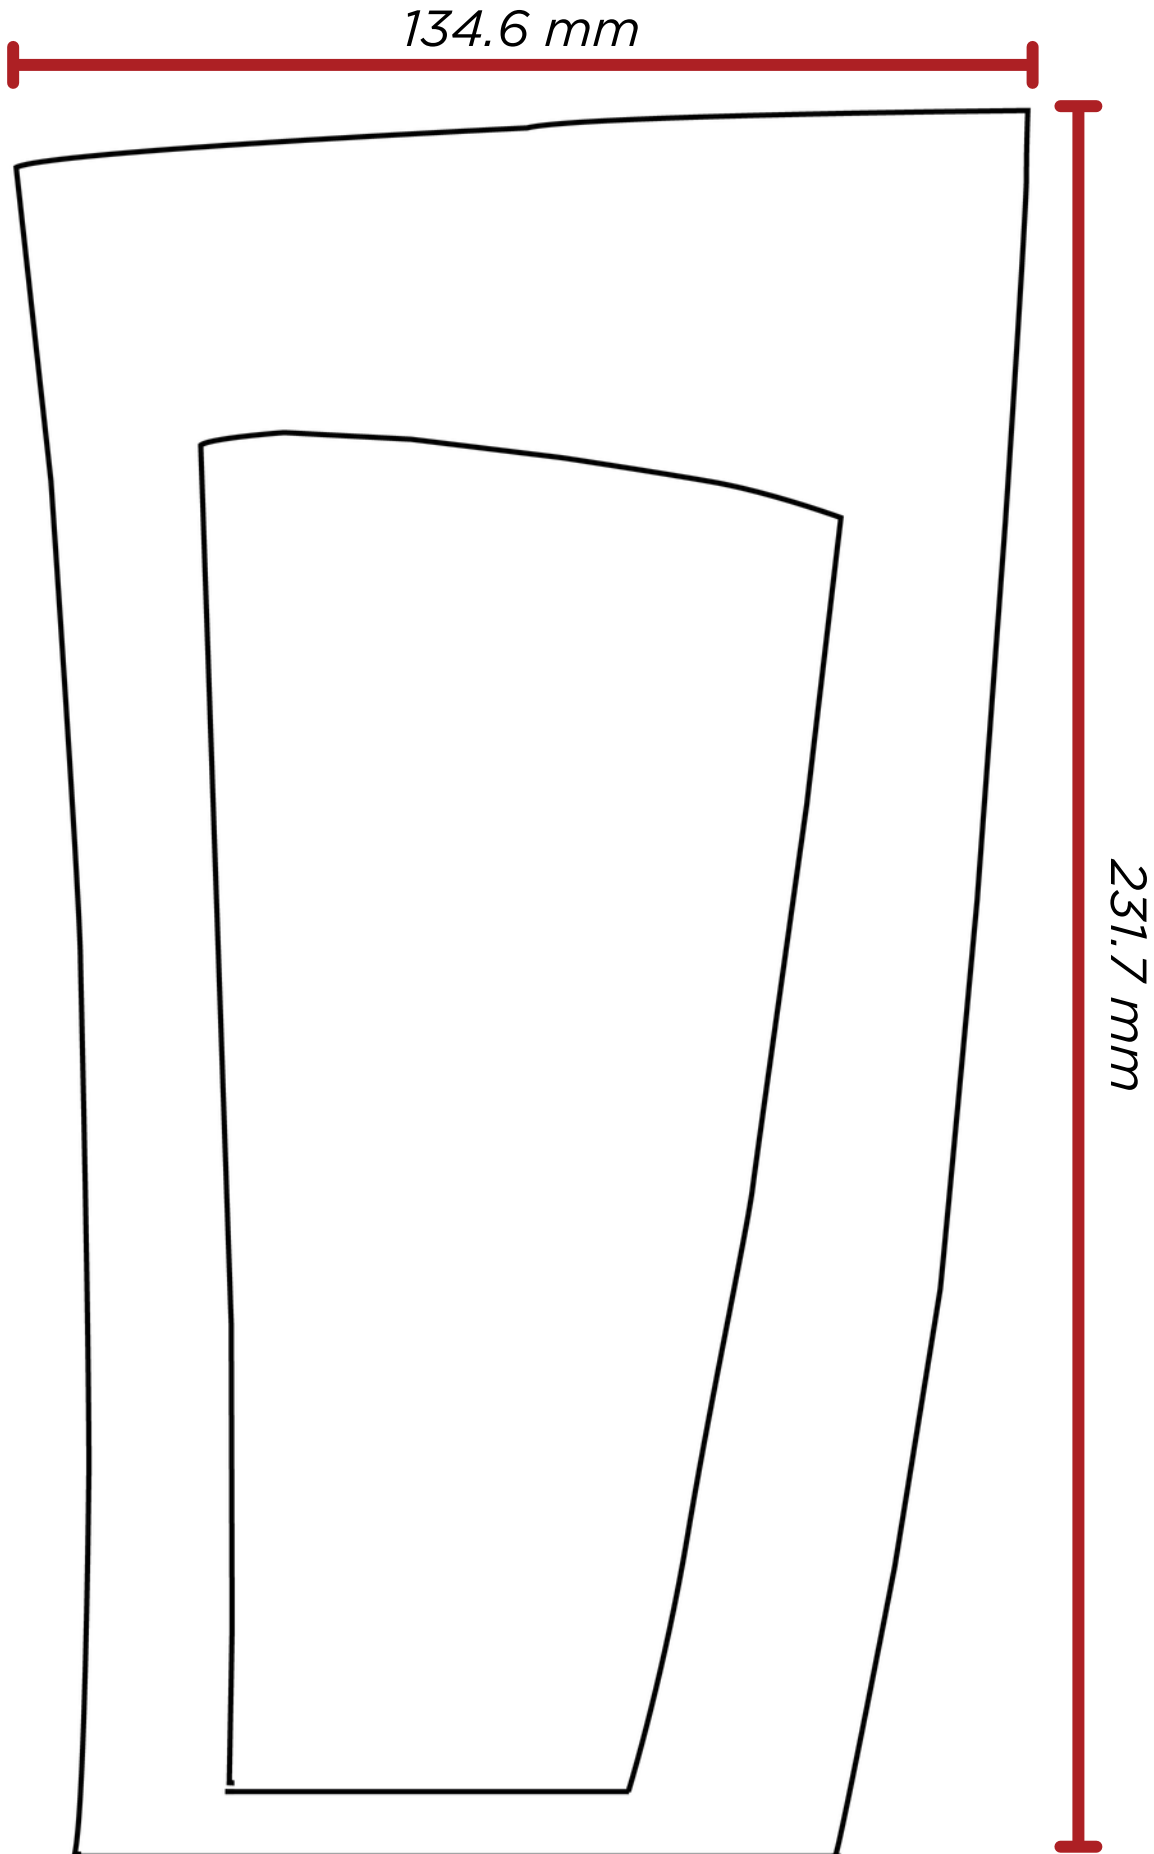

Compressive
TUNING