

Step4 Partslist

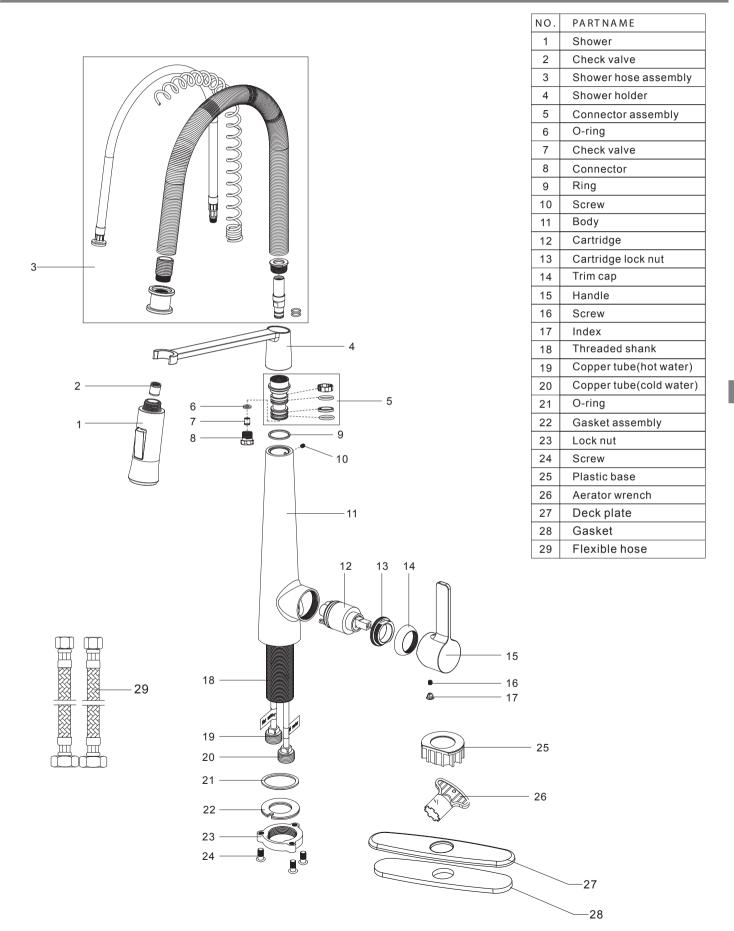




SINGLEH ANDLEK ITCHENFA UCET

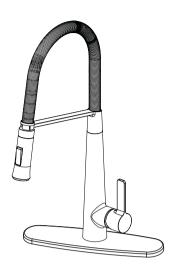


ASME A112.18.1/CSA B125.1




$The tools \, m \, ight be a \, pplied to the following \, places: \,$

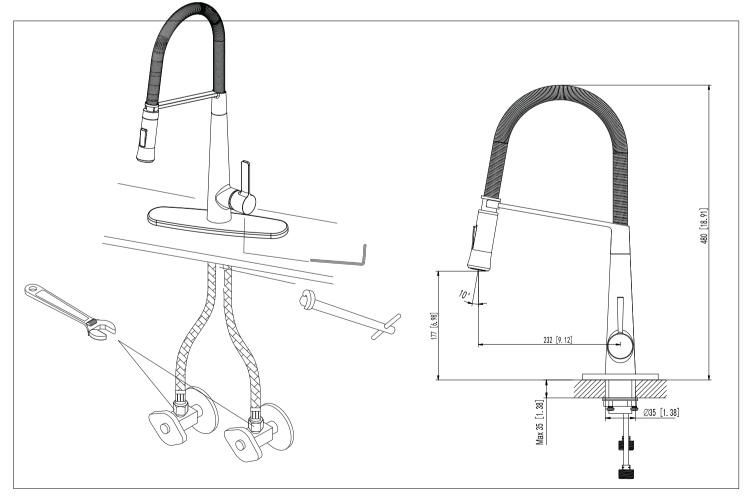

Step 1 Faucetinstallation

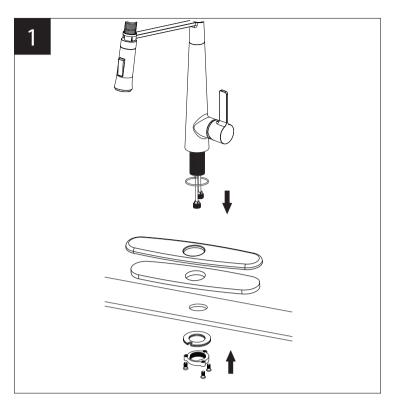


1. Position the faucet in order on the counter top as shown. Don't forget the O-ring. Assemble gasket assembly and lock nut to faucet threaded sleeve by hand and tighten the screws with screwdriver.

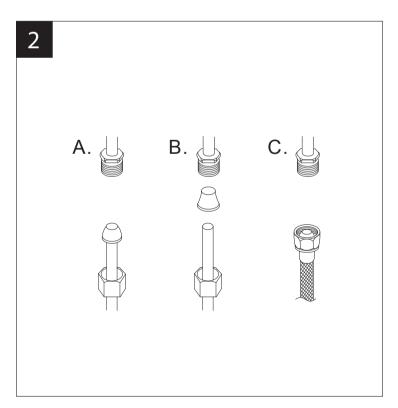

- 3. Connect to water supply lines with either:
- (A)3/8" O.D. Copper tubing (ball nose risers with the coupling nuts) or;
- (B)3/8" Copper tubing (no ball) with supplied tube head interior connector or;
- (C)IPS faucet connectors(1/2").

Step 2 C hecking and testing

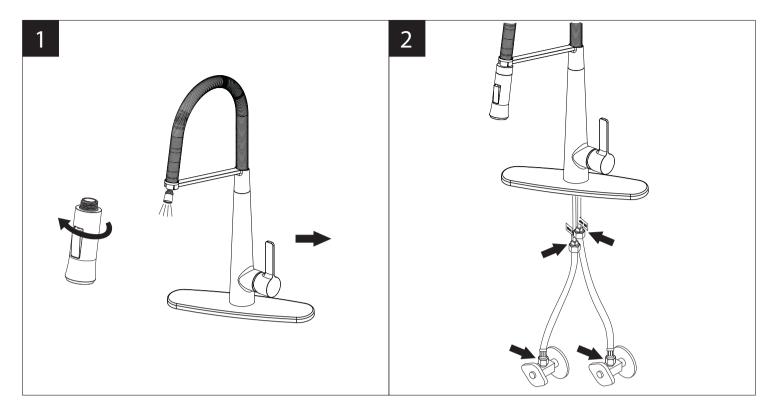

- 1.Remove the shower by hand. Turn the faucet handle all the way on, turn on hot and cold water supply and flush water lines for one minute. Reinstall shower by hand.
- 2. Check all connections at arrows for leaks, re-tighten it if necessary.



BUTD ON'TO VERTIGHTEN

Step 3 Cleaning and care

Daily cleaning and care are required in order to keep the product shining and properly working.

- 1 Clean it with water and dry it with soft cloth.
- 2 Clean the product with gentle liquid or glass cleaner.
- 3 Don't use acid cleaner.
- 4 Don't clean with abrasive material, abrasive paper or knife.