
Premium 4'x6' Safety Screen with Wheels

- 1. Lay out your pieces and make sure you have all the pieces and know which piece corresponds to each number.
- 2. Assemble the frame as per the drawing from the ground up. Do not drill screws.
- 3. After the frame is assembled, drill a screw through both pipes at every joint. The screws will drill themselves in with a little pressure, no guide hole is necessary.
- 4. Slide net over frame like a pillowcase.
- 5. Pull the bottom rope tight and tie.

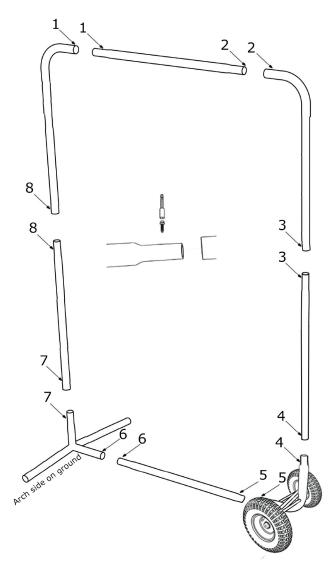

Arch should be positioned to set on the ground to accommodate uneven surfaces. Flip or turn it until you have it positioned correctly.