
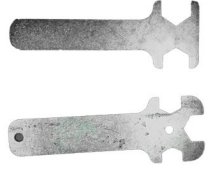









# **NO GAP BENCH ASSMEBLY INSTRUCTIONS**



# ASSMEBLY PARTS

 × 1	 × 1
 × 6	 × 4
 × 1	 × 1
 × 1	 × 1

**CAUTION:**  
**PART 2 SHOWS IN THE PICTURE IS WRONG WAY.**  
**THE SIGN NEEDS TO BE ON THE LEFT.**

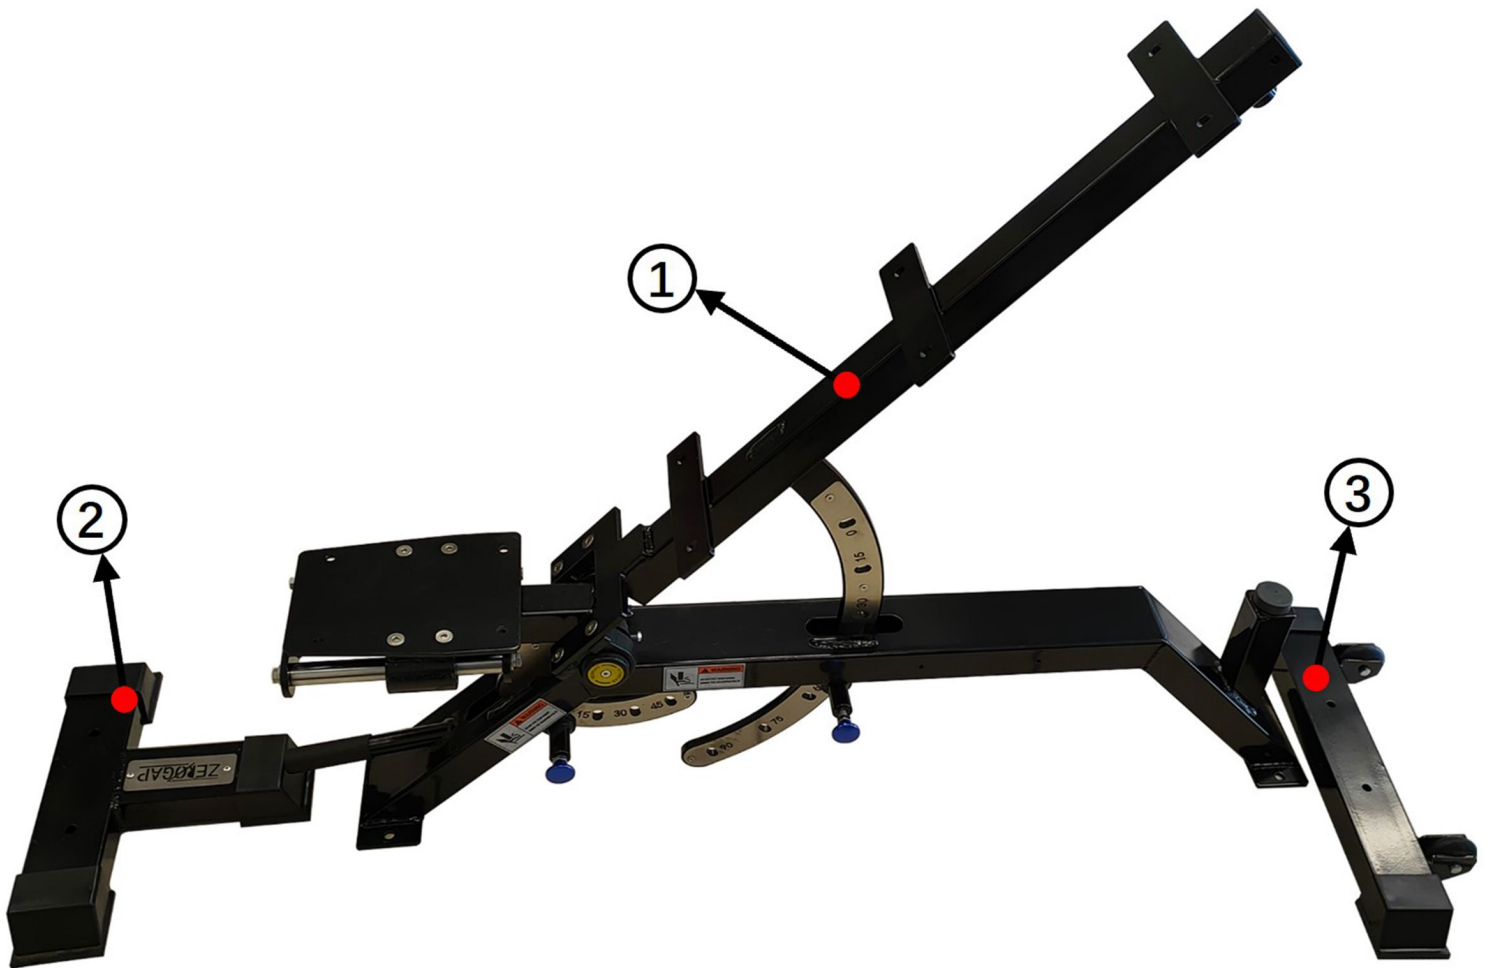


### **Step 1**

1. Place part 1 on the flat ground with incline position.
2. Connect part 2, 1, 3 in order with the longer screws. Put the screw from the bottom to the top.



**Super AlphaGo**

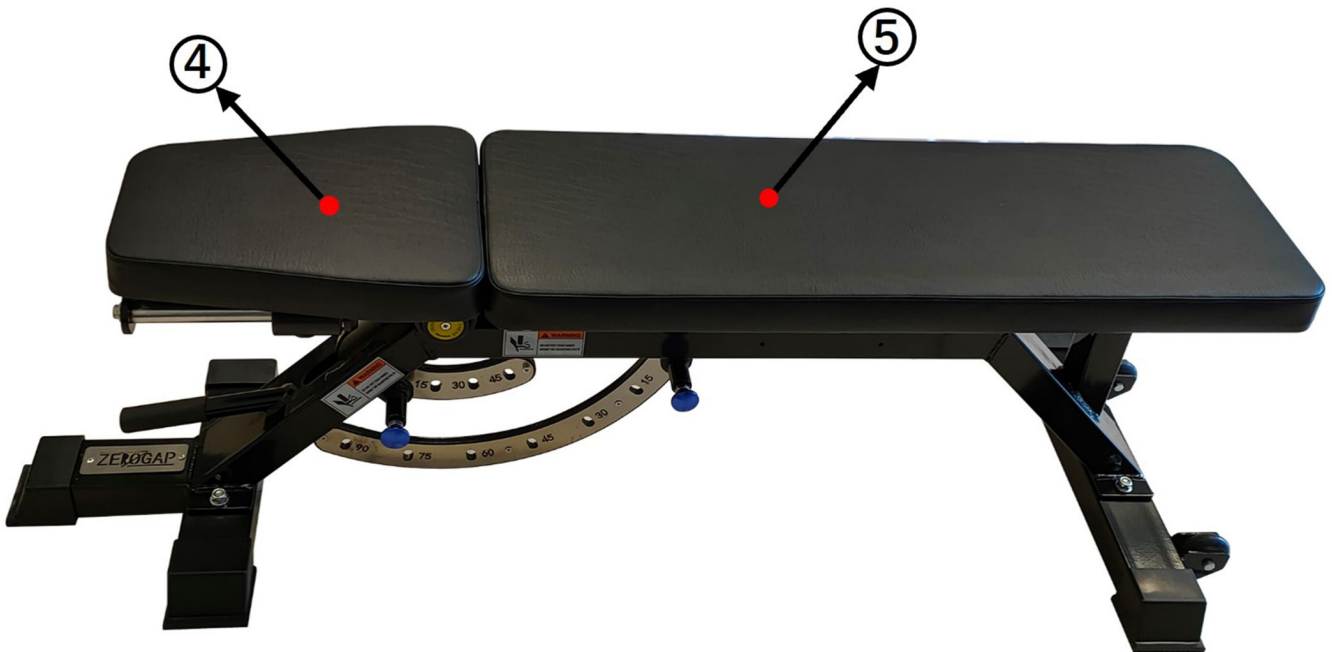

## **Step 2**

**1. Place part 4 first. Undo the screws at the back of the pad. Then lock the seat pad on the right last spot.**

**2. Then screw part 5 with shorter screws. DO NOT tight them up until you push the back pad towards the seat pad.**

**3. Tight everything up.**