

### Applied Panel Installation Guide

#### Kitch.

### Inspect the Product

A friendly reminder to unwrap and inspect your Kitch products before assembly and installation. You may find a blemish, but no sweat! Our KitchBOX parts are universal, so just rotate the blemish toward the back of your cabinet.


If a remake is required, please take photos of any damages along with the label on the piece and email them to hello@mykitch.ca. We'll review and advise what the next steps will be for you. You have 15 DAYS from receiving your products to report these to us.

### **Tools Required**

- Cordless drill.
- Screwdriver or Impact Driver.
- 3x Clamps.
- Soft clamp pad to protect finished surfaces.
- Saw (optional).
- Hardware needed:
  - 1-1/8" wood screws (not provided).

### **Kitch**<sub>10</sub>


## Step 1

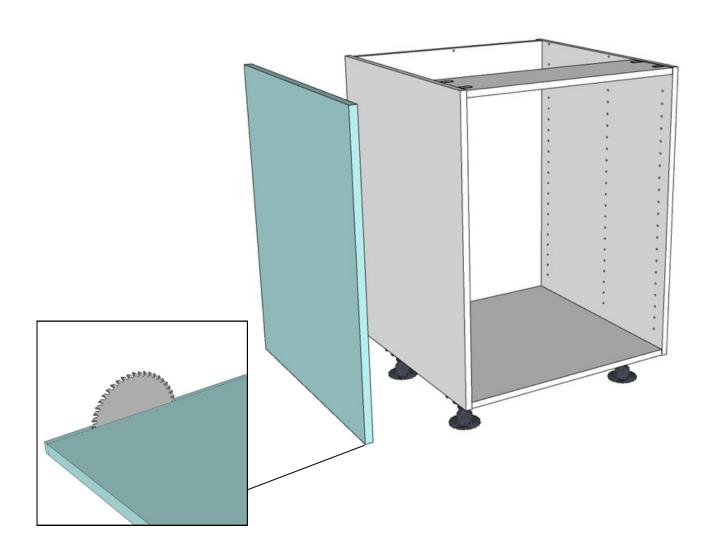

Confirm the correct location of the Applied Panel (KAP) by referring to the part label. If you are installing a panel to the floor, cut the bottom edge to suit before installation.

#### **Kitch**,

## Step 2

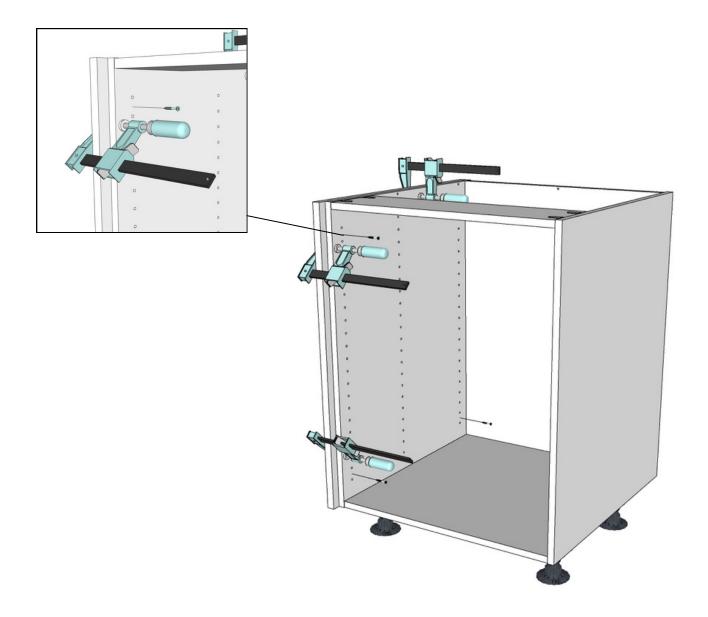

Secure the Applied Panel (KAP) in place using at least three clamps, then, attach the panel to the cabinet box using four 1-1/8" screws.

Helpful hint: Be sure to use soft clamping pads underneath each clamp head to protect finished panels.

### Kitch.

# Step 3



Your Applied Panel (KAP) is now installed.