

BEAUTIFULLY
SIMPLE

BRING YOUR IDEAS TO LIFE

COUNTLESS
POSSIBILITIES

Kitch™

BS252DREC

MODULAR CABINET SYSTEMS
100% --- CANADIAN MADE

Inspect the Product

A friendly reminder to unwrap and inspect your Kitch products before assembly and installation. You may find a blemish, but no sweat! Our KitchBOX parts are universal, so just rotate the blemish toward the back of your cabinet.

If a remake is required, please take photos of any damages along with the label on the piece and email them to hello@mykitch.ca. We'll review and advise what the next steps will be for you. **You have 15 DAYS from receiving your products to report these to us.**

Tools Required

- Cordless drill with adjustable torque settings.
- Kitch Assembly Tool.
 - *Recommended drill settings:* low speed, with torque setting at 50% of capacity, maximum torque of 2.5Nm (1.8ft. lbs).
- #2 Robertson (square drive) screwdriver or screwdriver bit.
- *Hardware needed:*




Before Assembly

Before you follow the steps below to assemble your configuration, you will need to assemble the BaseBOX and bottom DrawerBOX by following the QR code below.



CLICK OR SCAN

Step 1

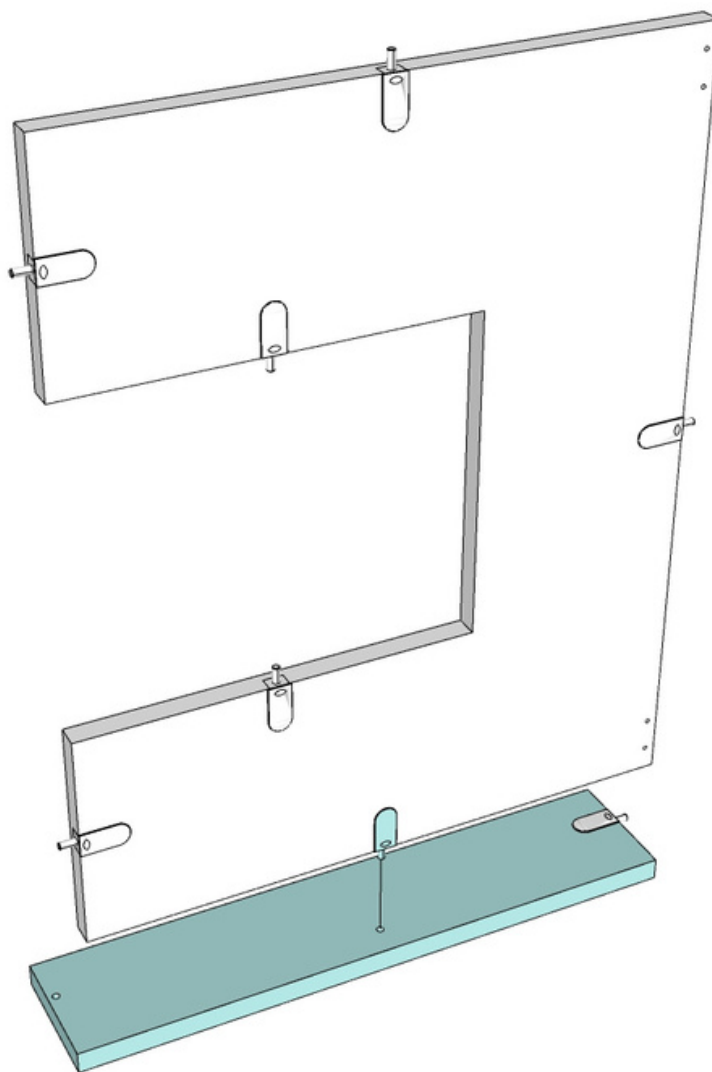


Attach the Sink Drawer Bottom (KPDBOSW) to the Right Hand Drawer Side (KPDSDLO18RH) using the **Kitch Assembly Tool**.

Hardware needed:


0

Step 2

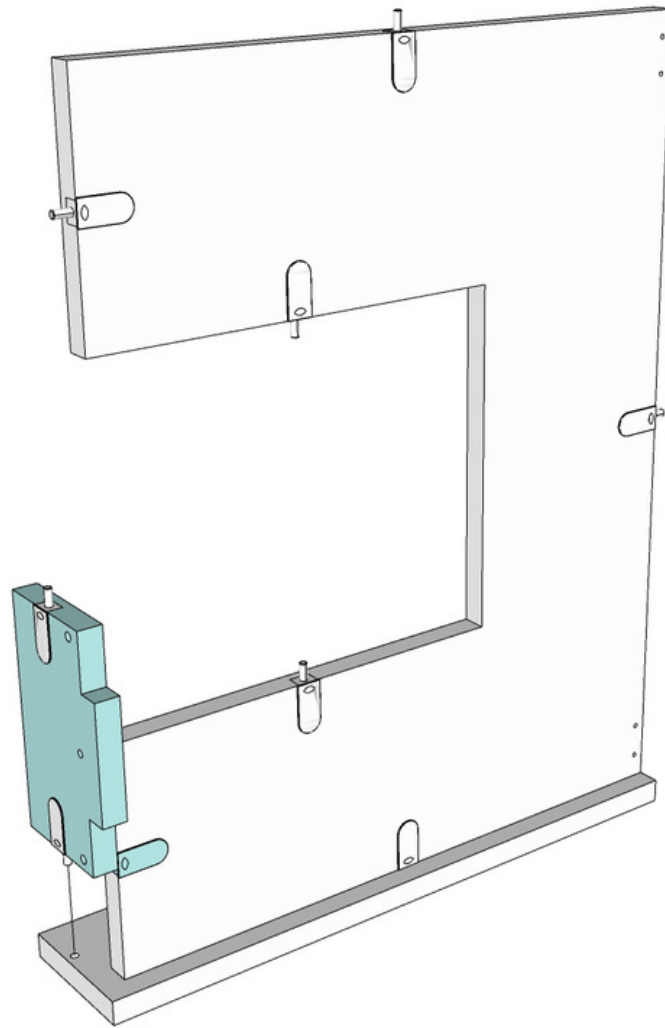


Attach one Drawer Back (KPDBALO) to the Right Hand Drawer Side (KPDSDLO18RH), then, tighten the bottom fixing to the drawer back.

Step 3

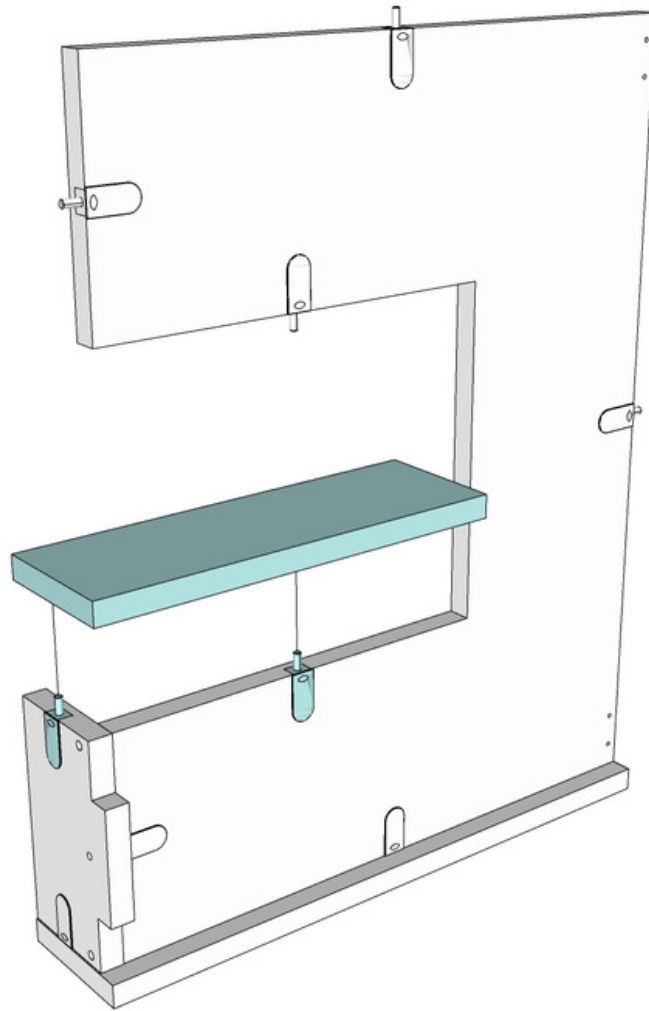


Attach the Left Hand Drawer Side (KPDSOLO12LH) to the Drawer Back (KPDBALO) and Drawer Bottom (KPDBOSW).

Step 4

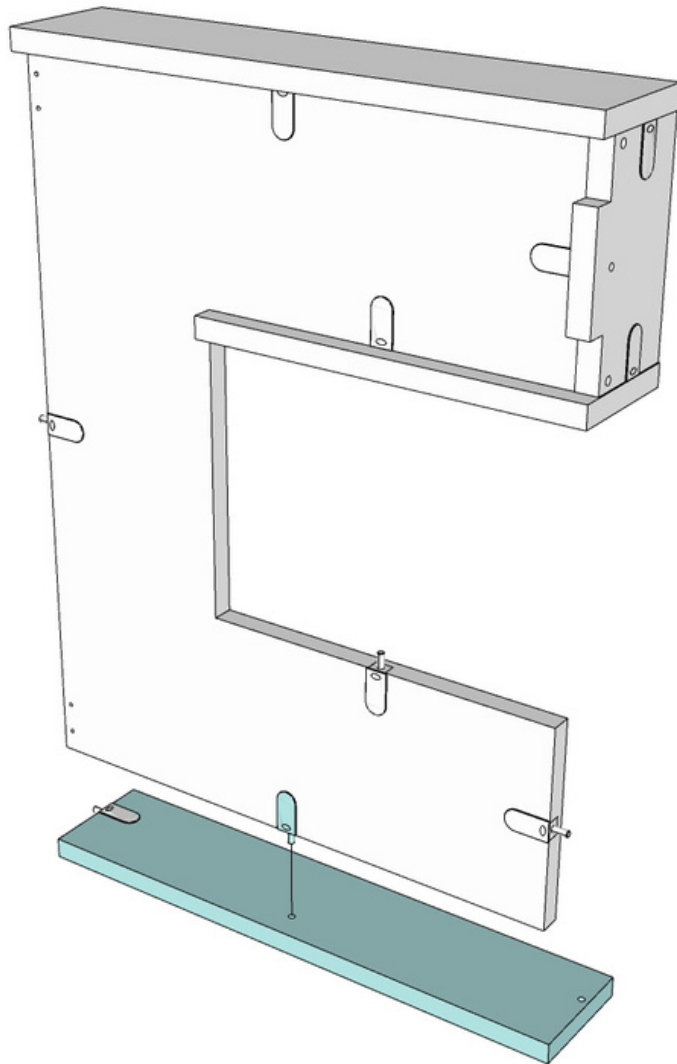


Attach the Sink Drawer Bottom (KPDBOSW) to the Left Hand Drawer Side (KPDSDLO18LH).

Step 5

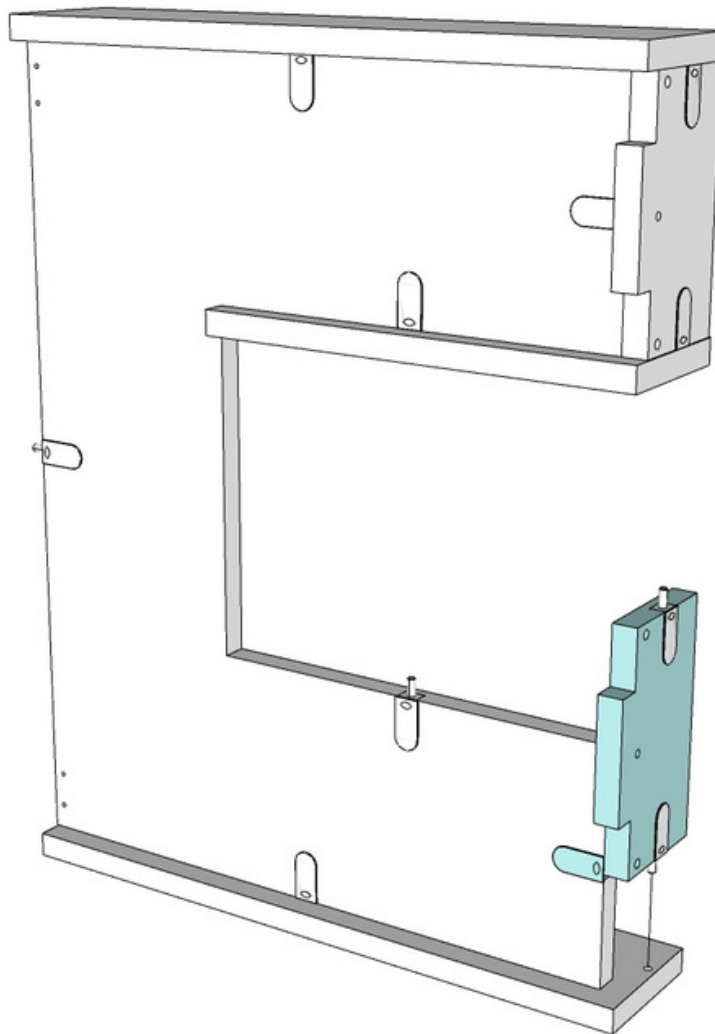


Attach the other Drawer Back (KPD BALO) to the Left Hand Drawer Side (KPDSDLO18LH), then, tighten the bottom fixing to the drawer back.

Step 6

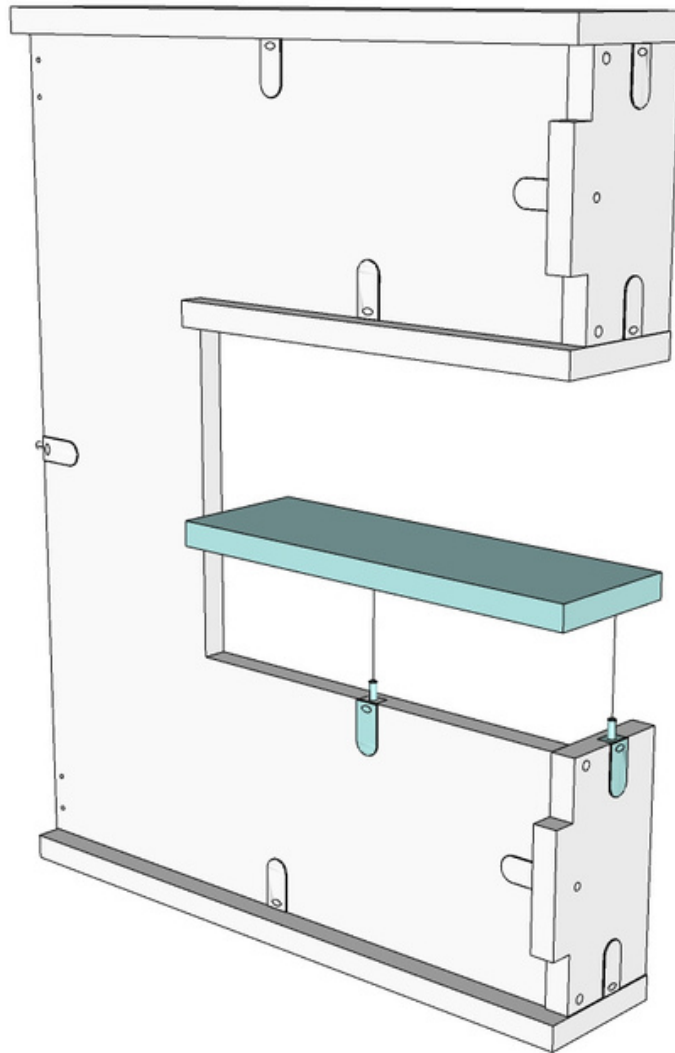


Attach the Right Hand Drawer Side (KPDSOLO12RH) to the Drawer Back (KPDBALO) and Drawer Bottom (KPDBOSW).

Step 7

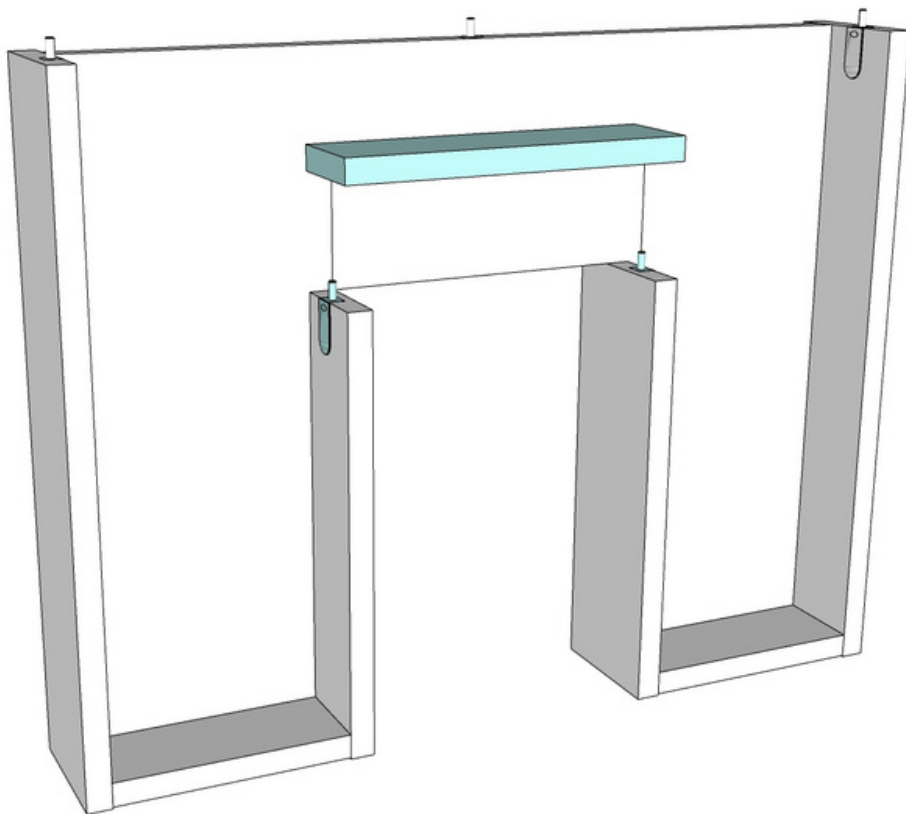

Attach the Inner Sink Front (KPIDF) to the Drawer Sides (KPDSDLO12LH & RH).

Step 8

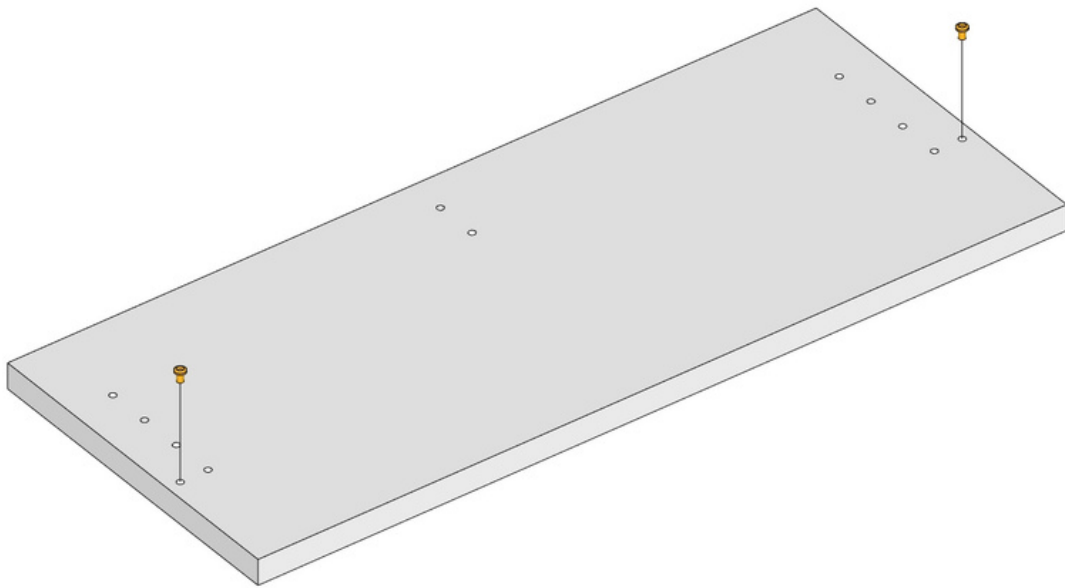


Insert the **bumpers** to the Drawer Front (KPDF).

Hardware needed:


6

Step 9

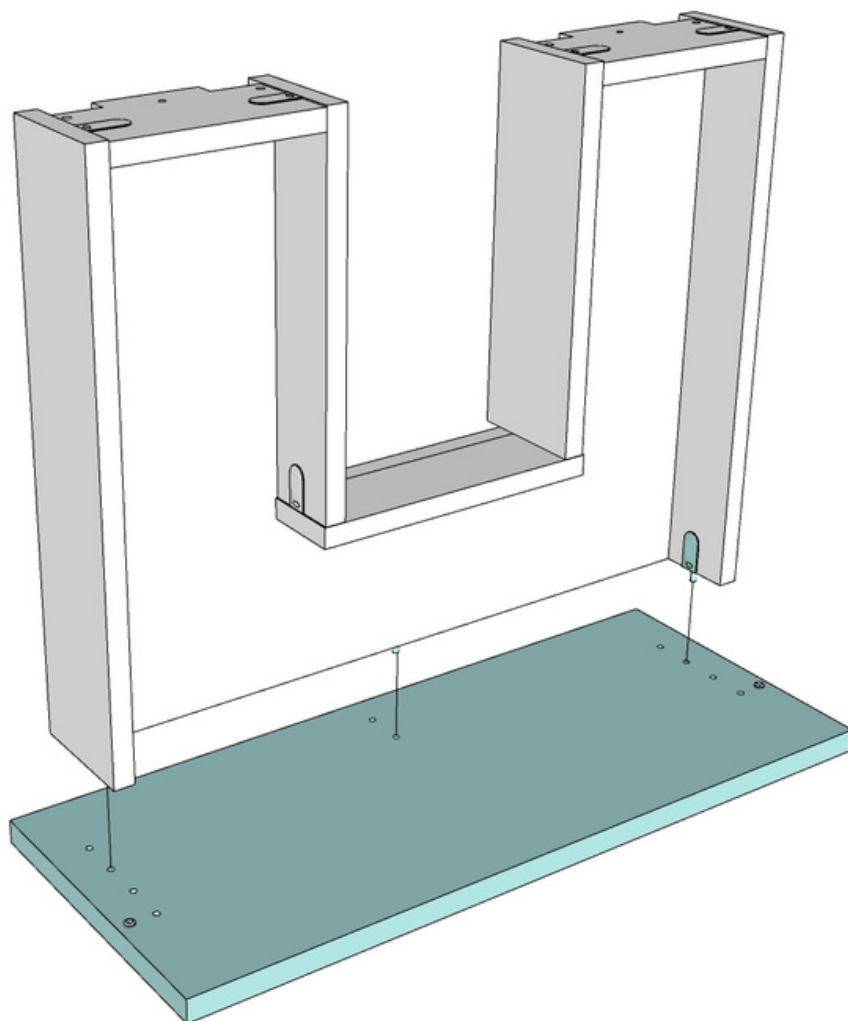

Attach the Drawer Sides (KPDSD) to the Drawer Front (KPDF).

Step 10

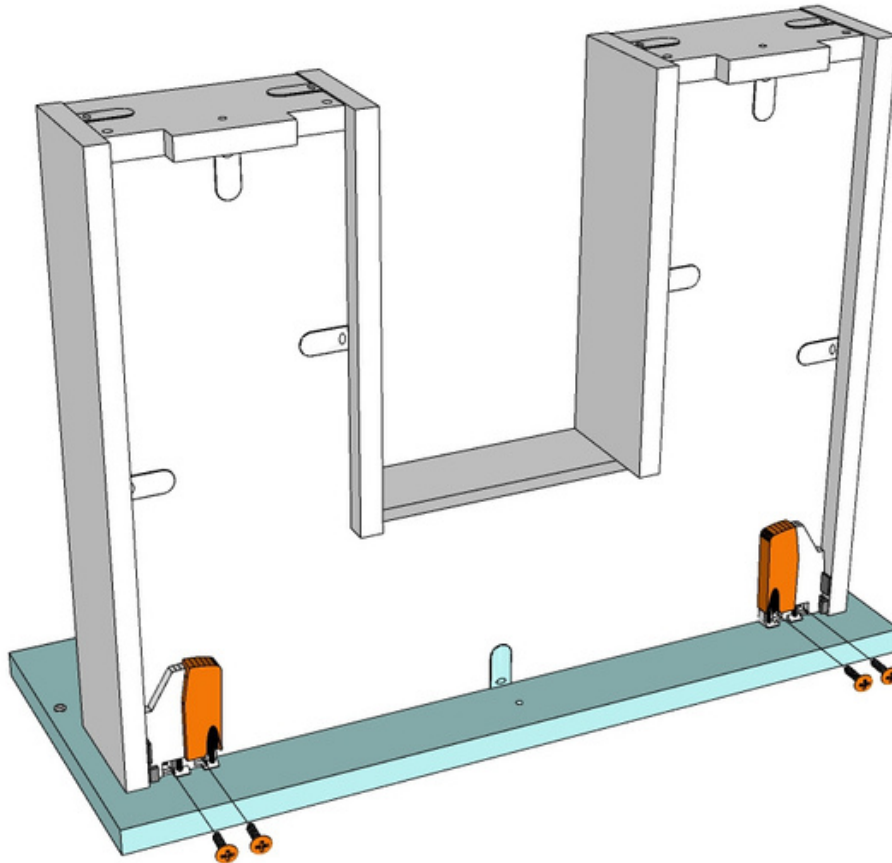

Tighten the Bottom (KPDBOSW) to the Drawer Front (KPDF).


Using a #2 Roberston (square driver) screwdriver or driver bit, attach the locking devices to the Drawer Bottom (KPDBO) with the **screws** provided.

Helpful hint: the locking devices have a left and right side. They provide up-and-down adjustment once the cabinet is installed to even out gaps.

Hardware needed:

3

Step 11

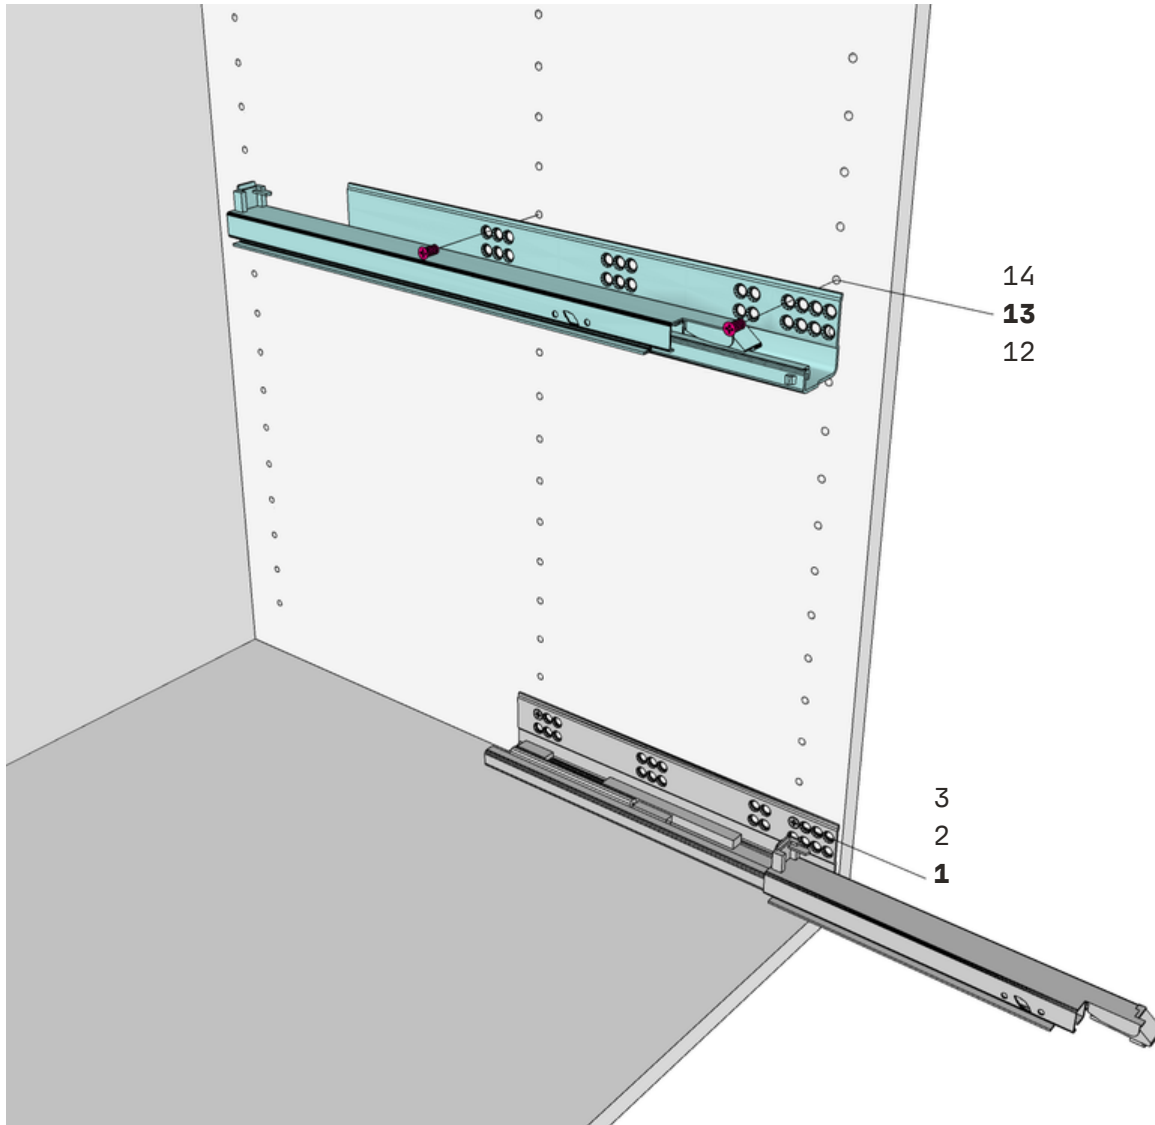


Align each Drawer Guide with the corresponding hole numbers on each Gable (KPGA). With the **Drawer Guide Screws** provided, screw through the Drawer Guide holes 4 & 12 into the cabinet gable.

Hardware needed:


4

Step 12

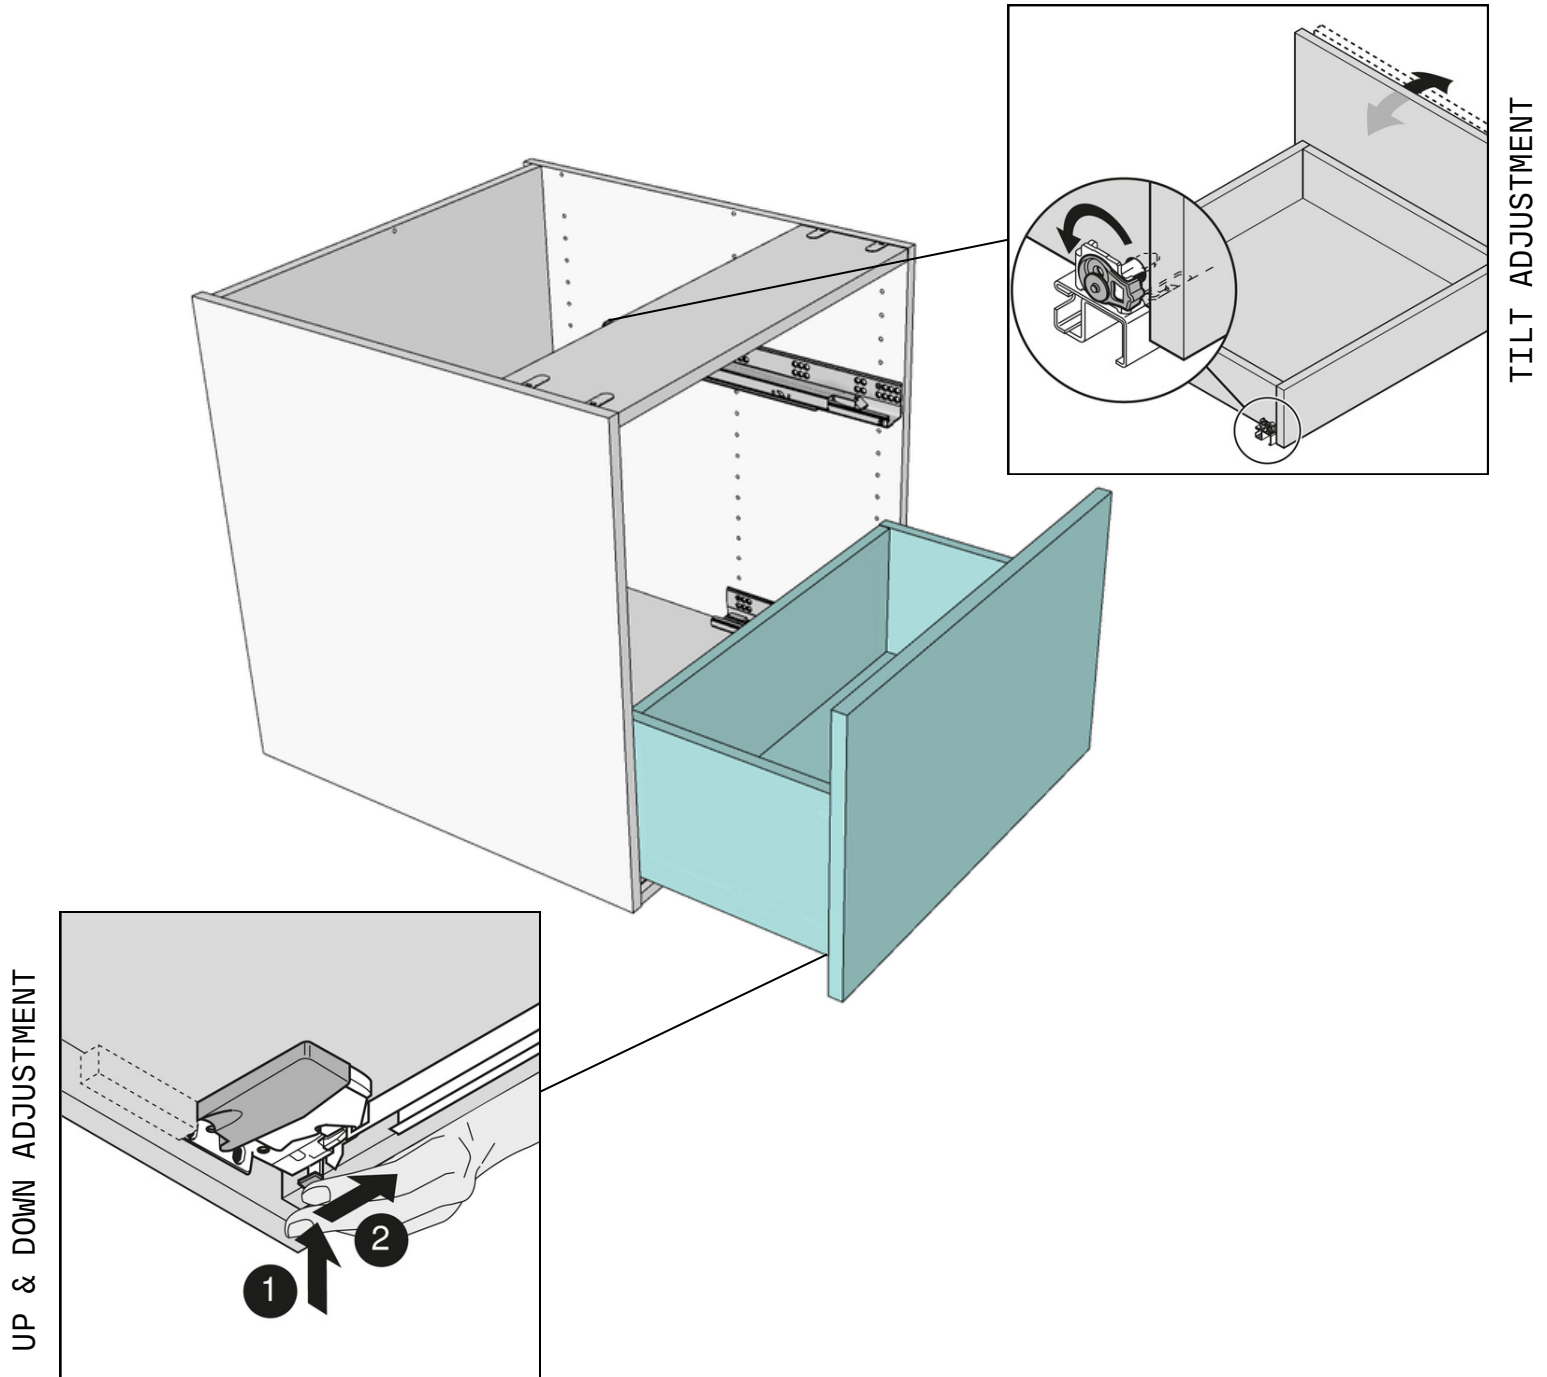

Pull the Drawer Guides out from the cabinet and align each DrawerBOX onto each of the guides. Push back into place until you hear a "click" sound.

Step 13

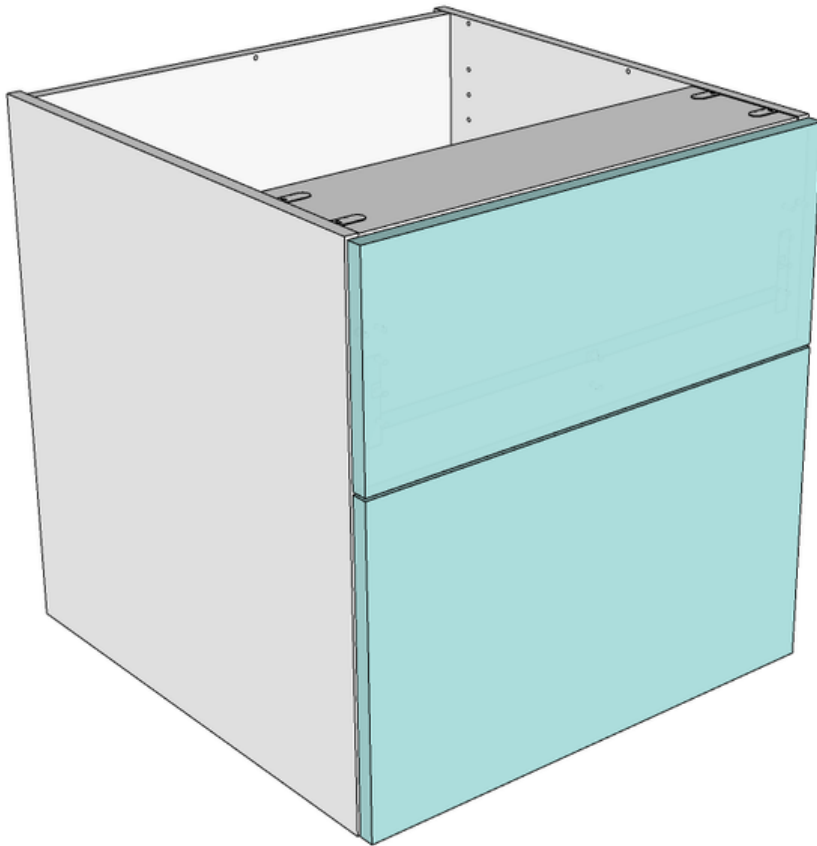

Your BaseBOX cabinet configuration is now assembled.