

WallBOX Assembly Guide

Inspect the Product

A friendly reminder to unwrap and inspect your Kitch products before assembly and installation. You may find a blemish, but no sweat! Our KitchBOX parts are universal, so just rotate the blemish toward the back of your cabinet.


If a remake is required, please take photos of any damages along with the label on the piece and email them to hello@mykitch.ca. We'll review and advise what the next steps will be for you. You have 15 DAYS from receiving your products to report these to us.

Tools Required

- Rubber Deadblow hammer or mallet.
- Cordless drill with adjustable torque setting.
- Kitch Assembly Tool.
 - *Recommended drill settings:* low speed, with torque setting at 50% of capacity, maximum torque of 2.5Nm (1.8ft. lbs).
- #2 Robertson (square drive) screwdriver or screwdriver bit.
- Hanger cabinets only: Phillips Head (star drive) screwdriver.
- Hardware needed:



Step 1

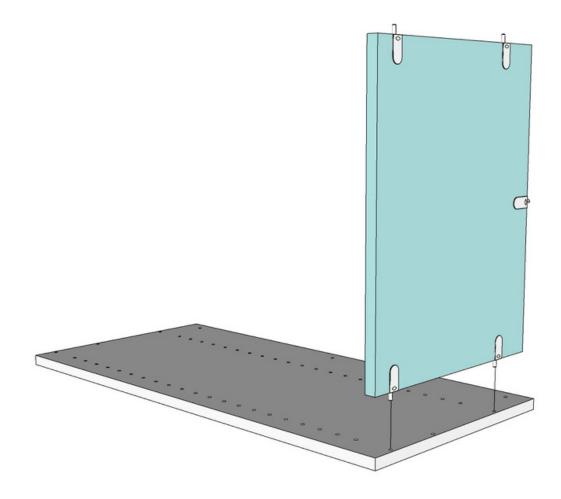


Attach the Bottom (KPTO) to the side Gable (KPGA) using the Kitch Assembly Tool.

Helpful hint: the Bottom and Top of the WallBOX are universal parts with the same part name (KPTO).


Hardware needed:

Step 2

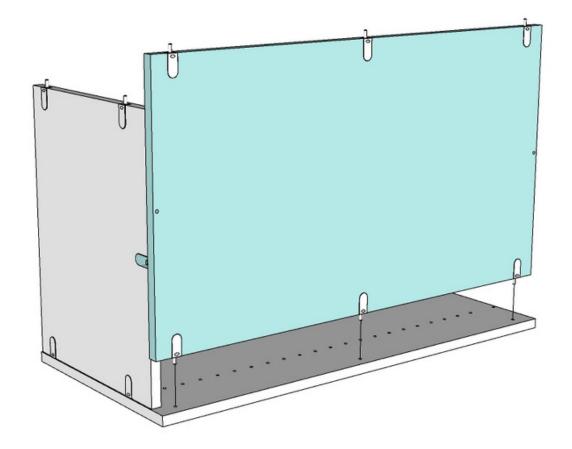

Attach the Back (KPBA) to the side Gable (KPGA), then, tighten the bottom fixing(s) to the Back.


Step 3

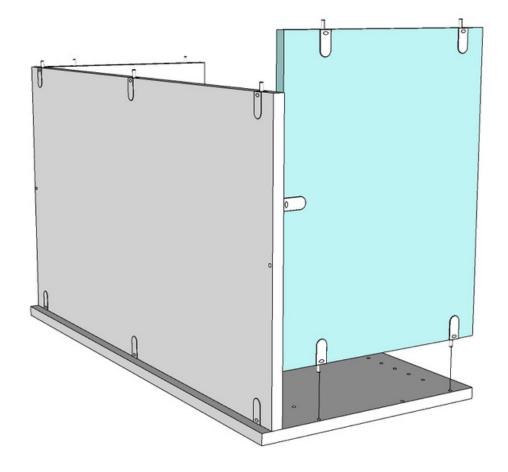

Attach the Top (KPTO) to the side Gable (KPGA), then, tighten the top fixing(s) to the Back.

Helpful hint: the Bottom and Top of the WallBOX are universal parts with the same part name (KPTO).

Step 4

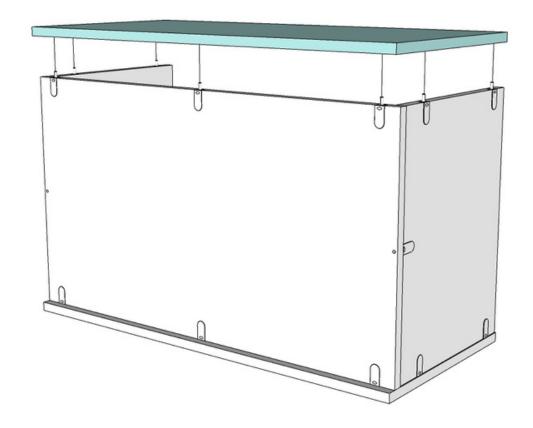


Attach the remaining side Gable (KPGA) to the box.

NOTE: If you are NOT using the wall hanger system, please ignore the remaining steps, your WallBOX is now ready to be installed.

Kitch₁₀

Step 5


FOR CABINET BOX WITH HANGER.

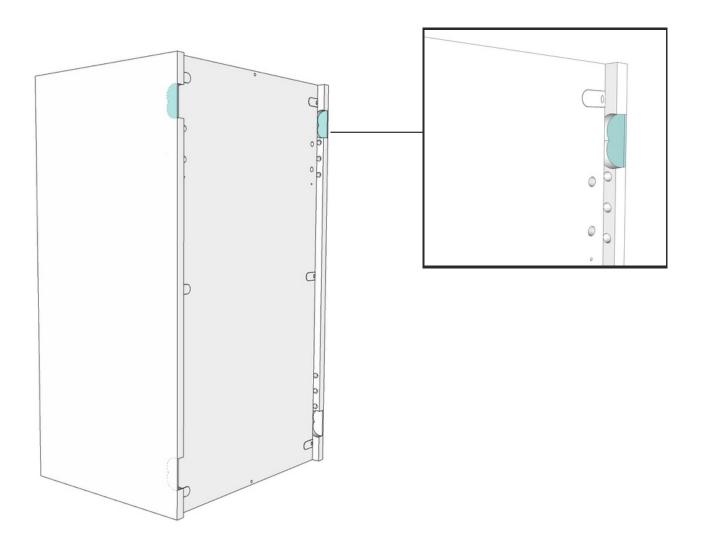

OPTIONAL: If multiple cabinets are to be installed side by side on the same suspension rail, knock out the semicircular cutouts at the top of each side Gable (KPGA).

Step 6


FOR CABINET BOX WITH HANGER.

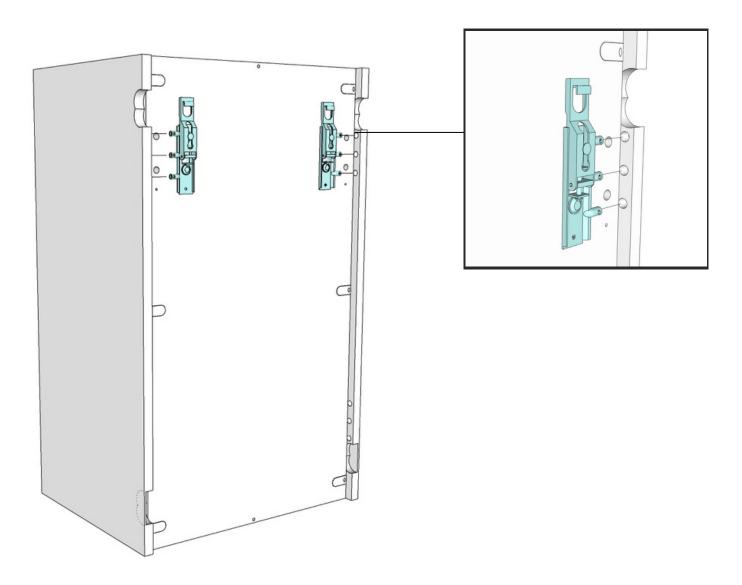

Align the three holes of the left bracket with the three upper holes of the left Gable (KPGA) and press them into place. Repeat this step for the right bracket.

Step 7

FOR CABINET BOX WITH HANGER.

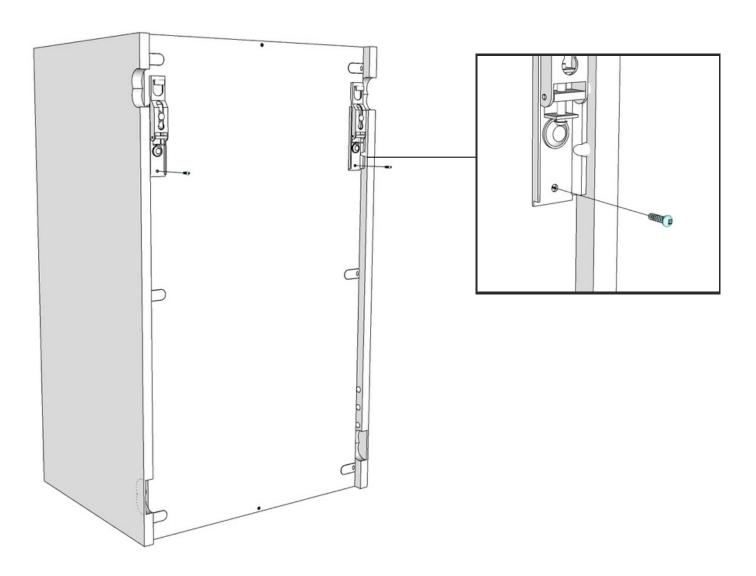

Fasten the hanger brackets with the screws provided.


Hardware needed:

1

Kitch₁₀

Step 8


FOR CABINET BOX WITH HANGER.

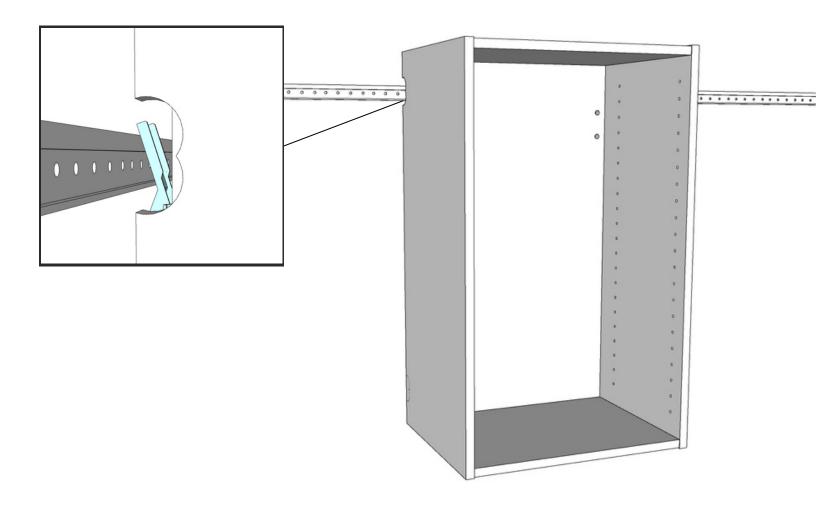

Adjust the hanger out by way of the top screw and mount the WallBOX on the suspension rail.

Step 9

FOR CABINET BOX WITH HANGER.

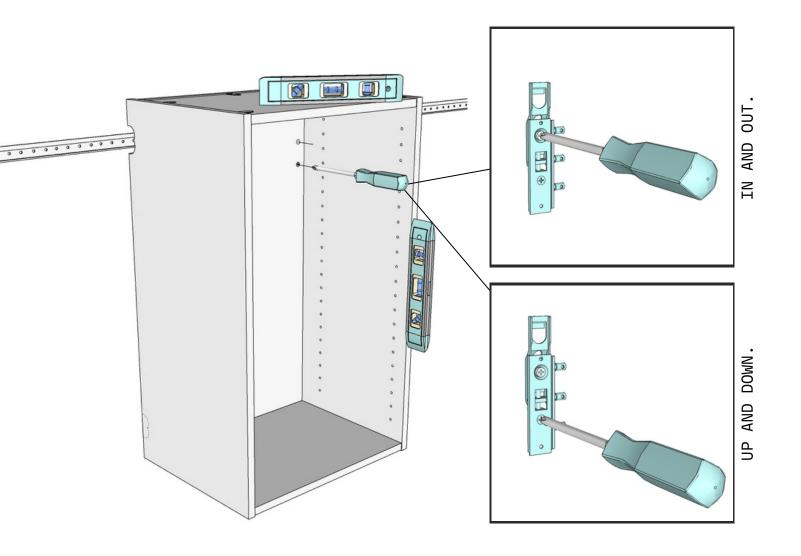


Using the four adjustment screws, adjust the cabinet to be plumb and level.

Kitch₁₀

Step 10


FOR CABINET BOX WITH HANGER.

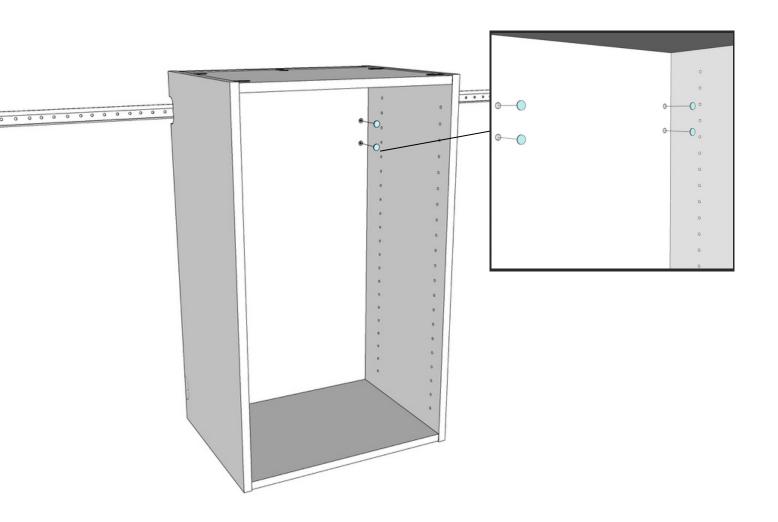

Once all adjustments are completed, cover the holes with the cover caps provided and fasten the cabinet to the wall.

Helpful hint: our hangers have a weight capacity of 150 lbs per set/cabinet.

Step 11

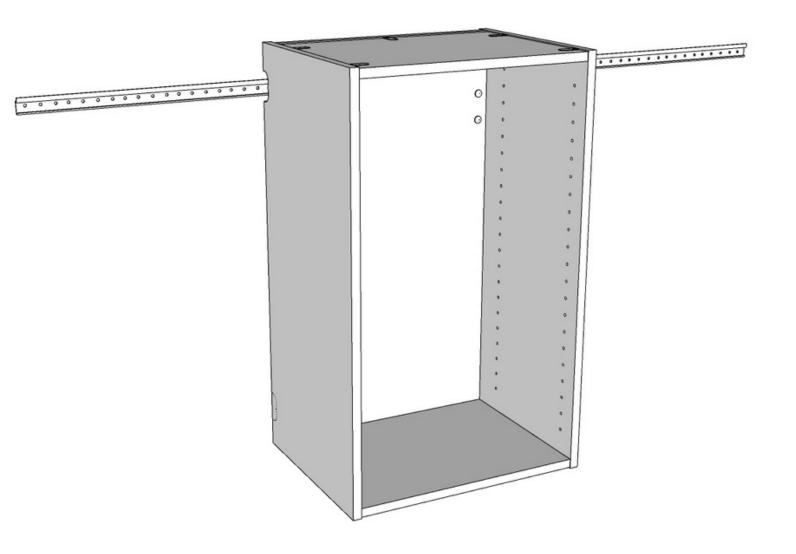

Your Kitch WallBOX is now installed.