

**C437V02**

# **Cargo Van Roof Ladder Rack**

**Fit for Ford Tranist 2015-On**




## **FOR WAREHOUSE USE**

Part#: C437V02  
Material: Steel  
Fitment: Ford Transit Cargo Van 2015-On

## **REQUIRED TOOLS**








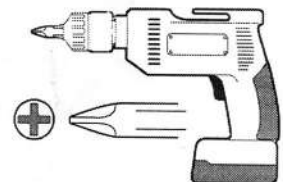






Power Tool  
with  
Philips Head



1/2" Wrench





## List

PART #	DESCRIPTION	QTY	ITEM
①	CROSS BAR	4	
②	MOUNTING BASE	8	
③	END CAP	8	
④	LADDER GUAIDE	4	
⑤	LADDER STOPPER	2	
⑥	RUBBER SEAT	8	
⑦	ANTISKID TAPE	4	
⑧	NYLON STRAP	2	
⑨	SELF TAPPING SCREW	16	
⑩	LOCK WASHER	8	
⑪	CARRIAGE BOLT	8	
⑫	KNOB	8	
⑬	WASHER	8	
⑭	HEX BOLT	8	

PLASTIC BAR GUARDS FOR STEEL CROSS BARS







Remove wax paper from plastic bar guard and adhere it to the top of the Cross Bar.

Leave 4" on each end





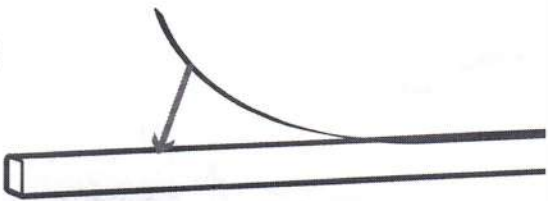
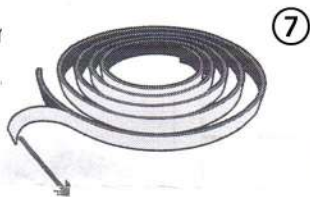


Hook & Loop Strap

Directions

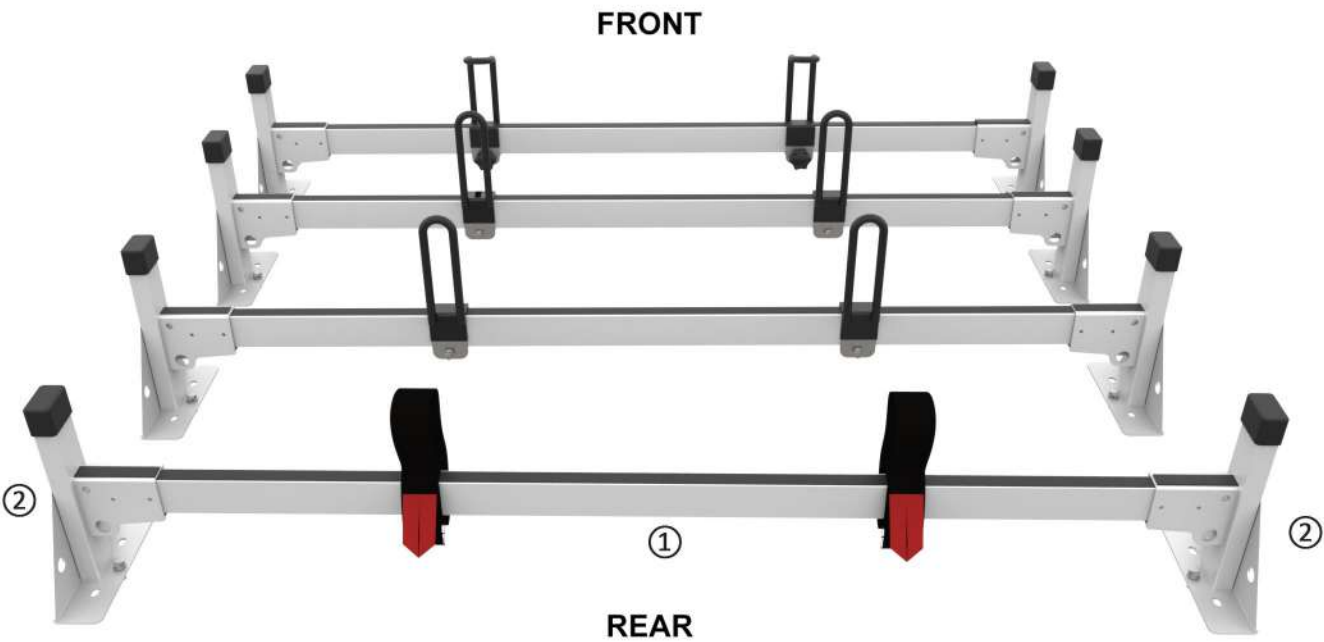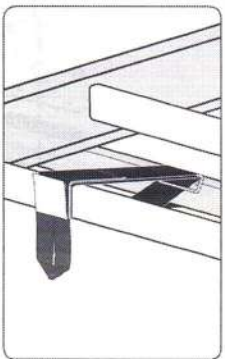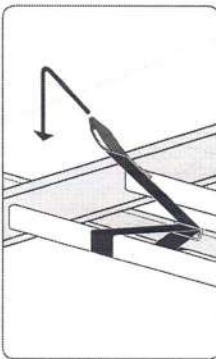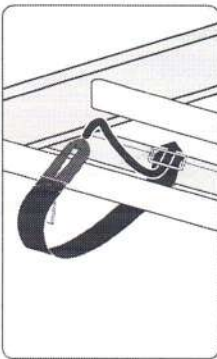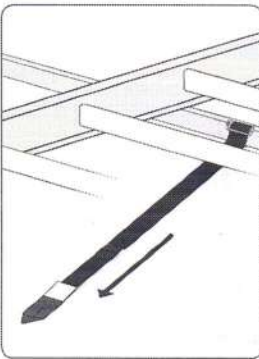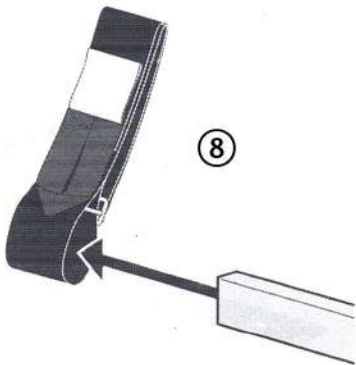

# C437V02

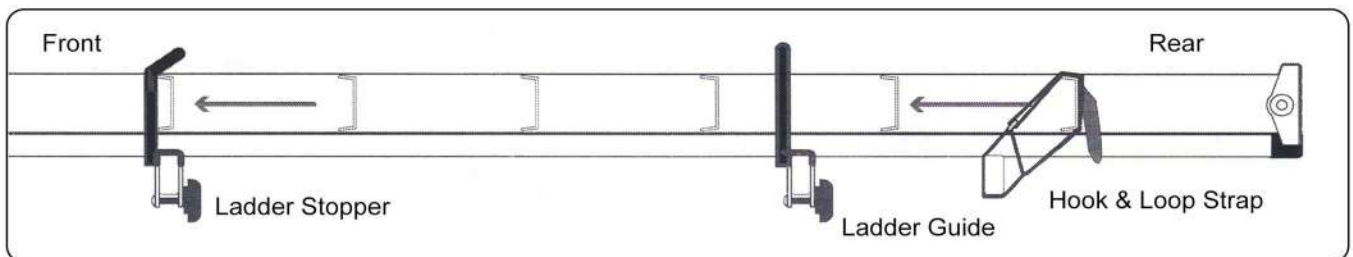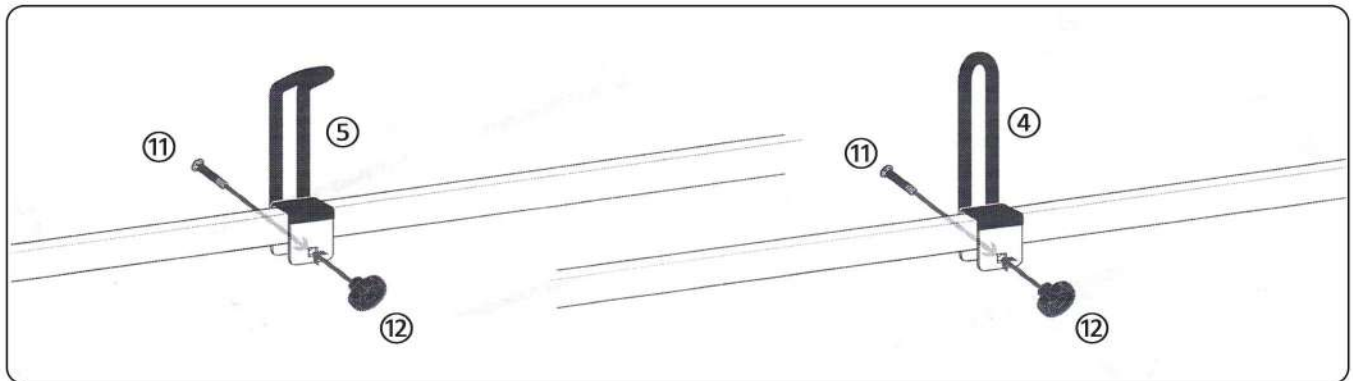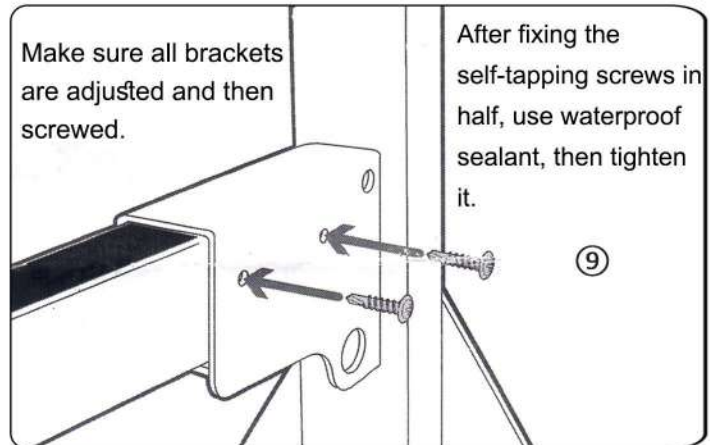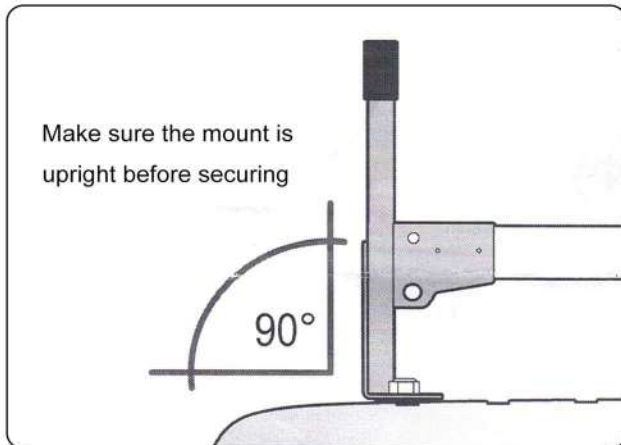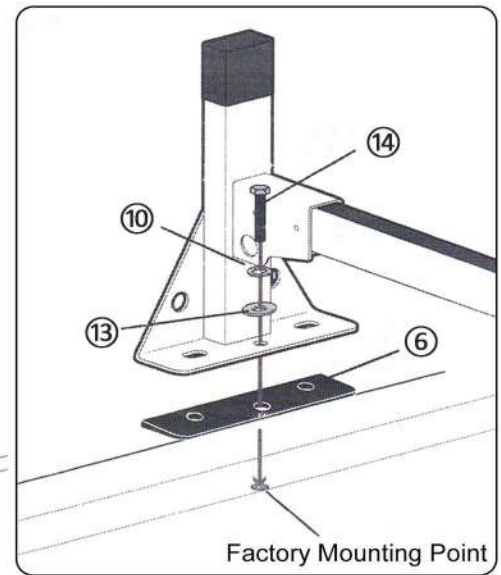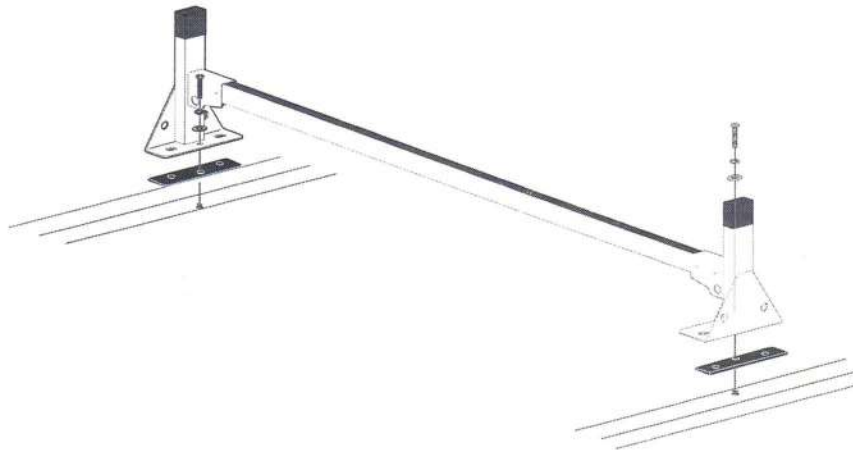

Please note: Each rack bracket already has a rubber seat on the bottom, and the bolt secures the bracket to the van using a sealing washer which should keep most water out. That being said, we always use waterproof sealant(NOT PROVIDE) to ensure no water can get into your van and we recommend that you do the same.

Tip: For a clean installation, apply tape on all 4 sides of the rack bracket, apply sealant to all 4 sides of the rack bracket and the hex bolt and sealing washer. Remove the tape.

If there is no factory mounting point, you can drill, need to buy matching screws and washer(NOT PROVIDE) .