
Installation Diagram

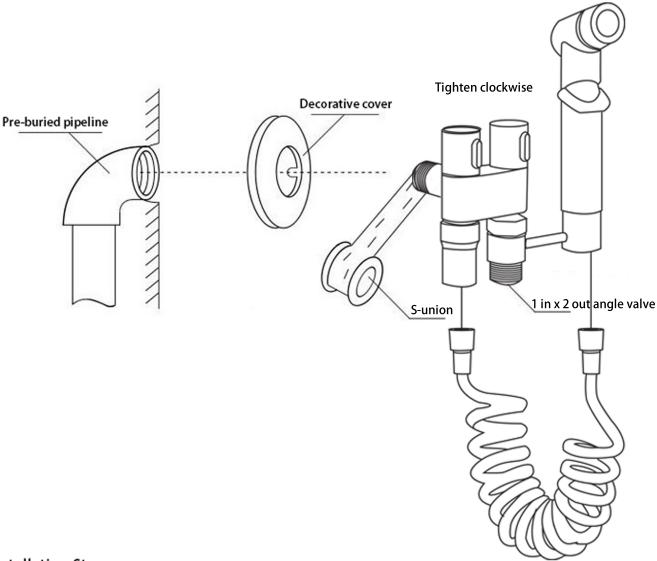

Installation Steps:

- 1. Let the water clean the dirt inside the pipes before installation;
- 2. Put the decorative cover over the water entrance of the angle valve;
- 3. Wrap the threaded water entrance of the angle valve with the seal tape, and screw the valve into the pre-buried pipeline.
- 4. Screw the valve clockwise until it's tightened, and adjust the angle of the valve outlet to the right place.
- 5. Open the valve, check if the threaded connection part is sealed well, and the installation would be finished if there's no dripping.