













LIVING CULTURE

BIOCLIMATIC PERGOLA FREE STANDING 4 POSTS

MOTORIZED 2*2/2.5*2.5/2*3/2*4/3*3/3*4m



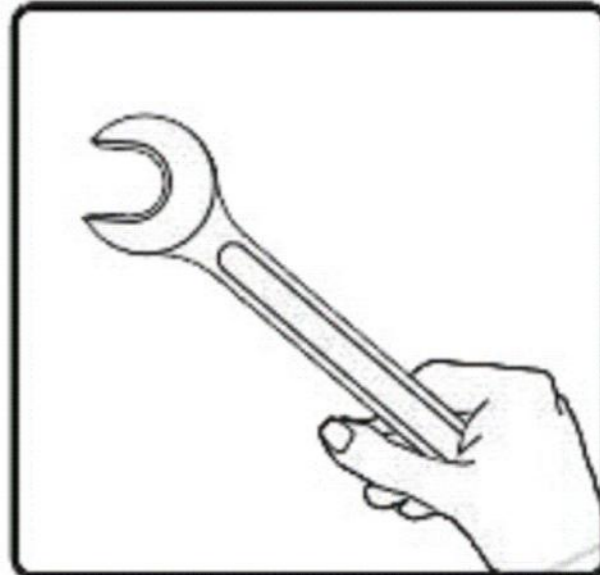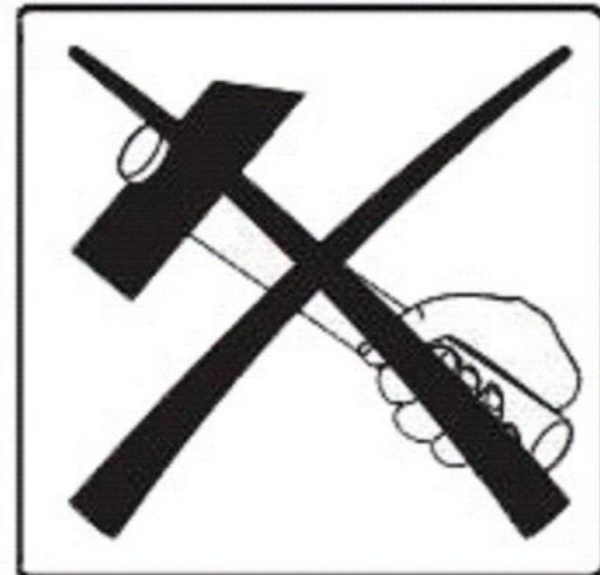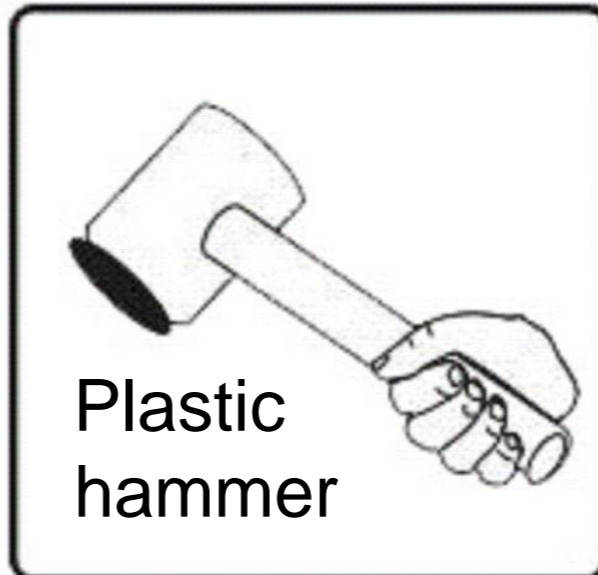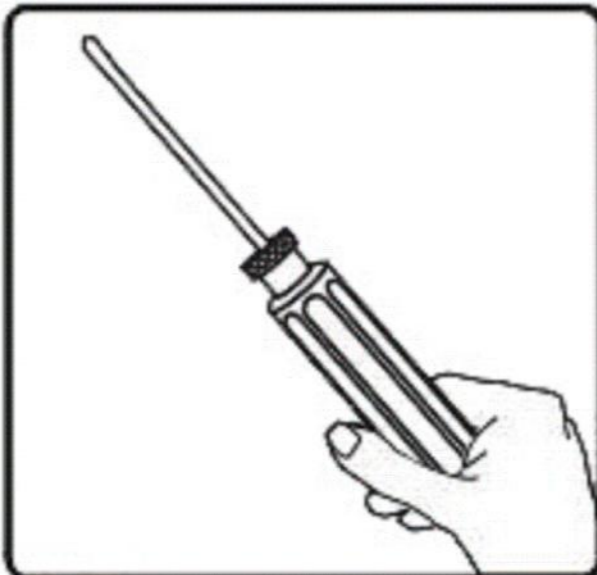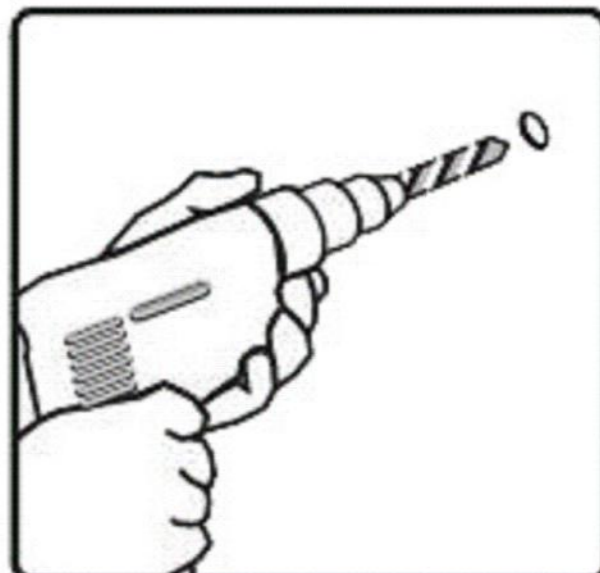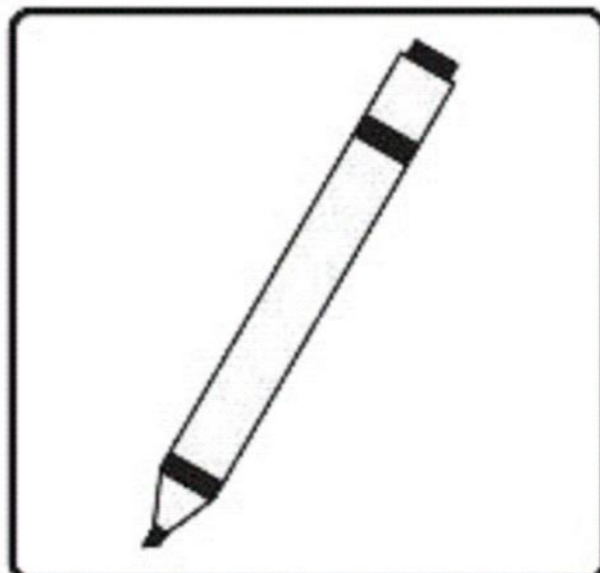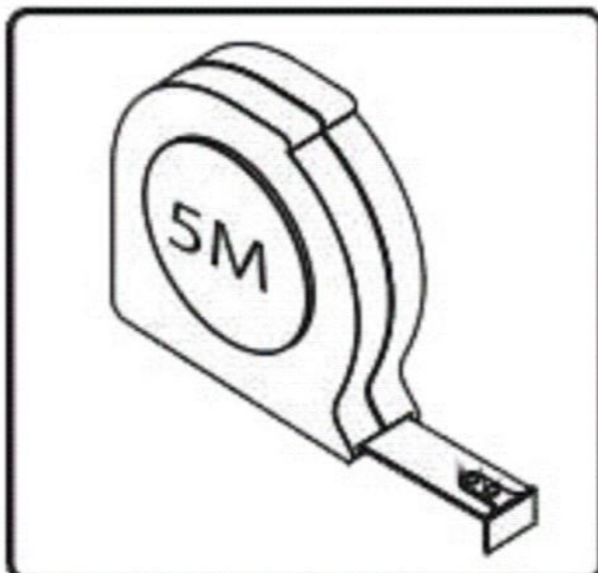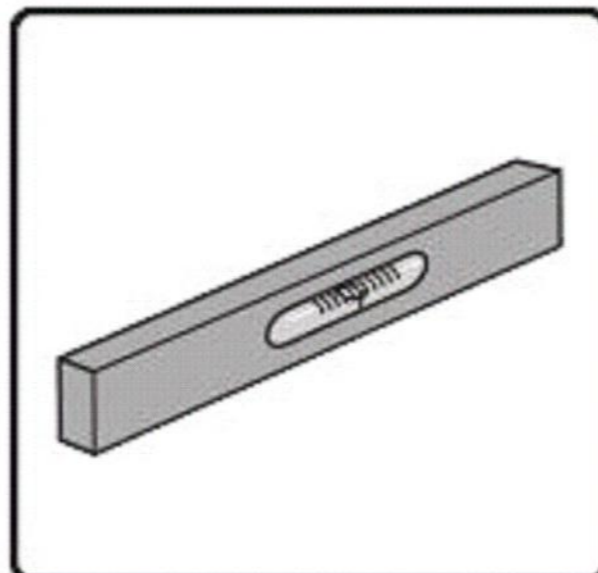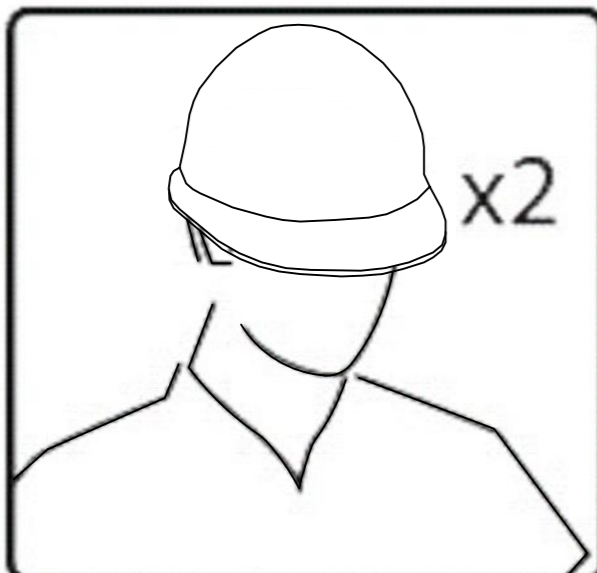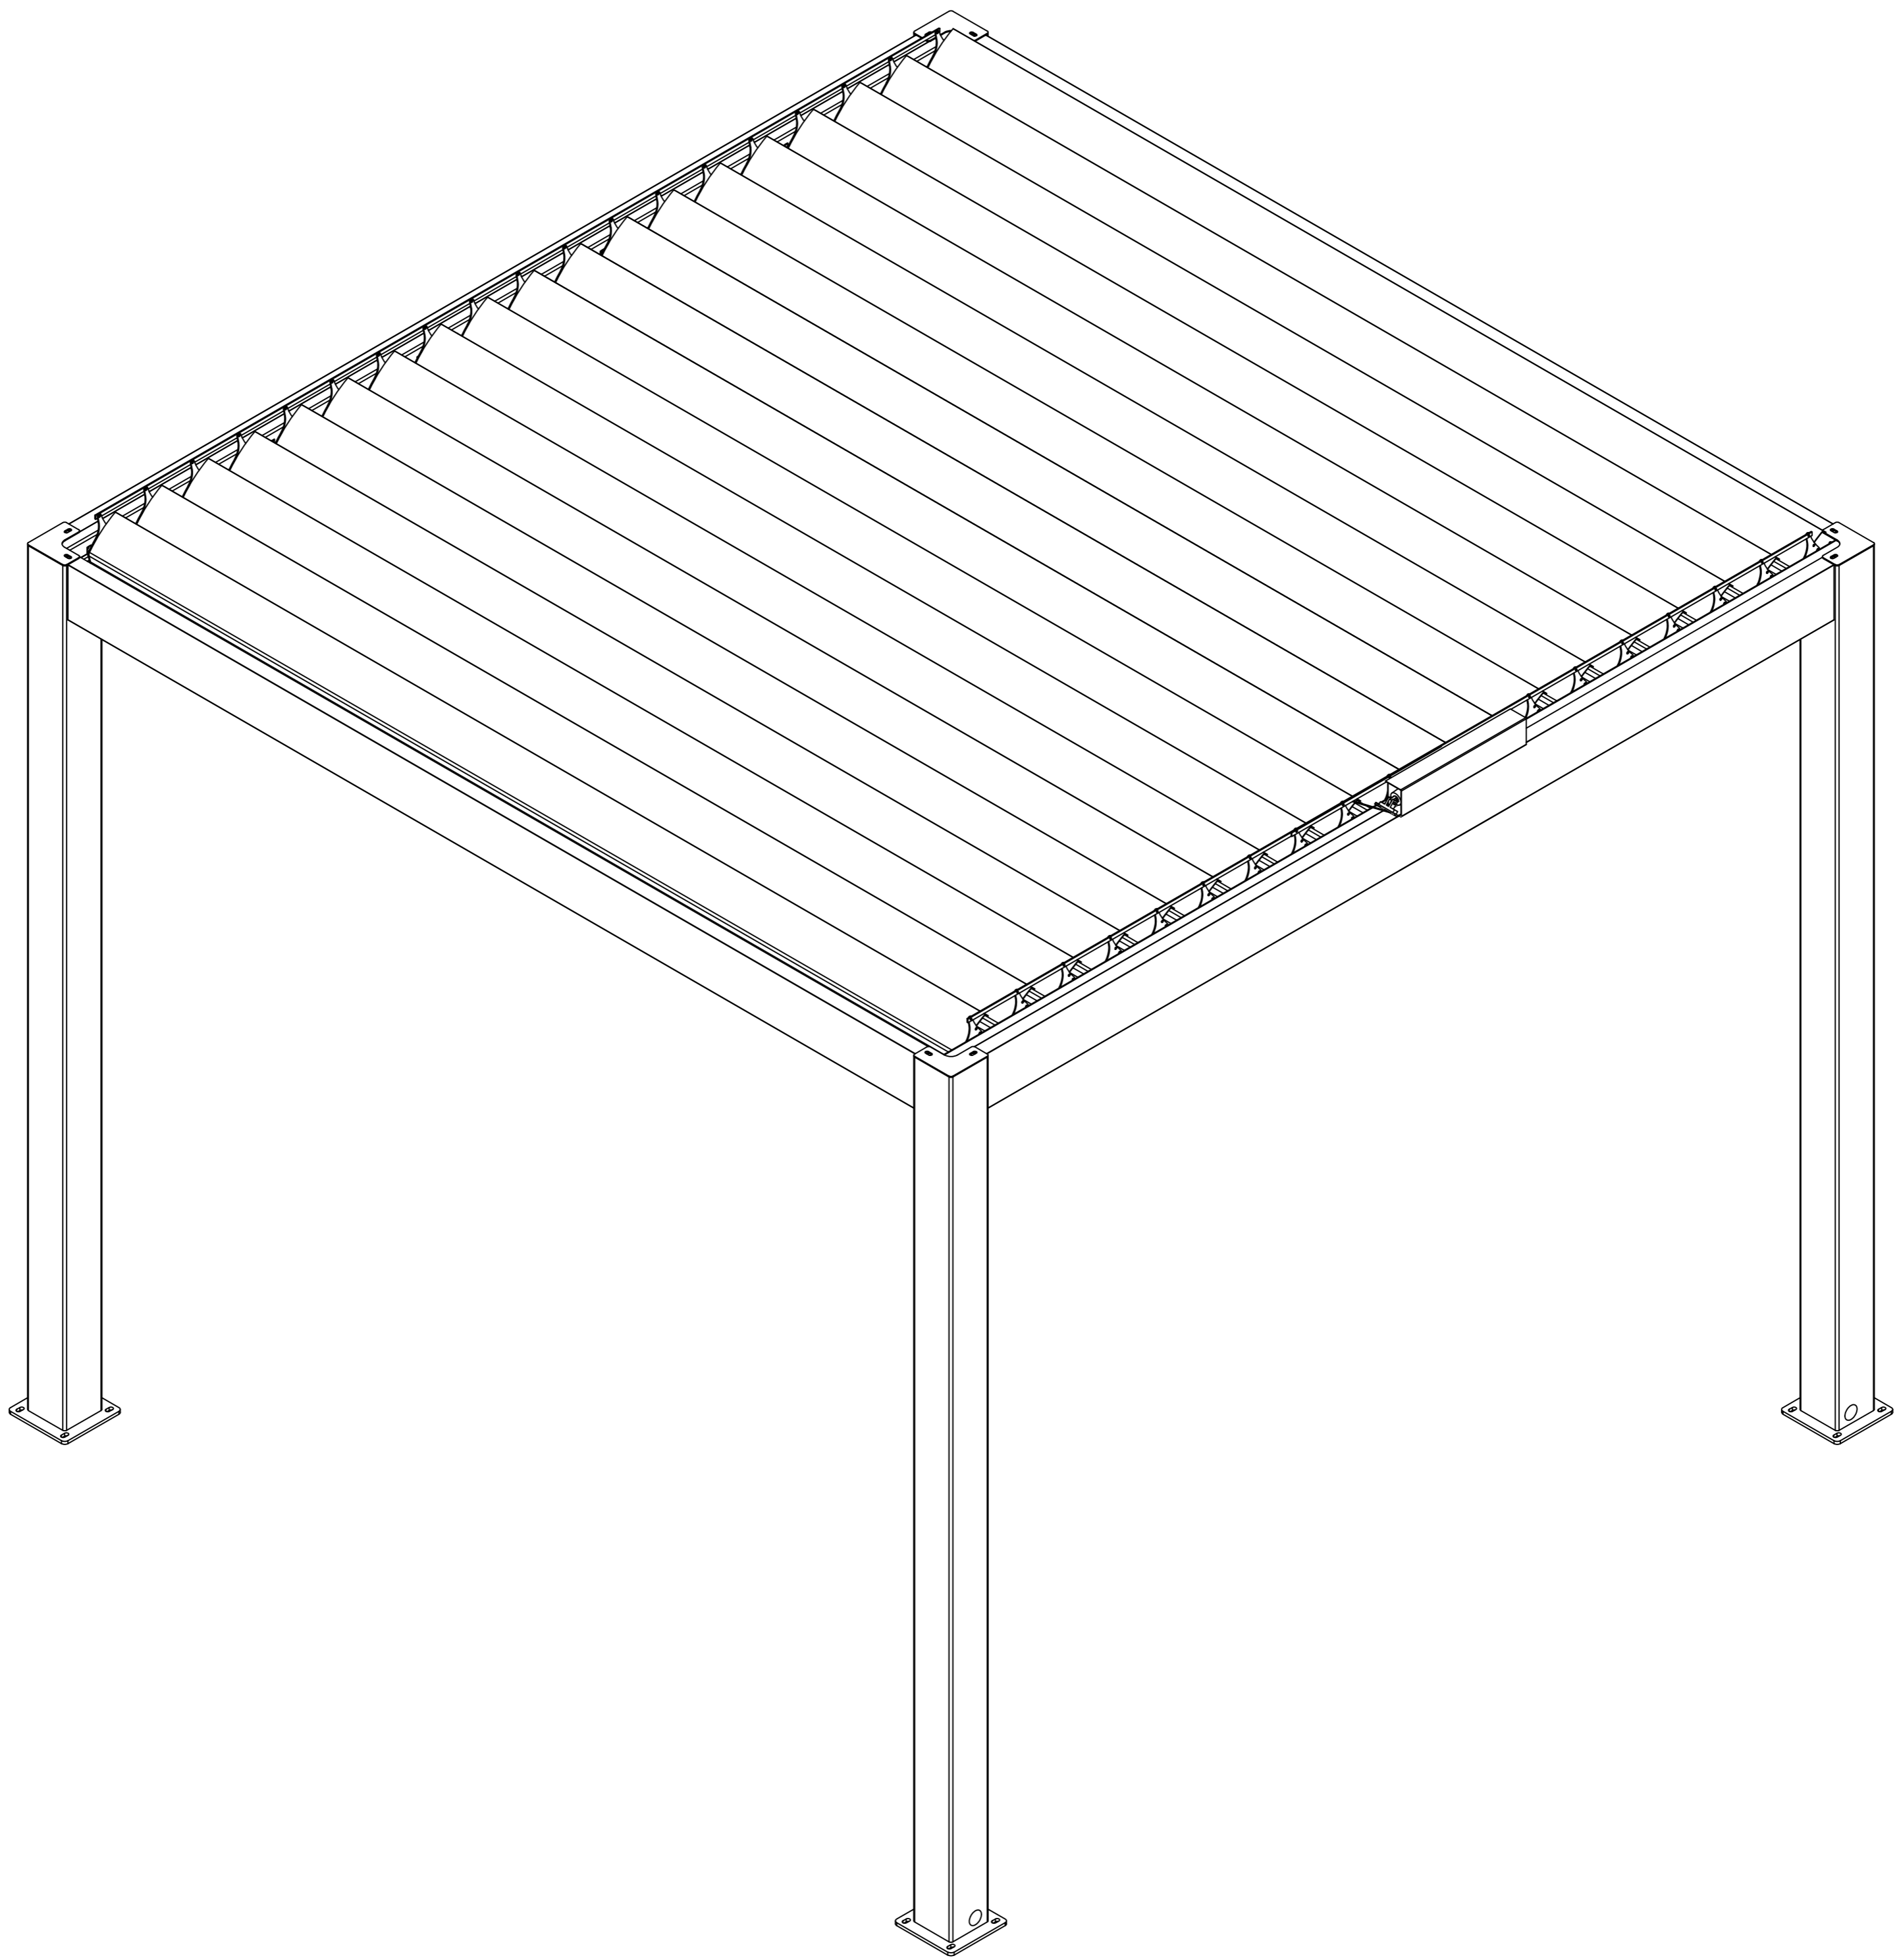























2x2m

	Item	Qty	Item	Qty	Item	Qty
Carton 1/4	3B-01/ 01B	4	3B-11	4	3B-12	4
	3B-13	4	3B-14	1	3B-18	1
	3B-19	8	3B-20	22	3B-20B	4
	3B-21	16	3B-22	24	3B-23	10
	3B-24	1	3B-30	1	3B-31	1
	3B-48	10	3B-48B	3	3B-49	10
	3B-49B	3	3B-51	104	3B-57	3
	3B-58	1	3B-59	1	3B-60	1
	3B-46a	1	3B-46b	3		
Carton 2/4	3B-02	1	3B-03	1	3B-04	2
	3B-08A/ B	2	3B-09	2	3B-06	10
	3B-07	3				



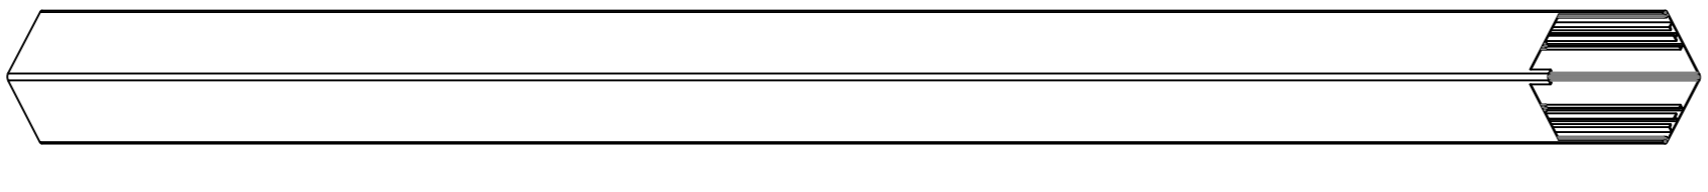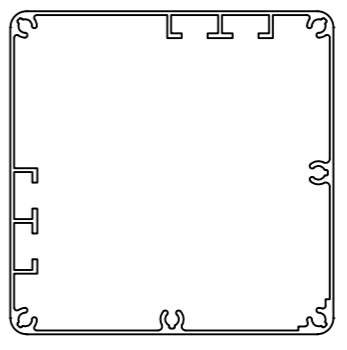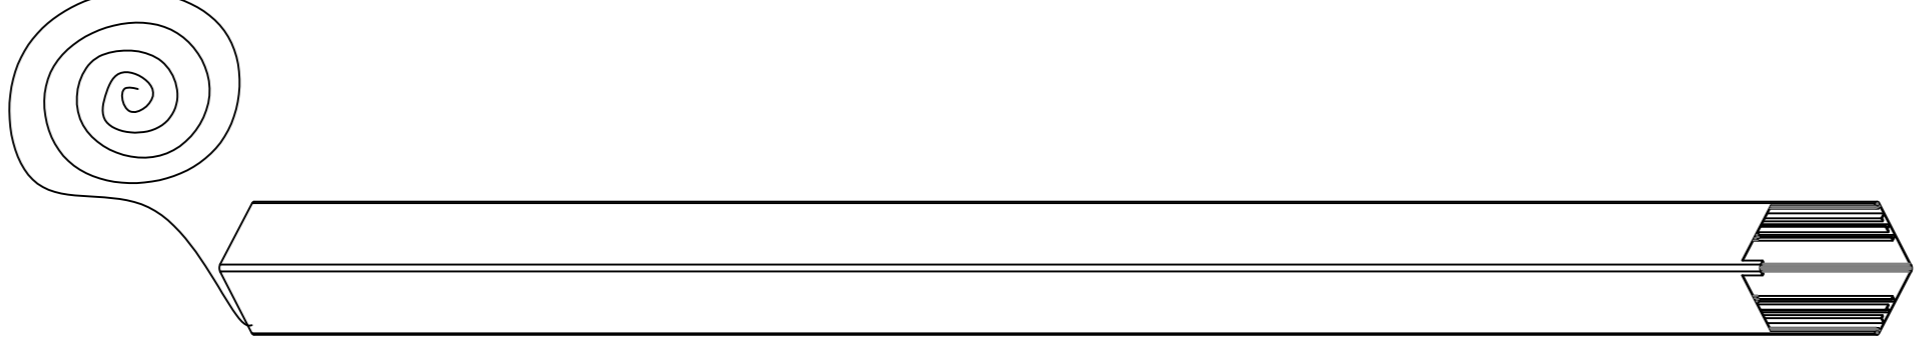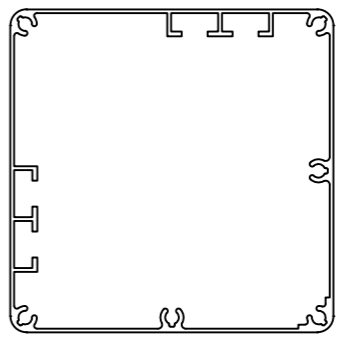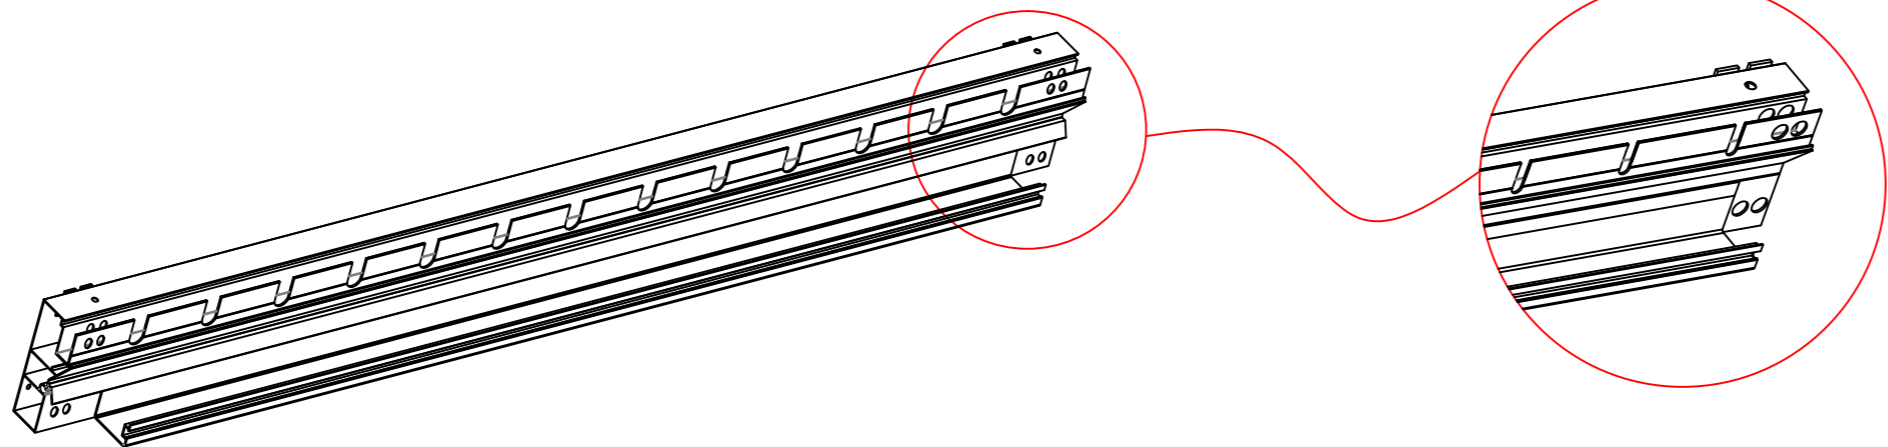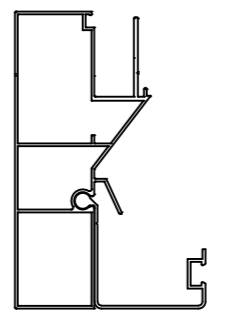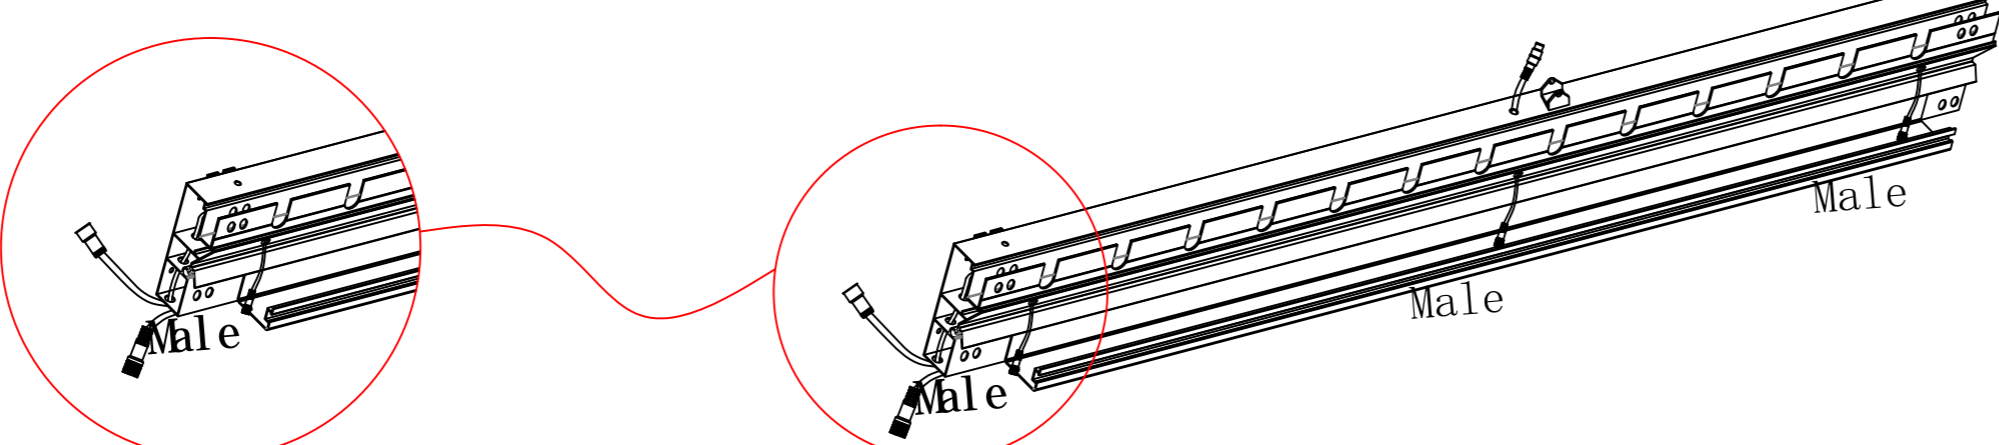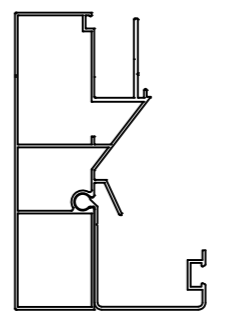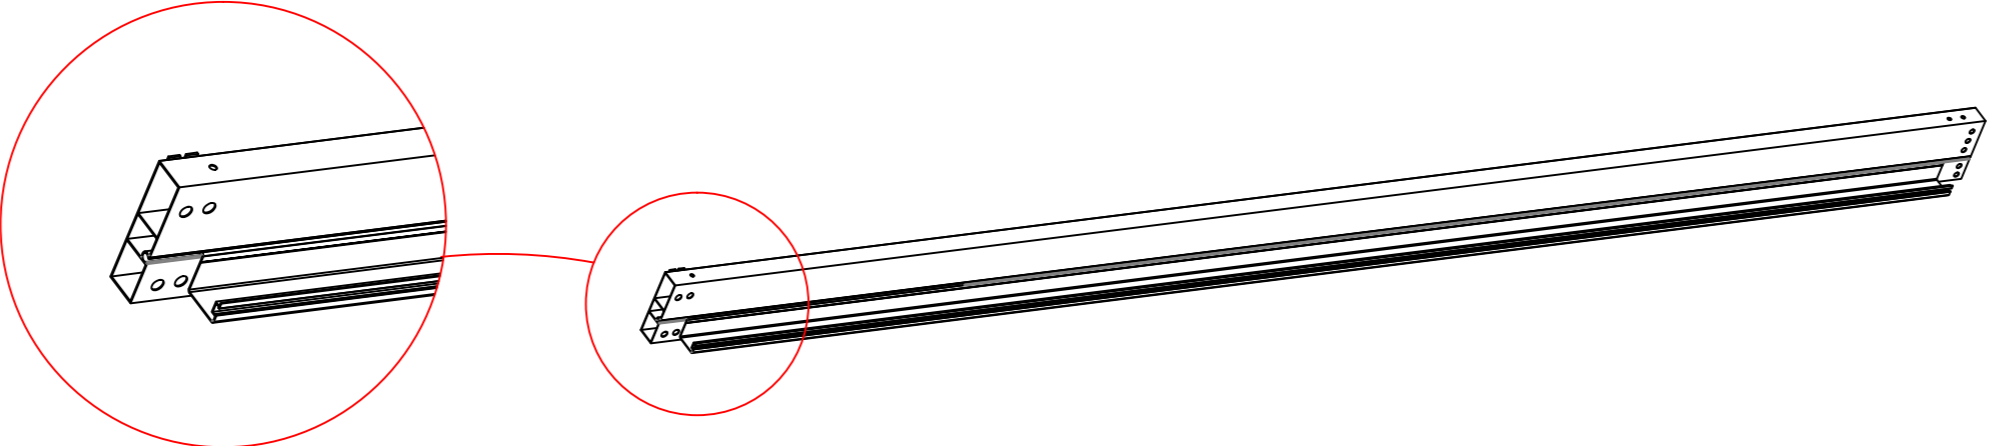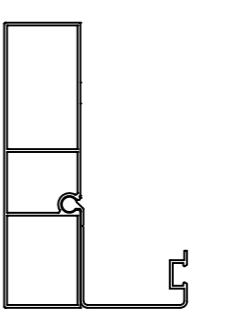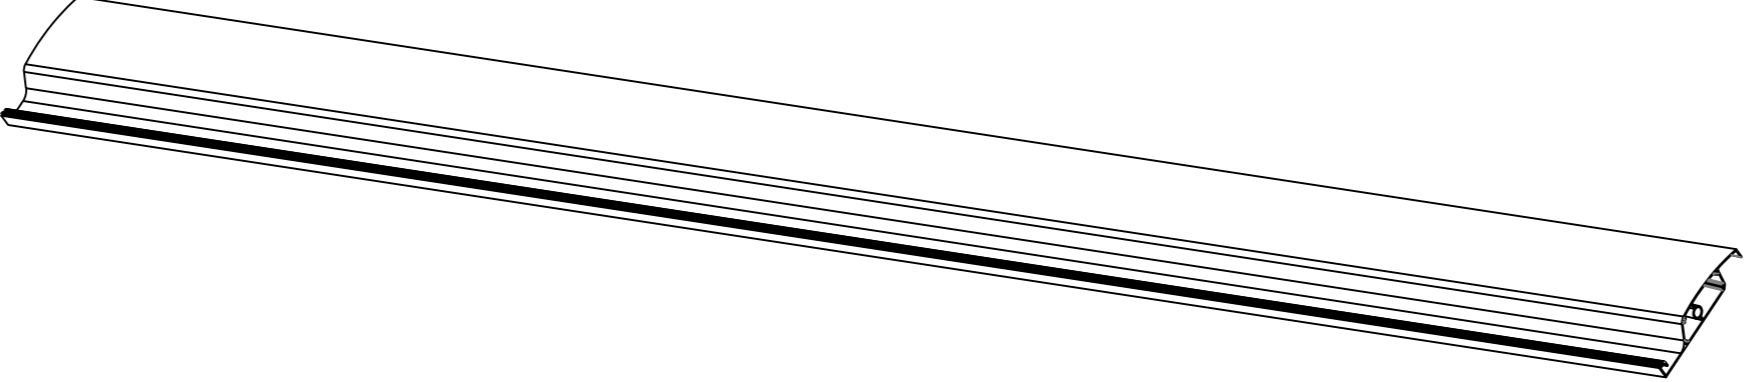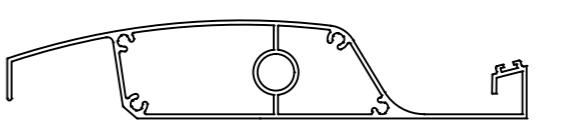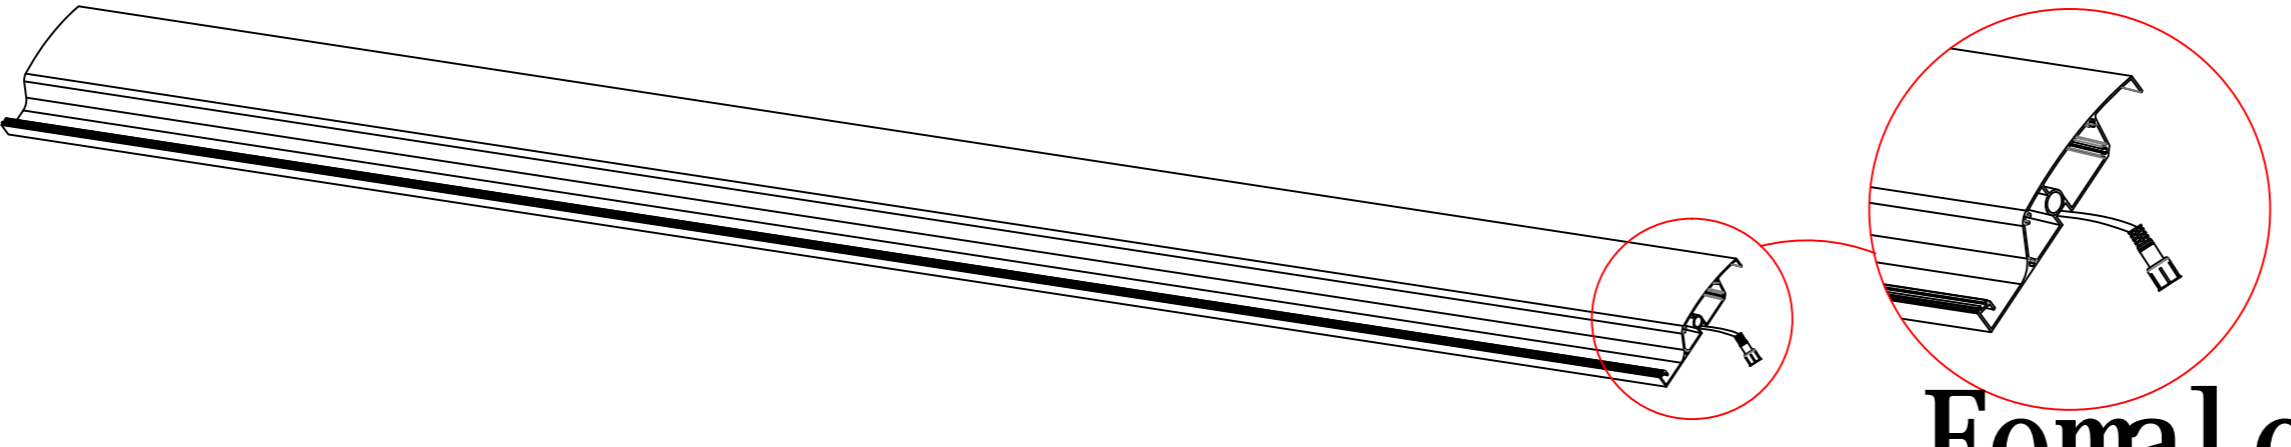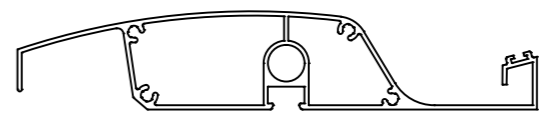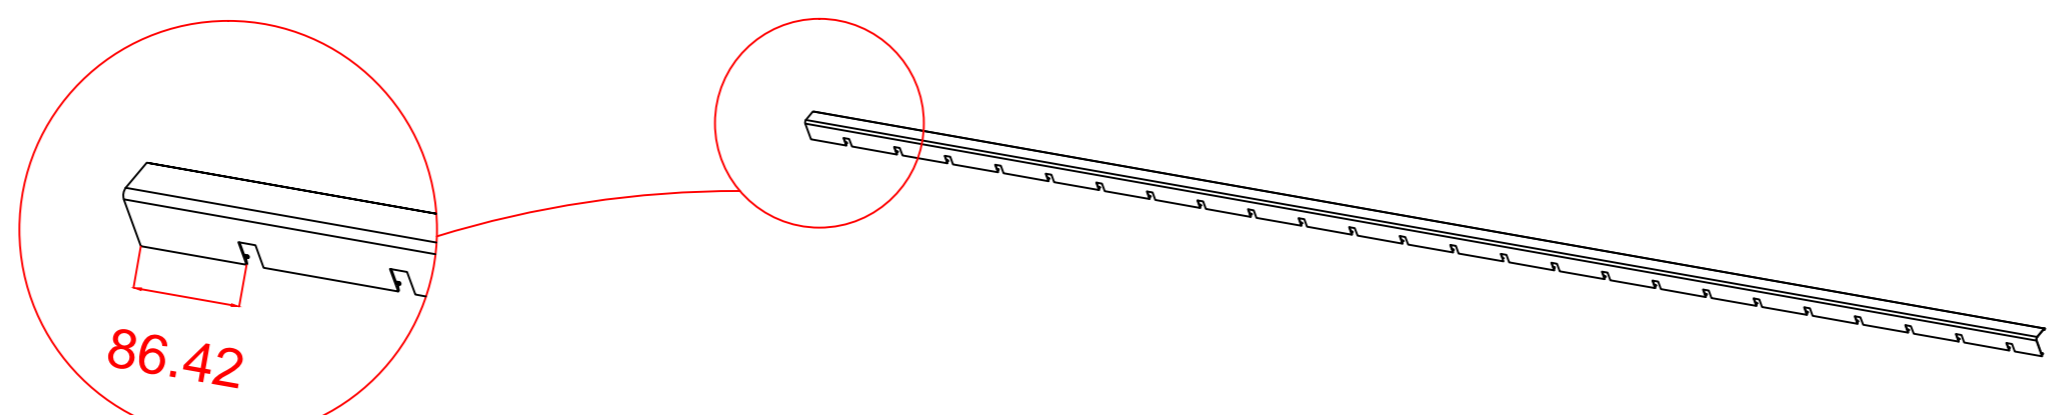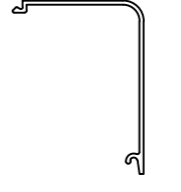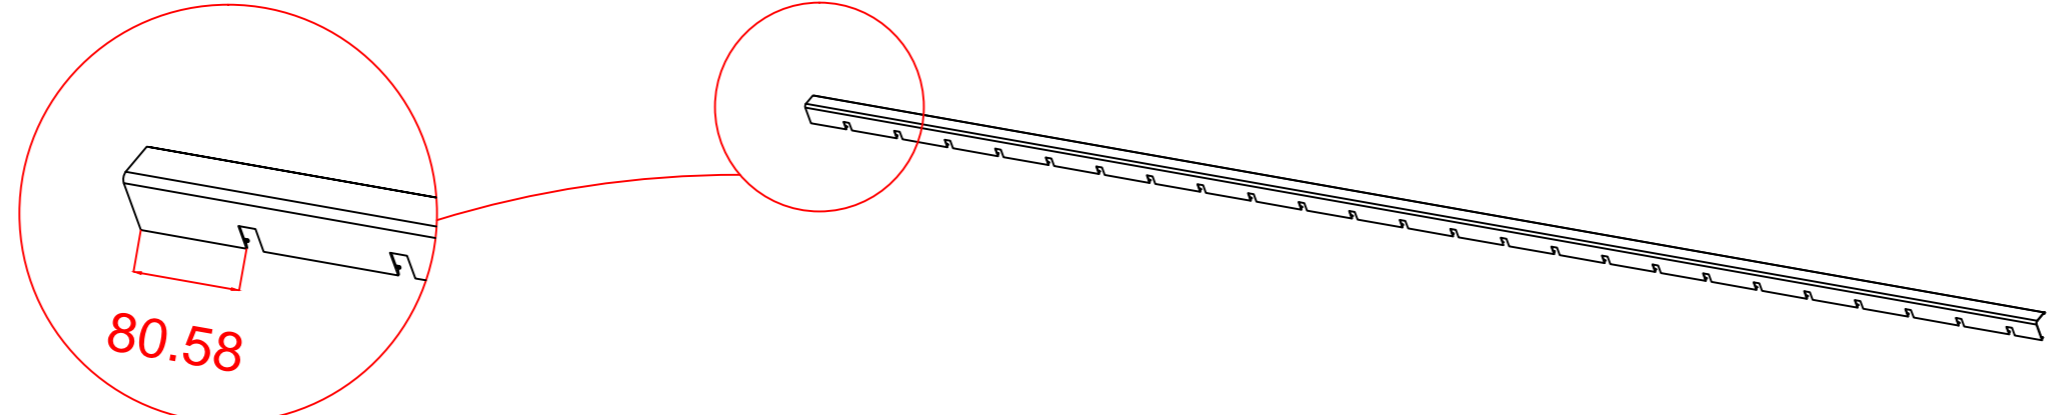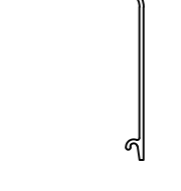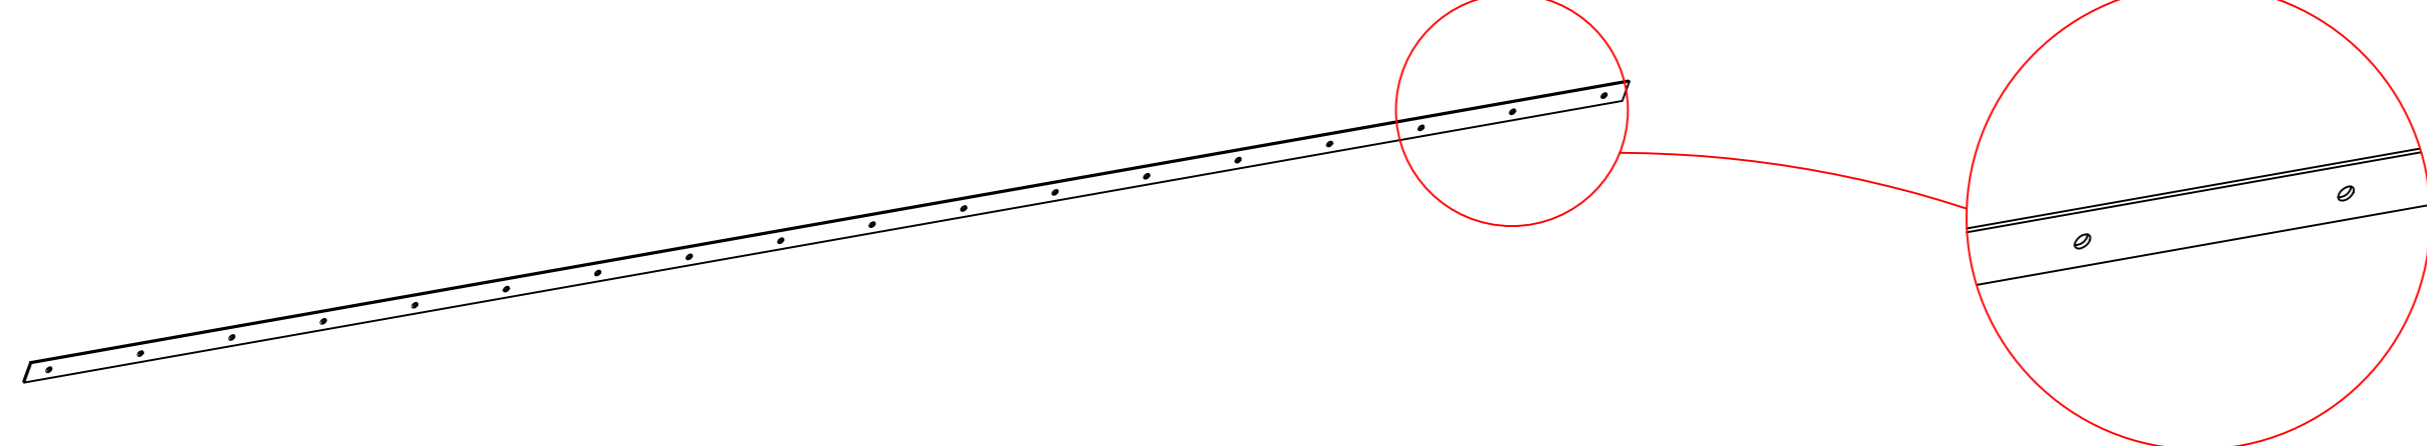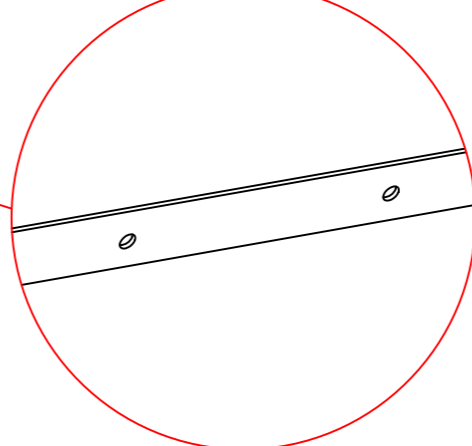

Item	Drawings	Qty
3B-01	 	3
3B-01B	 	1
3B-02	 	1
3B-03	 	1
3B-04	 	2
3B-06	 	10
3B-07	  <p data-bbox="1260 1884 1459 1944">Female</p>	3
3B-08A	  <p data-bbox="535 2122 619 2166">86.42</p>	1
3B-08B	  <p data-bbox="535 2359 619 2404">80.58</p>	1
3B-09	 	2






Item	Drawings	Qty
3B-11		4
3B-12		4
3B-13		4
3B-14		1
3B-18		1
3B-19	 M8*20	8
3B-20	 5-12-M4	22+2
3B-20B	 5-16-M4	4+2
3B-21	 M10*80	16
3B-22	 M5.5*60	24+2
3B-23	 M4.2*19	10+2
3B-24		1
3B-30		1


Item	Drawings	Qty
3B-31		1
3B-46a		1
3B-46b		3
3B-48		10
3B-48B		3
3B-49		10
3B-49B		3
3B-51	 M4.2*25	104+4
3B-57		3
3B-58		1
3B-59	 M5*20	1
3B-60	 M4.2*19/8pcs	1



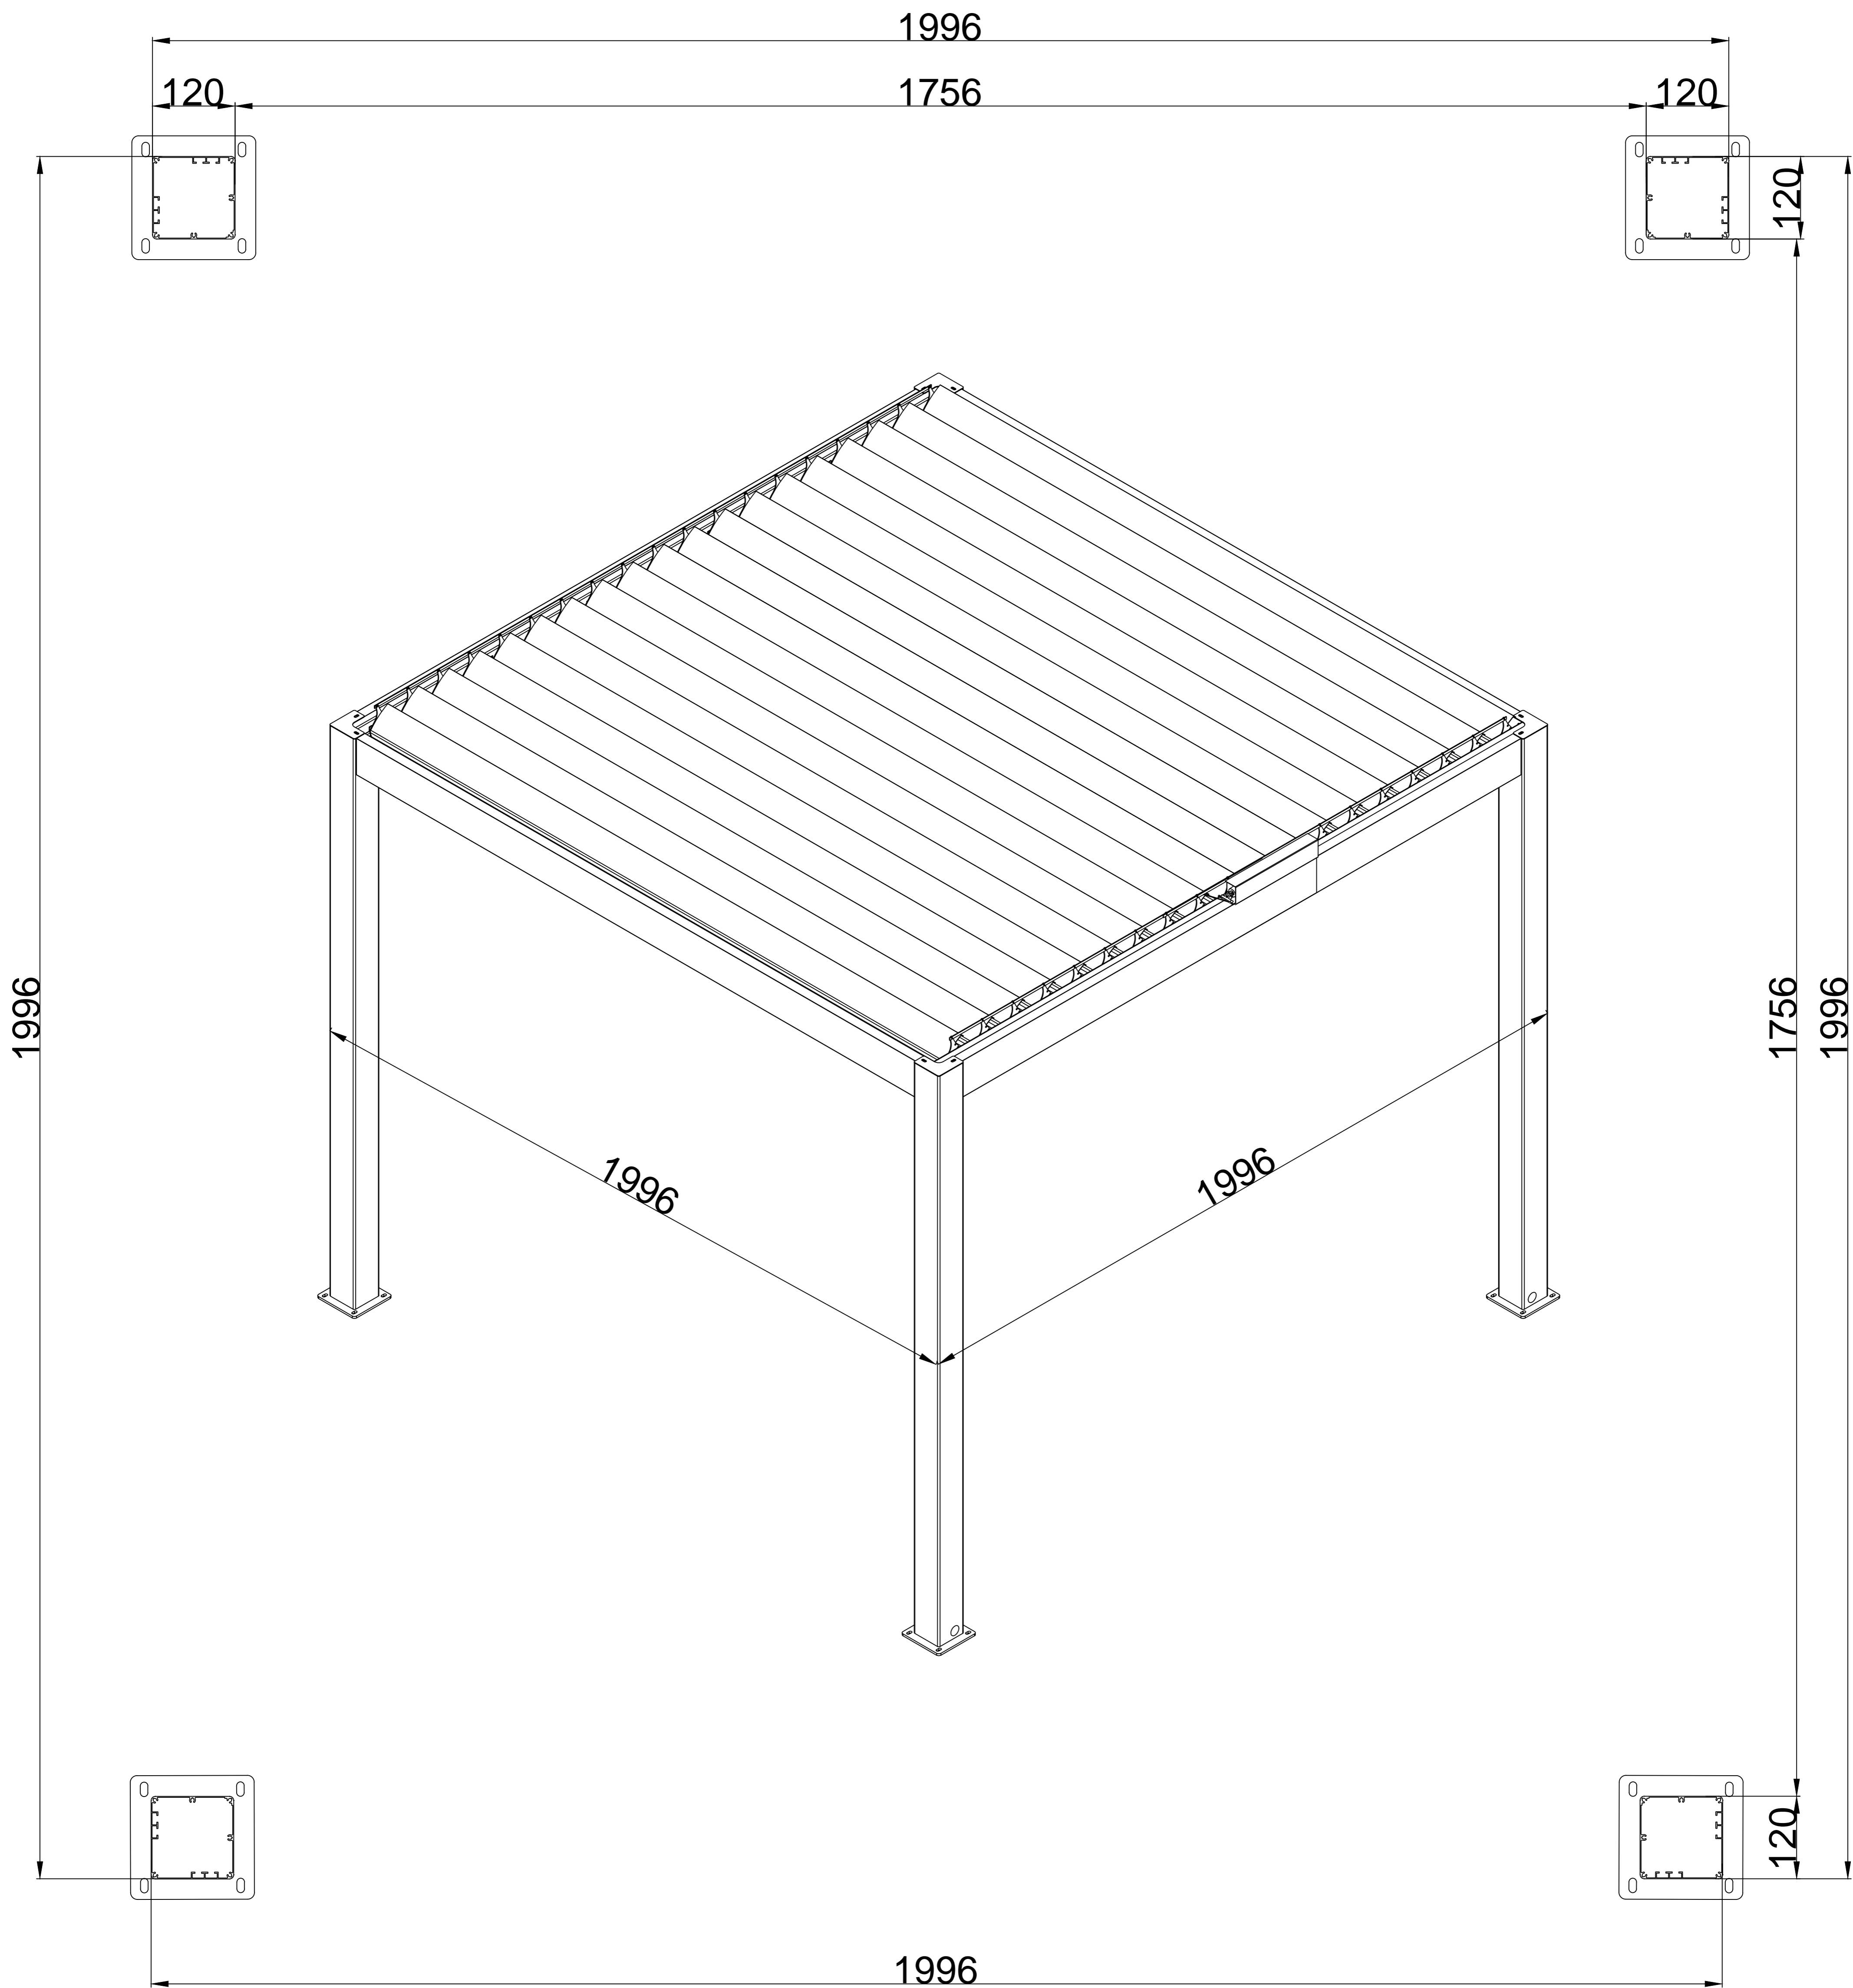











2*2-4



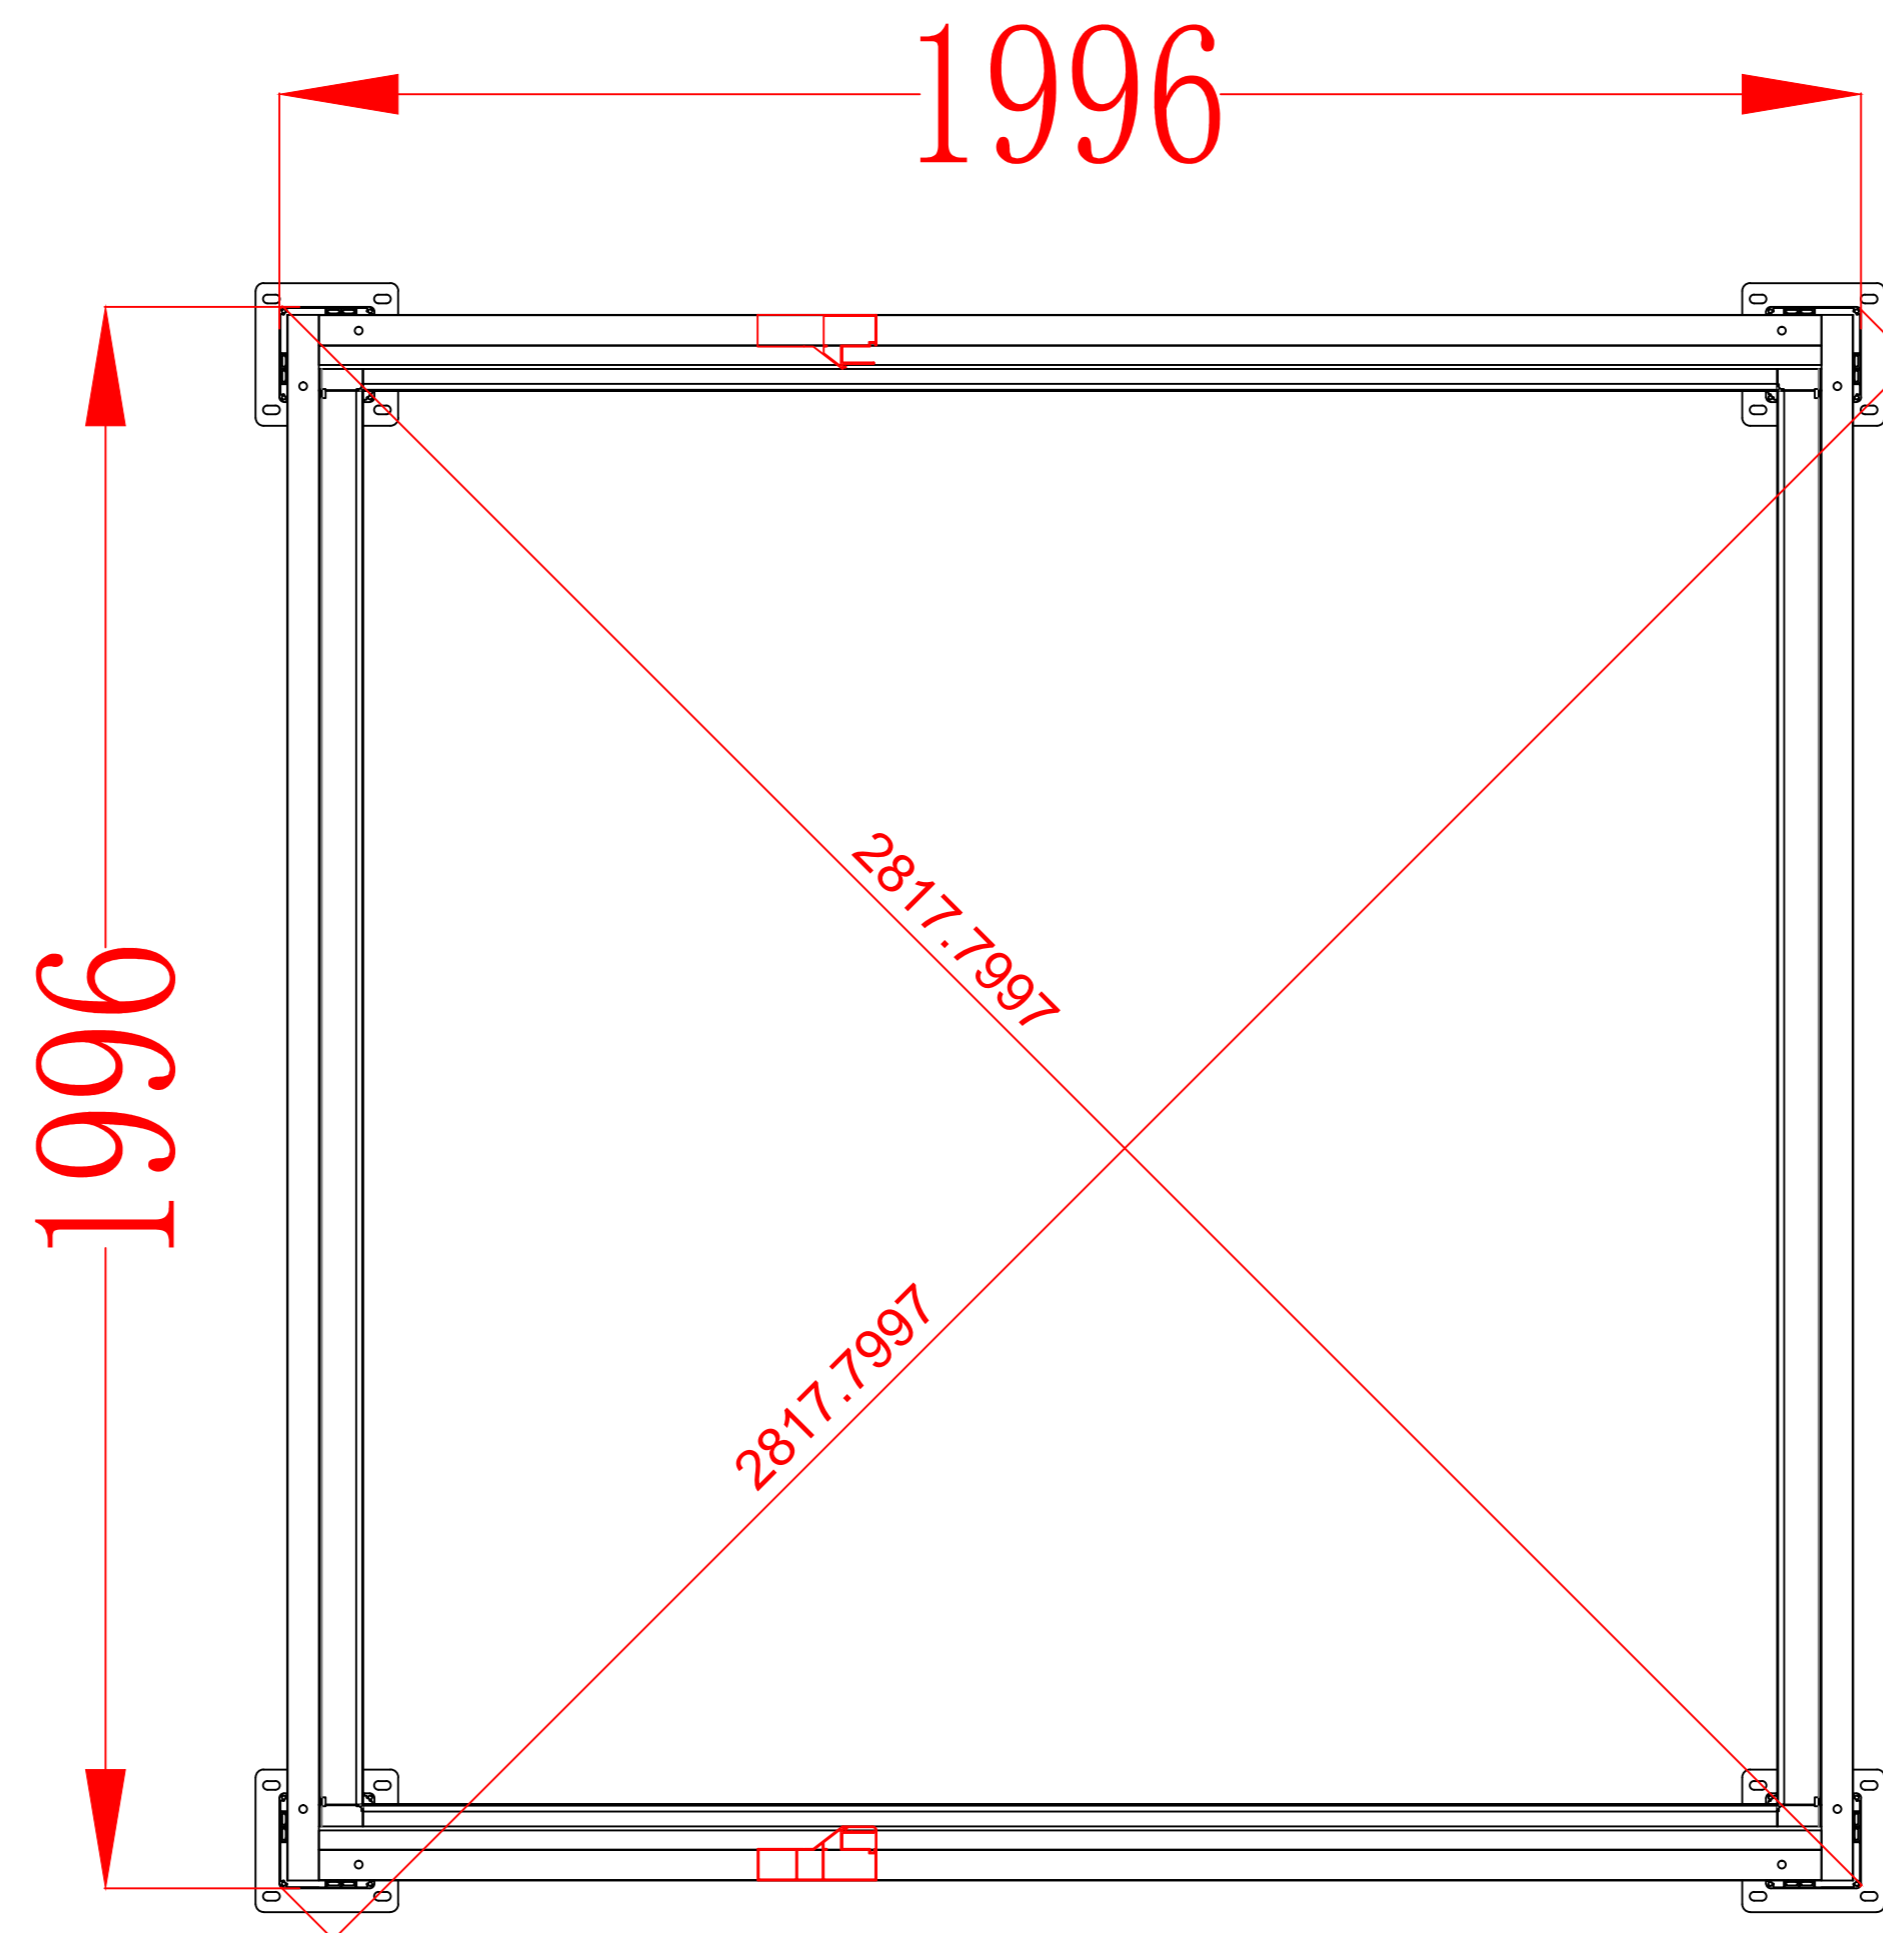

Before installing the bottom expansion screws, please be sure to correct the frame size



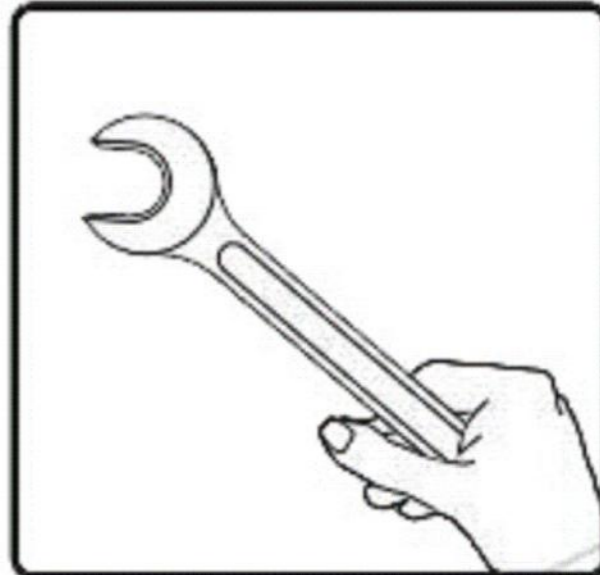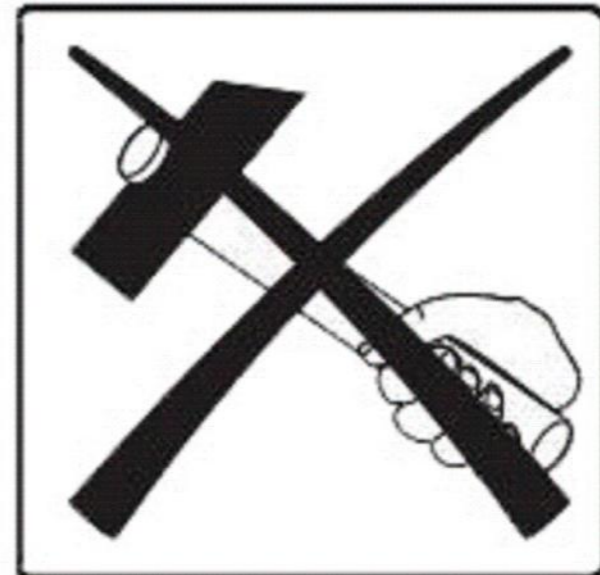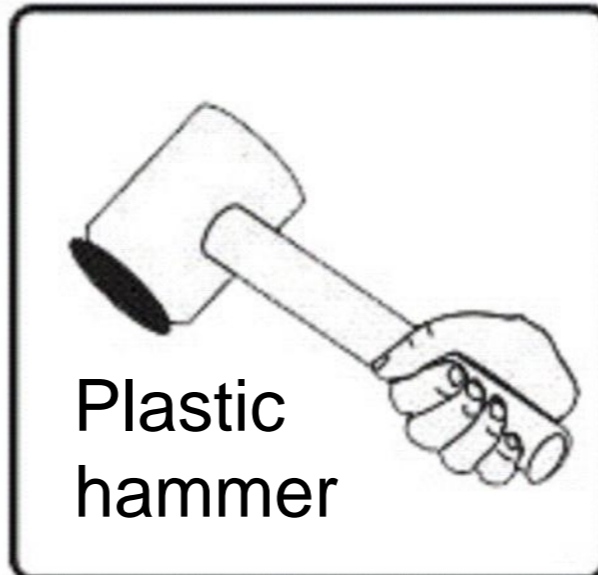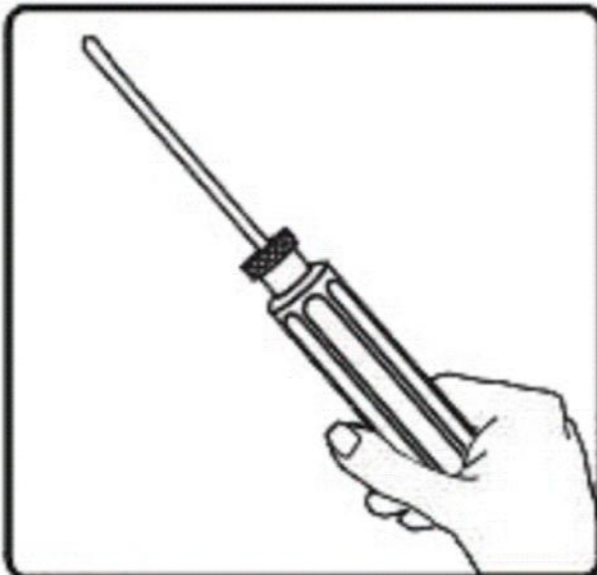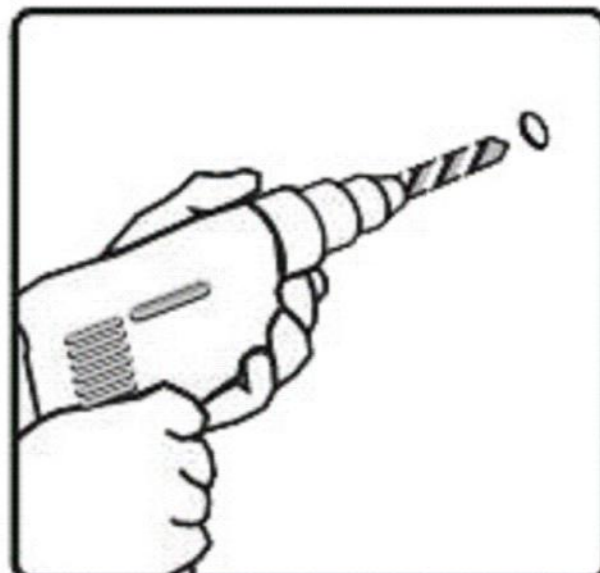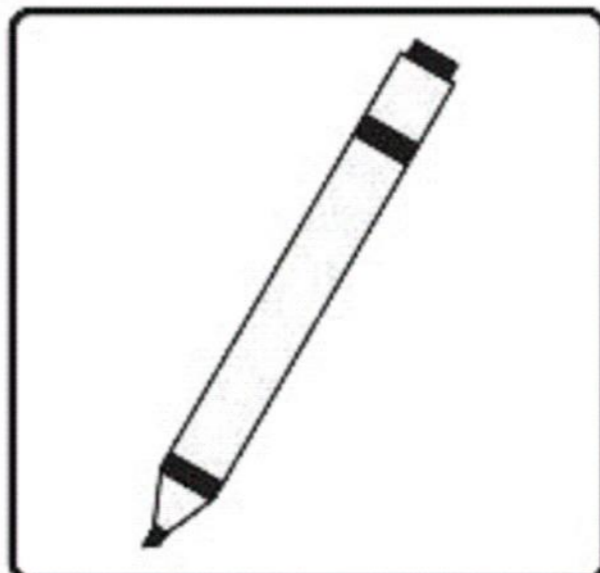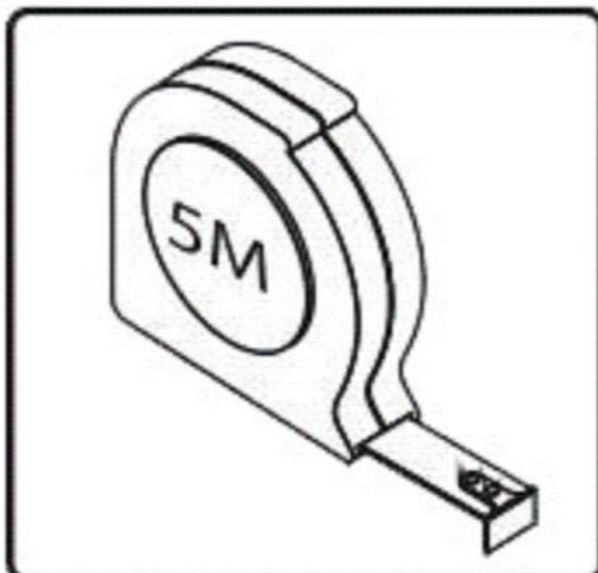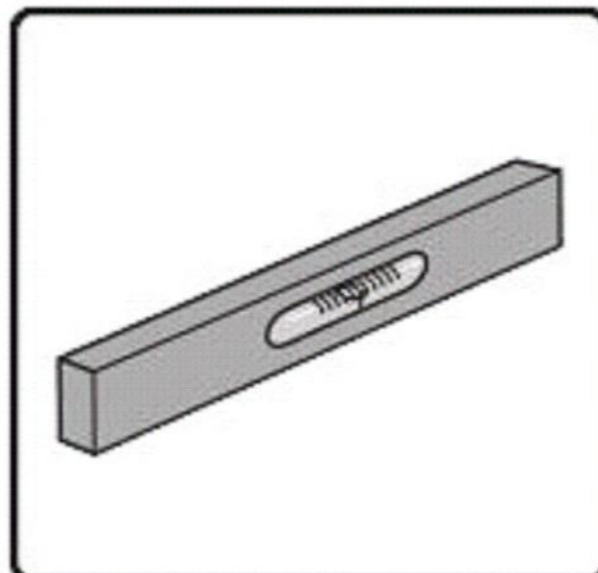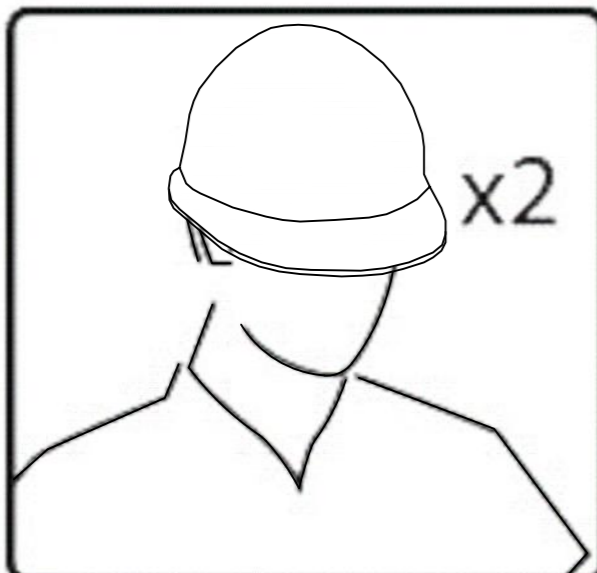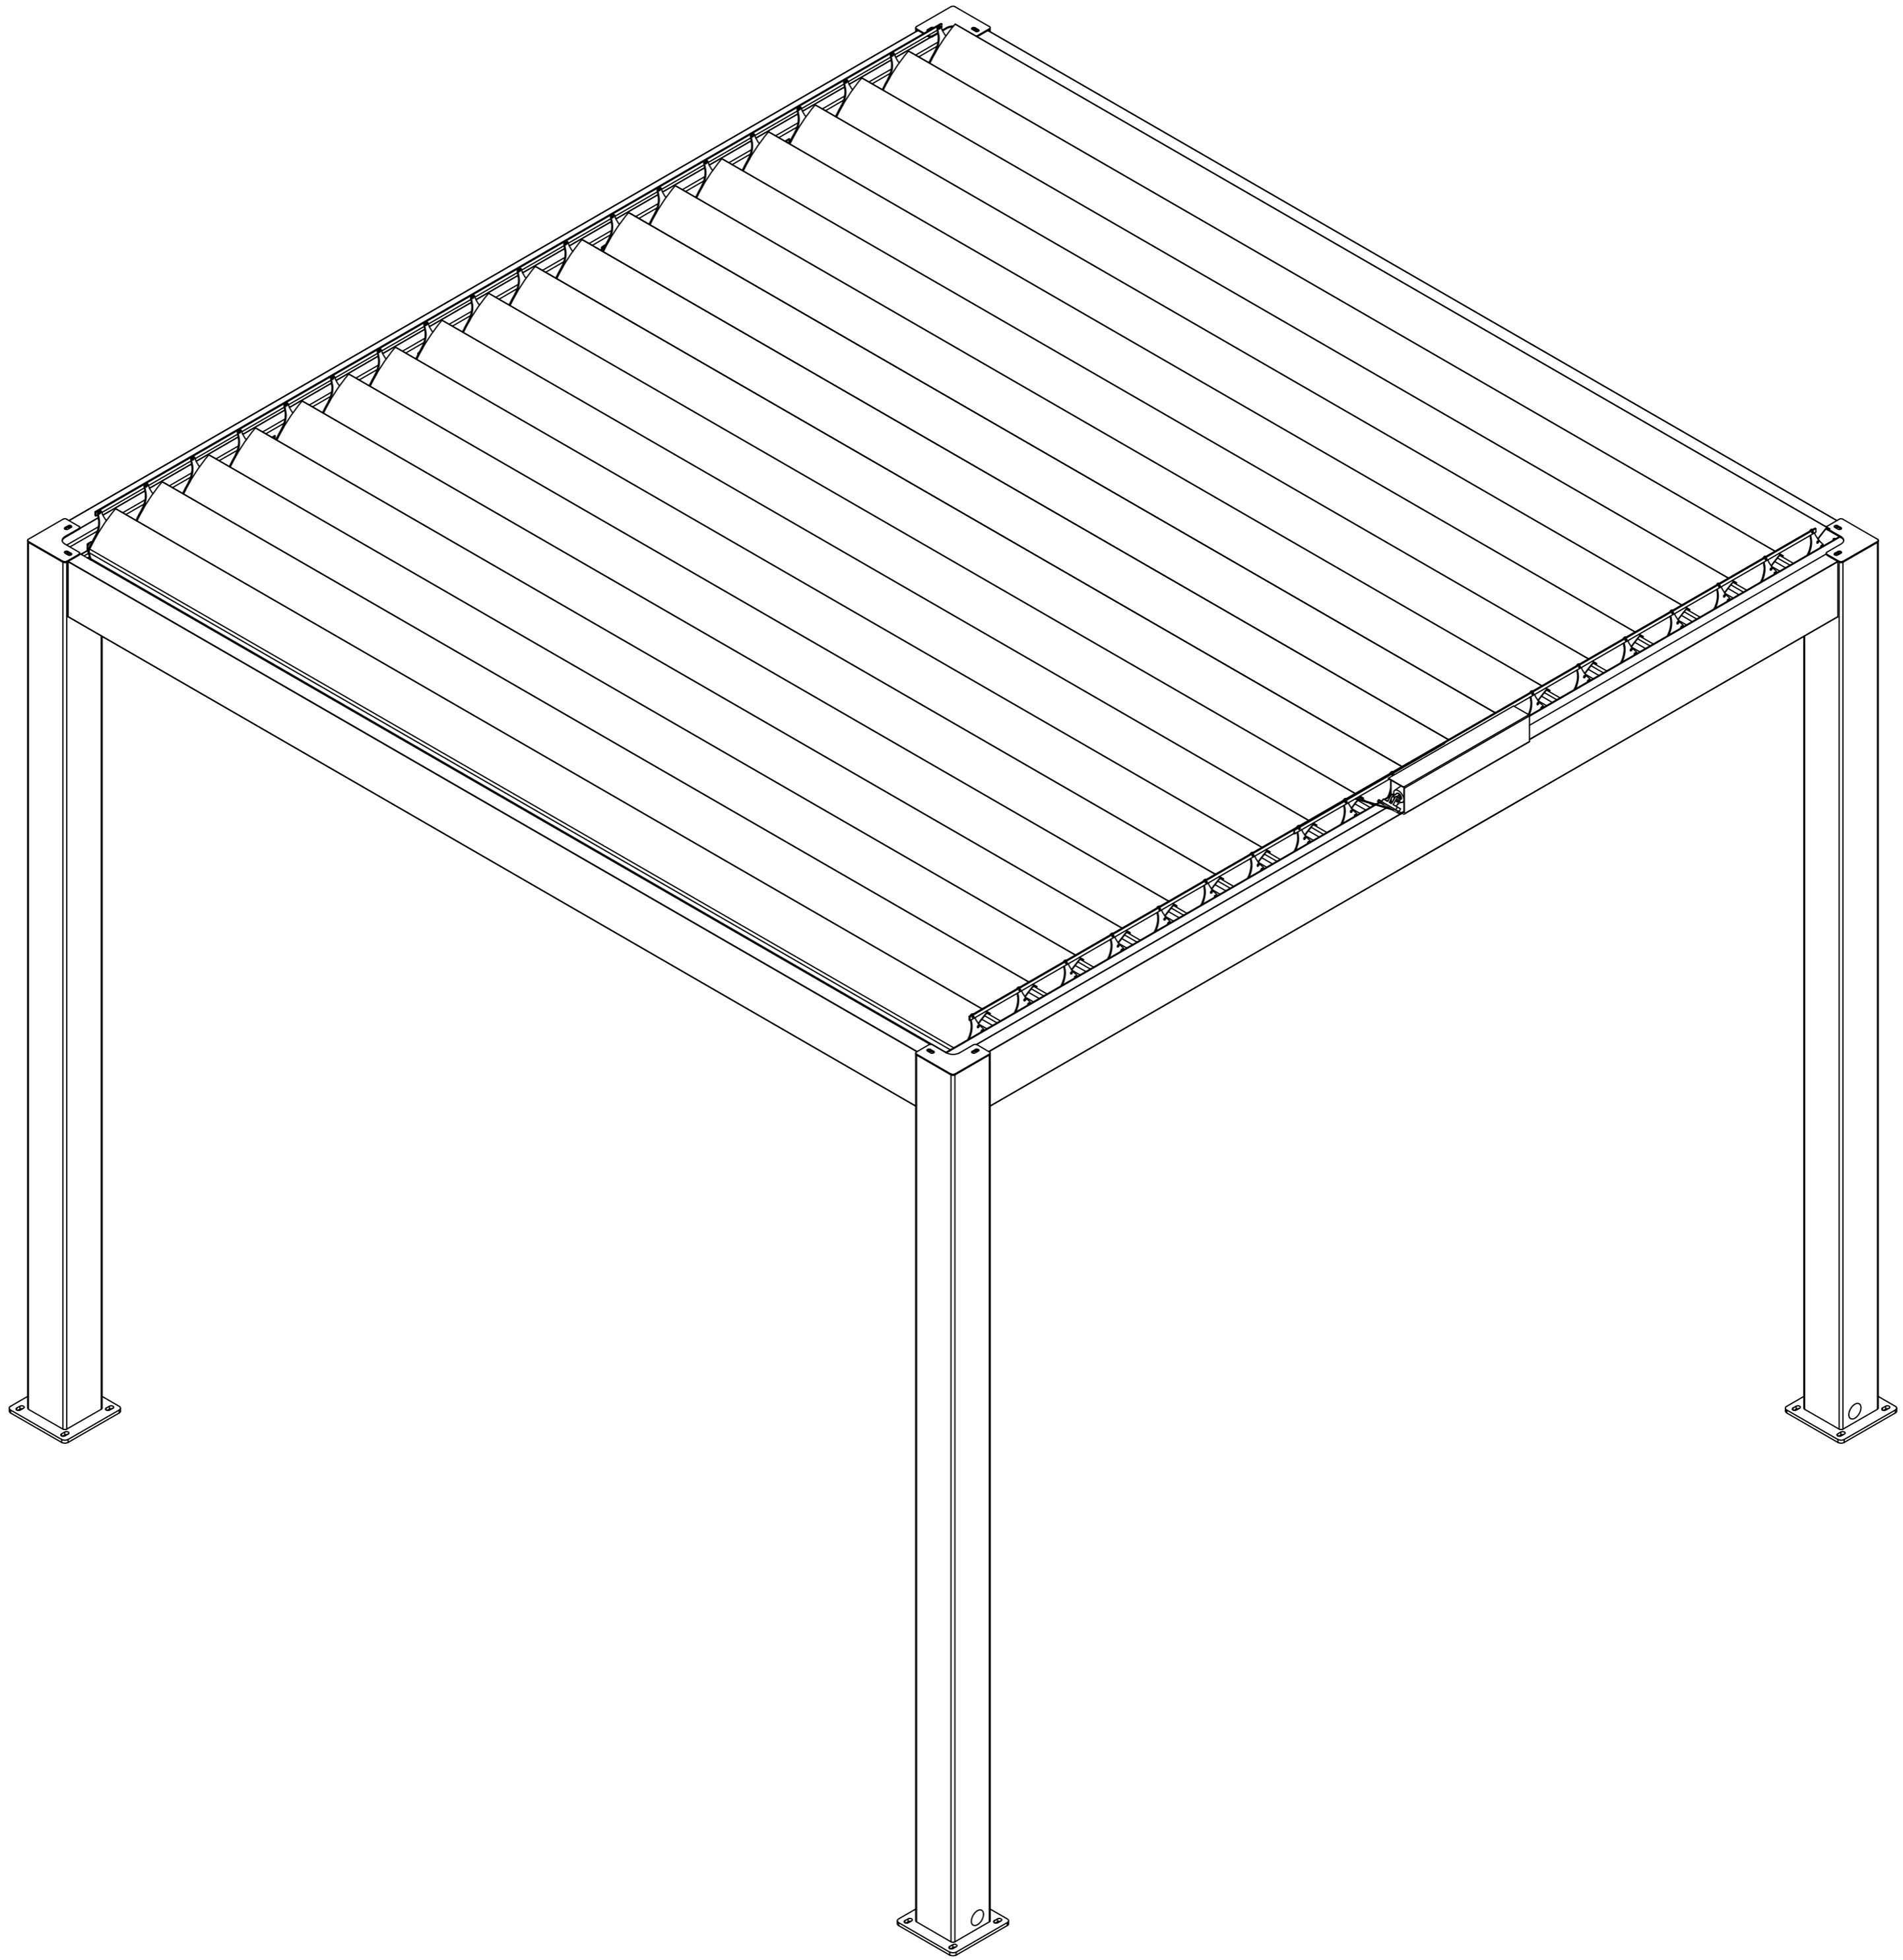






















2.5×2.5m

	Item	Qty	Item	Qty	Item	Qty
Carton 1/3	3B-01/ 01B	4	3B-11	4	3B-12	4
	3B-13	4	3B-14	1	3B-18	1
	3B-19	8	3B-20	30	3B-20B	4
	3B-21	16	3B-22	24	3B-23	10
	3B-24	1	3B-30	1	3B-31	1
	3B-48	14	3B-48B	3	3B-49	14
	3B-49B	3	3B-51	136	3B-57	3
	3B-58	1	3B-59	1	3B-60	1
	3B-46a	1	3B-46b	3		
Carton 2/3	3B-02	1	3B-03	1	3B-04	2
	3B-08A/ B	2	3B-09	2		
Carton 3/3	3B-06	14	3B-07	3		



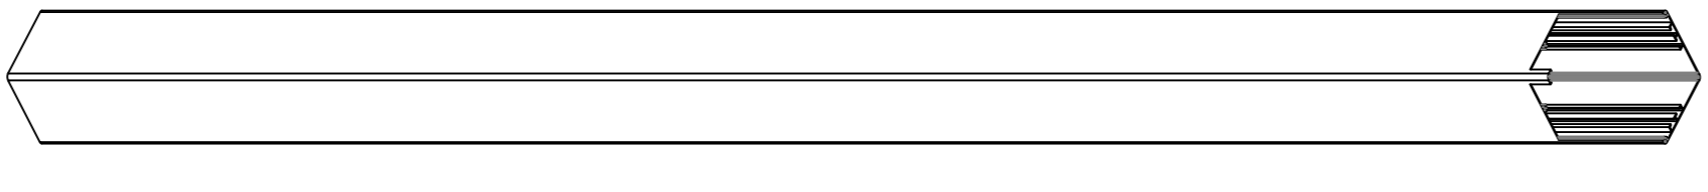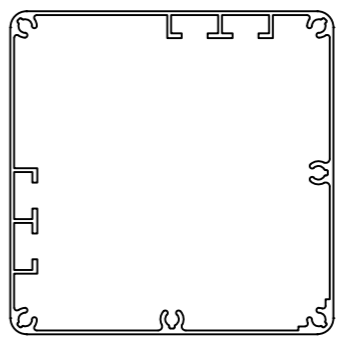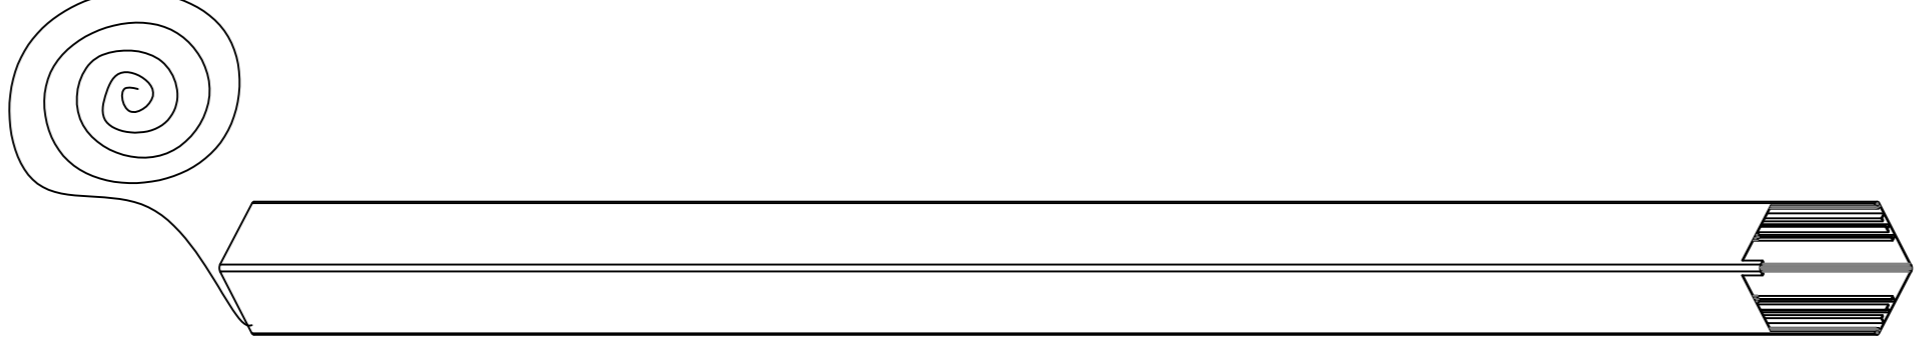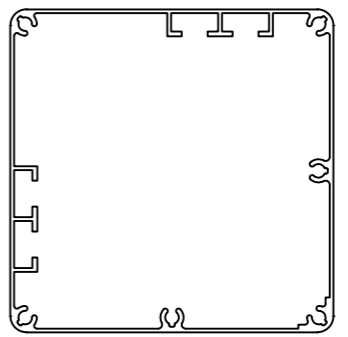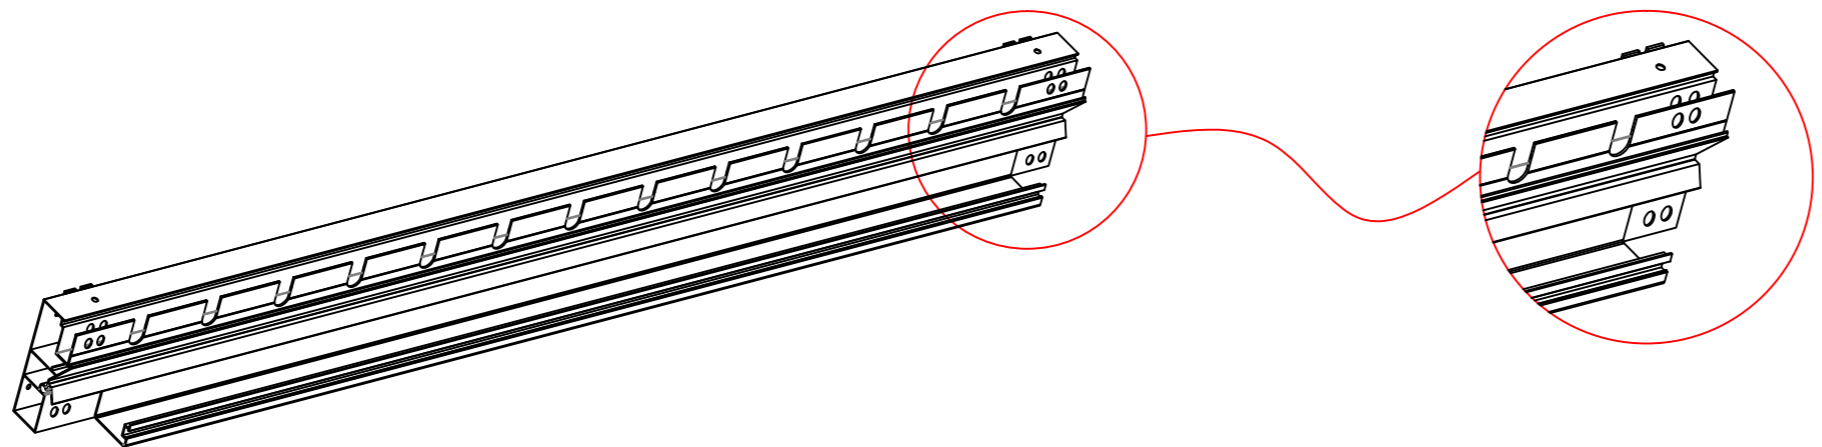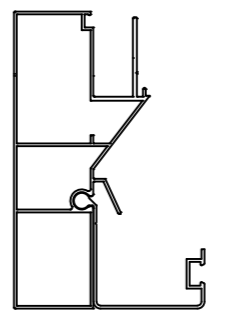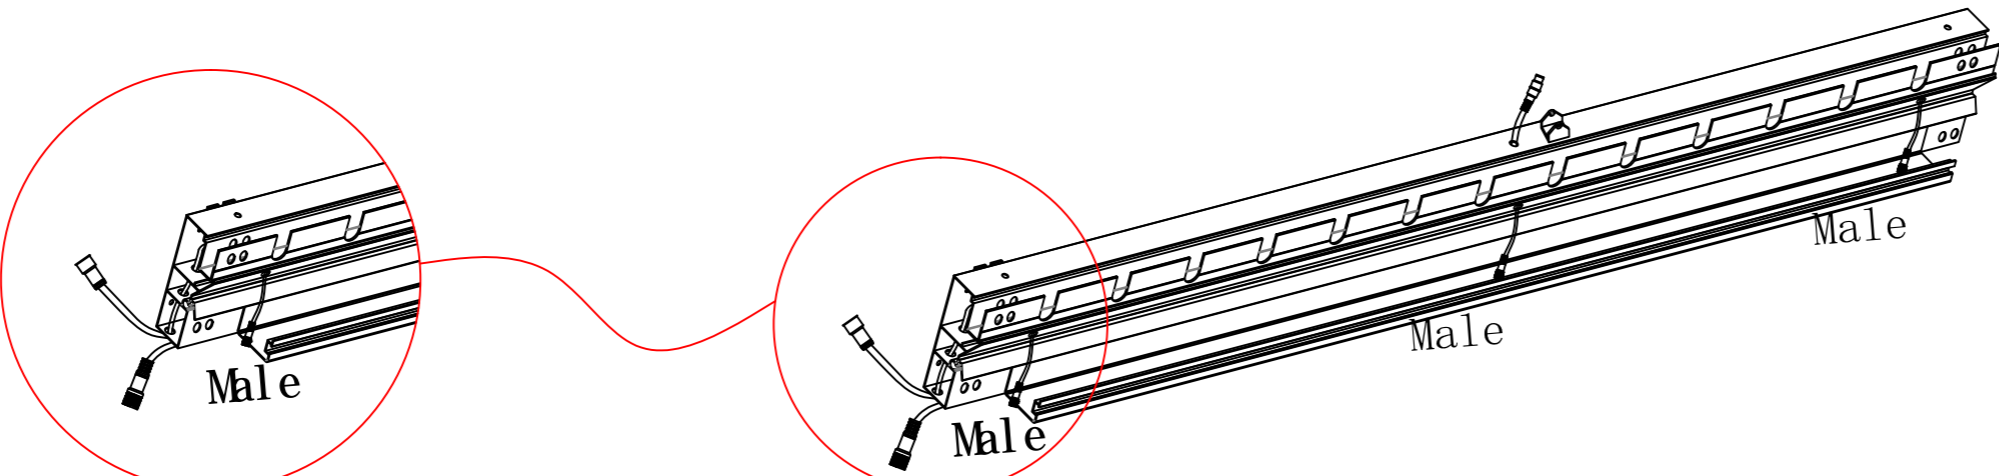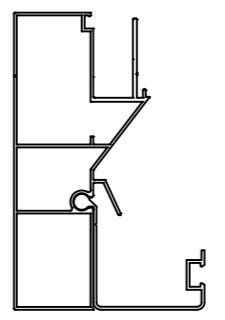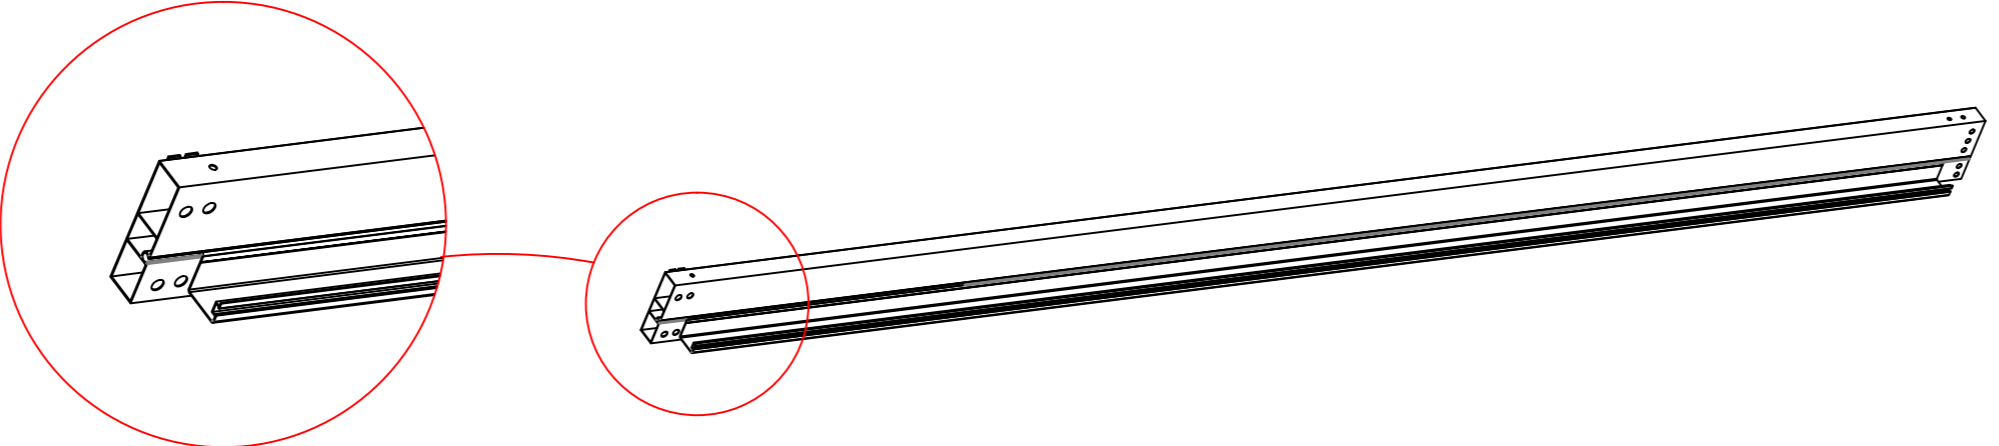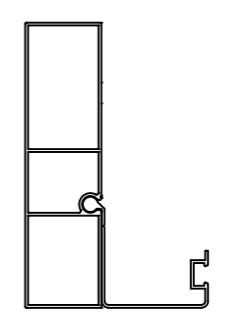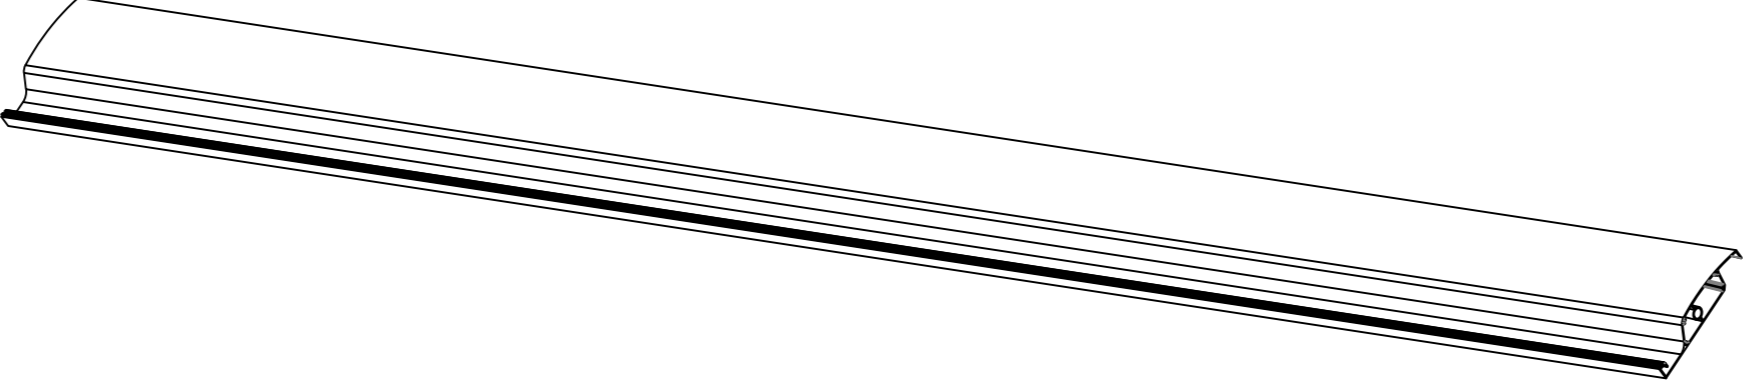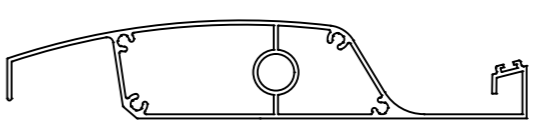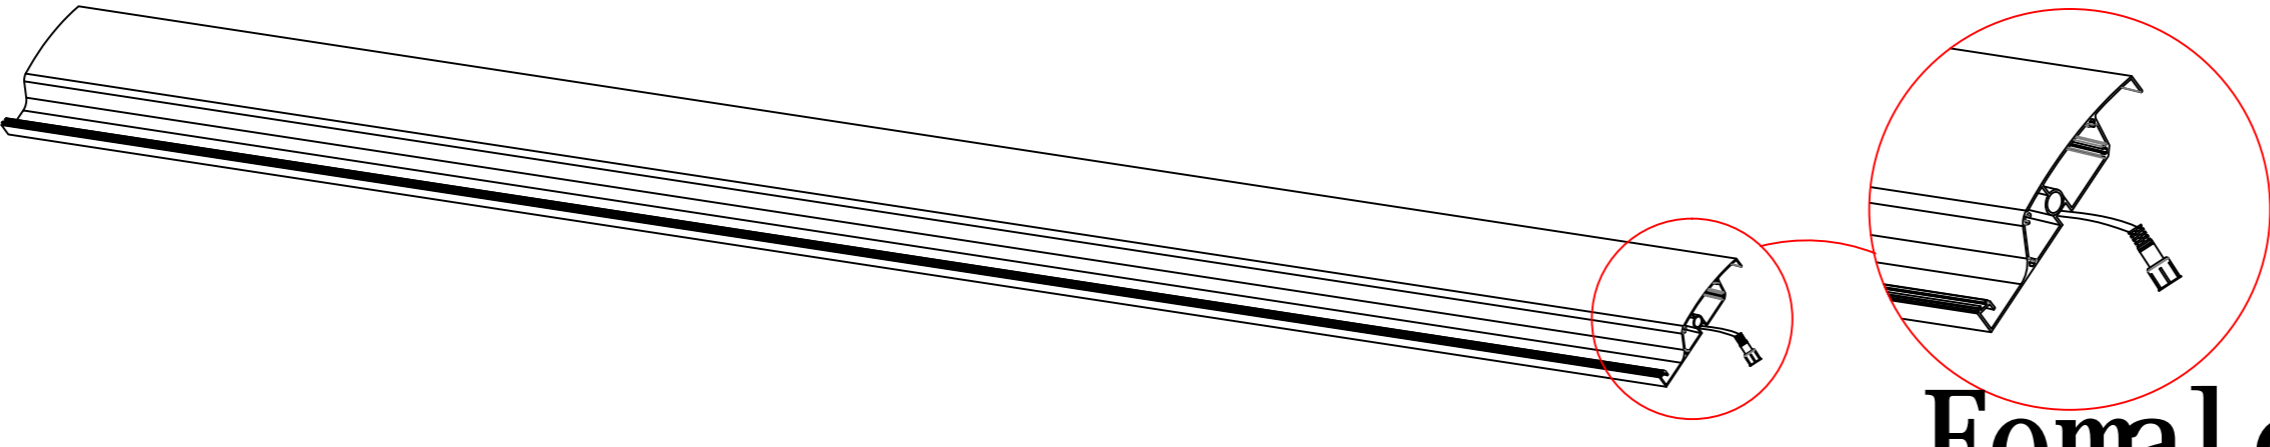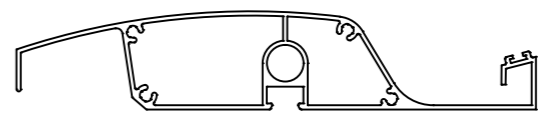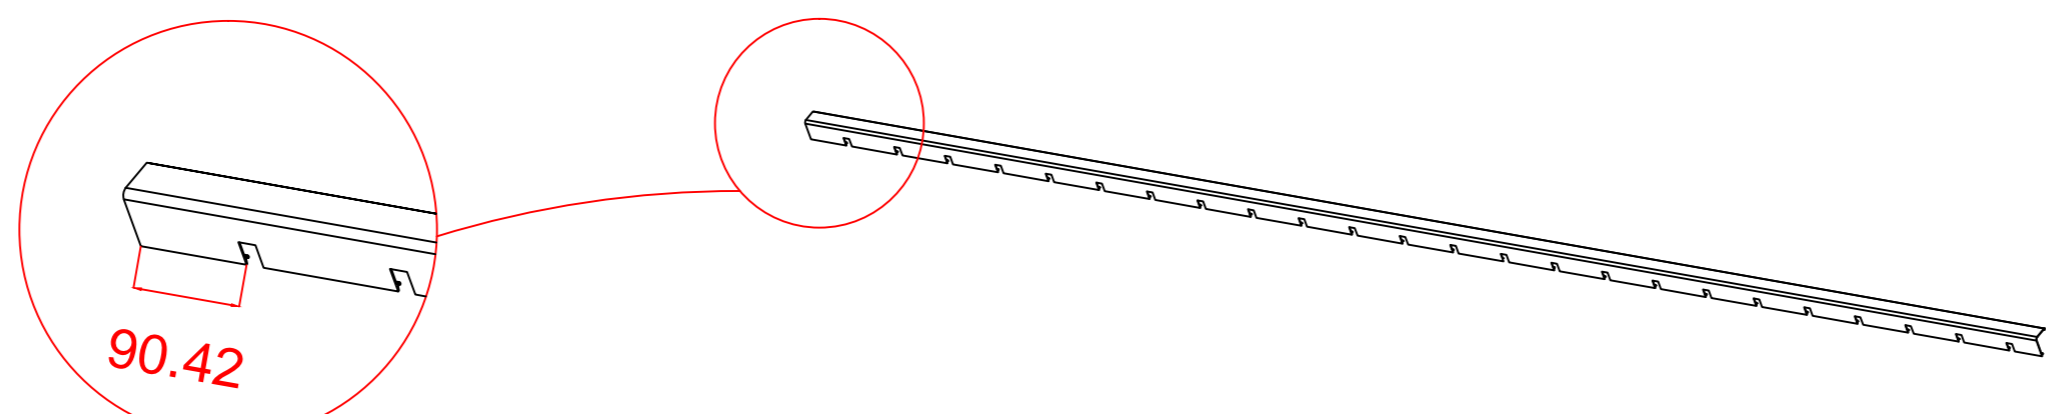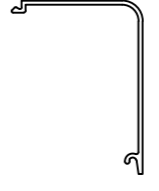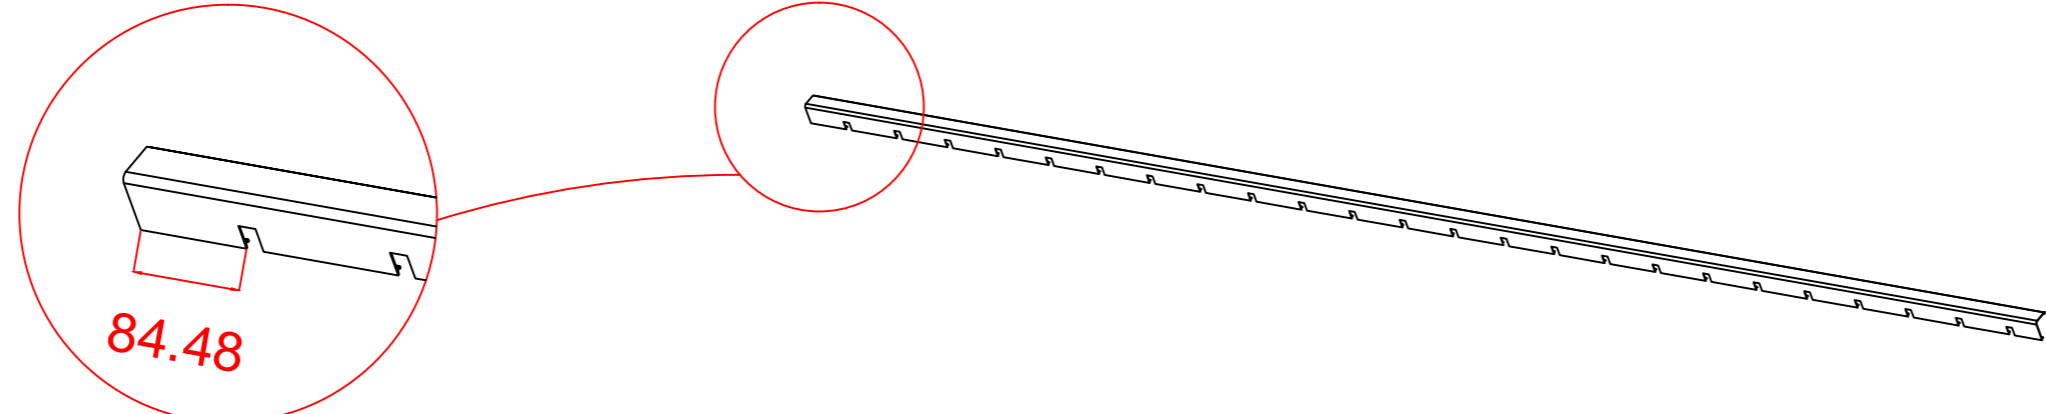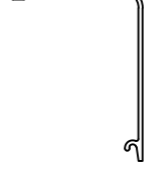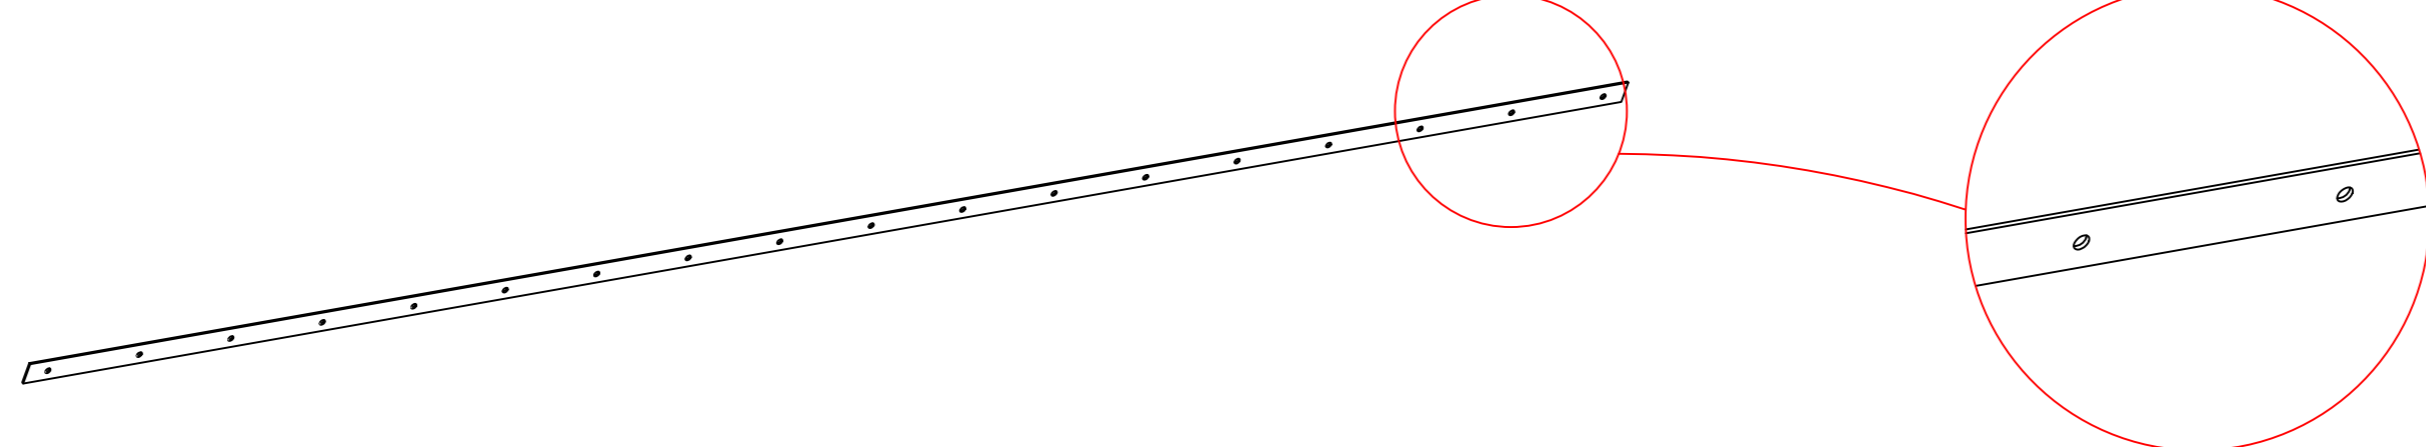

Item	Drawings	Qty
3B-01	 	3
3B-01B	 	1
3B-02	 	1
3B-03	 	1
3B-04	 	2
3B-06	 	14
3B-07	 	3
3B-08A	 	1
3B-08B	 	1
3B-09		2






Item	Drawings	Qty
3B-11		4
3B-12		4
3B-13		4
3B-14		1
3B-18		1
3B-19	 M8*20	8
3B-20	 5-12-M4	30+2
3B-20B	 5-16-M4	4+2
3B-21	 M10*80	16
3B-22	 M5.5*60	24+2
3B-23	 M4.2*19	10+2
3B-24		1
3B-30		1


Item	Drawings	Qty
3B-31		1
3B-46a		1
3B-46b		3
3B-48		14
3B-48B		3
3B-49		14
3B-49B		3
3B-51	 M4.2*25	136+4
3B-57		3
3B-58		1
3B-59	 M5*20	1
3B-60	 M4.2*19/8pcs	1
3B-61		



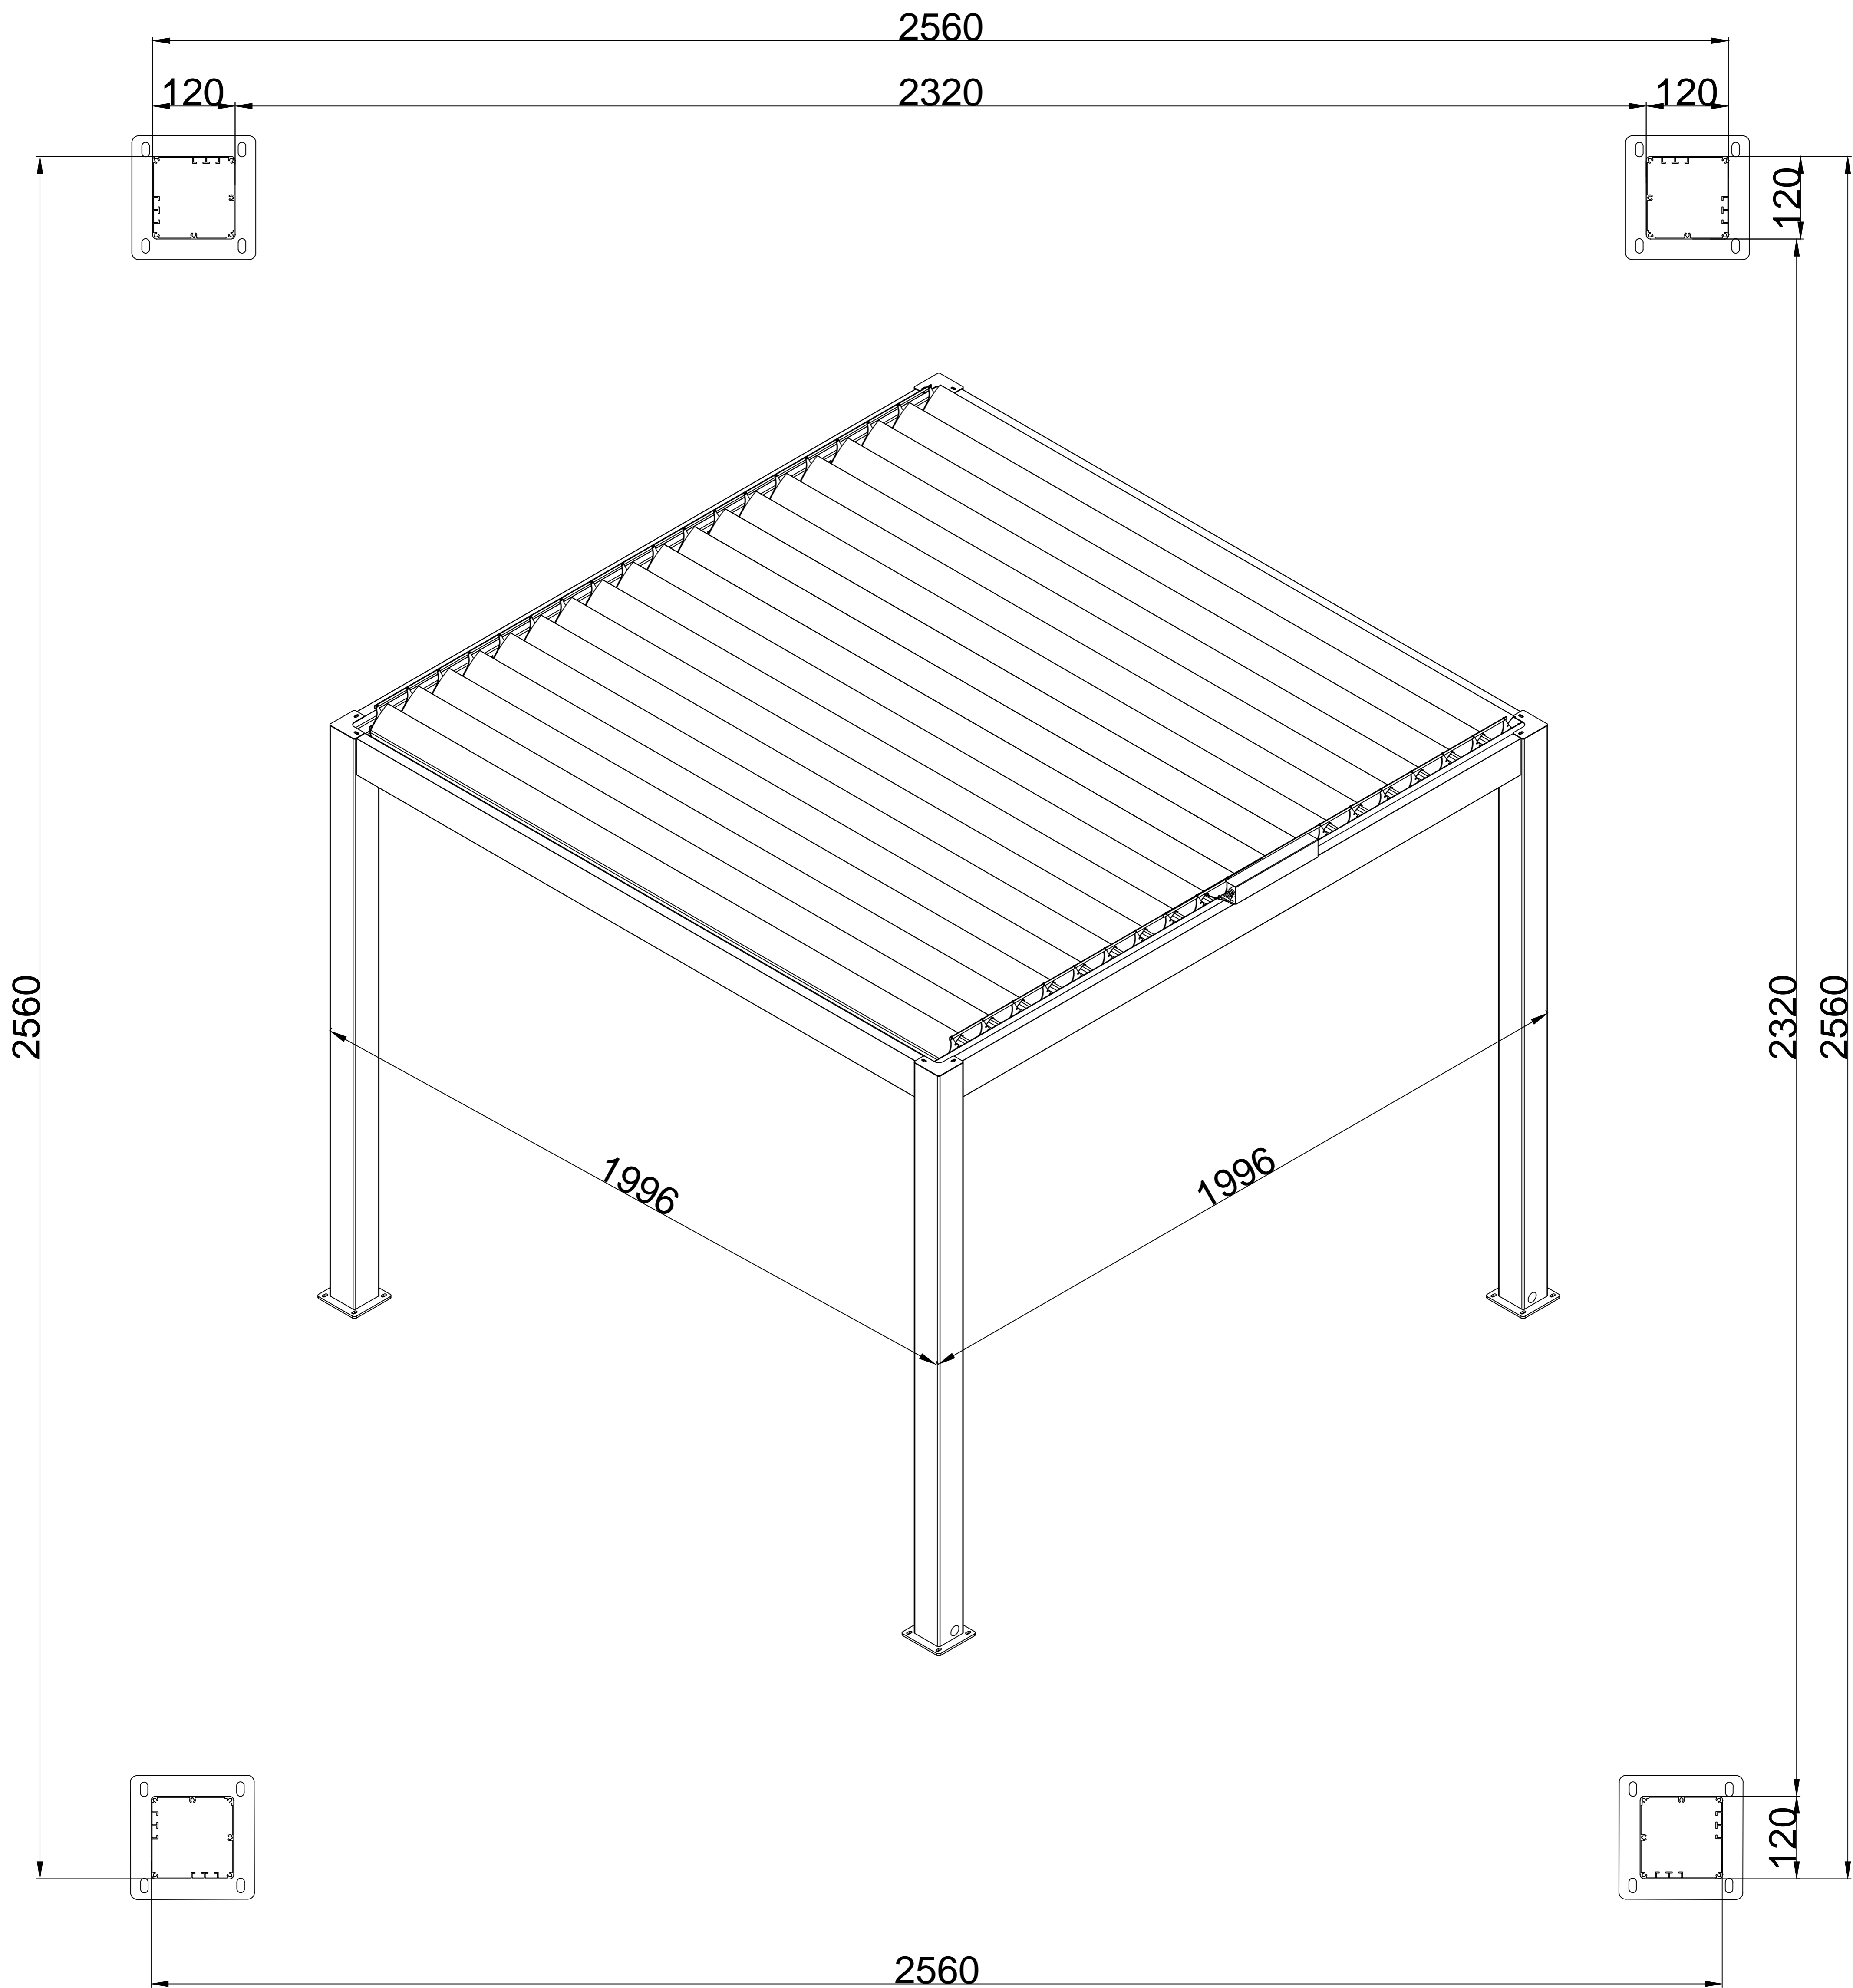











2.5*2.5-4



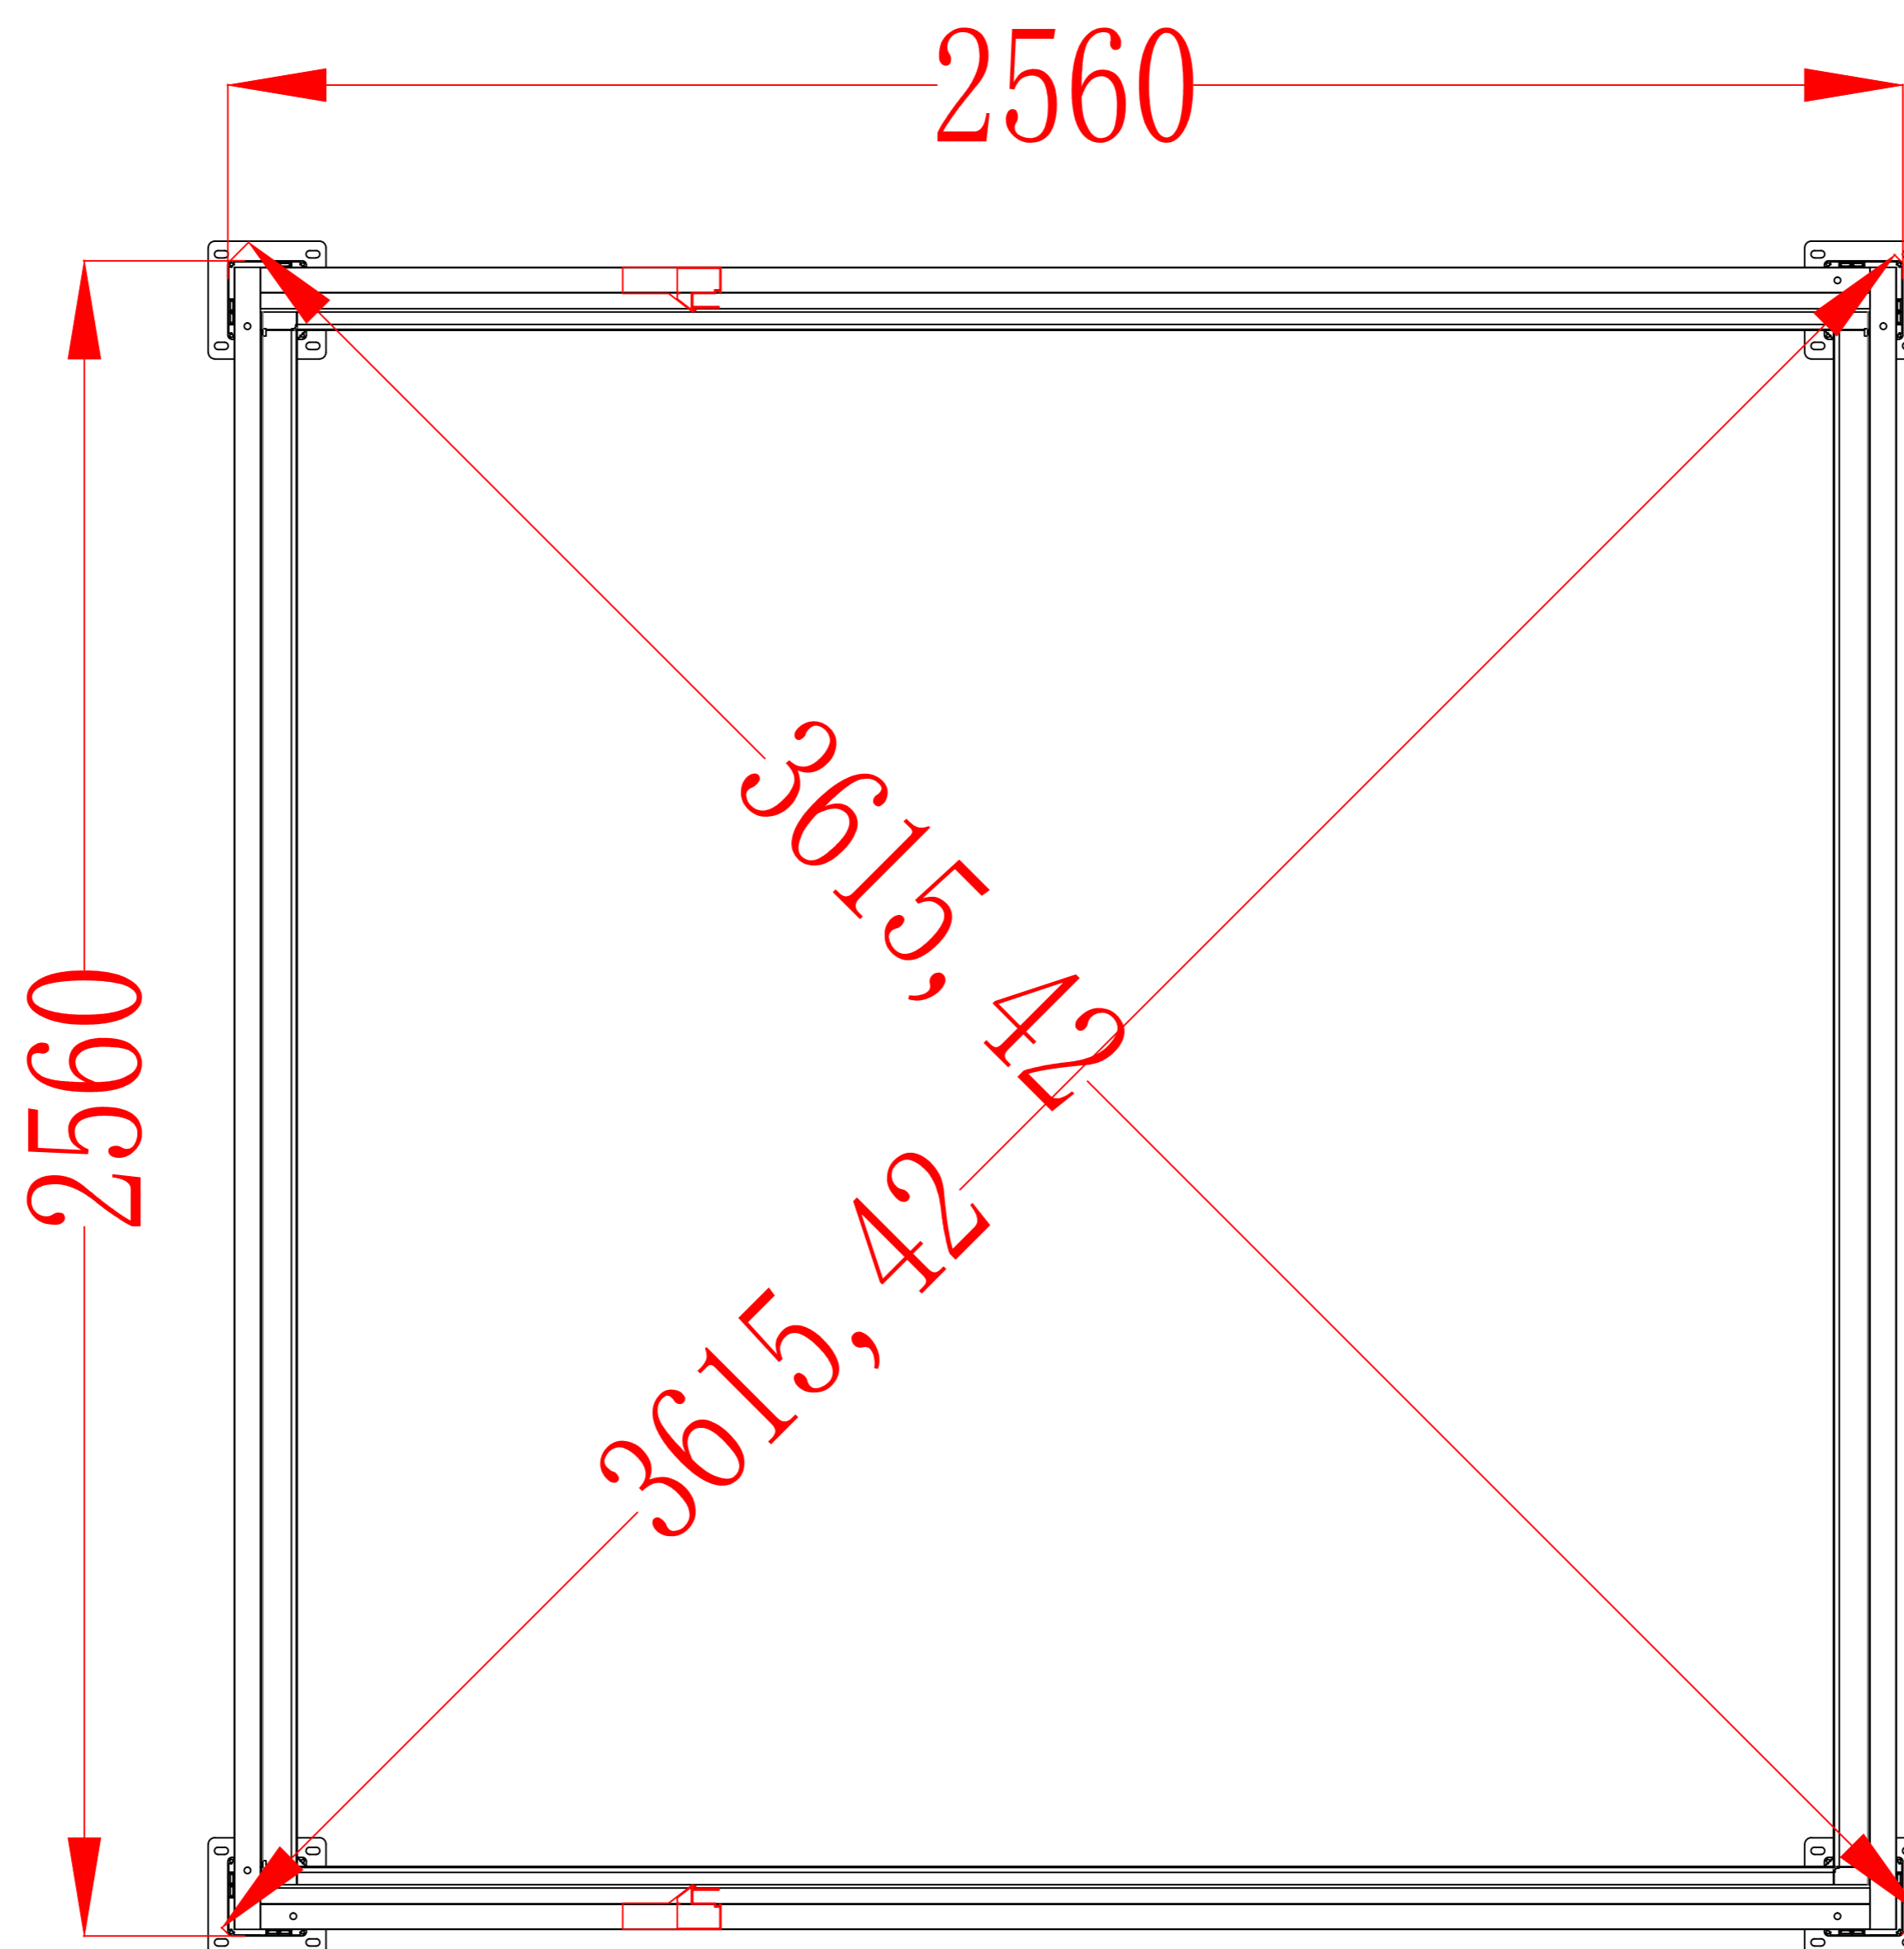

Before installing the bottom expansion screws, please be sure to correct the frame size



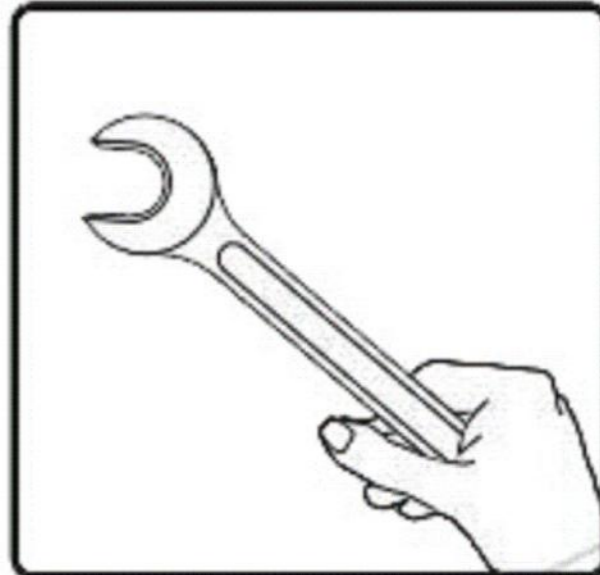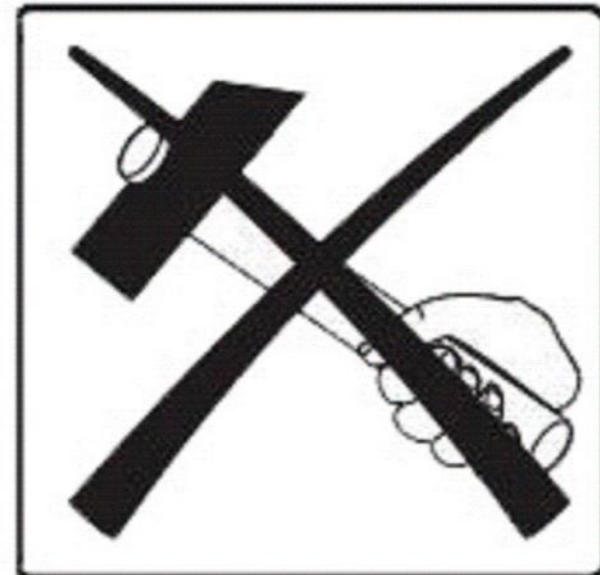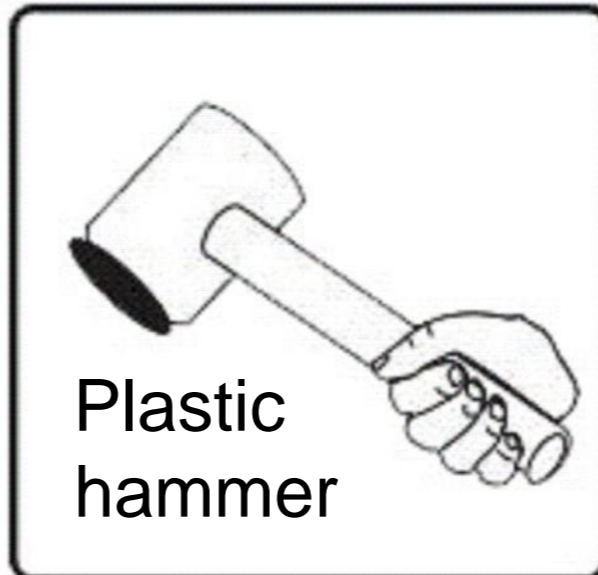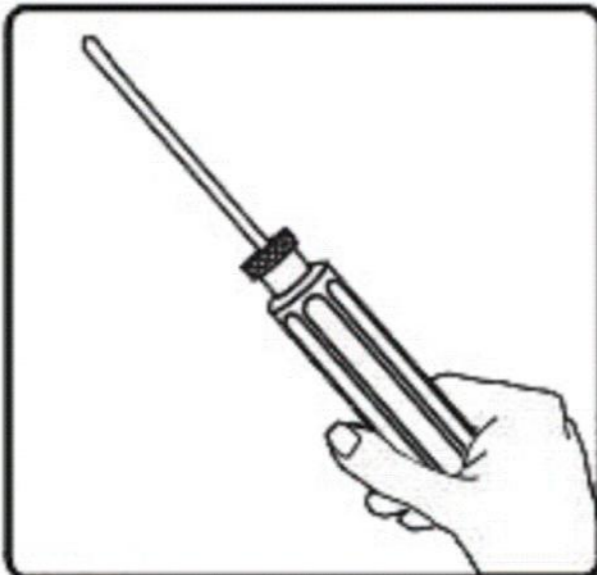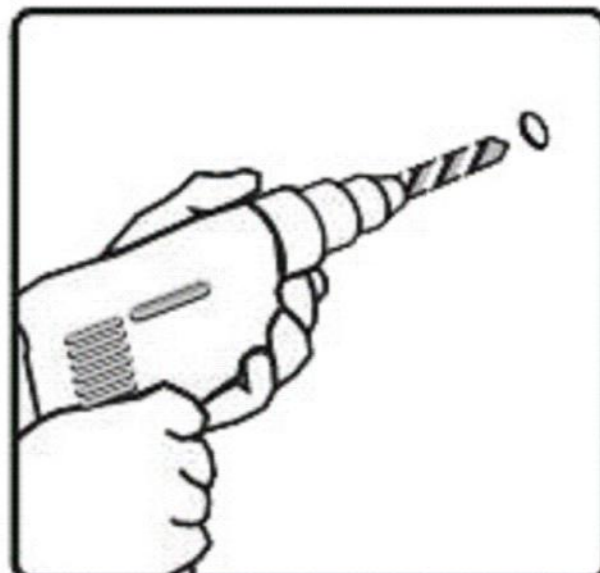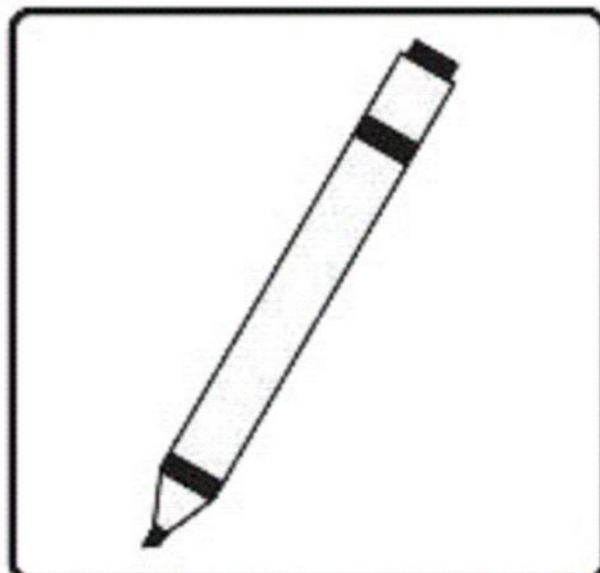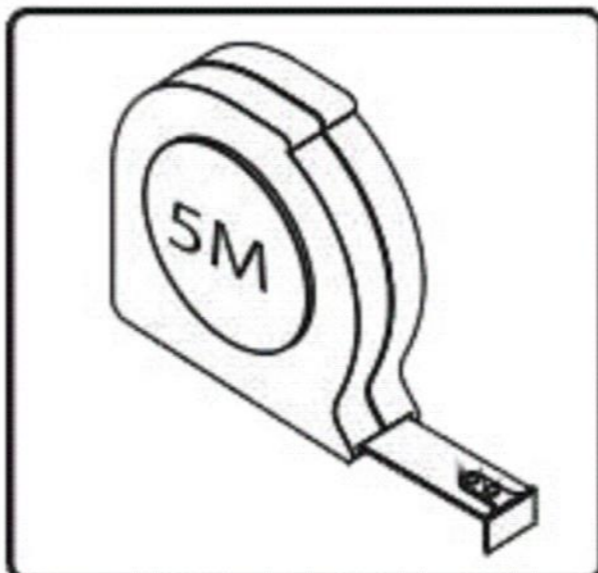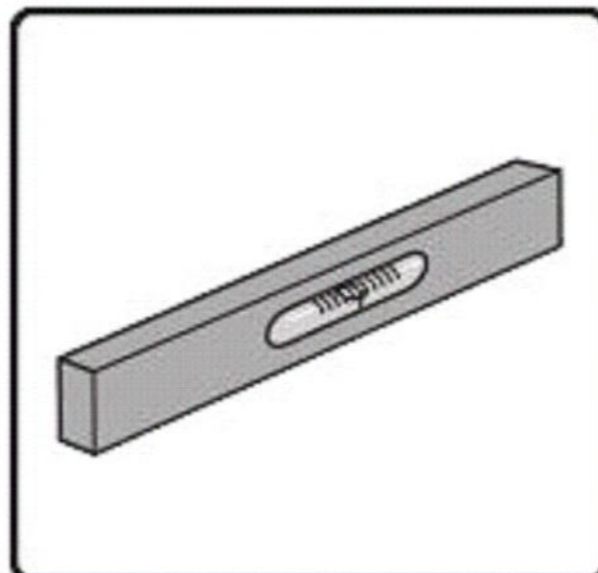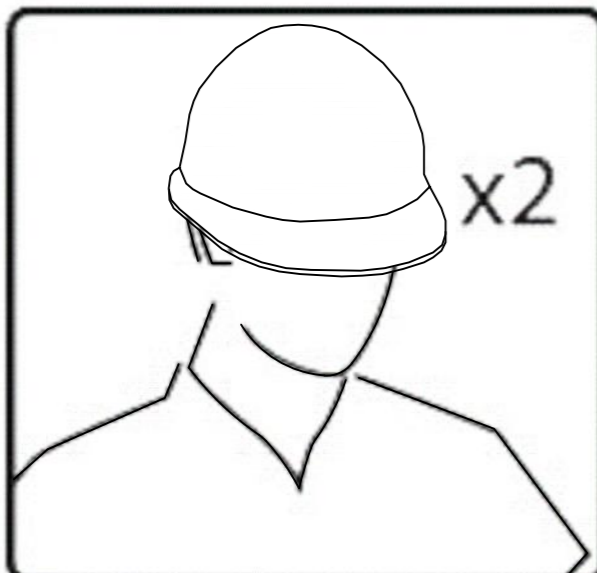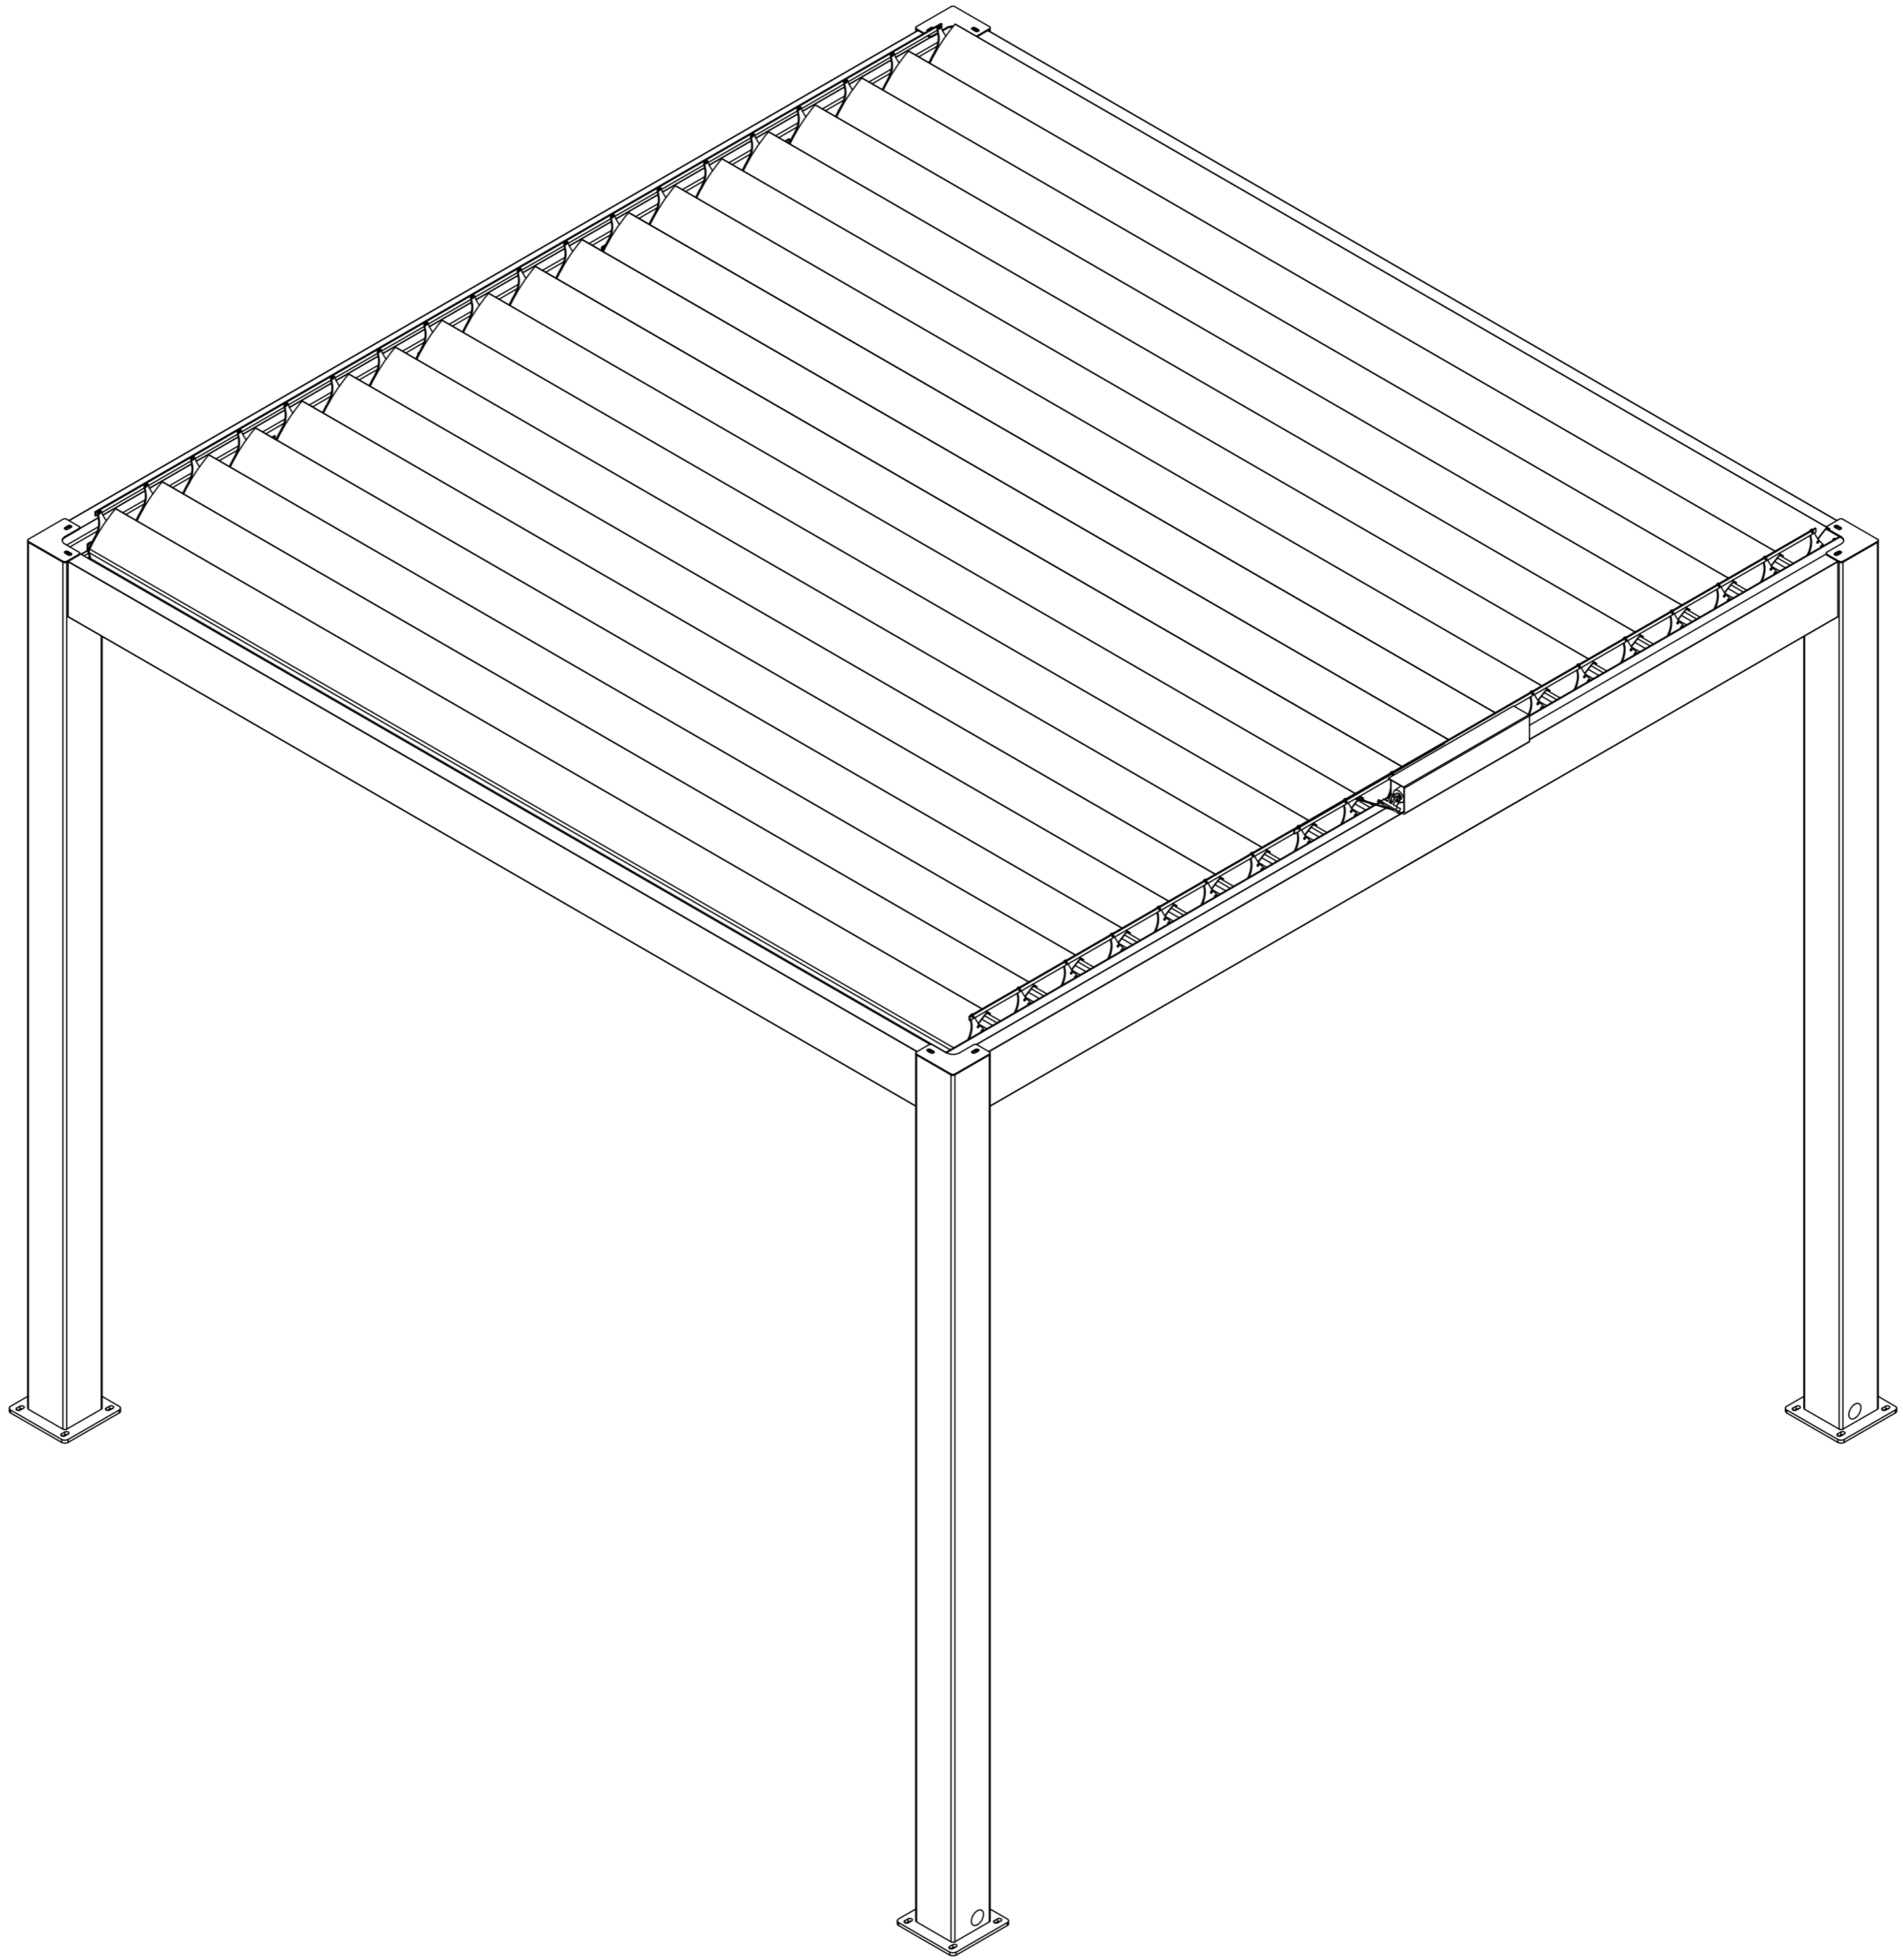






















2x3m

	Item	Qty	Item	Qty	Item	Qty
Carton 1/4	3B-01/ 01B	4	3B-11	4	3B-12	4
	3B-13	4	3B-14	1	3B-18	1
	3B-19	8	3B-20	34	3B-20B	4
	3B-21	16	3B-22	24	3B-23	10
	3B-24	1	3B-30	1	3B-31	1
	3B-48	15	3B-48B	4	3B-49	15
	3B-49B	4	3B-51	152	3B-57	4
	3B-58	1	3B-59	1	3B-60	1
	3B-46a	1	3B-46b	3		
Carton 2/4	3B-02	1	3B-03	1	3B-04	2
	3B-08A/ B	2	3B-09	2	3B-06	1
Carton 3/4	3B-06	14	3B-07	4		



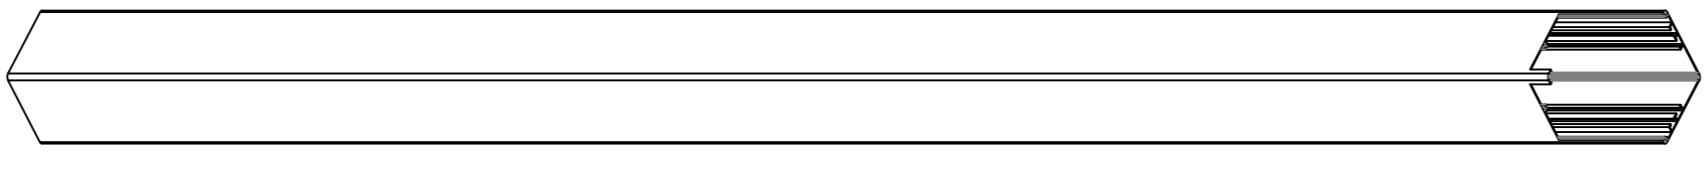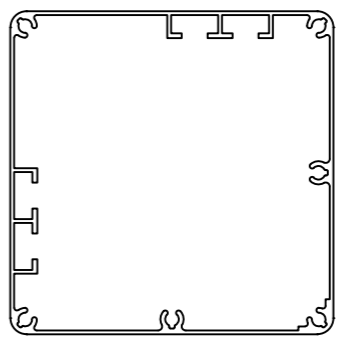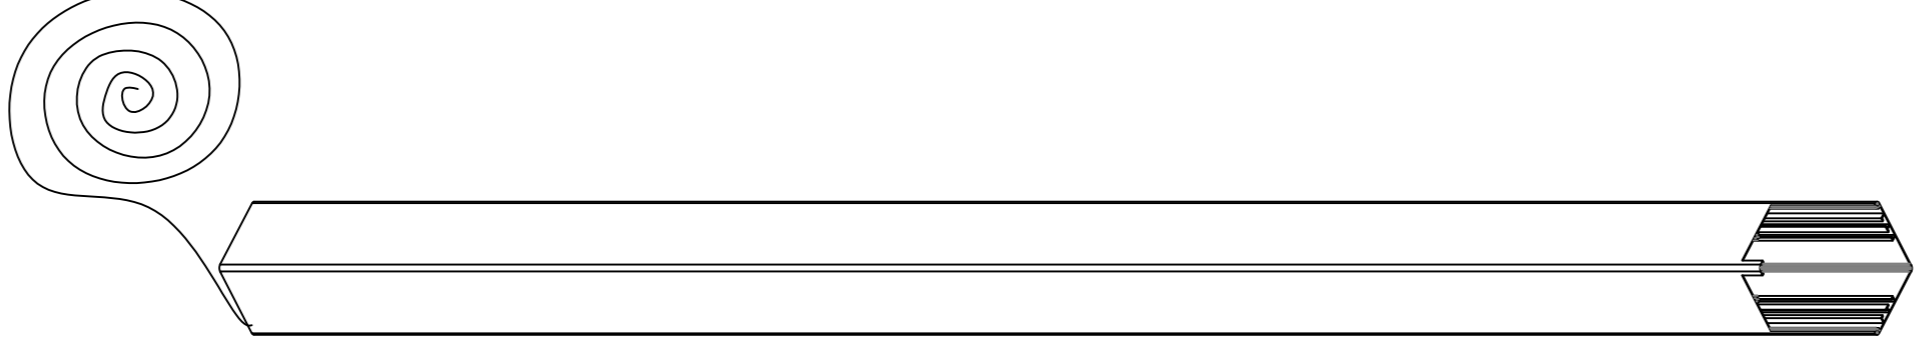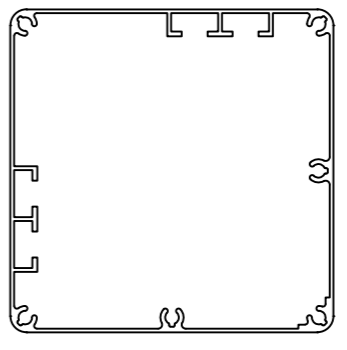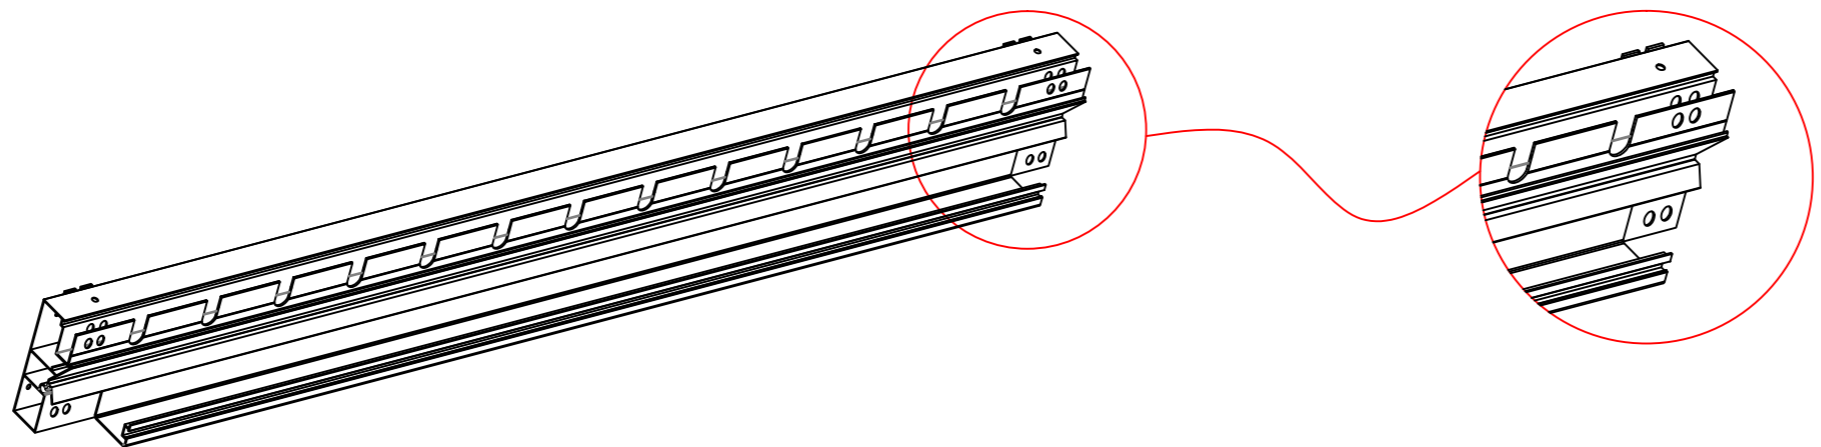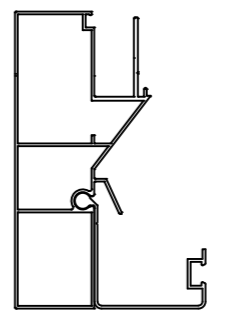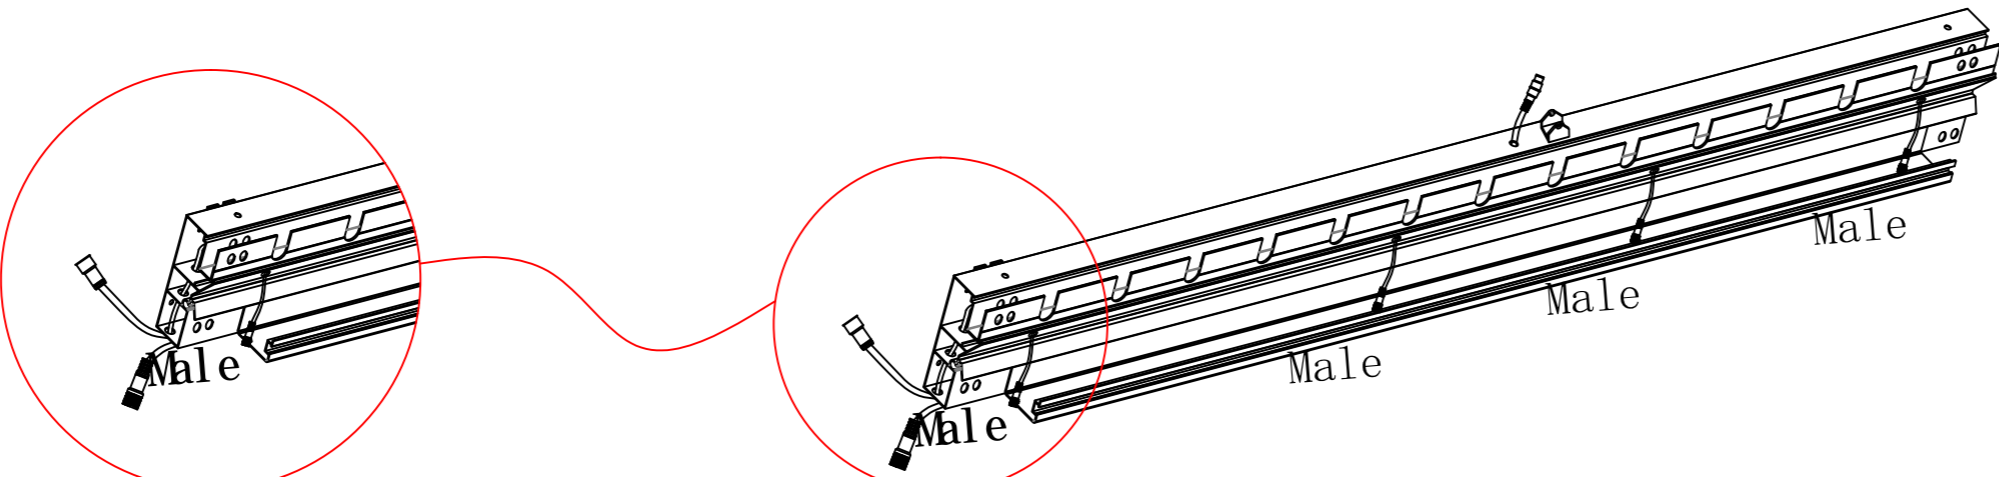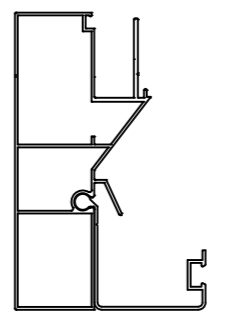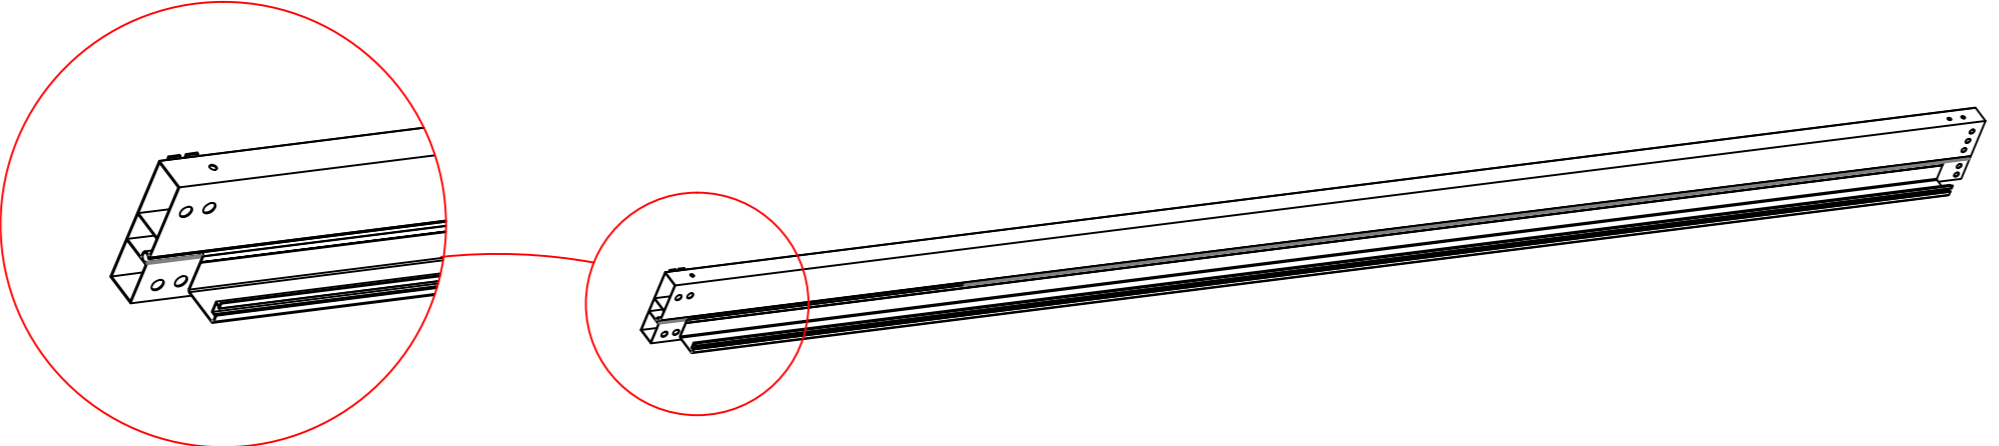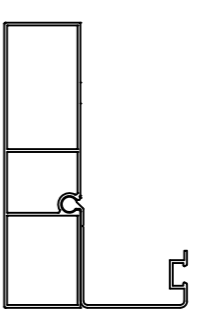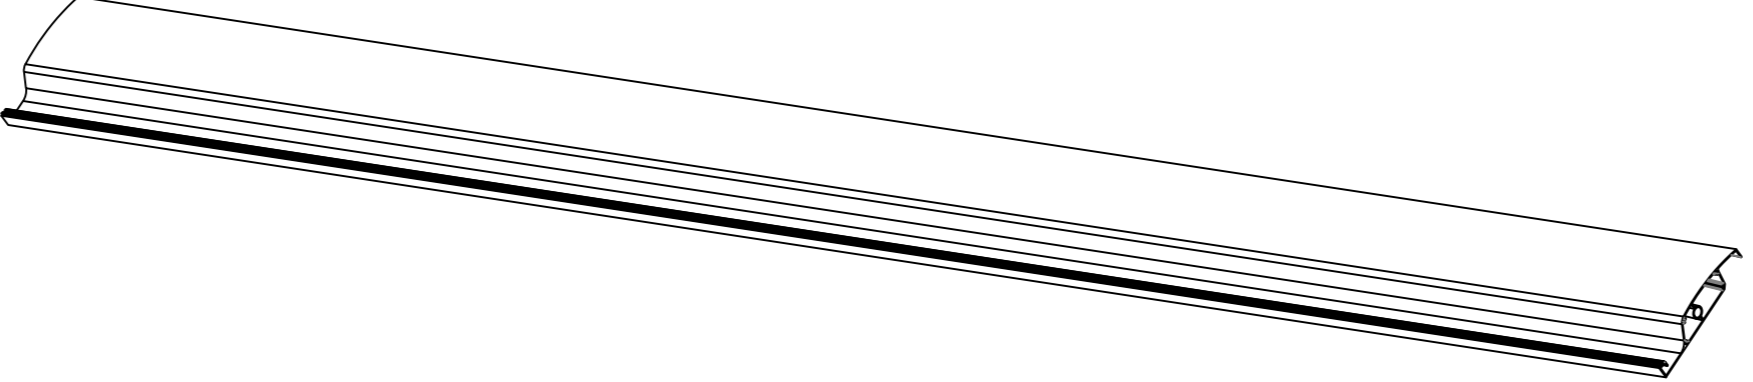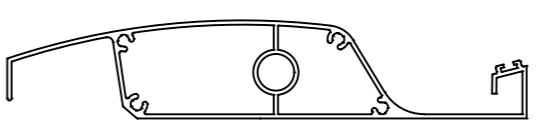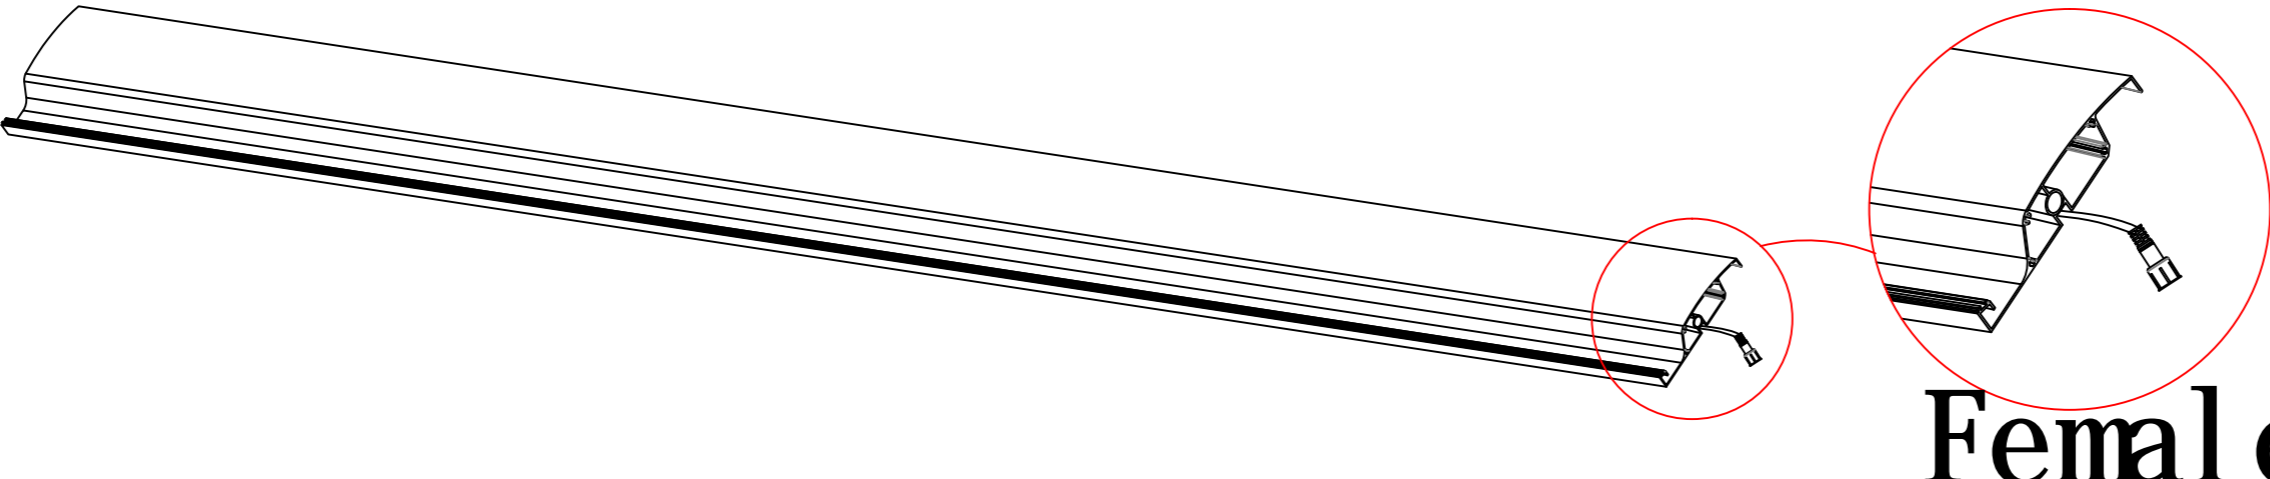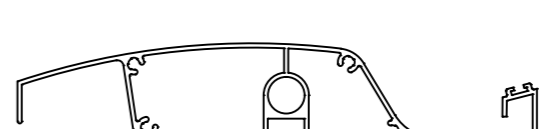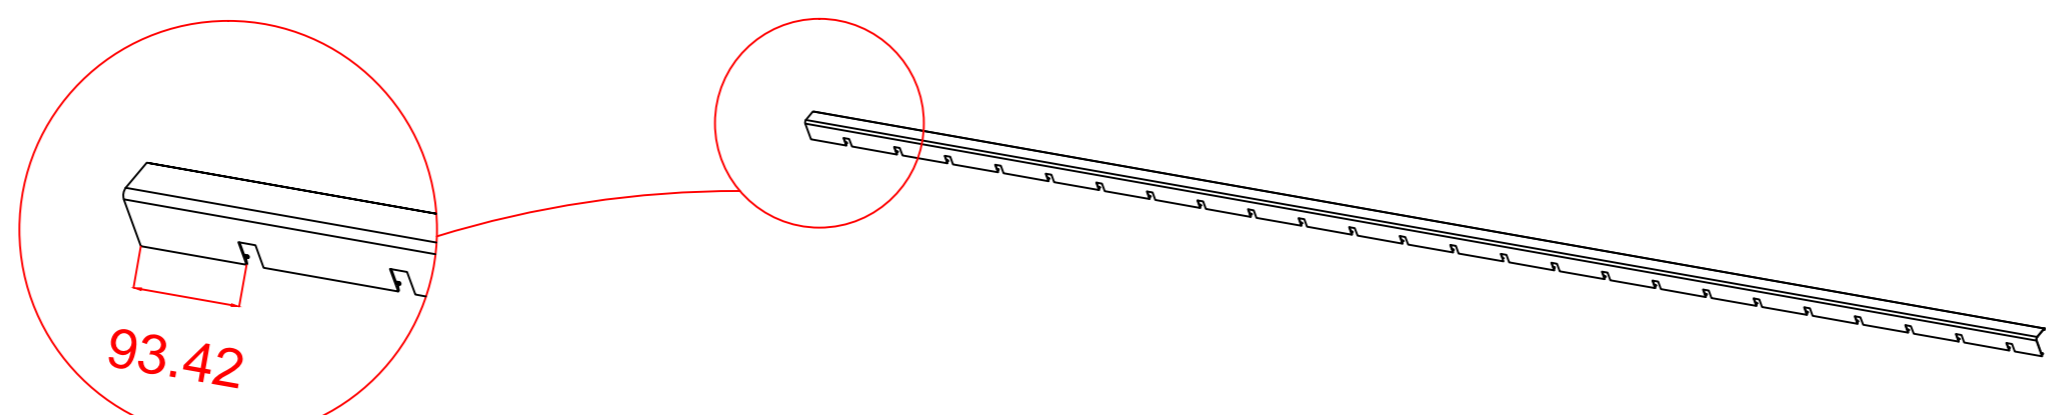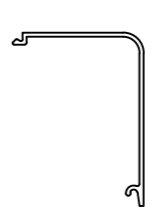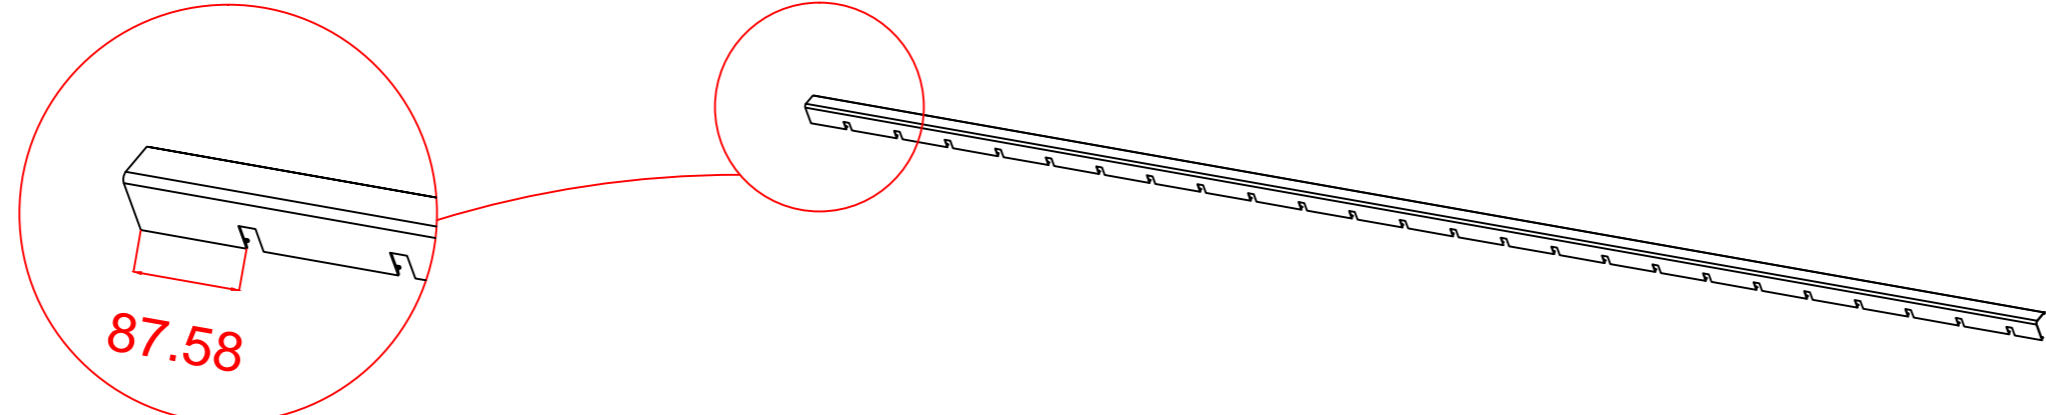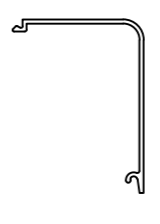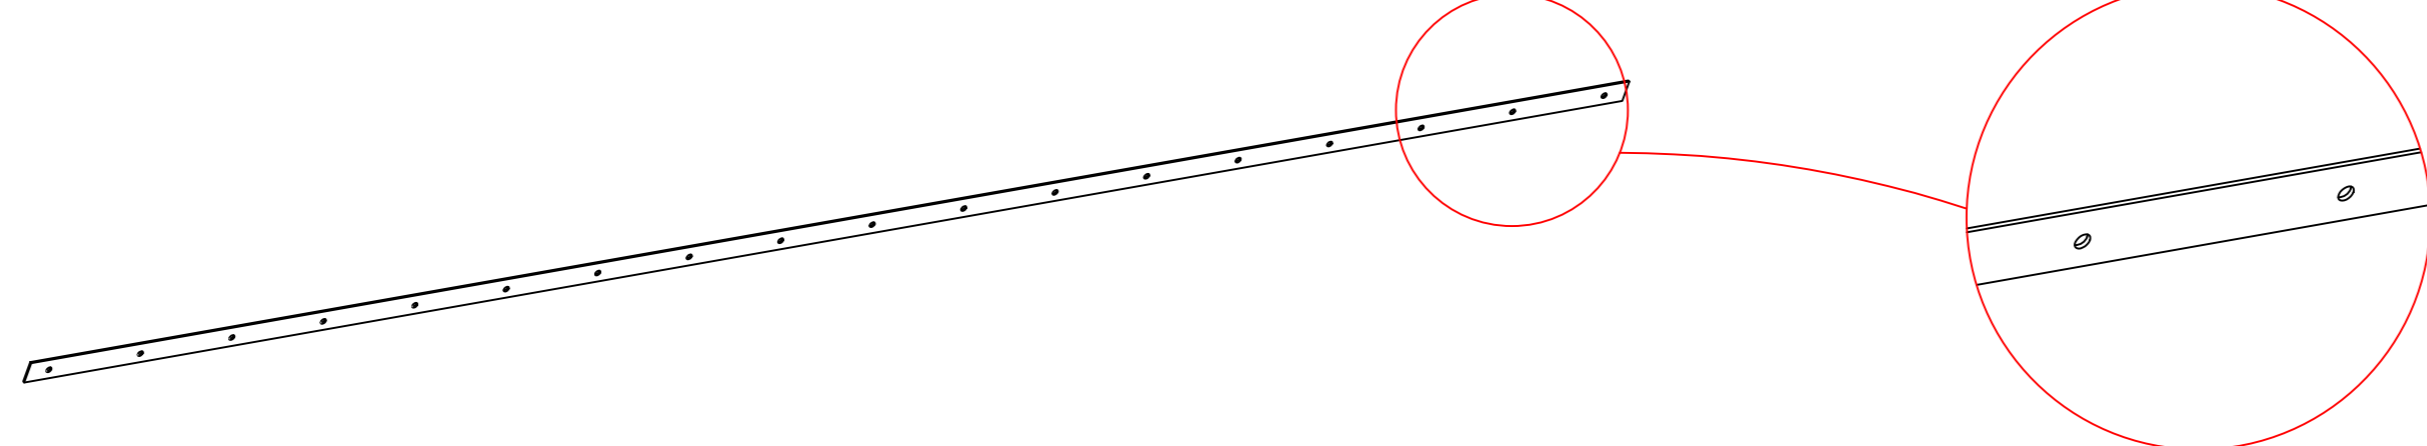

Item	Drawings	Qty
3B-01	 	3
3B-01B	 	1
3B-02	 	1
3B-03	 	1
3B-04	 	2
3B-06	 	15
3B-07	 	4
3B-08A	 	1
3B-08B	 	1
3B-09		2






Item	Drawings	Qty
3B-11		4
3B-12		4
3B-13		4
3B-14		1
3B-18		1
3B-19	 M8*20	8
3B-20	 5-12-M4	34+2
3B-20B	 5-16-M4	4+2
3B-21	 M10*80	16
3B-22	 M5.5*60	24+2
3B-23	 M4.2*19	10+2
3B-24		1
3B-30		1


Item	Drawings	Qty
3B-31		1
3B-46a		1
3B-46b		3
3B-48		15
3B-48B		4
3B-49		15
3B-49B		4
3B-51	 M4.2*25	152+4
3B-57		4
3B-58		1
3B-59	 M5*20	1
3B-60	 M4.2*19/8pcs	1



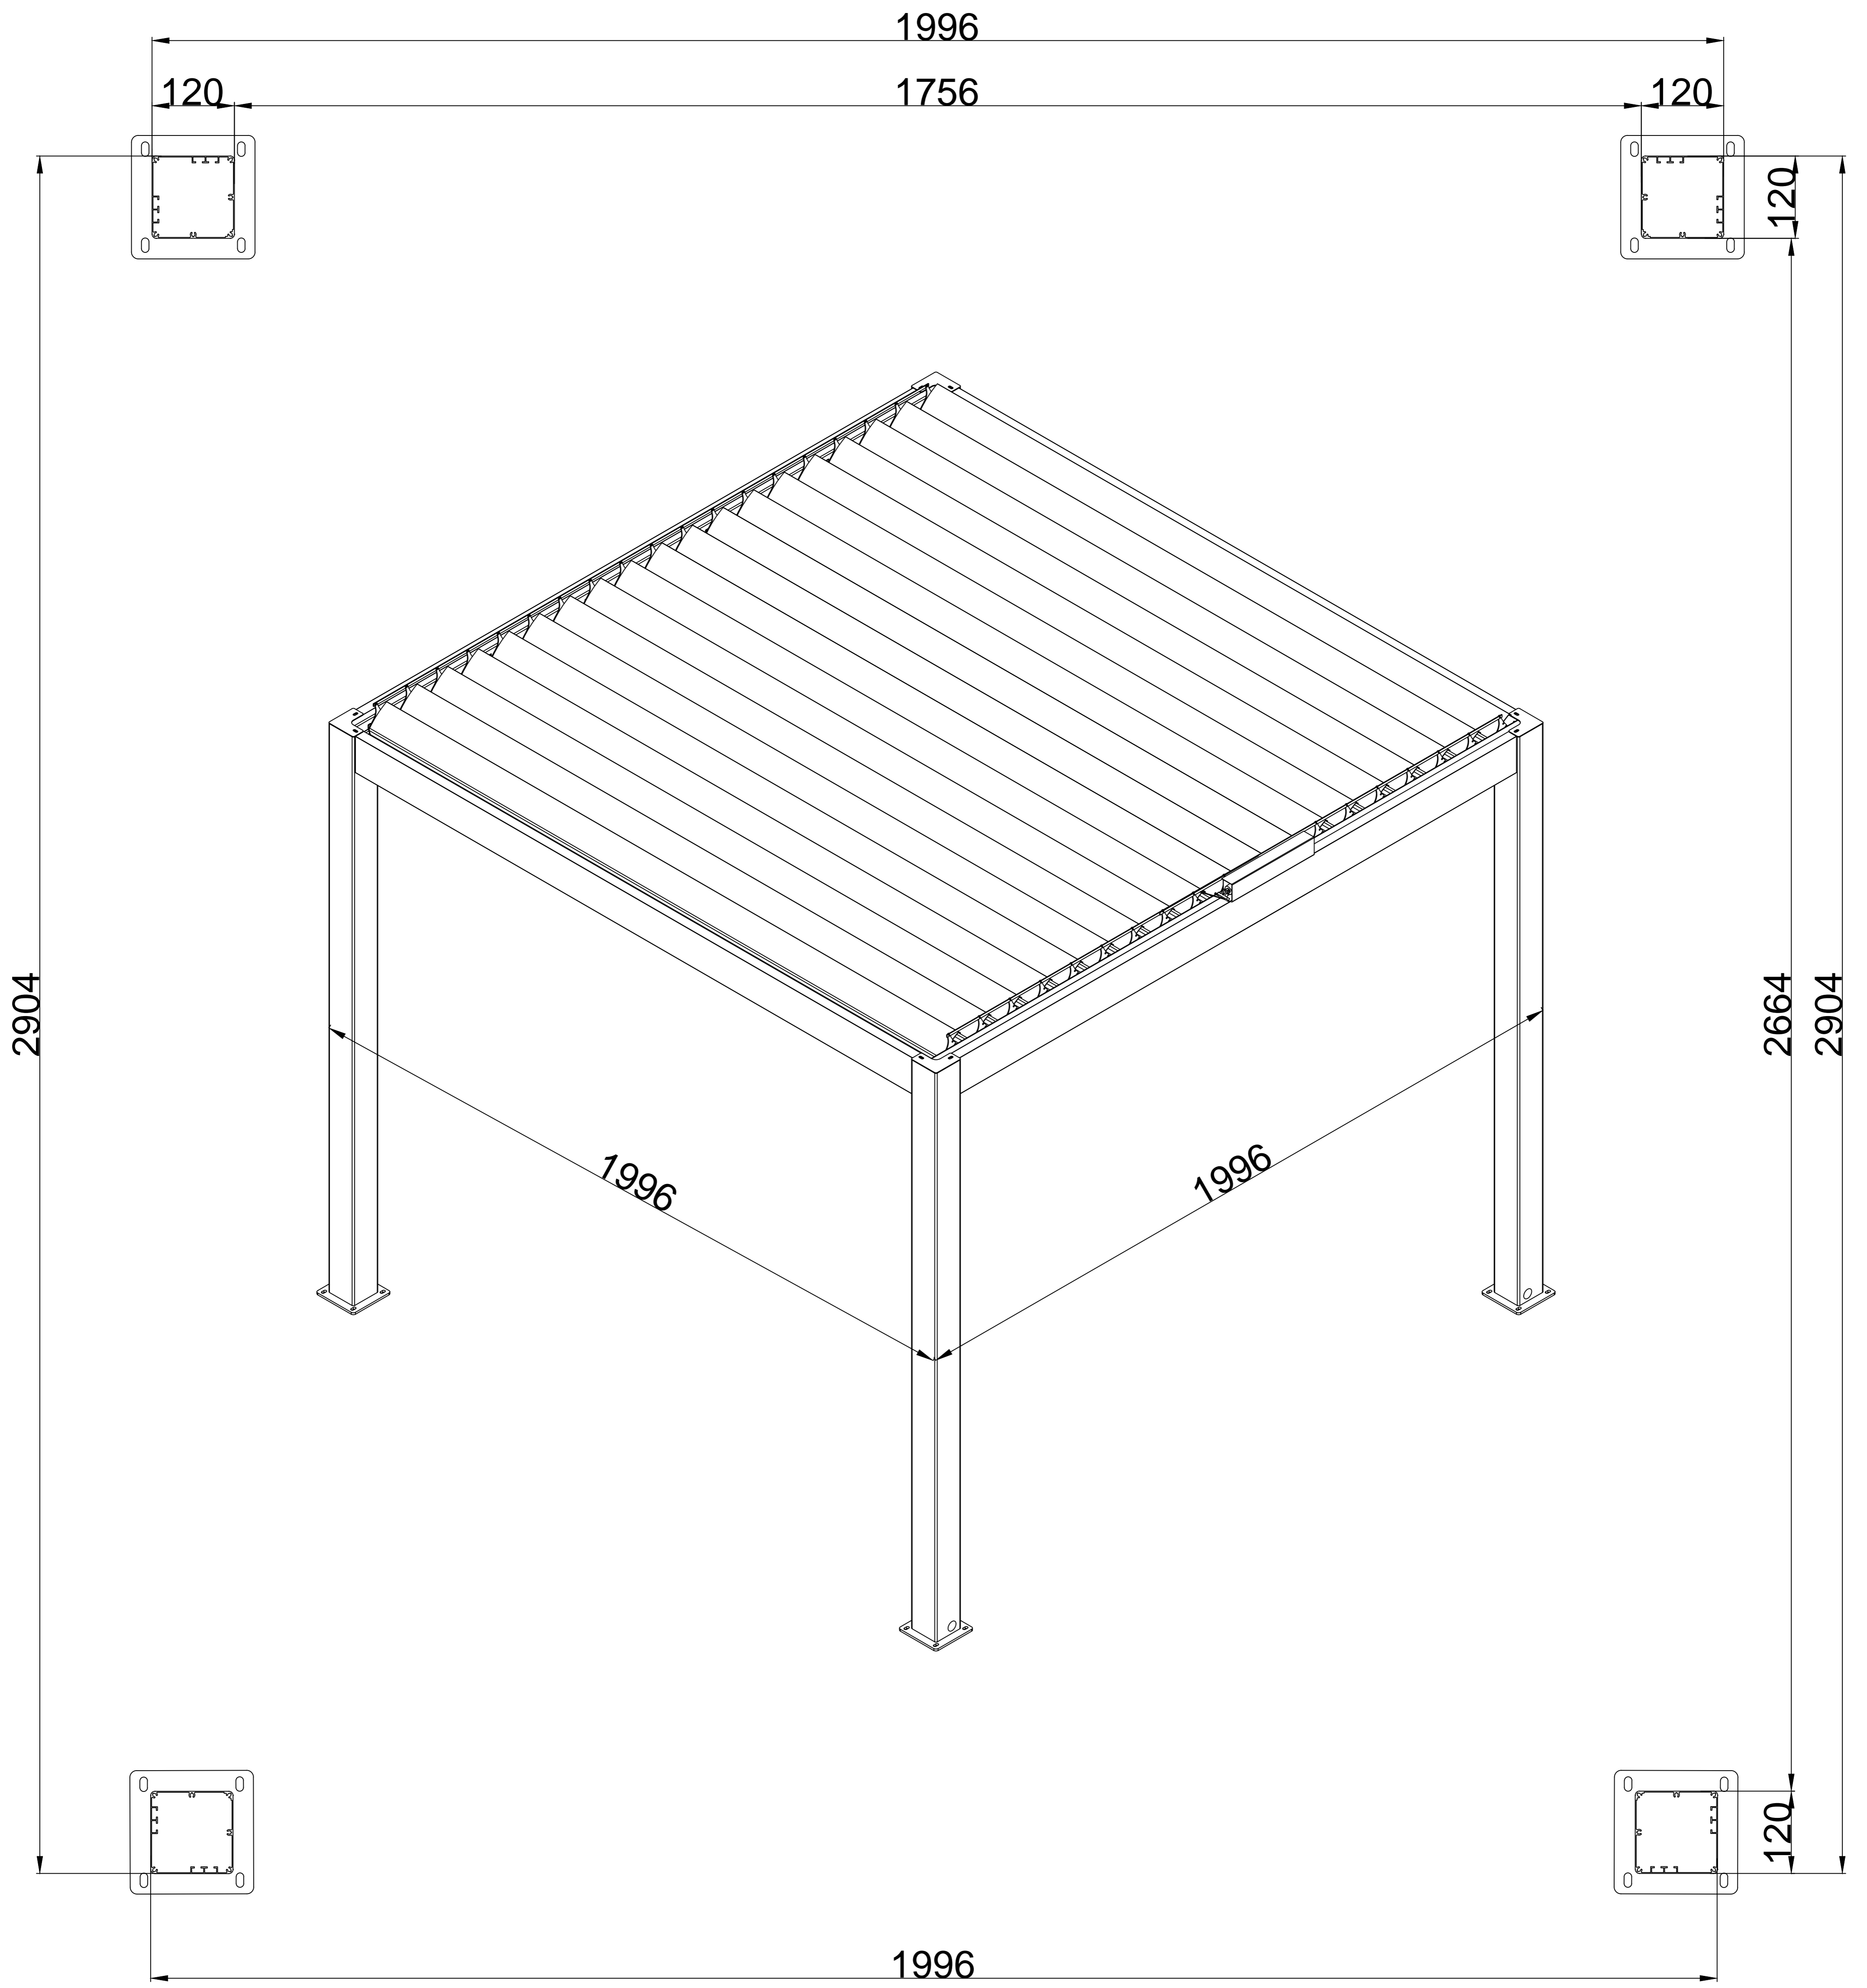










2*3-4



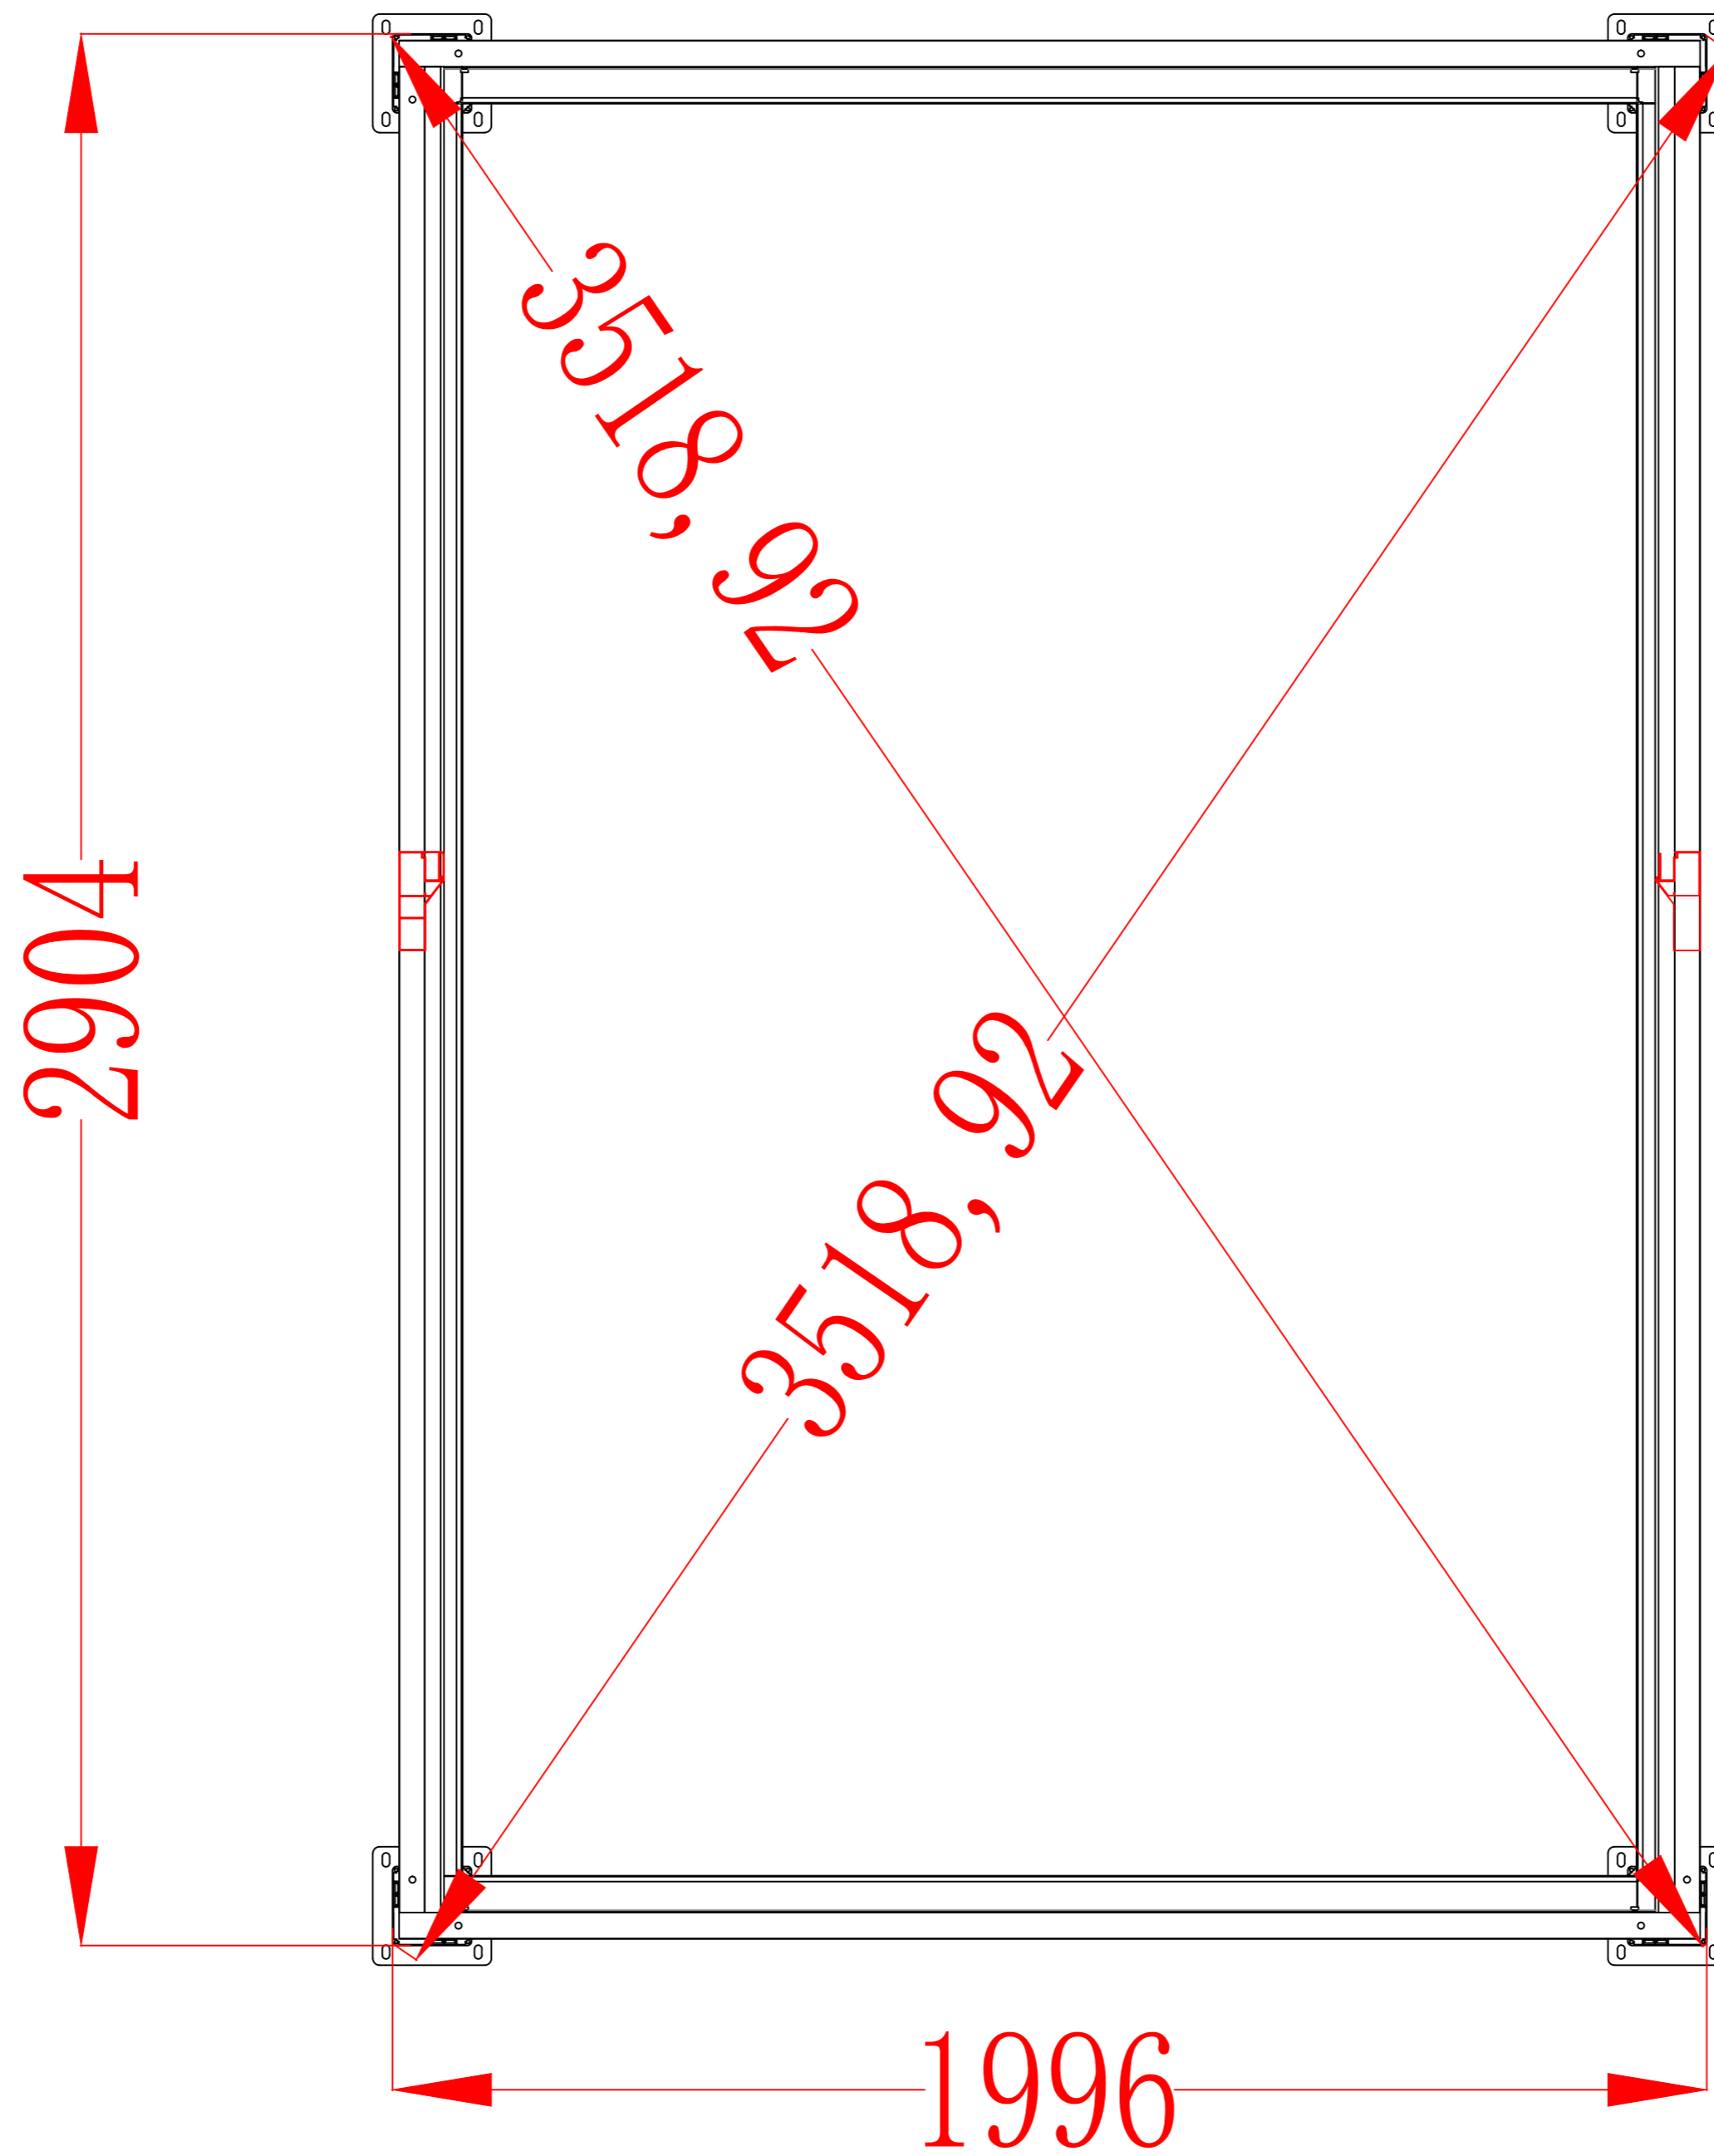

Before installing the bottom expansion screws, please be sure to correct the frame size






















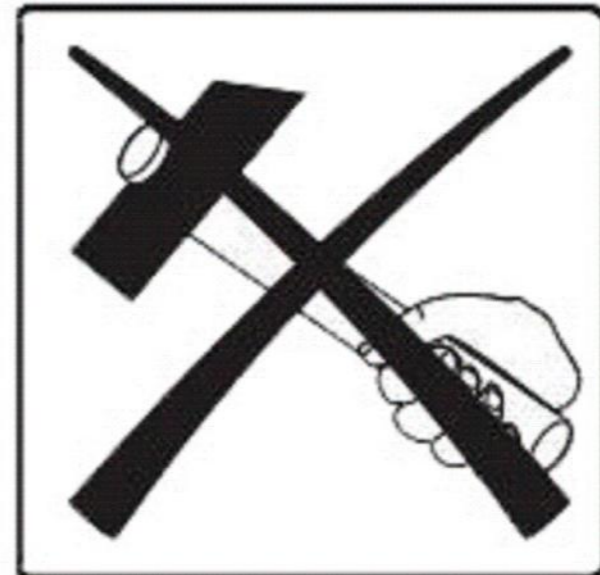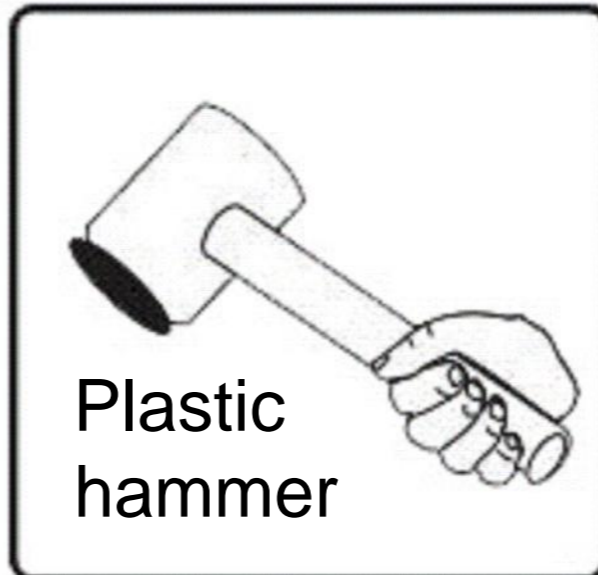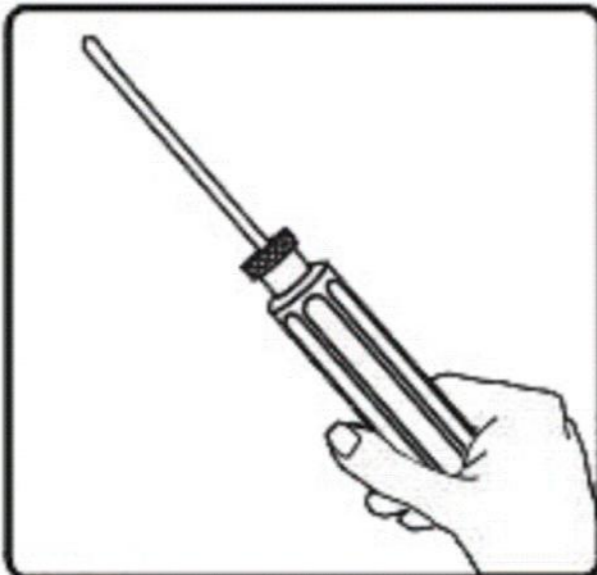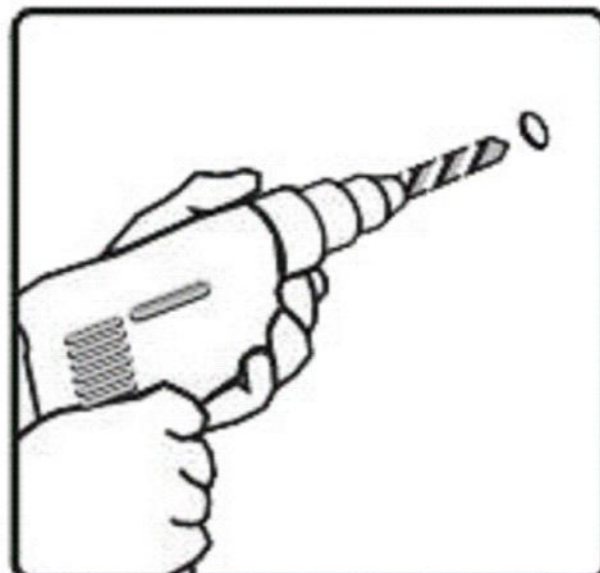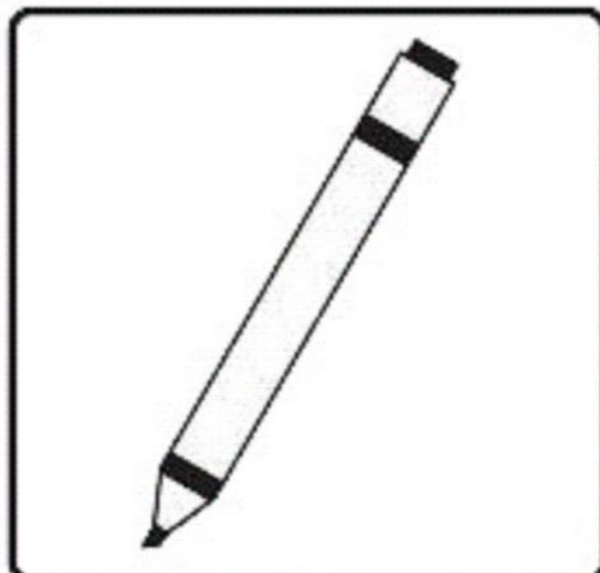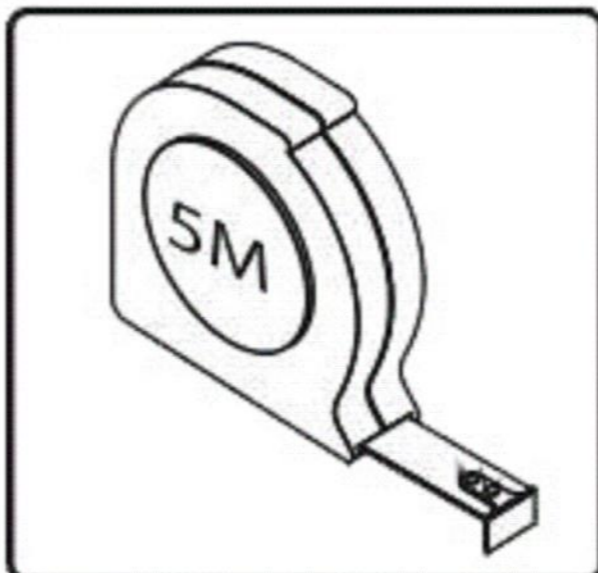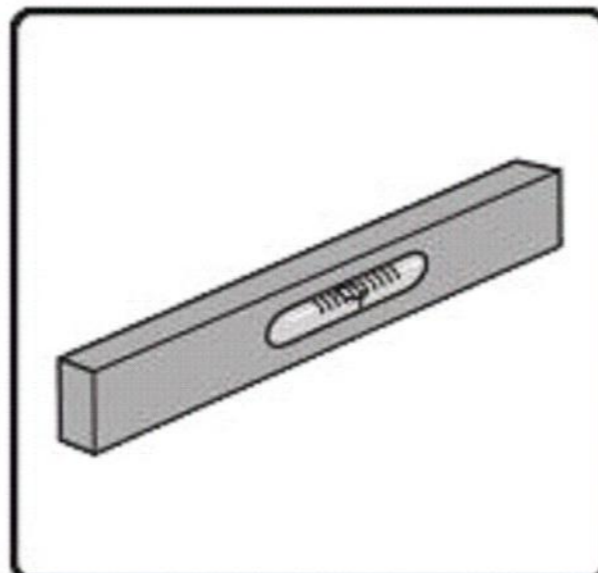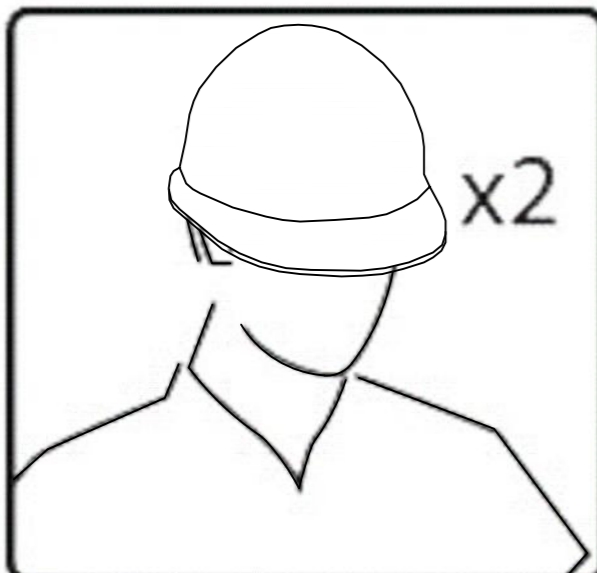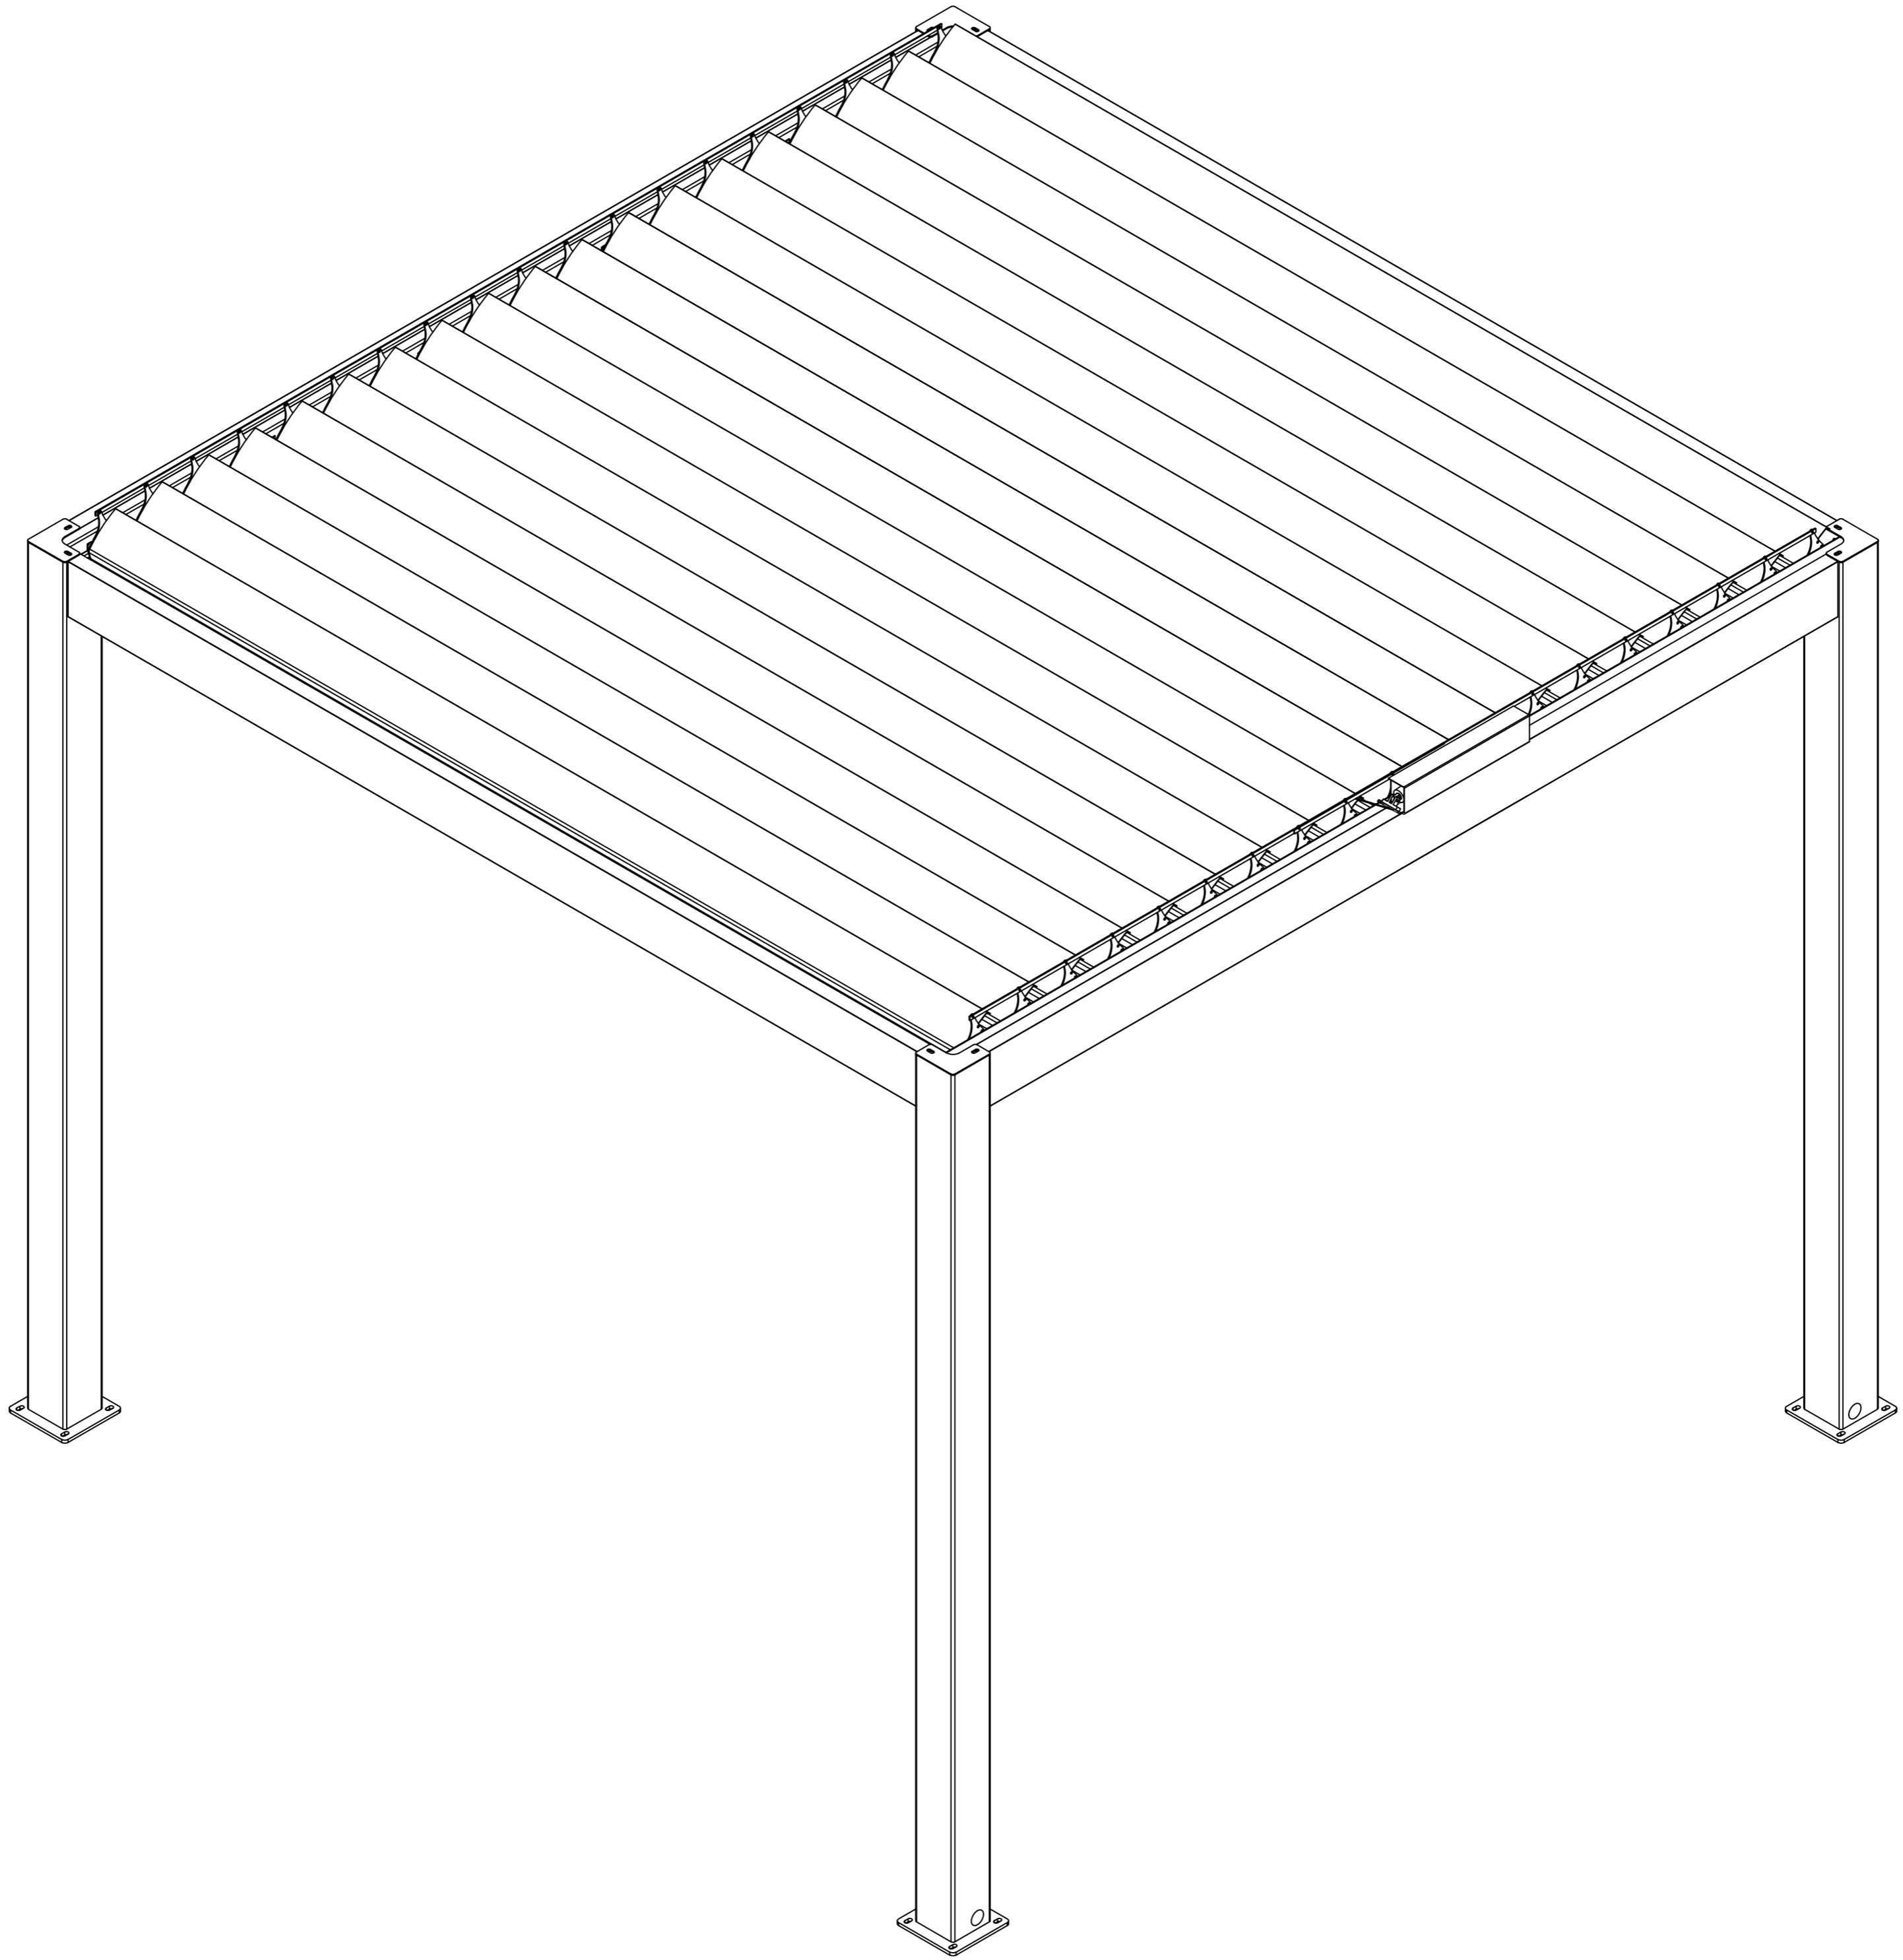

2x4m

	Item	Qty	Item	Qty	Item	Qty
Carton 1/4	3B-01/ 01B	4	3B-11	4	3B-12	4
	3B-13	4	3B-14	1	3B-18	1
	3B-19	8	3B-20	50	3B-20B	4
	3B-21	16	3B-22	24	3B-23	10
	3B-24	1	3B-30	1	3B-31	1
	3B-48	23	3B-48B	4	3B-49	23
	3B-49B	4	3B-51	216	3B-57	4
	3B-58	1	3B-59	1	3B-60	1
	3B-46a	1	3B-46b	3		
Carton 2/4	3B-02	1	3B-03	1	3B-04	2
	3B-08A/ B	2	3B-09	2		
Carton 3/4	3B-06	14	3B-07	4		
Carton 4/4	3B-06	9				

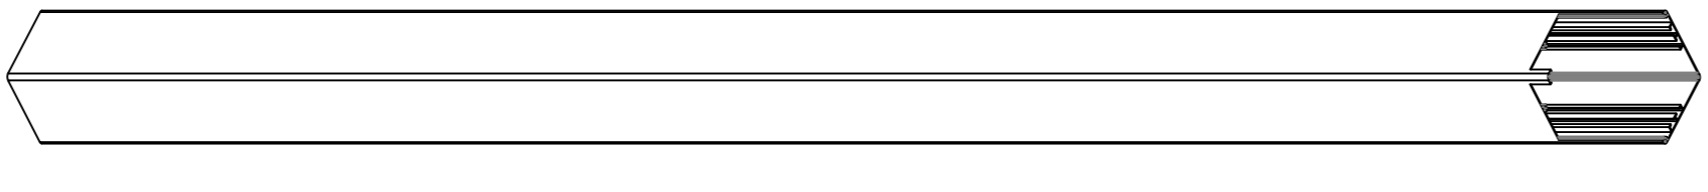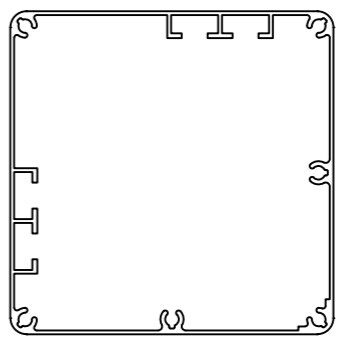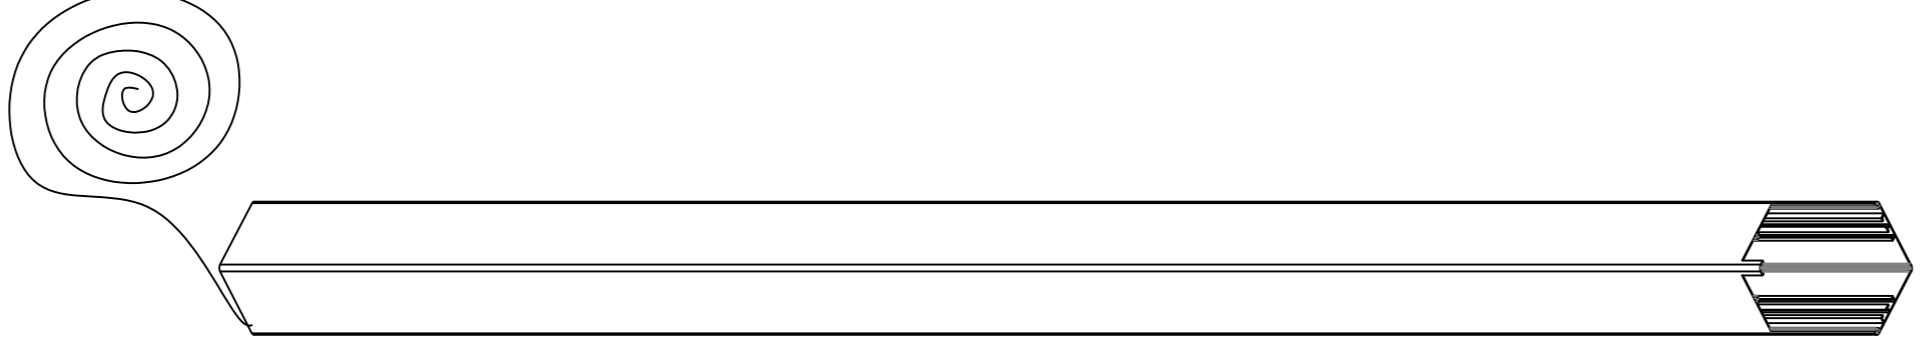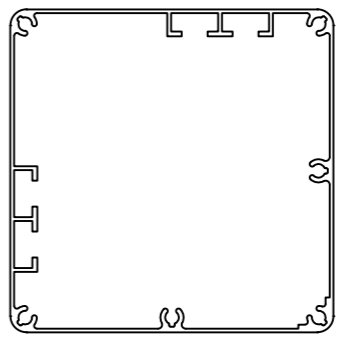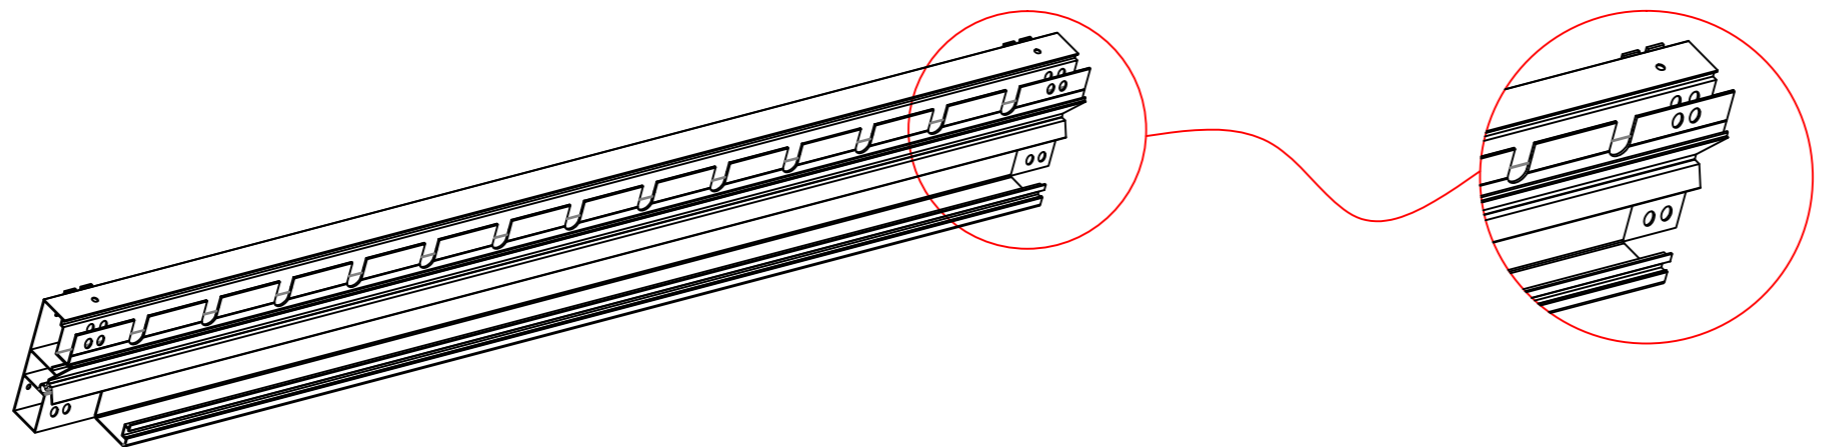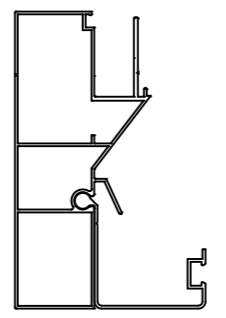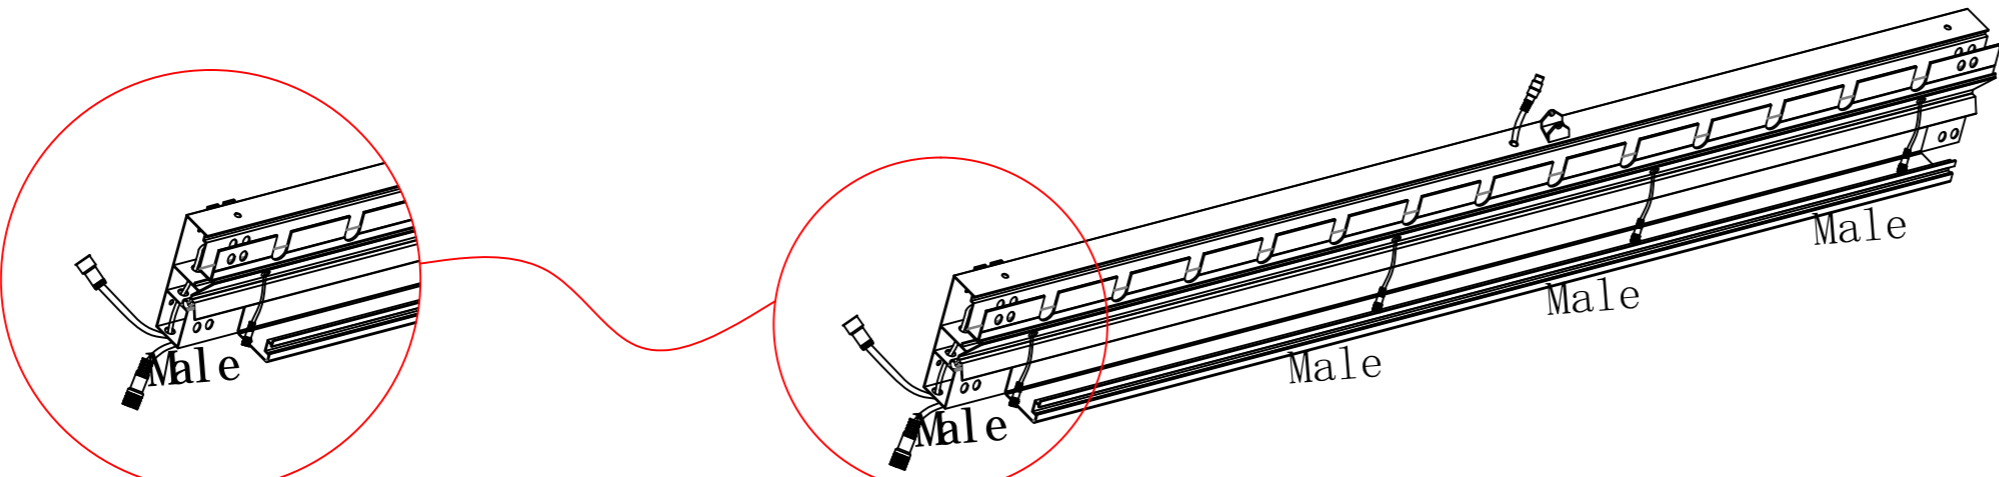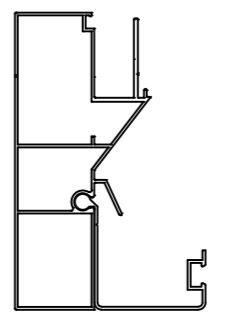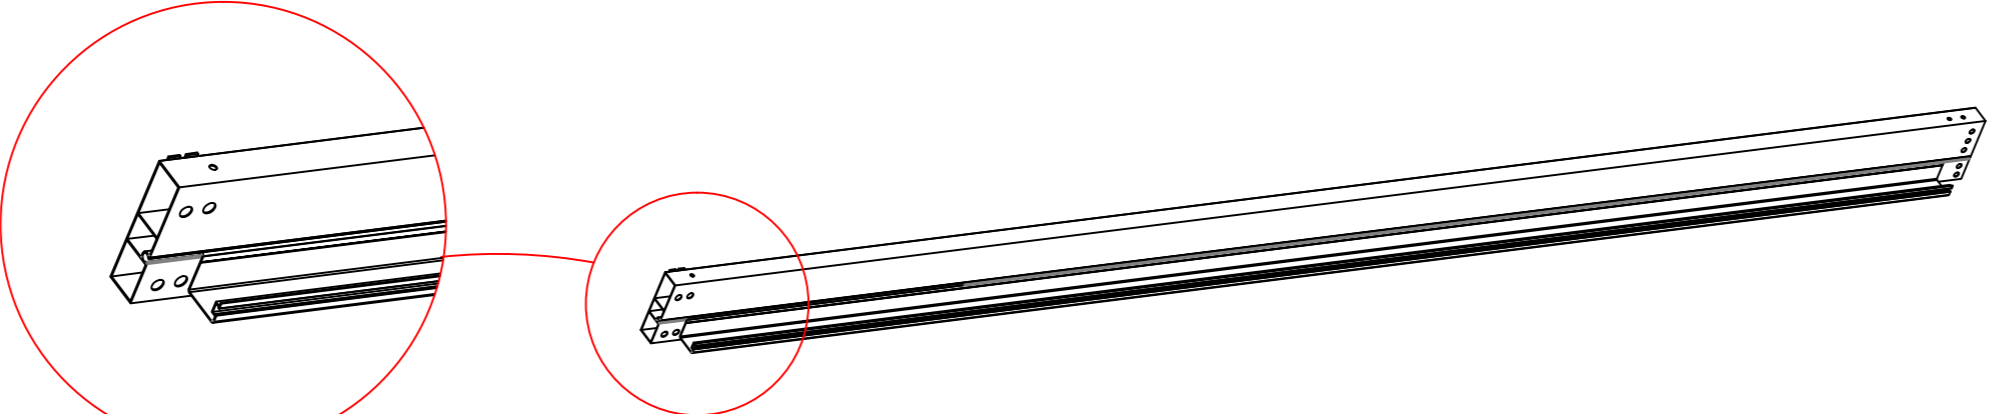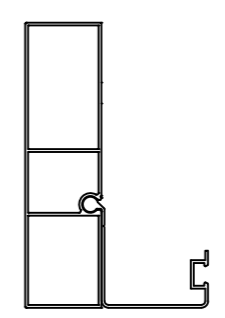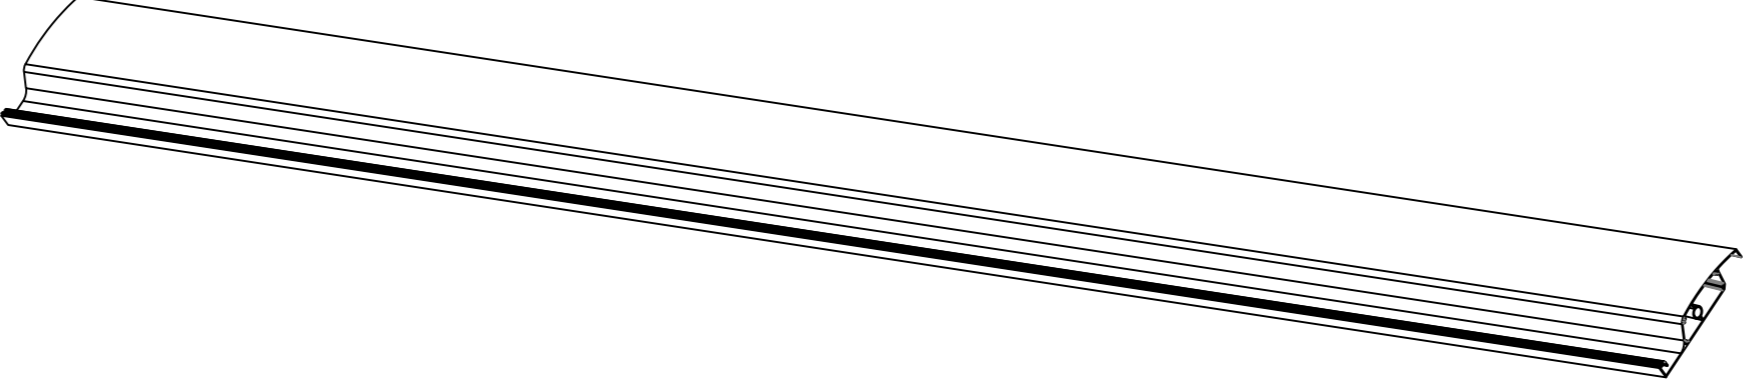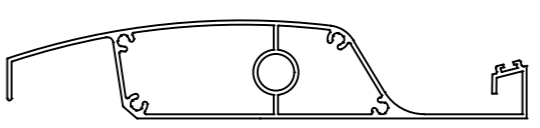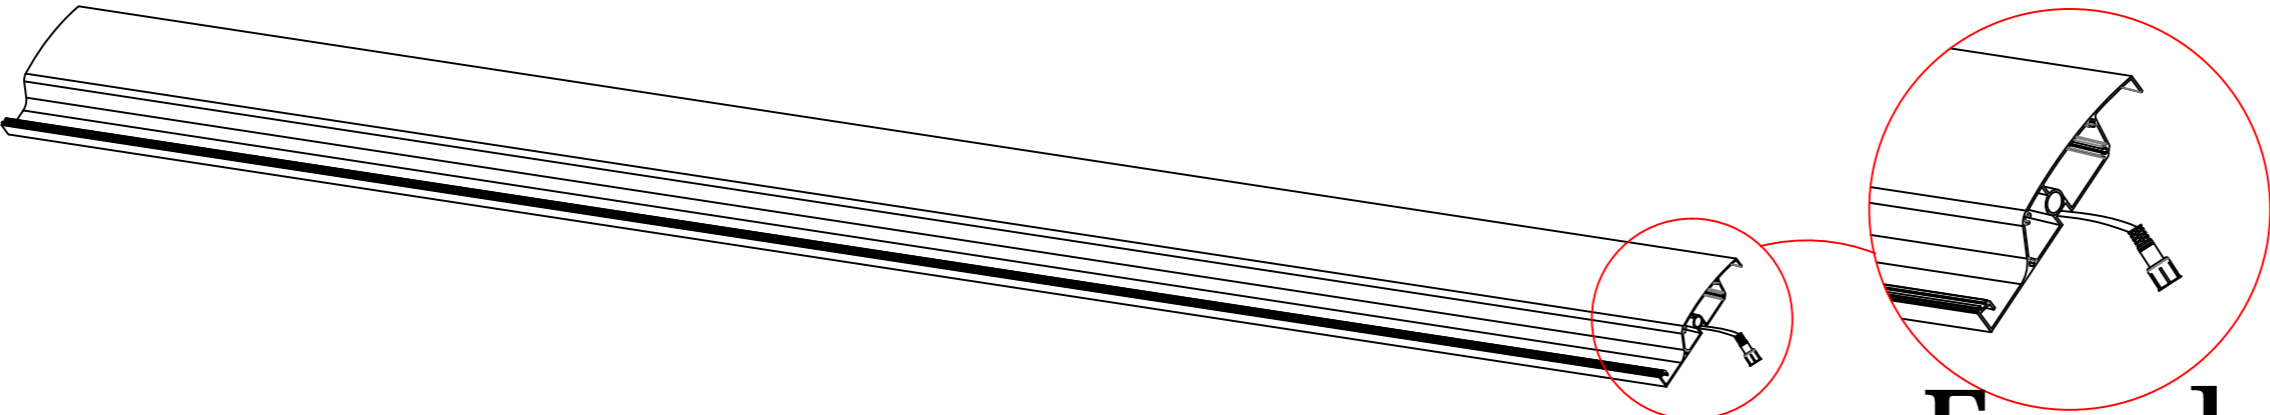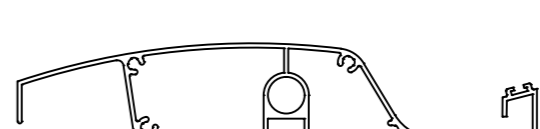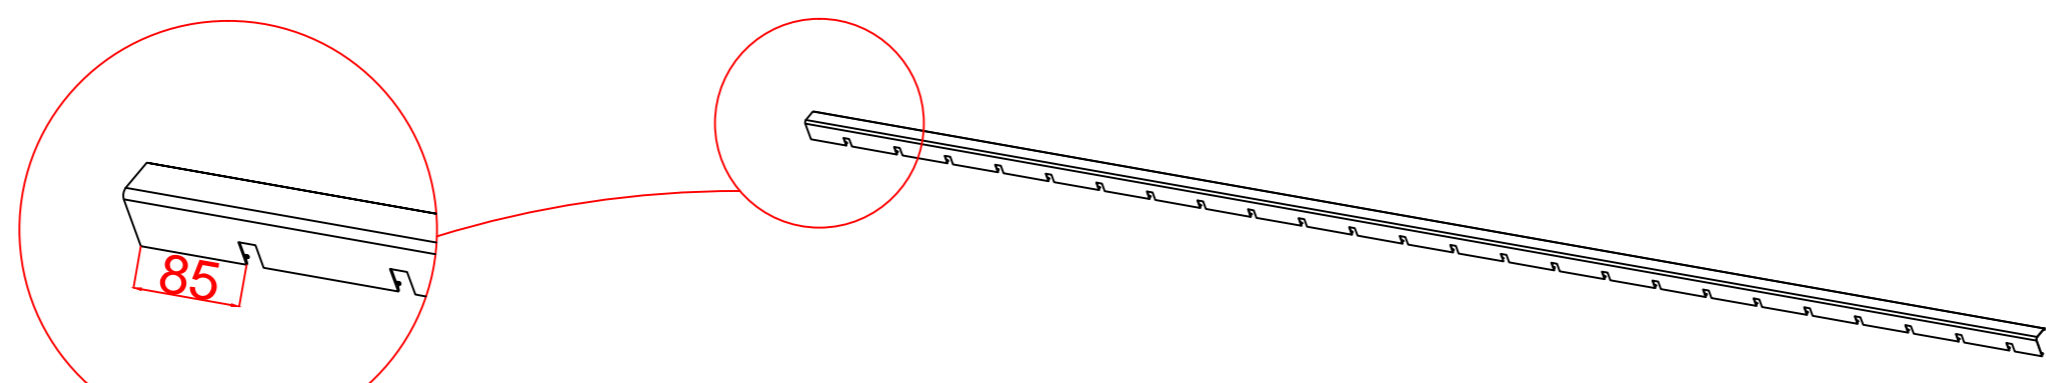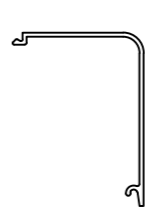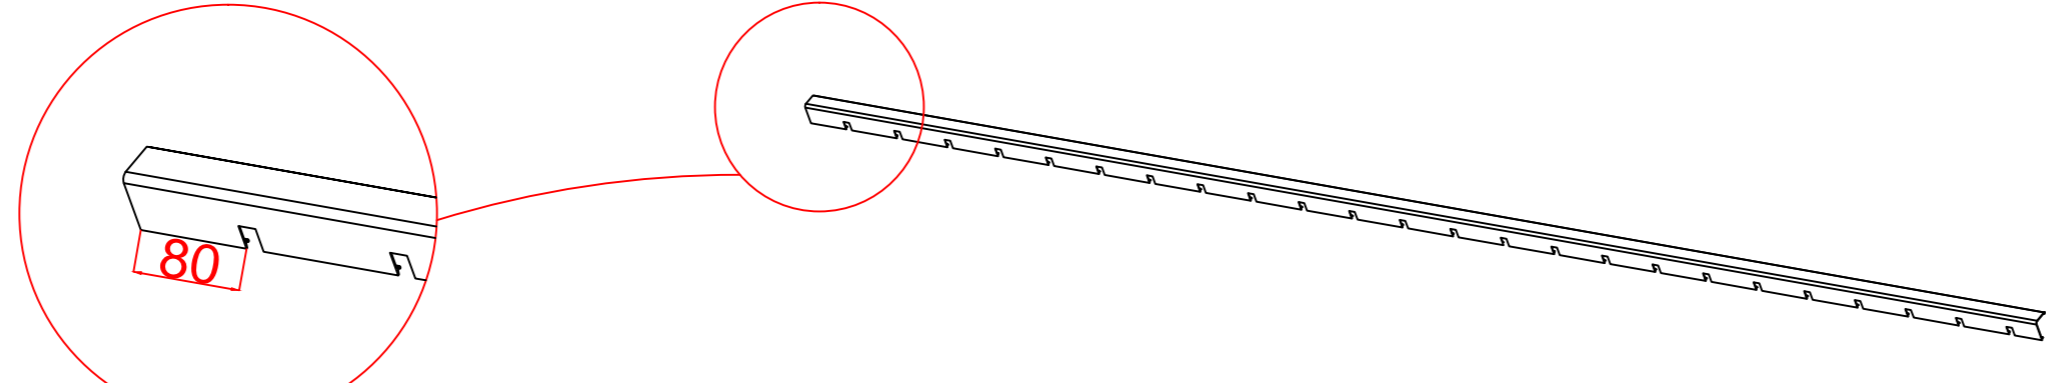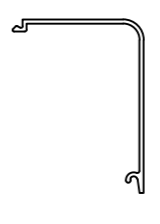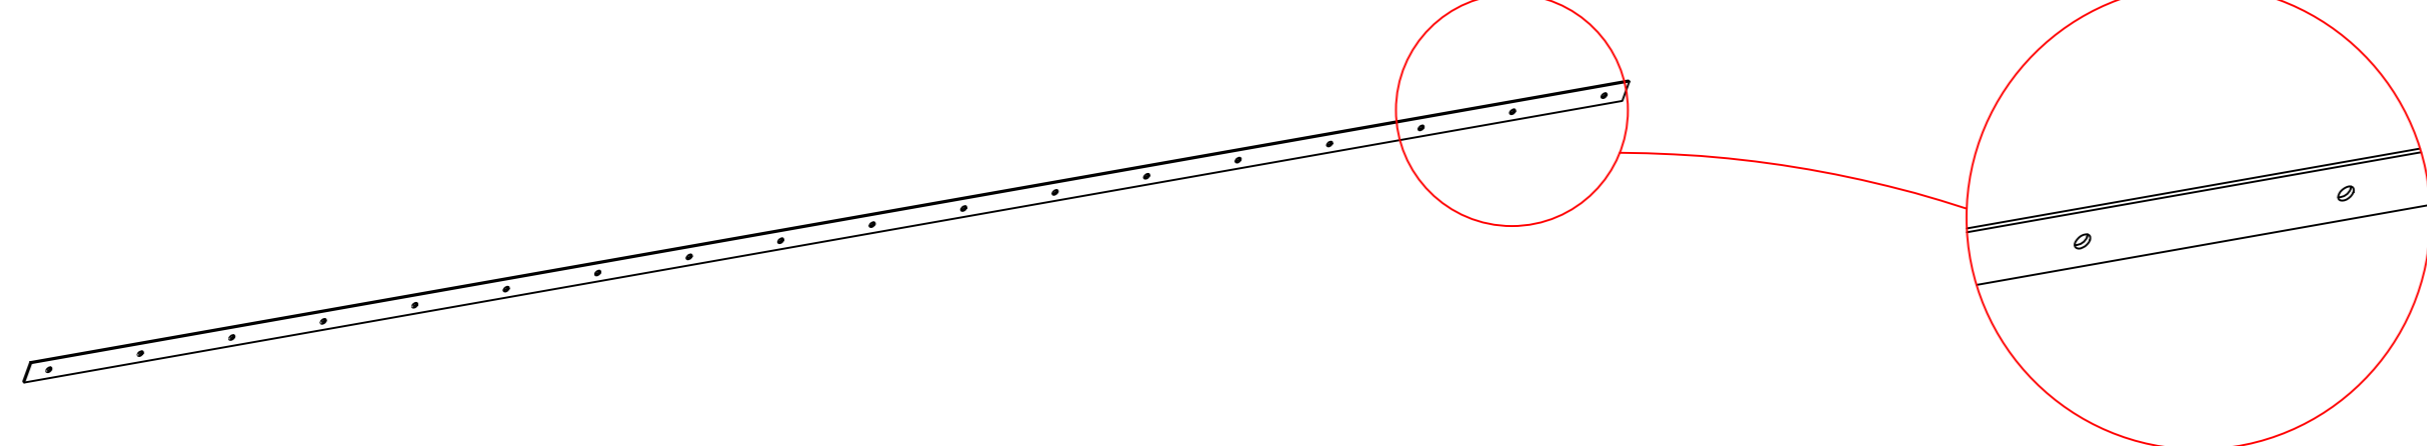

Item	Drawings	Qty
3B-01	 	3
3B-01B	 	1
3B-02	 	1
3B-03	 	1
3B-04	 	2
3B-06	 	23
3B-07	  <p data-bbox="1260 1884 1449 1944">Female</p>	4
3B-08A	 	1
3B-08B	 	1
3B-09		2






Item	Drawings	Qty
3B-11		4
3B-12		4
3B-13		4
3B-14		1
3B-18		1
3B-19	 M8*20	8
3B-20	 5-12-M4	50+2
3B-20B	 5-16-M4	4+2
3B-21	 M10*80	16
3B-22	 M5.5*60	24+2
3B-23	 M4.2*19	10+2
3B-24		1
3B-30		1


Item	Drawings	Qty
3B-31		1
3B-46a		1
3B-46b		3
3B-48		23
3B-48B		4
3B-49		23
3B-49B		4
3B-51	 M4.2*25	216+4
3B-57		4
3B-58		1
3B-59	 M5*20	1
3B-60	 M4.2*19/8pcs	1



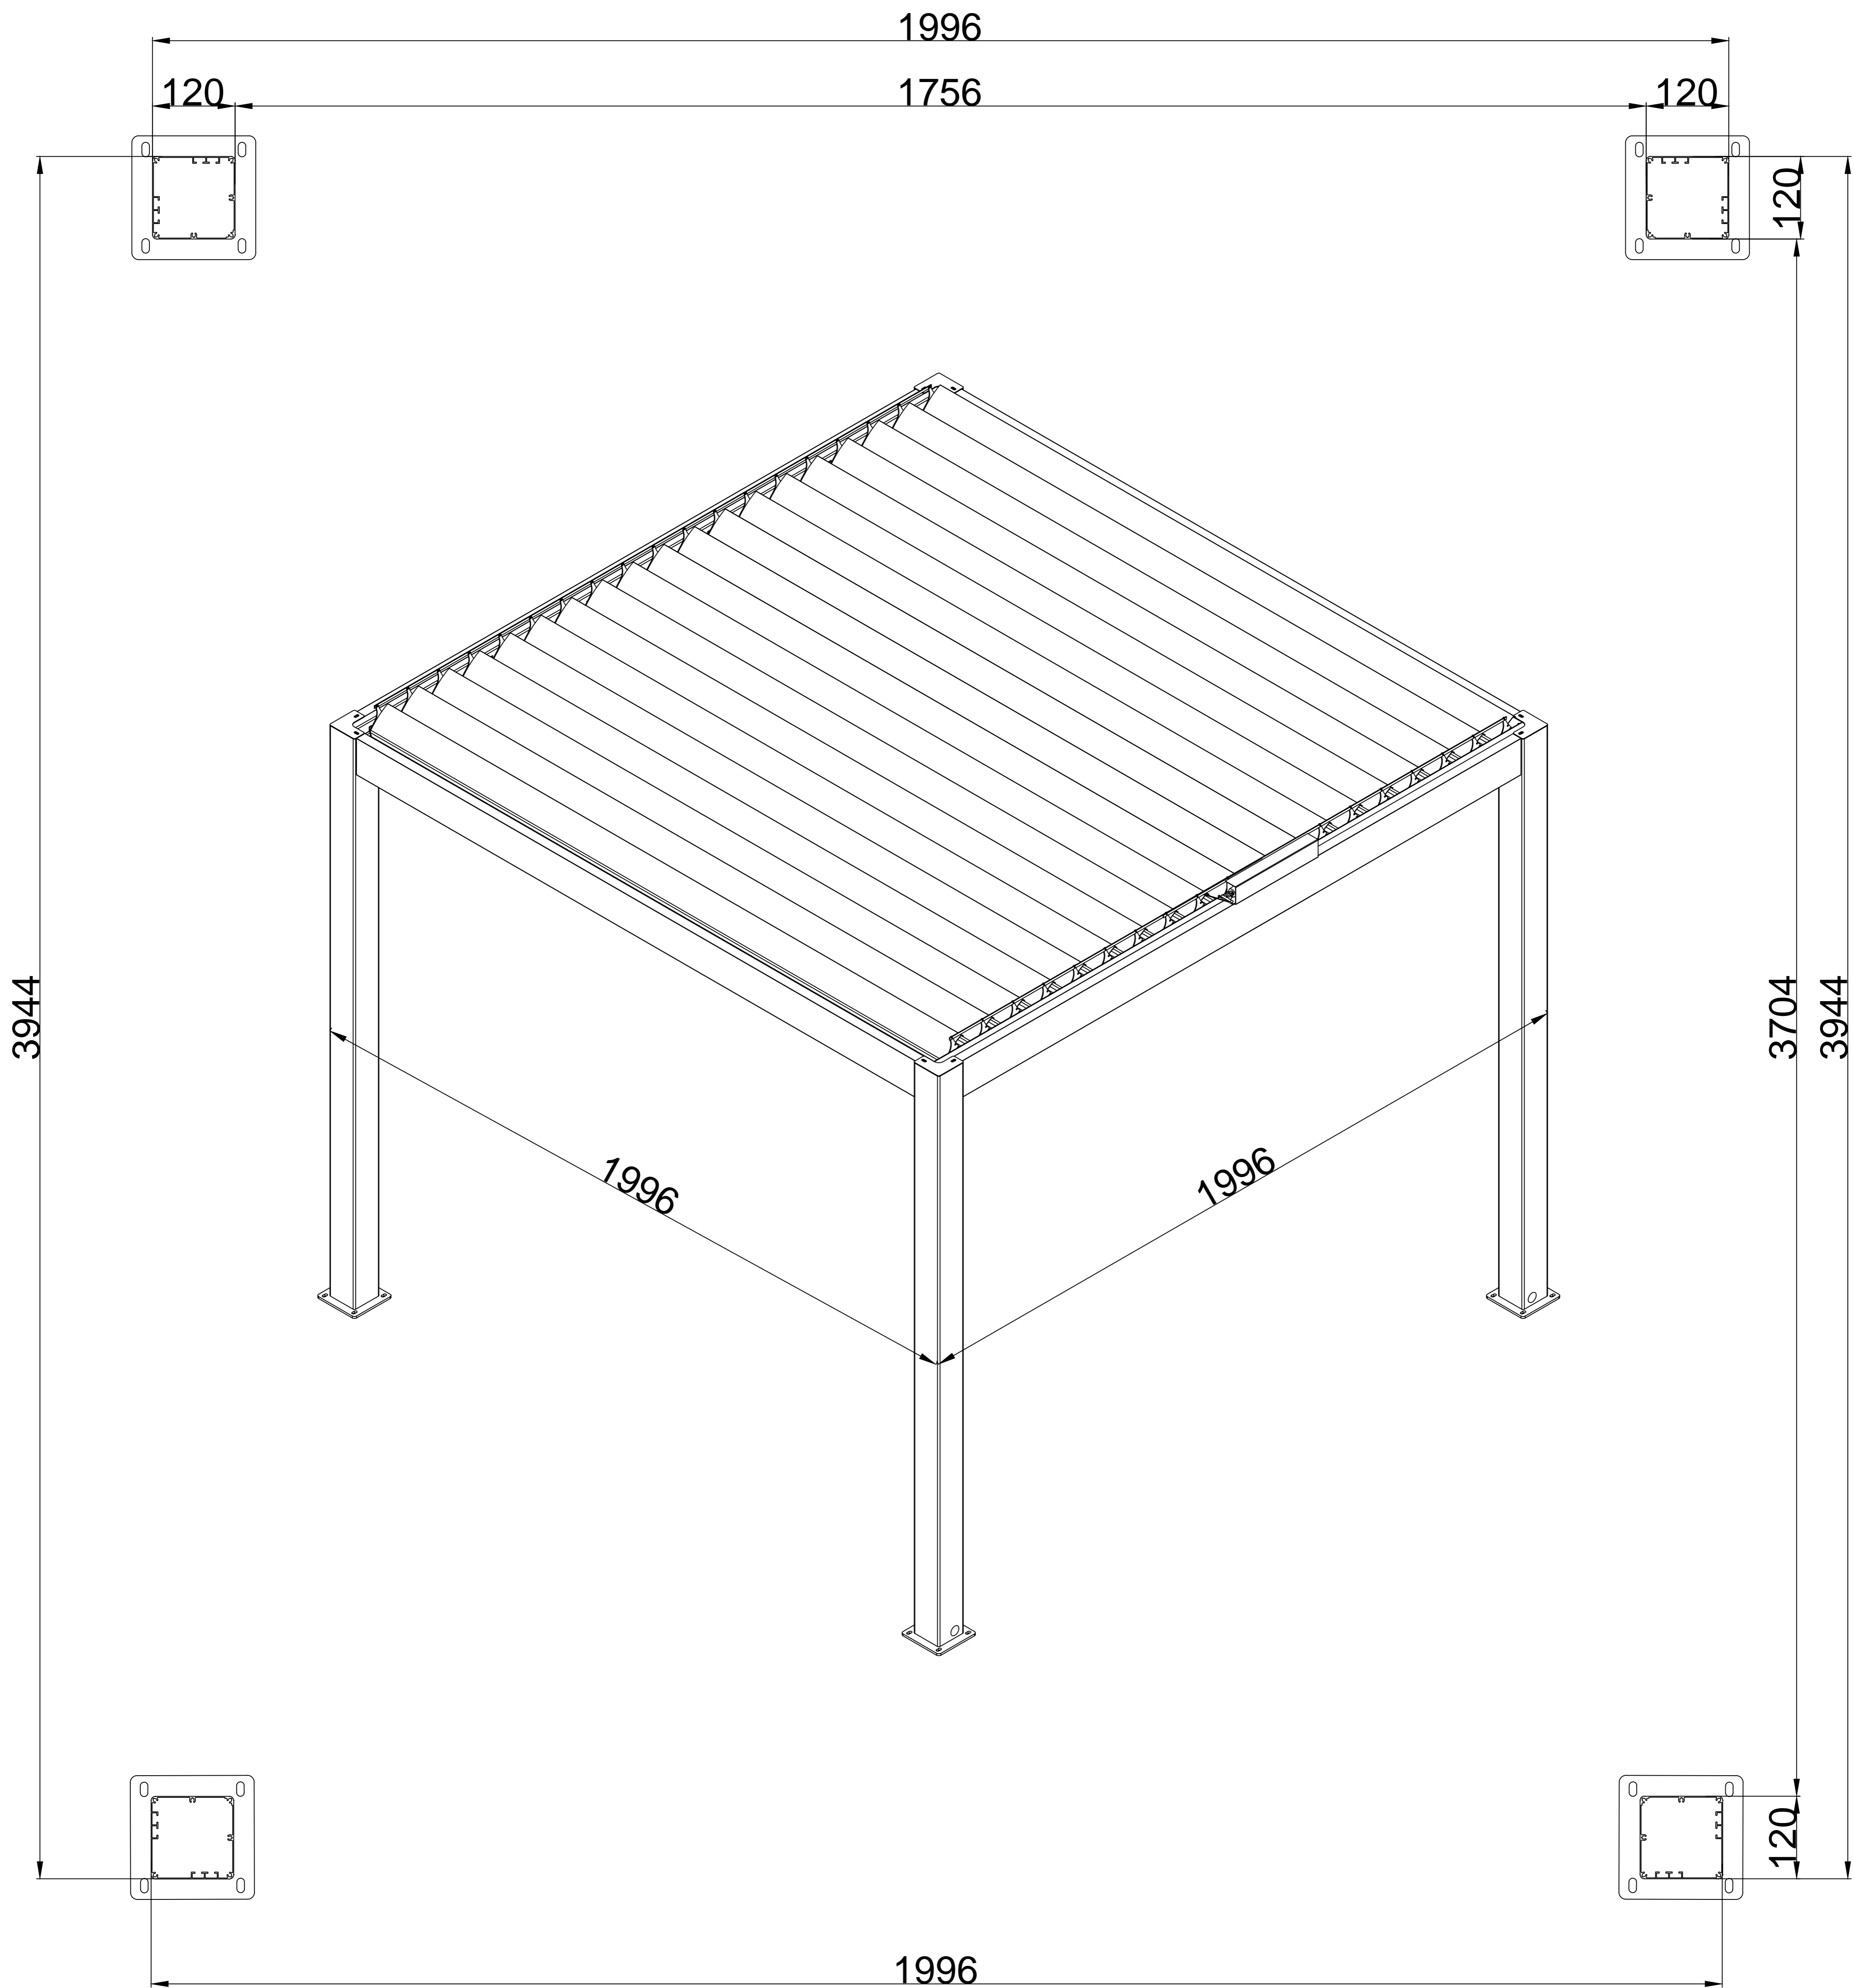











2*4-4



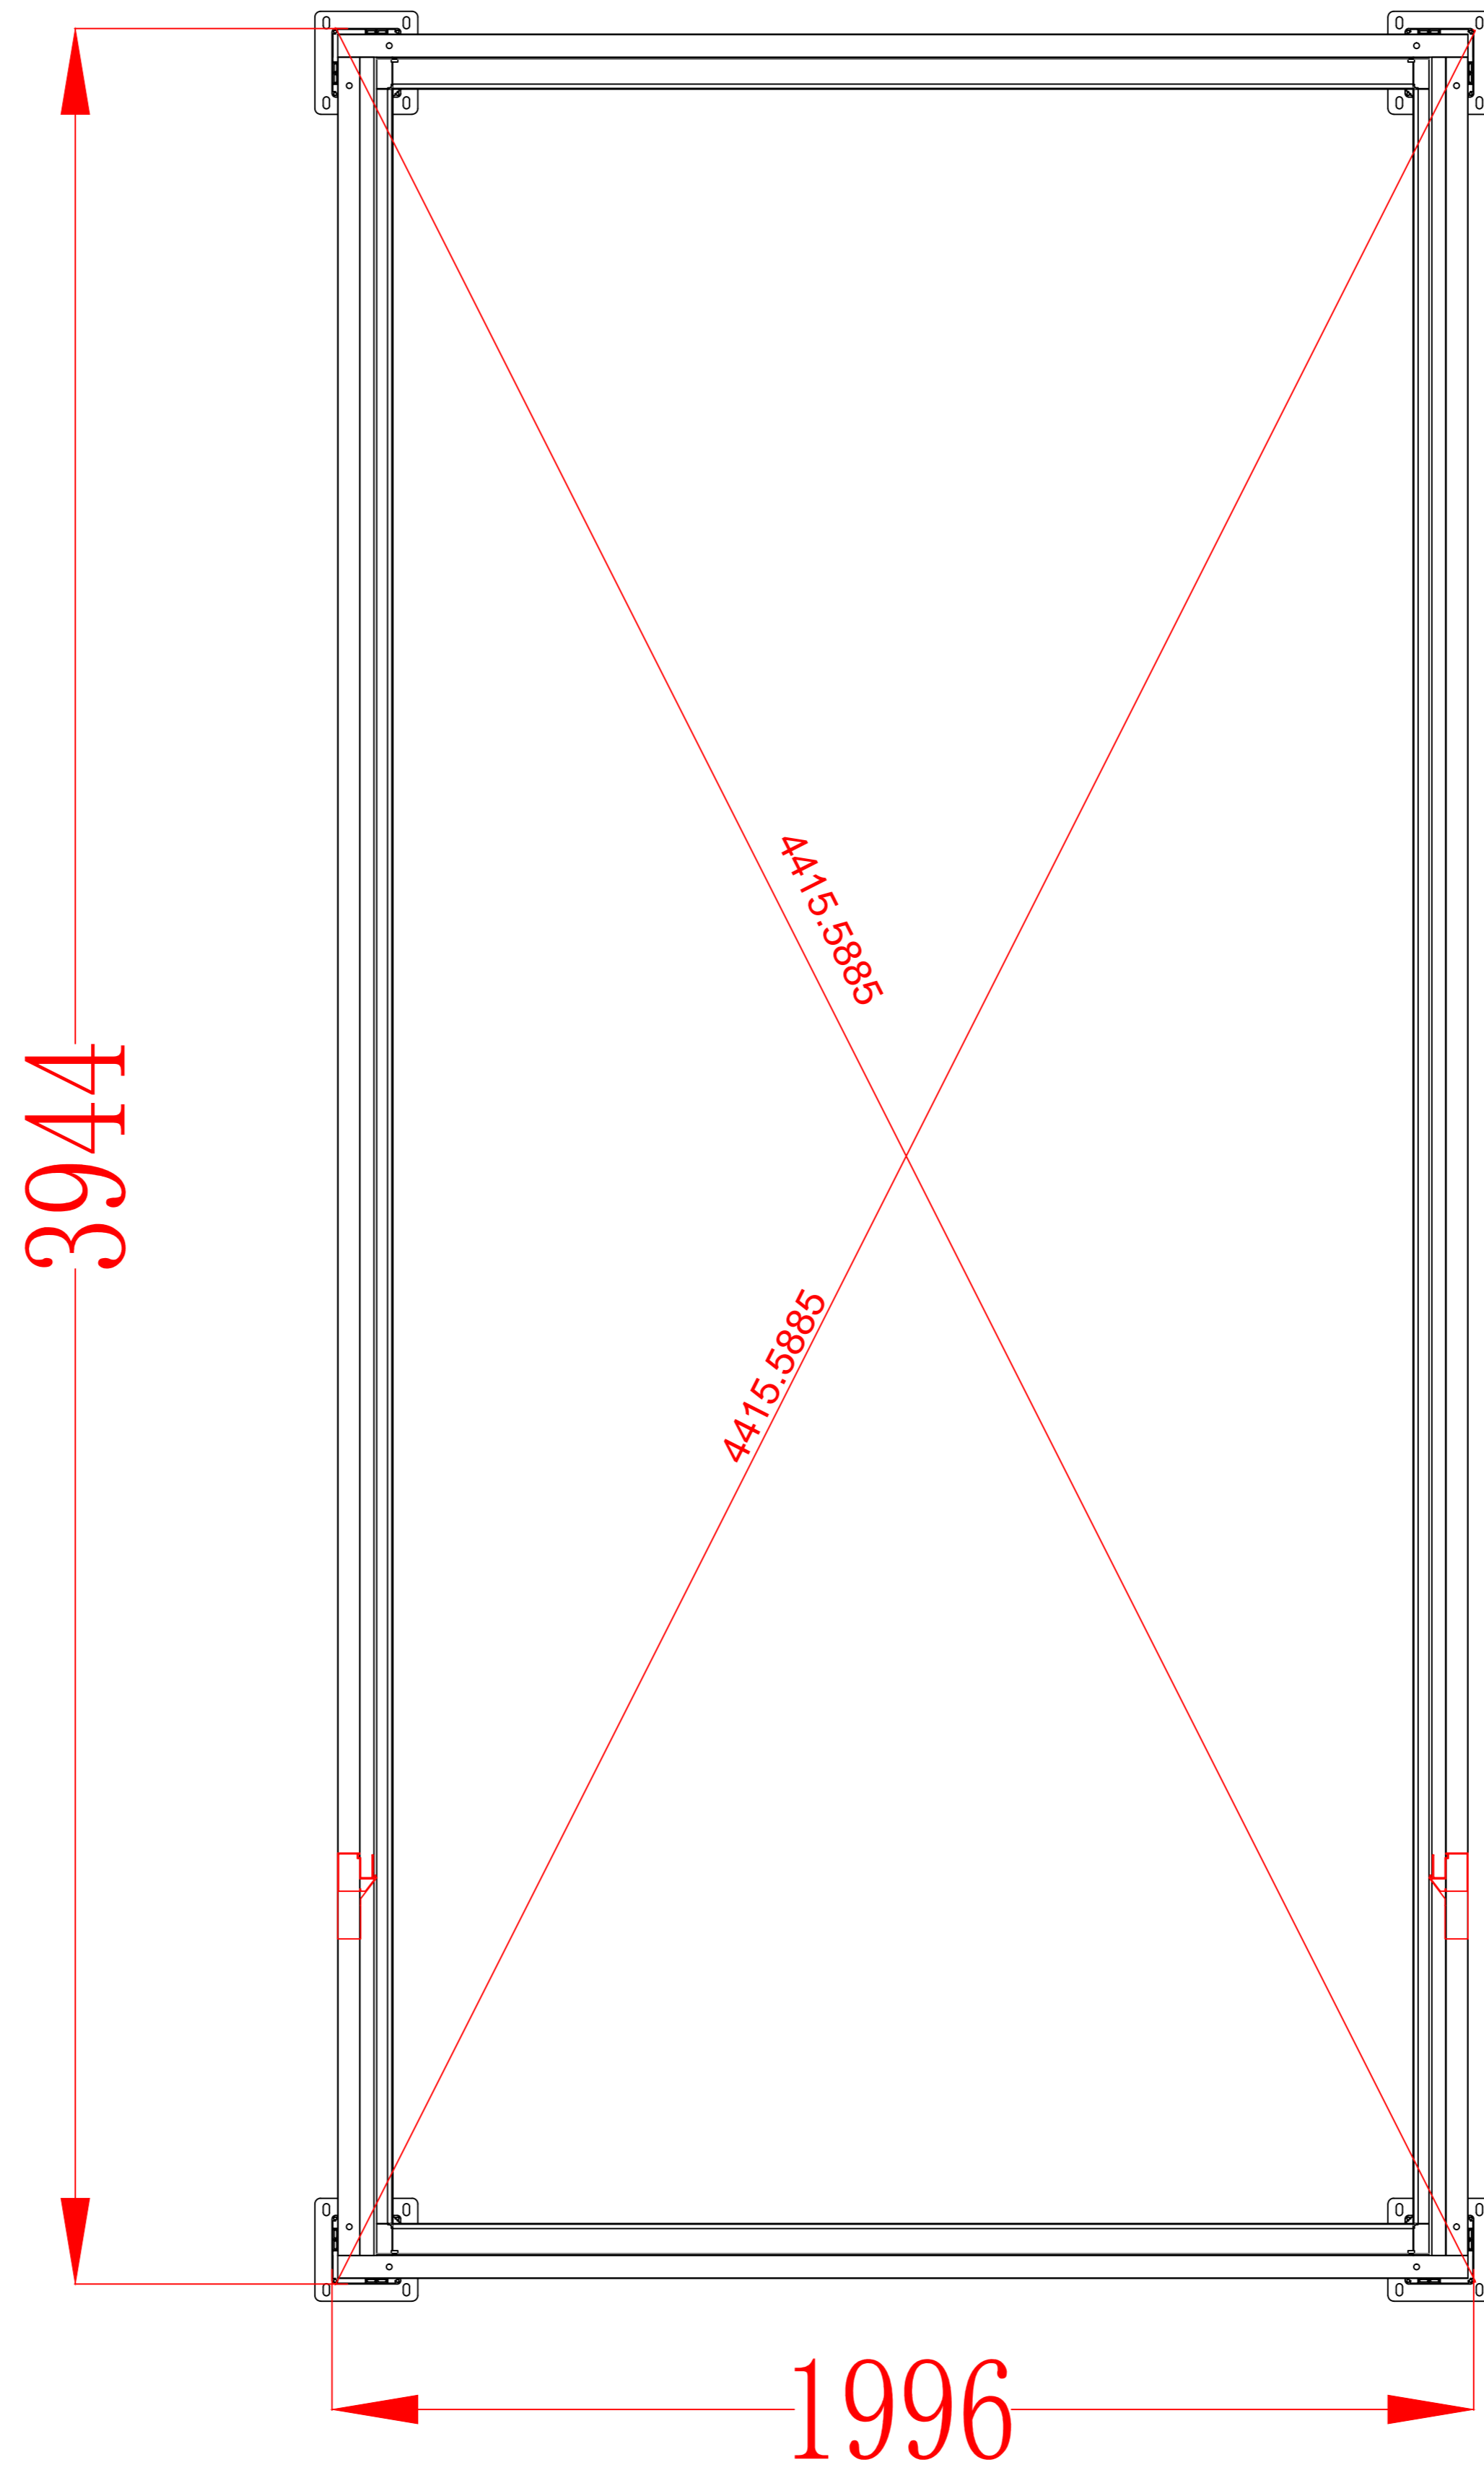

Before installing the bottom expansion screws, please be sure to correct the frame size



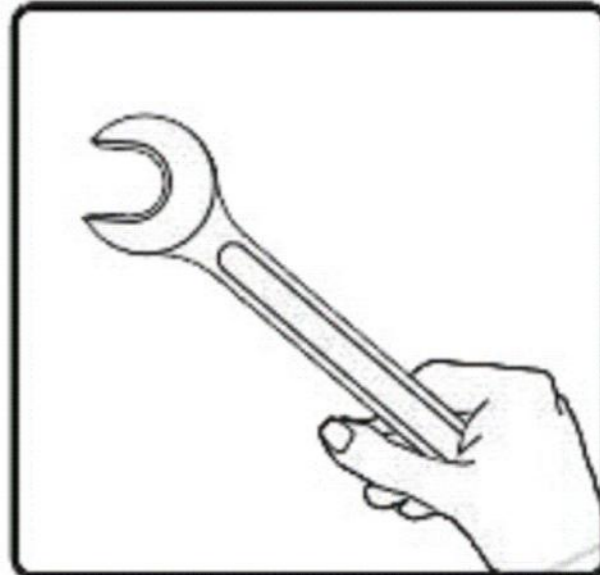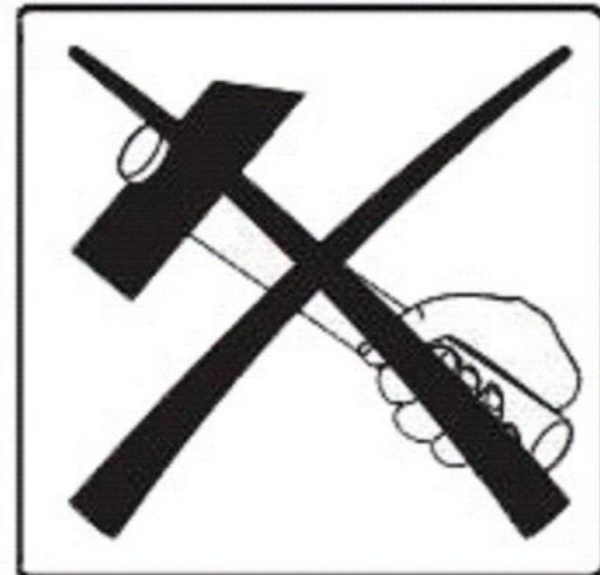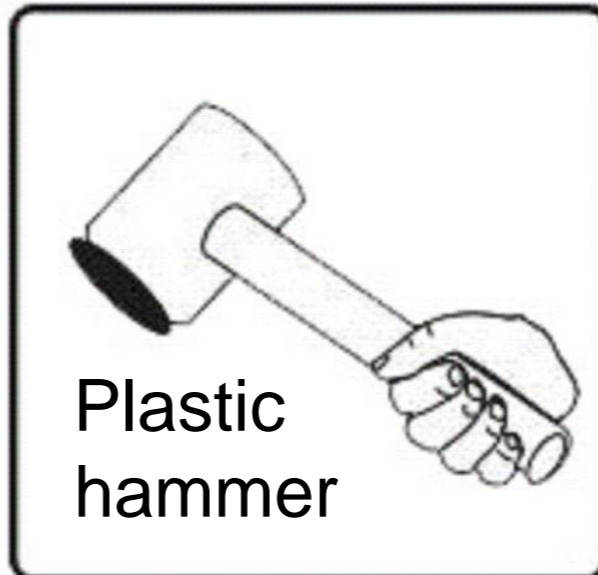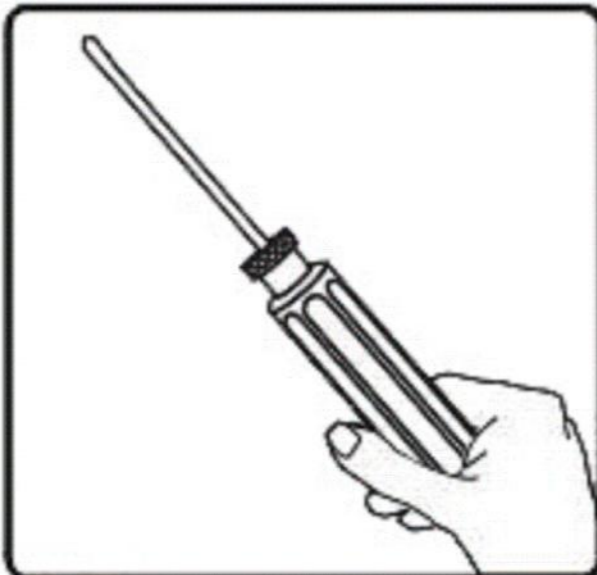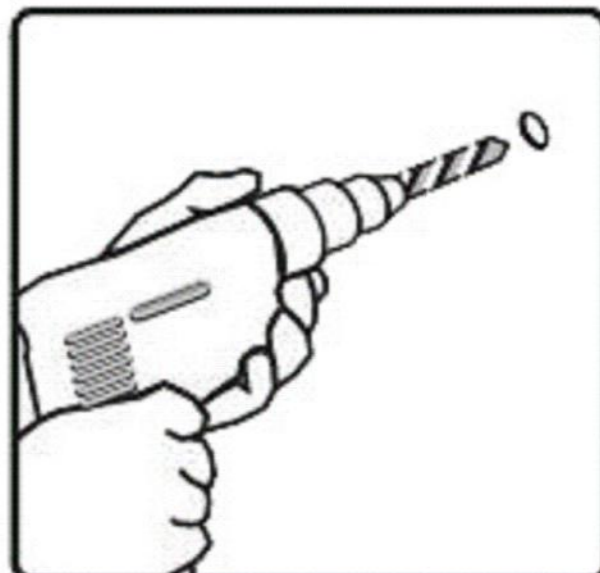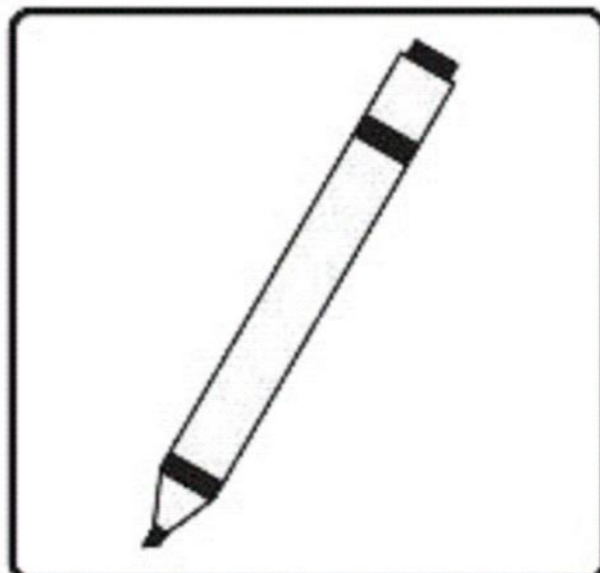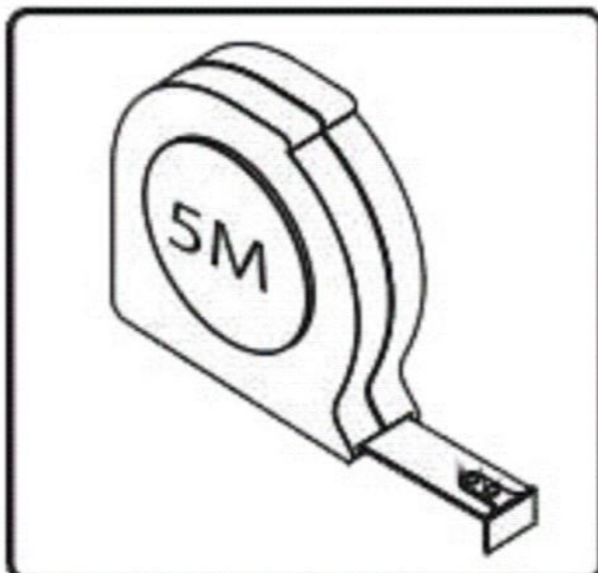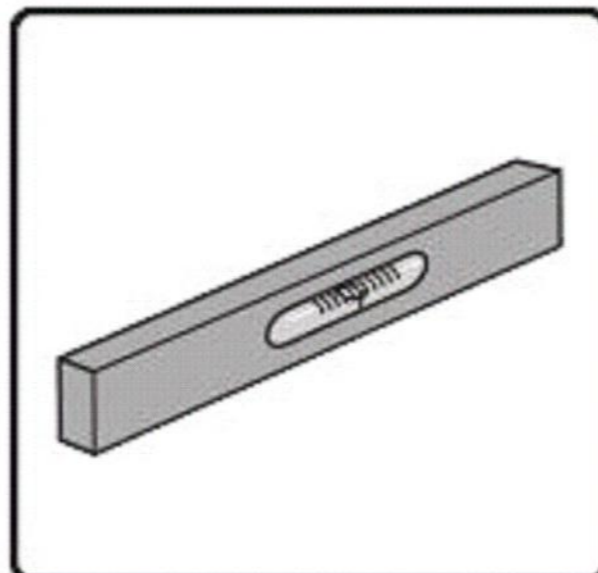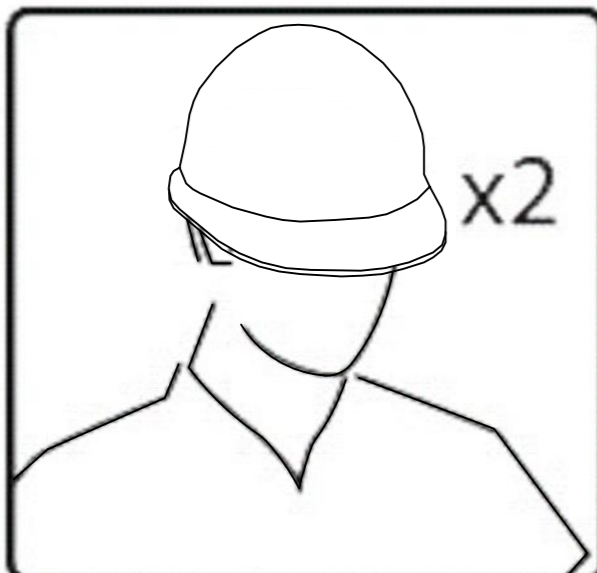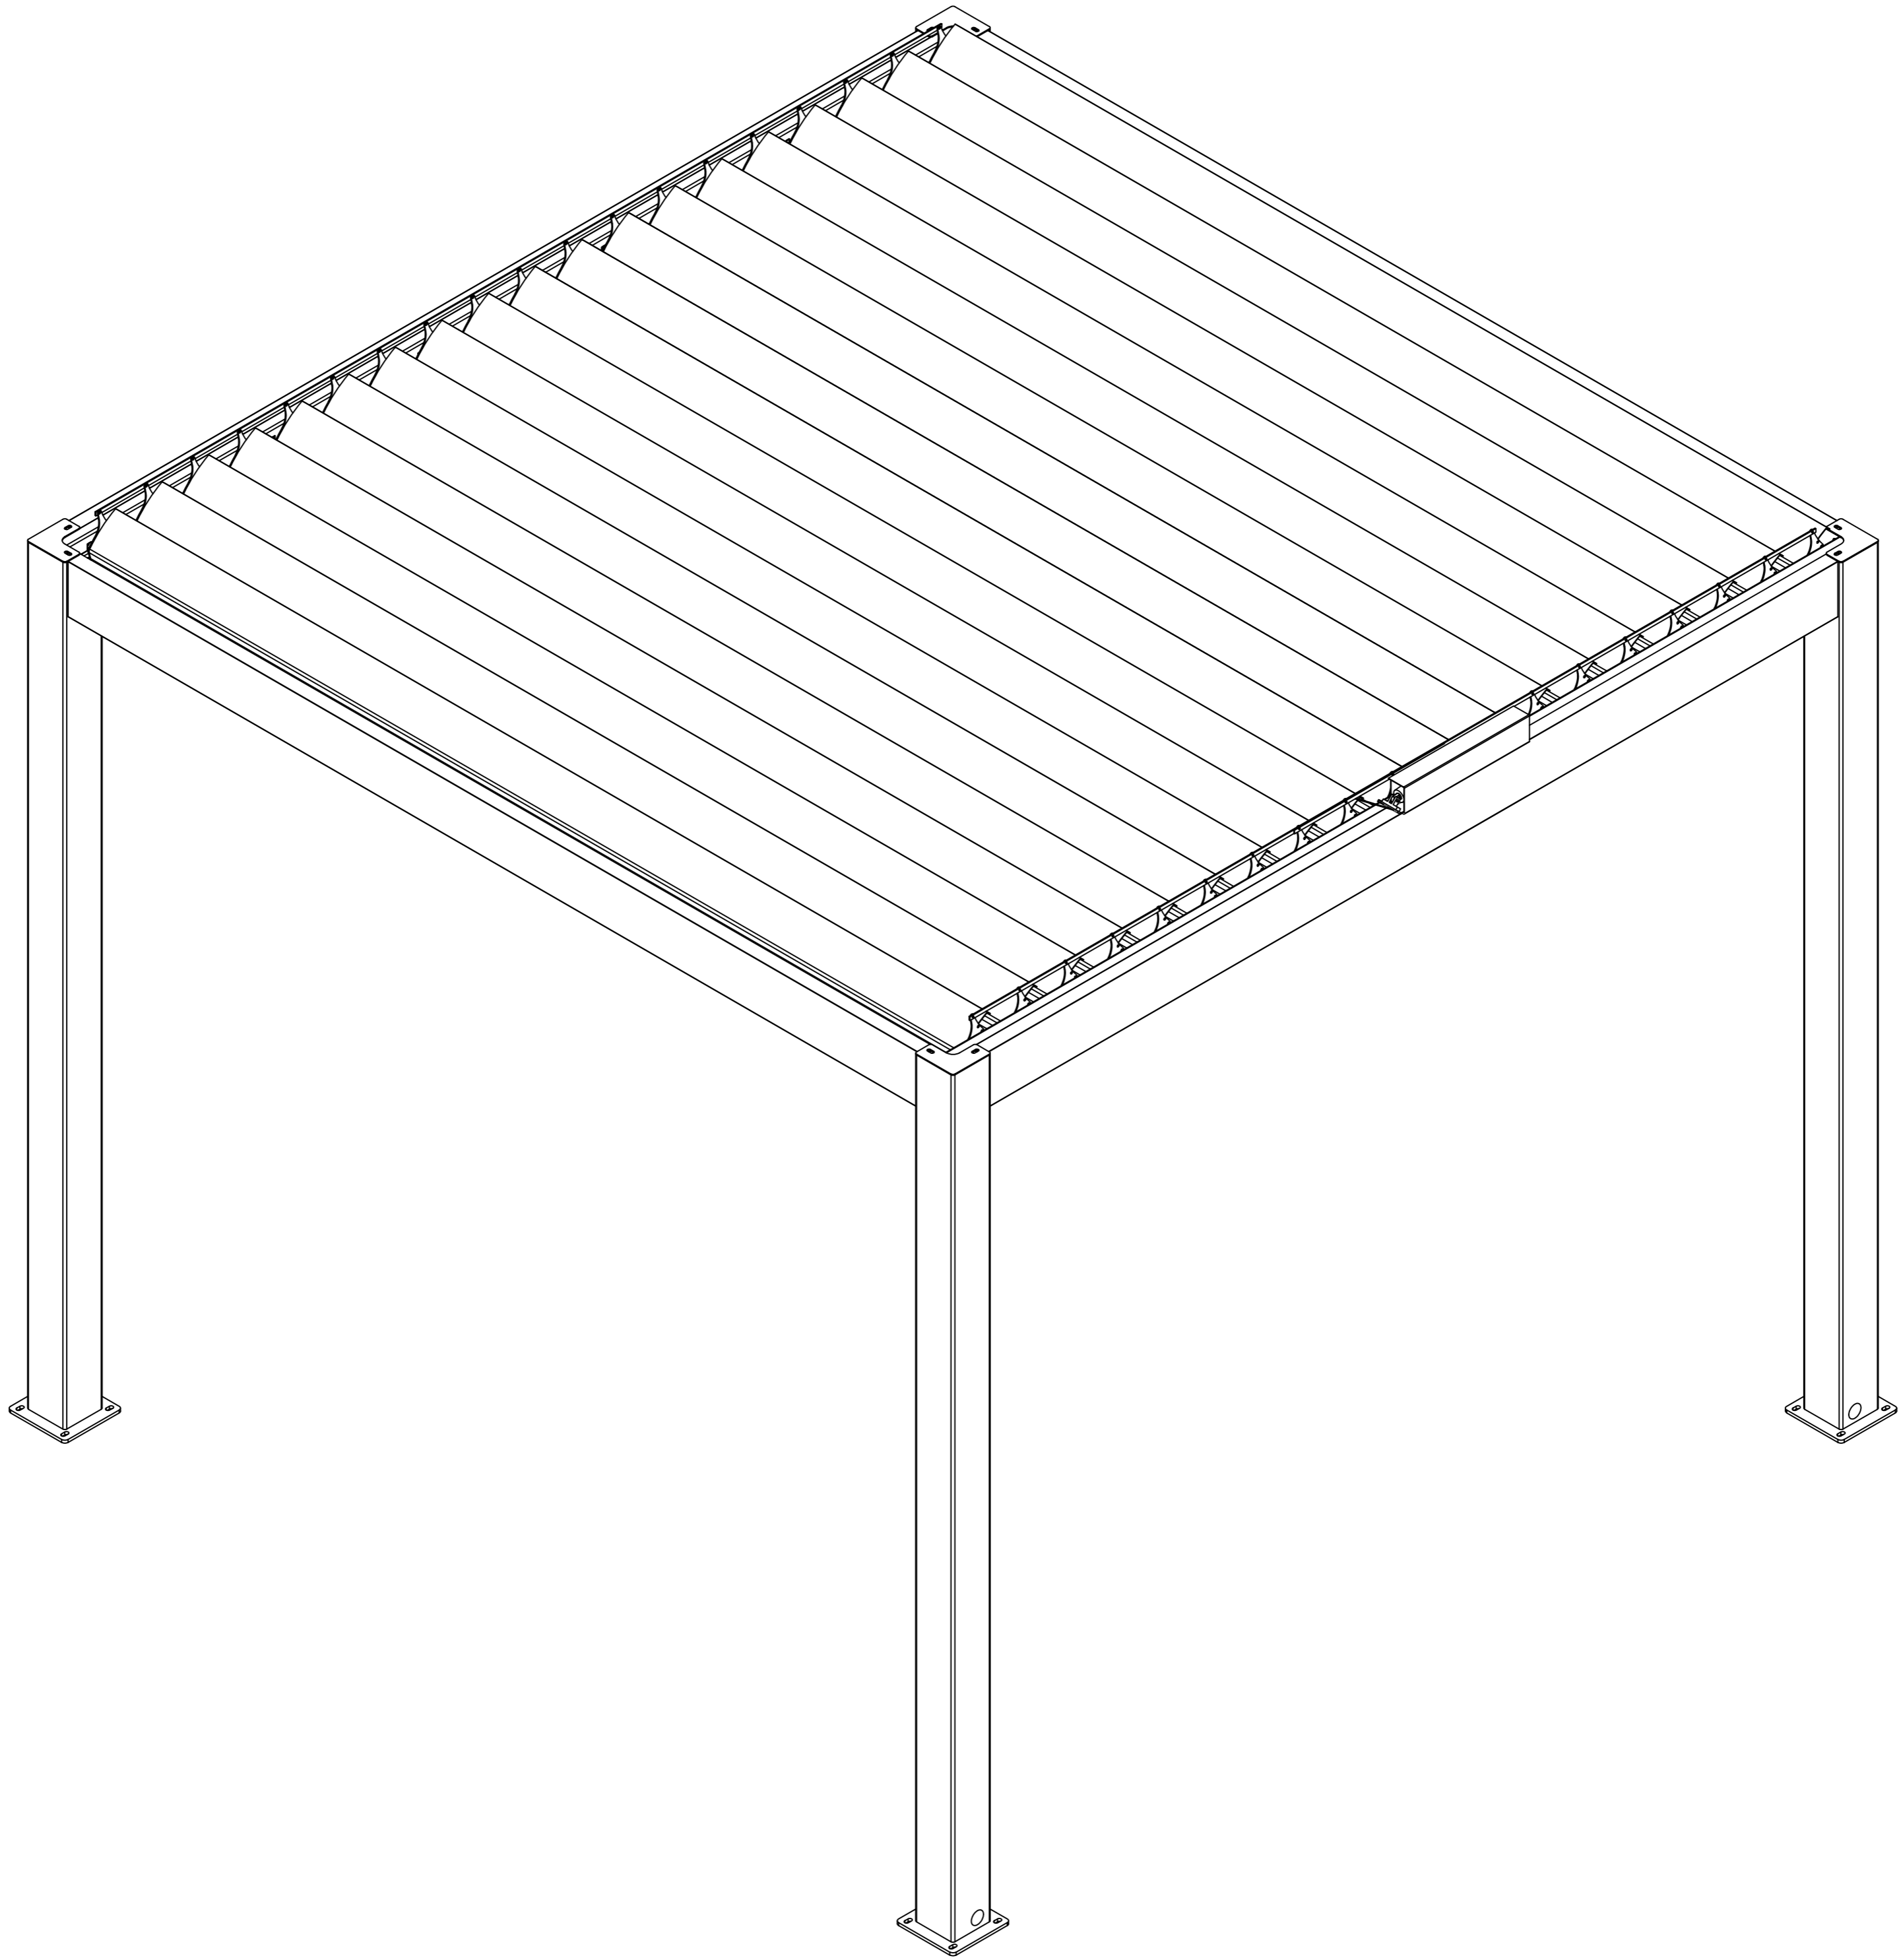













3x3m

	Item	Qty	Item	Qty	Item	Qty
Carton 1/3	3B-01/ 01B	4	3B-11	4	3B-12	4
	3B-13	4	3B-14	1	3B-18	1
	3B-19	8	3B-20	34	3B-20B	4
	3B-21	16	3B-22	24	3B-23	10
	3B-24	1	3B-30	1	3B-31	1
	3B-48	15	3B-48B	4	3B-49	15
	3B-49B	4	3B-51	152	3B-57	4
	3B-58	1	3B-59	1	3B-60	1
	3B-46a	1	3B-46b	3		
Carton 2/3	3B-02	1	3B-03	1	3B-04	2
	3B-06	1	3B-08A/ B	2	3B-09	2
Carton 3/3	3B-06	14	3B-07	4		



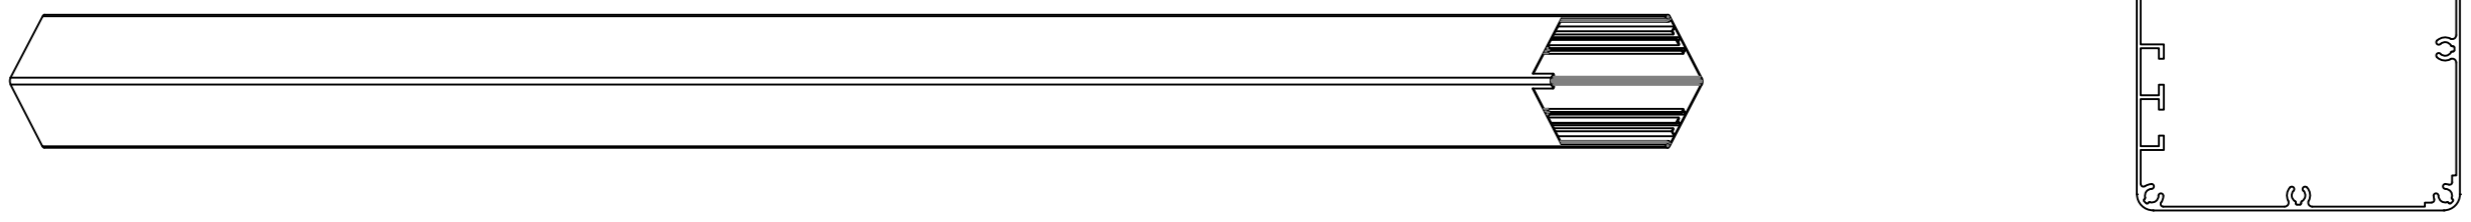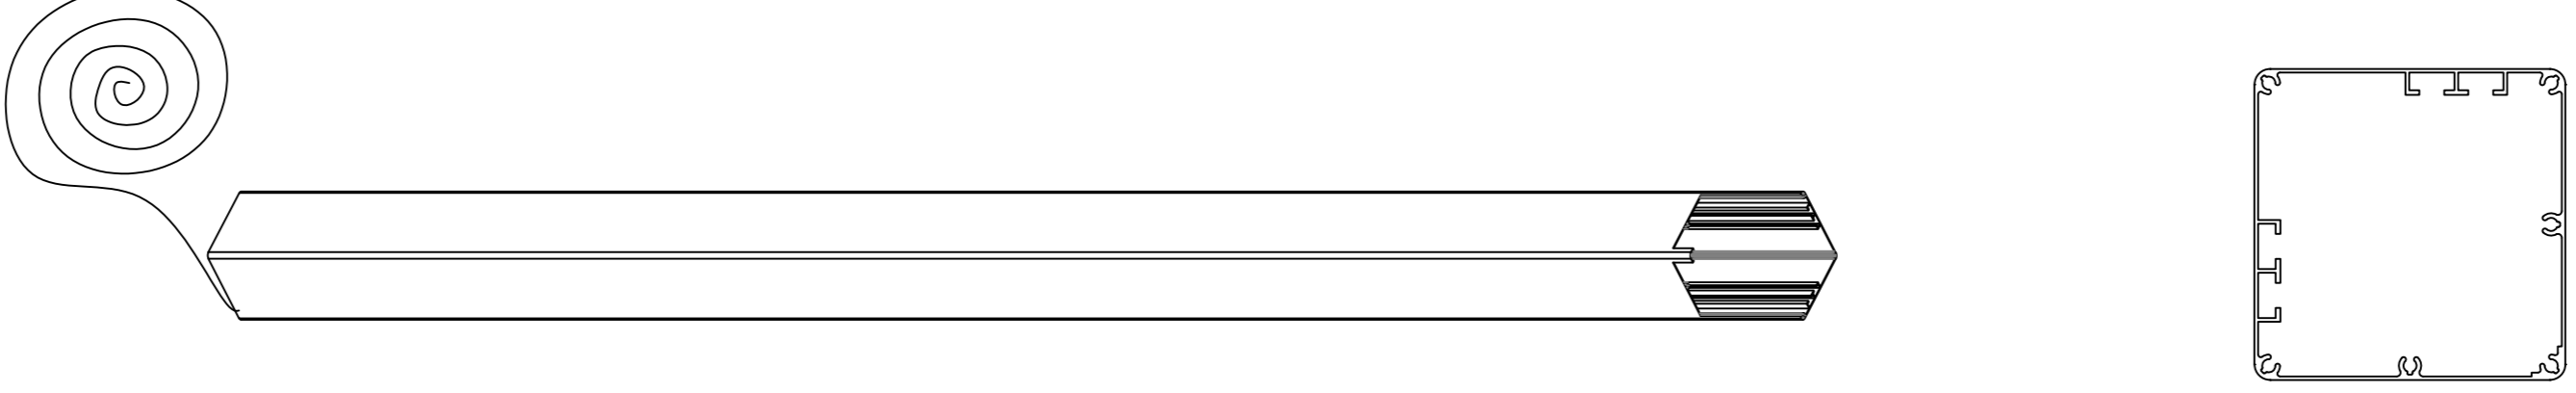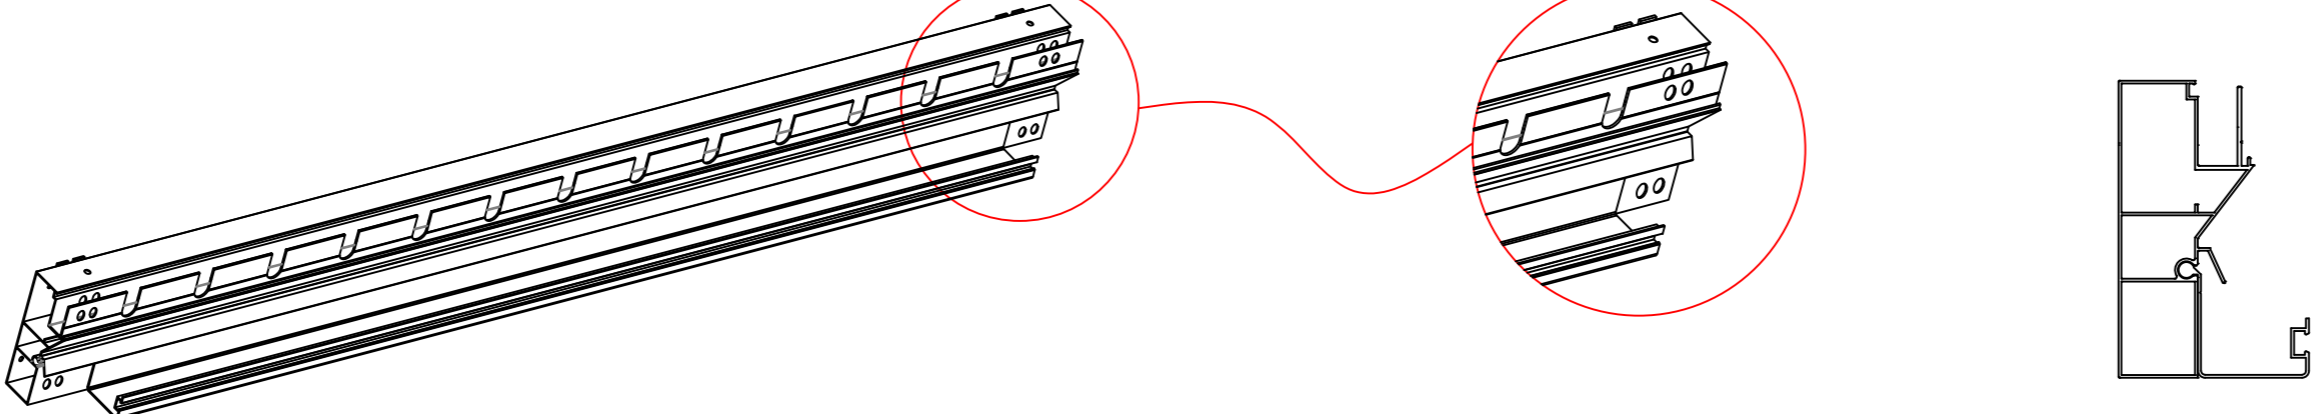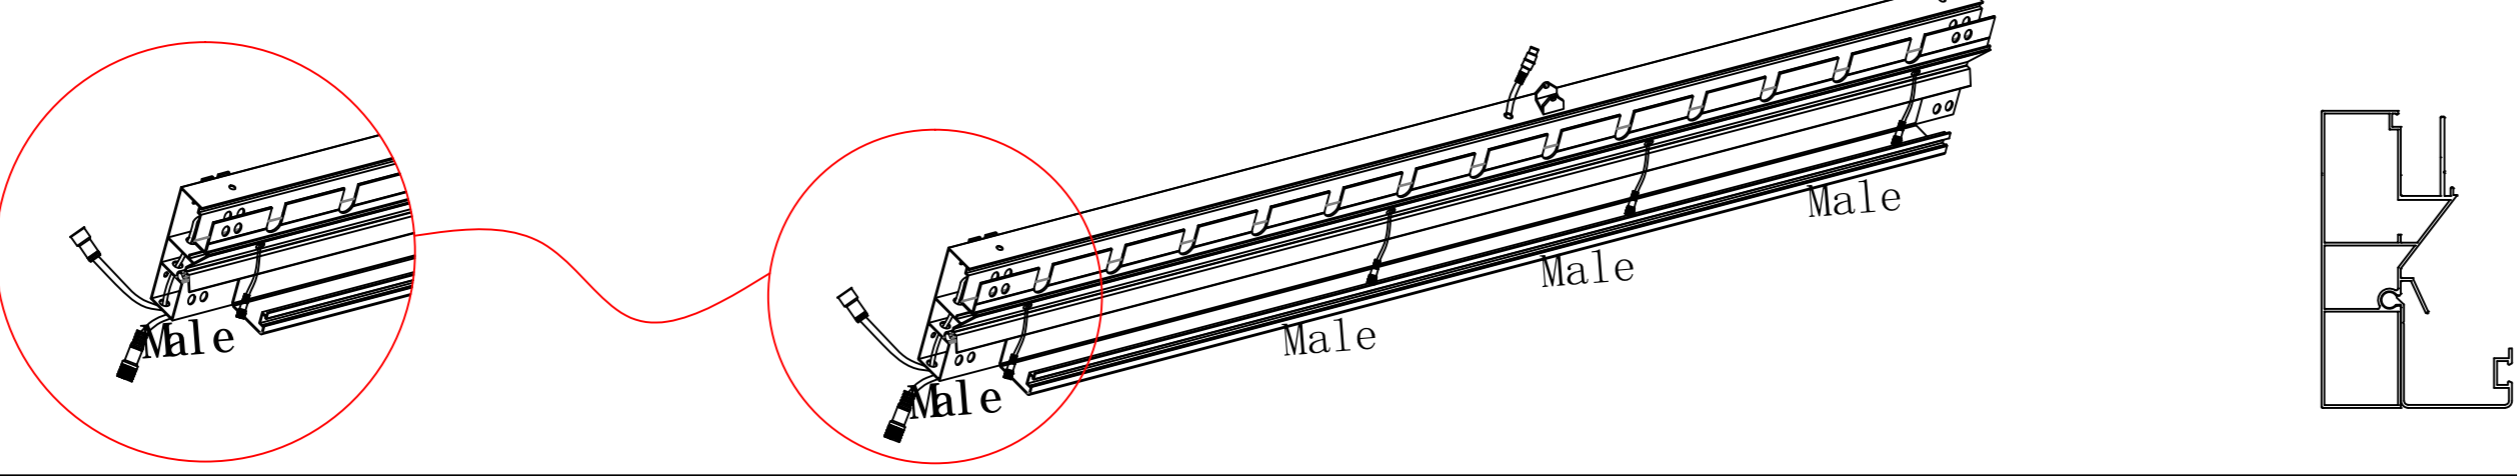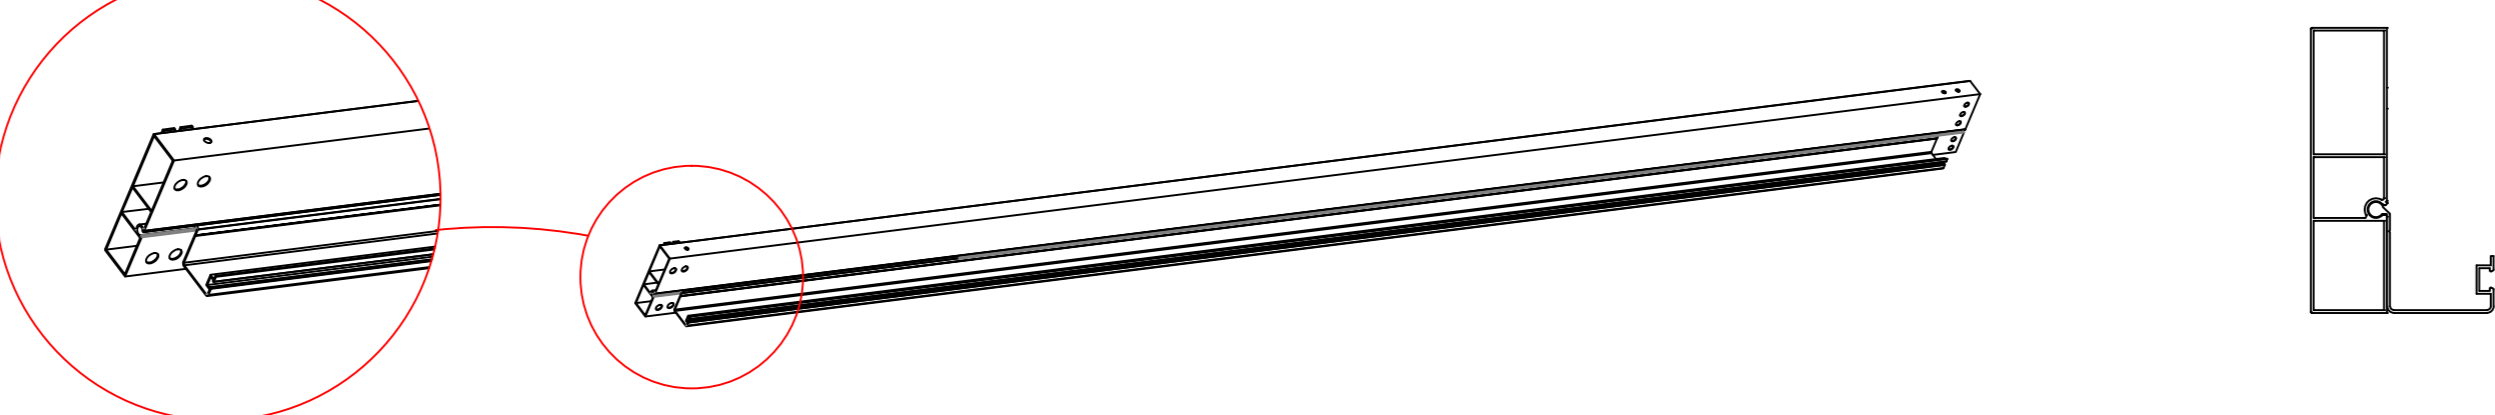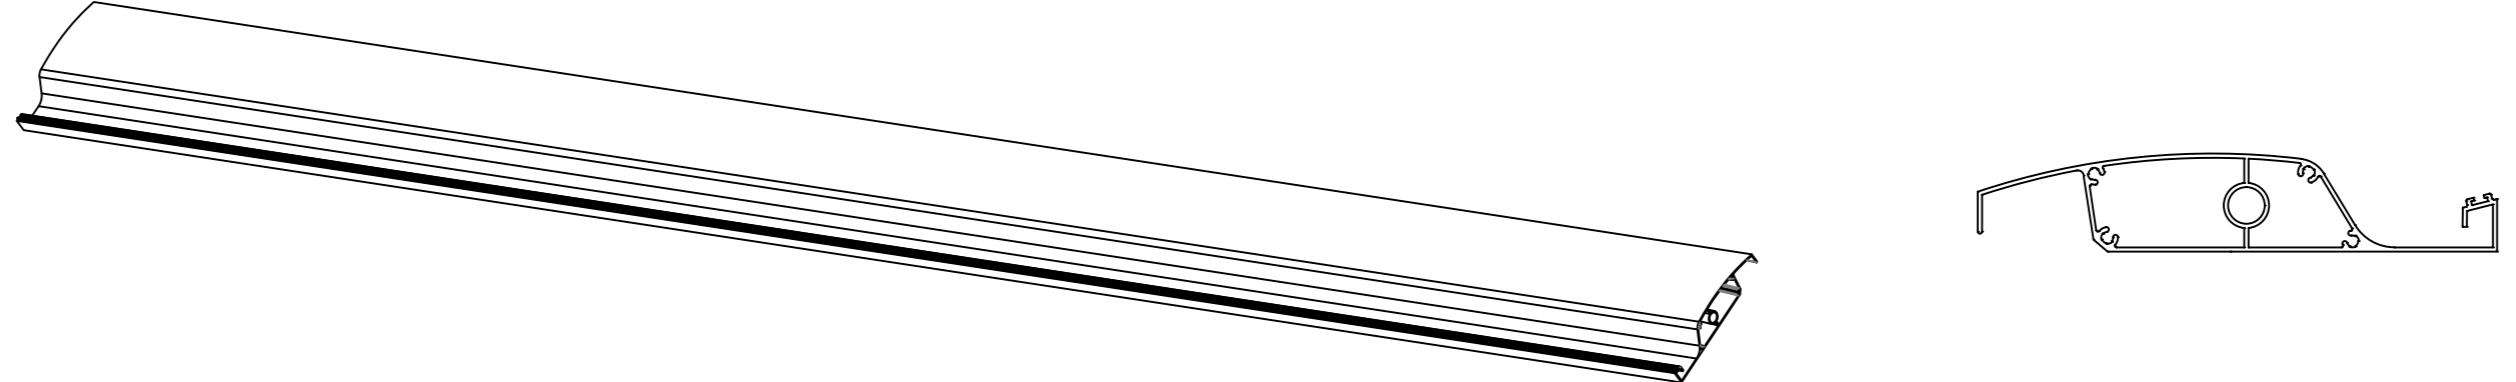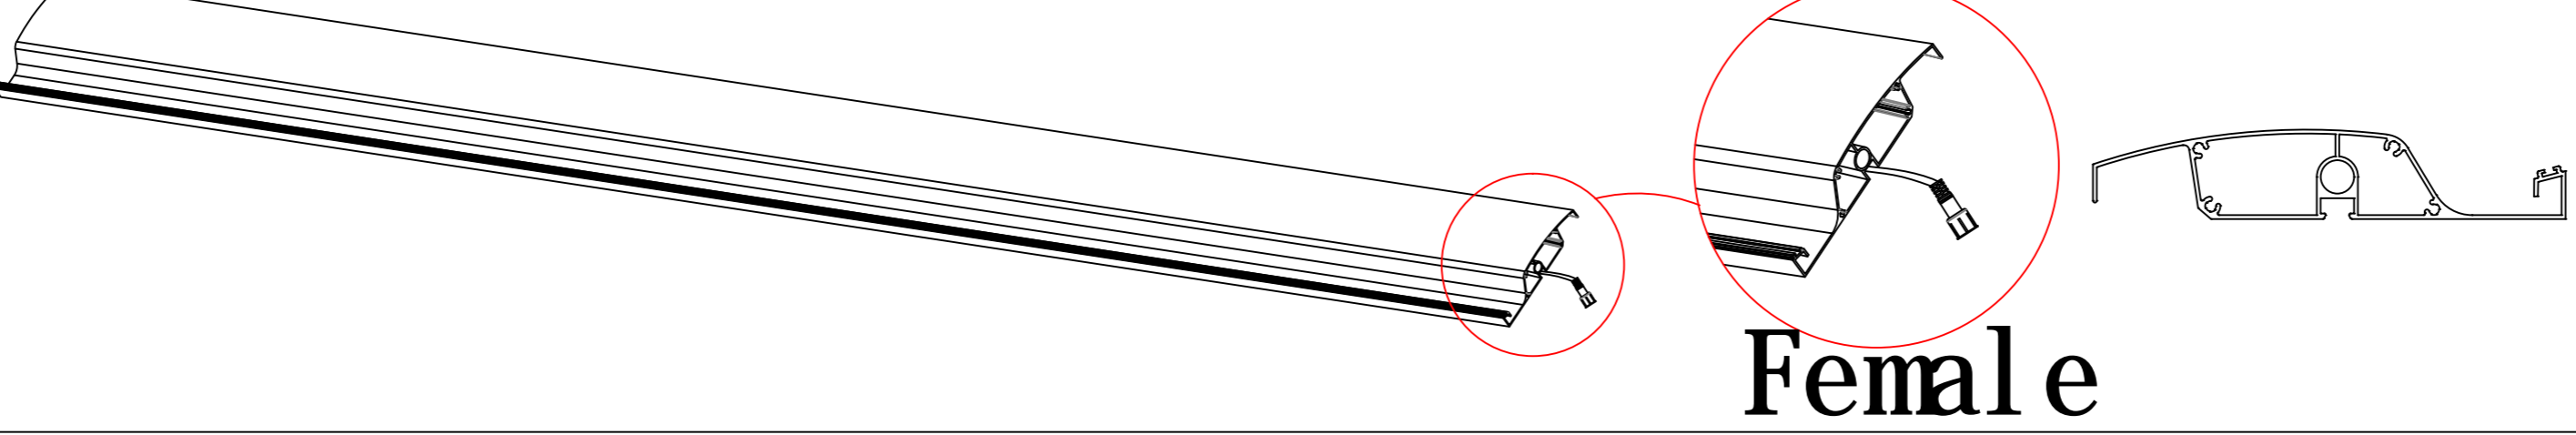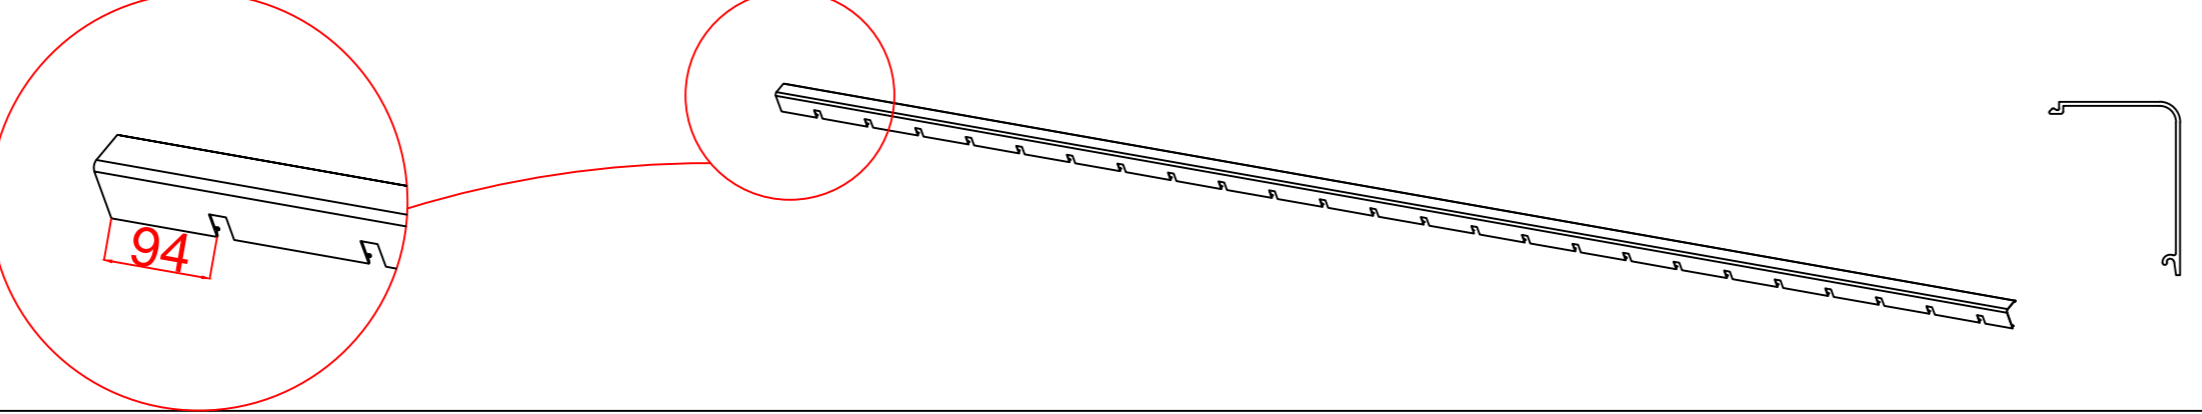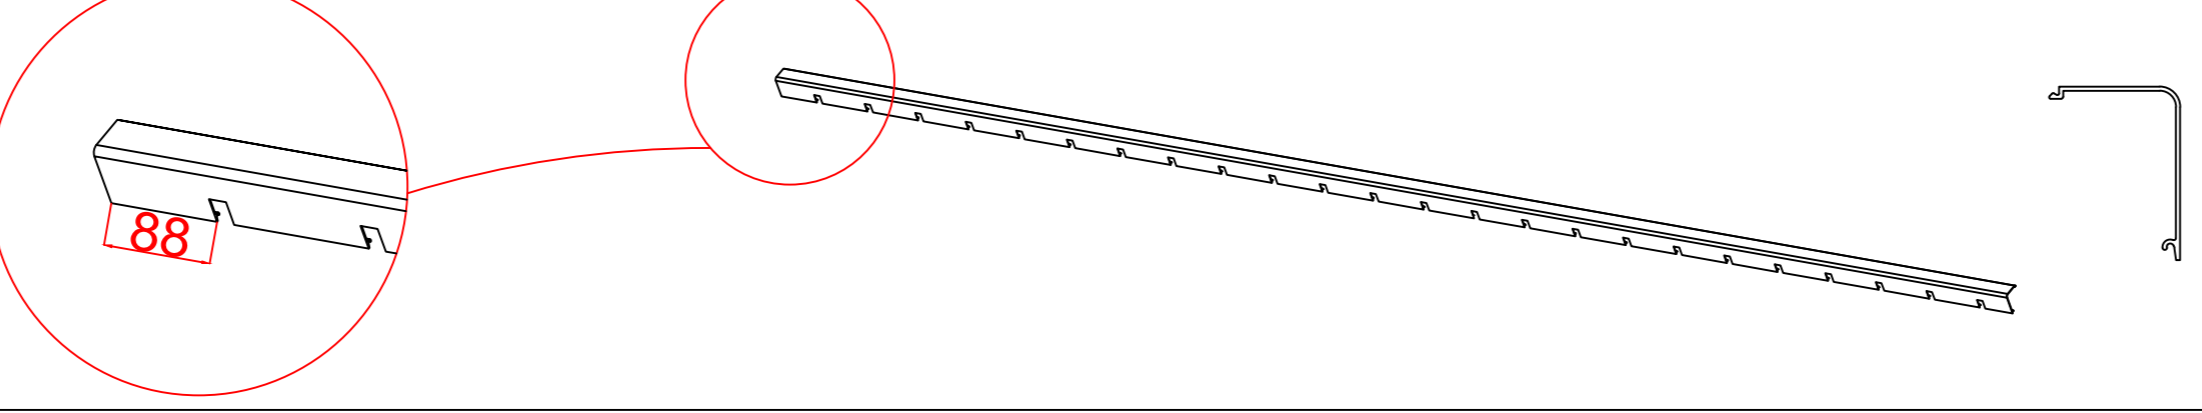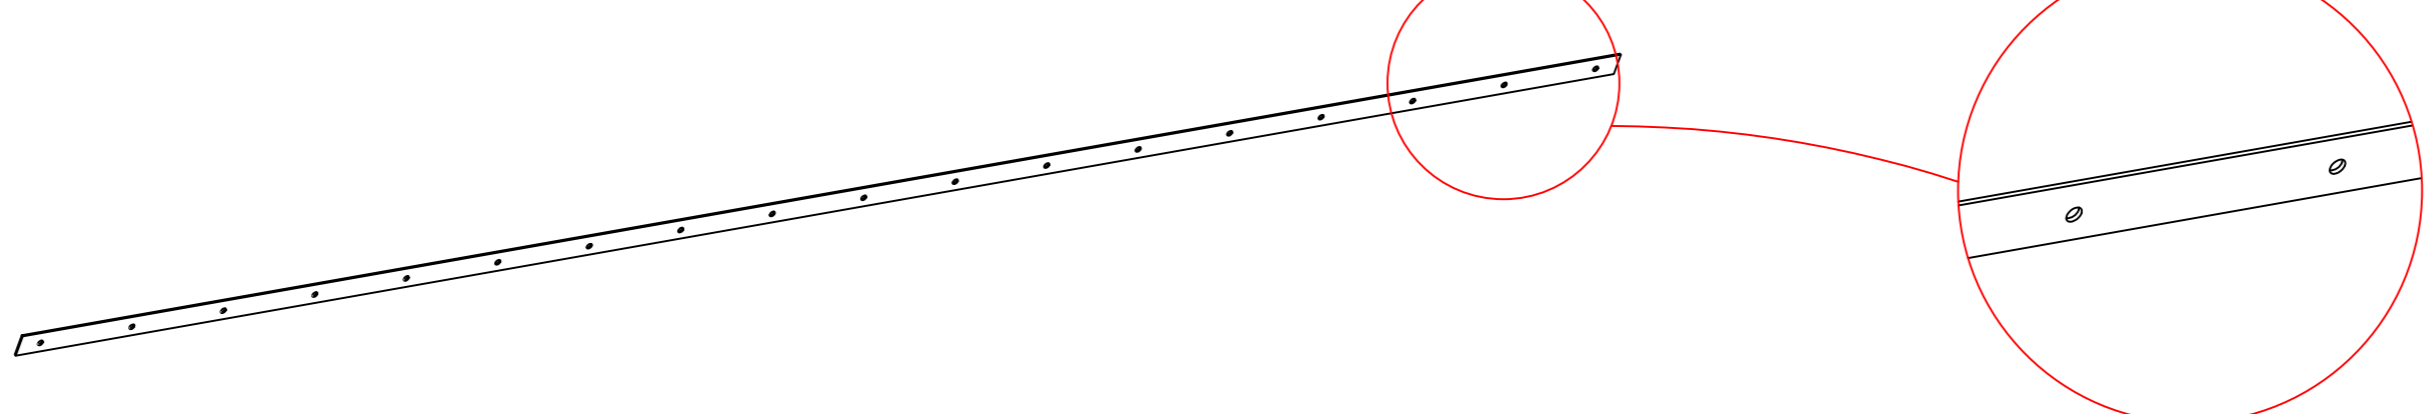

Item	Drawings	Qty
3B-01		3
3B-01B		1
3B-02		1
3B-03		1
3B-04		2
3B-06		15
3B-07		4
3B-08A		1
3B-08B		1
3B-09		2






Item	Drawings	Qty
3B-11		4
3B-12		4
3B-13		4
3B-14		1
3B-18		1
3B-19	 M8*20	8
3B-20	 5-12-M4	34+2
3B-20B	 5-16-M4	4+2
3B-21	 M10*80	16
3B-22	 M5.5*60	24+2
3B-23	 M4.2*19	10+2
3B-24		1
3B-30		1


Item	Drawings	Qty
3B-31		1
3B-46a		1
3B-46b		3
3B-48		15
3B-48B		4
3B-49		15
3B-49B		4
3B-51	 M4.2*25	152+4
3B-57		4
3B-58		1
3B-59	 M5*20	1
3B-60	 M4.2*19/8pcs	1



3x3m










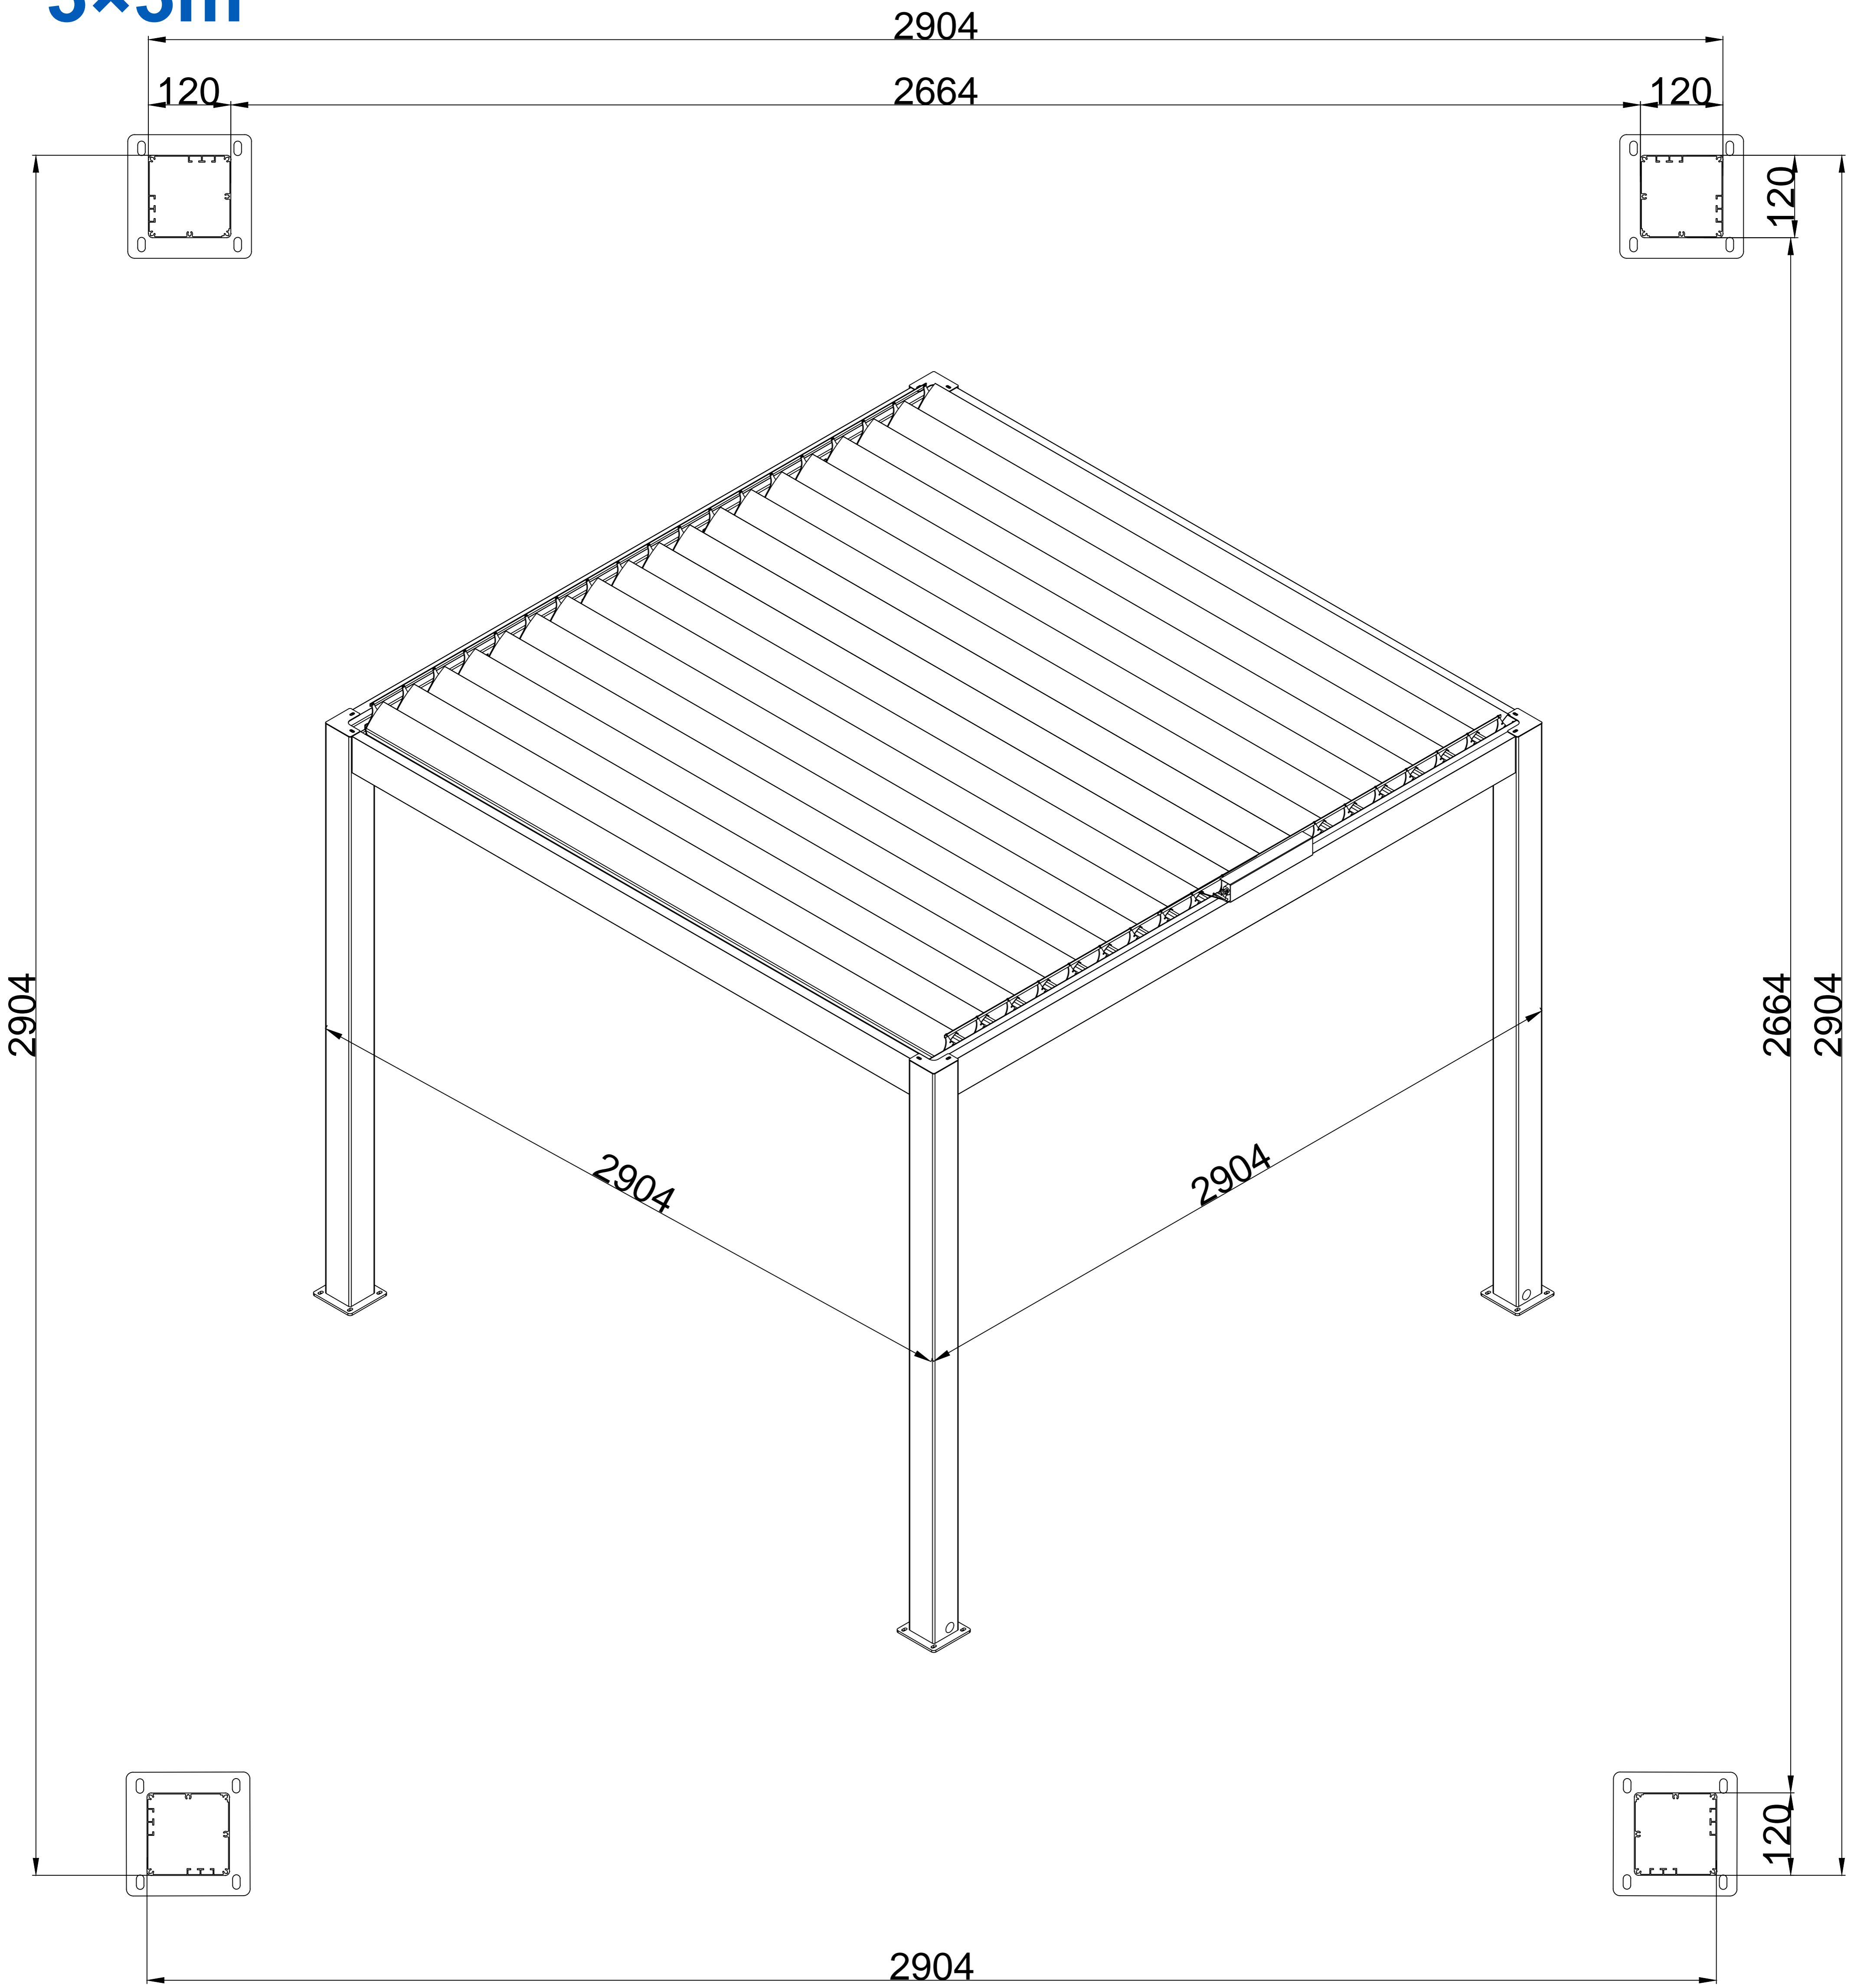


3*3-4

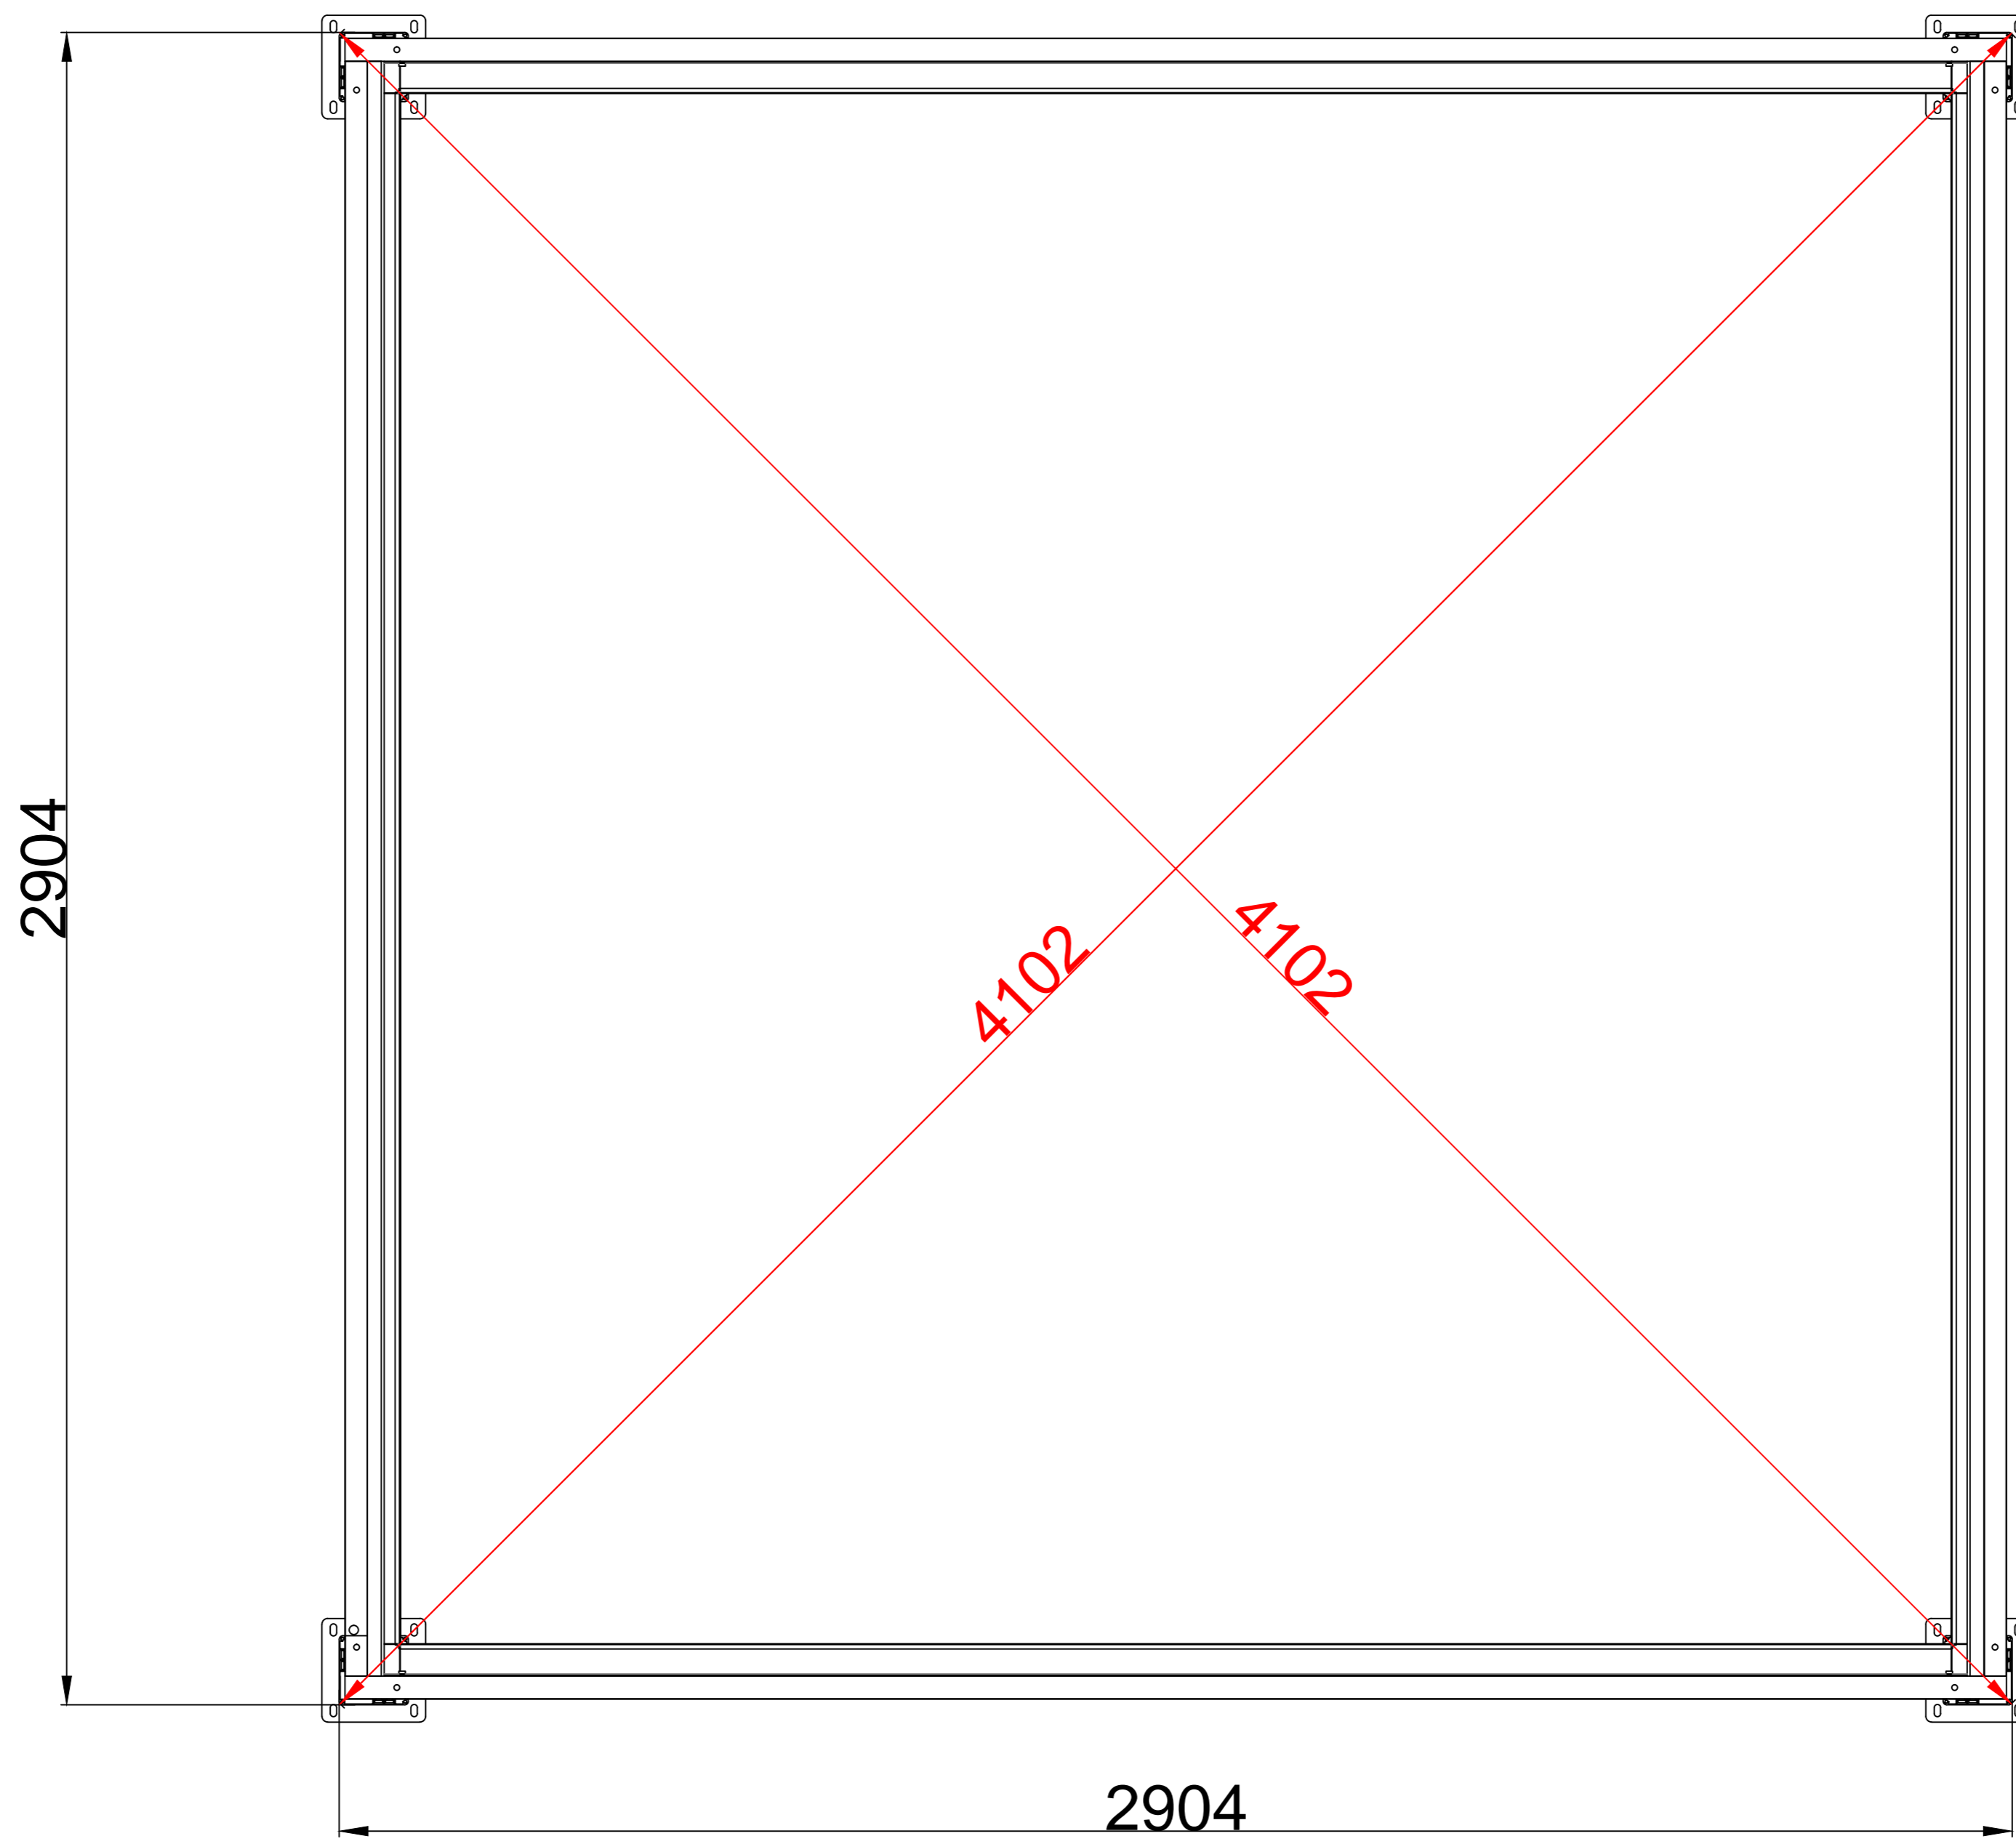

Before installing the bottom expansion screws, please be sure to correct the frame size



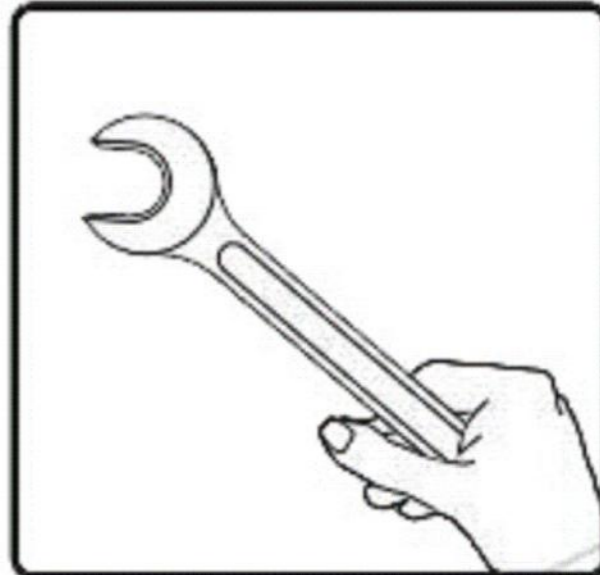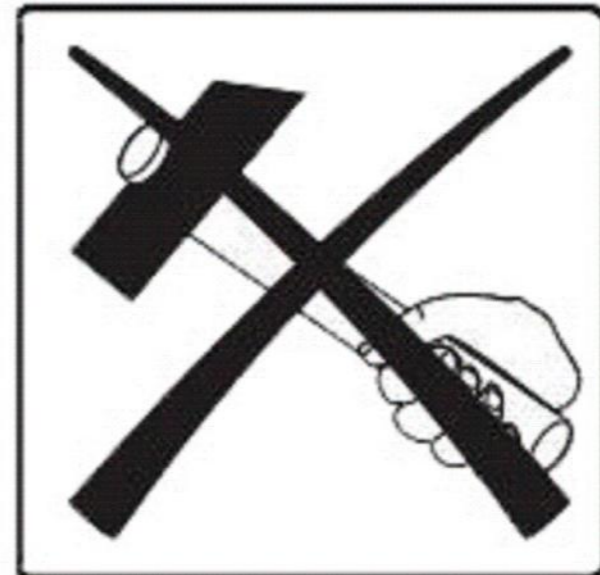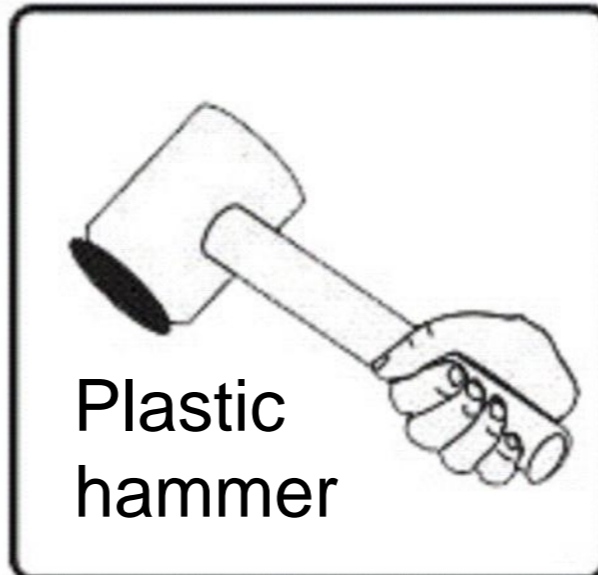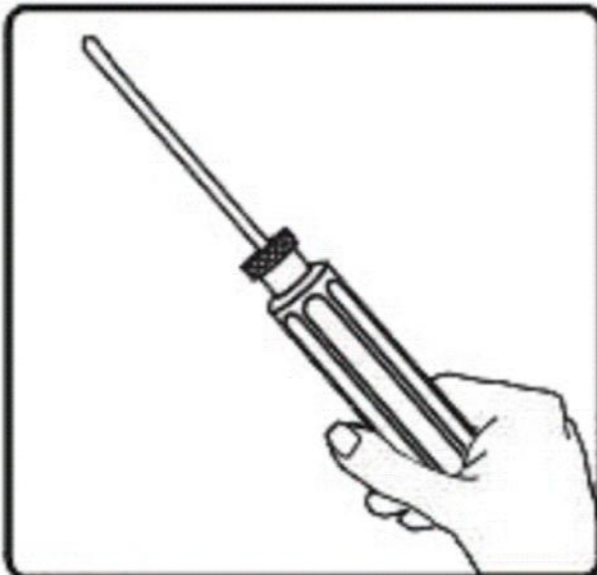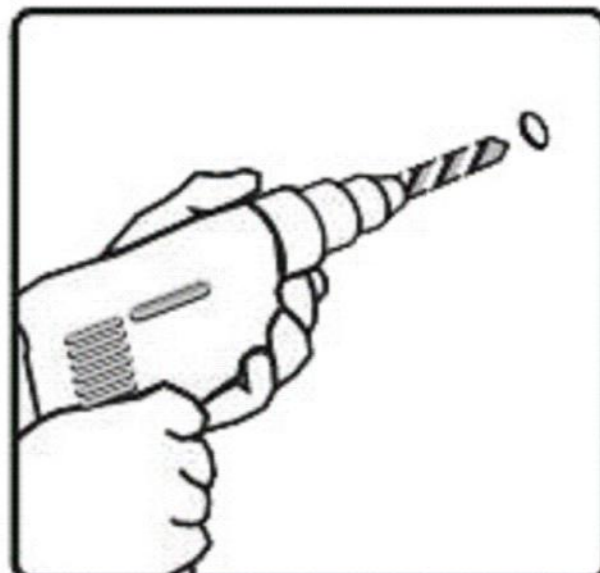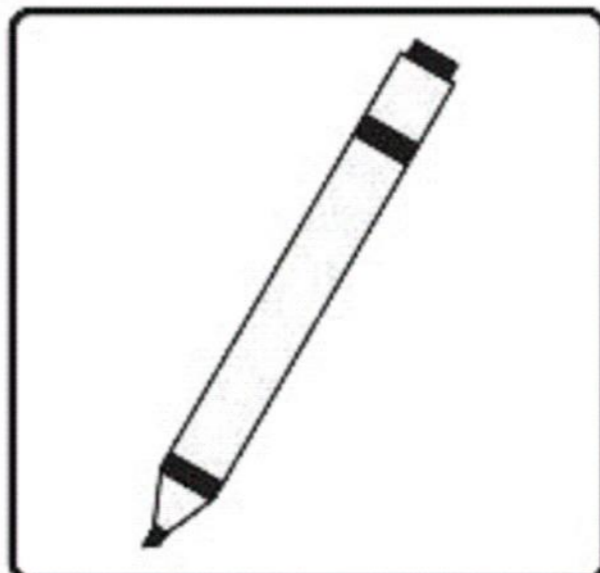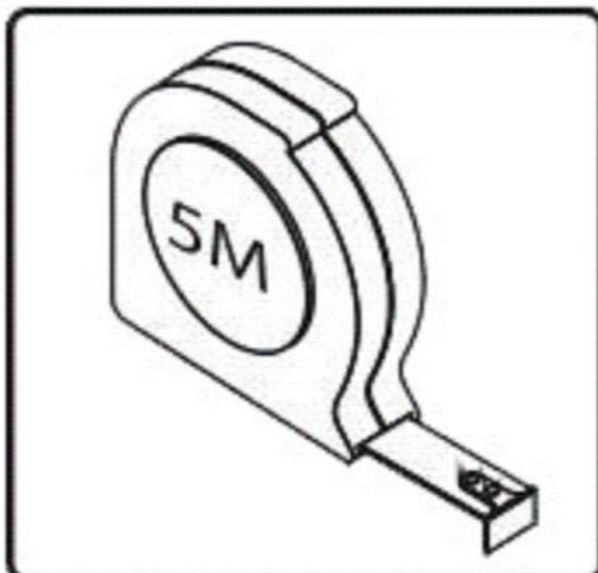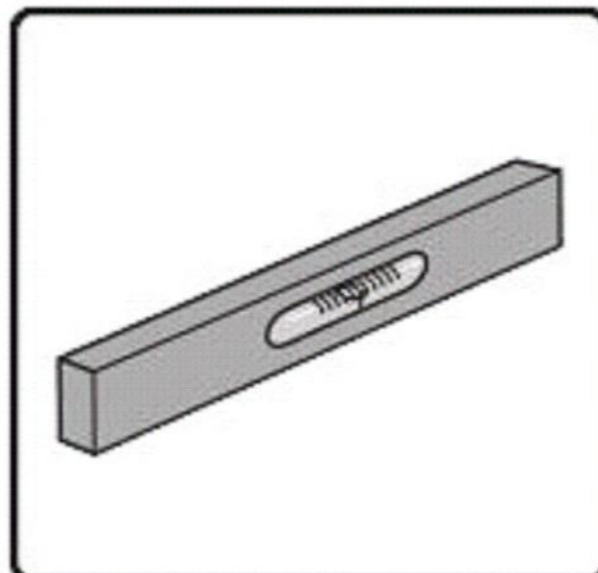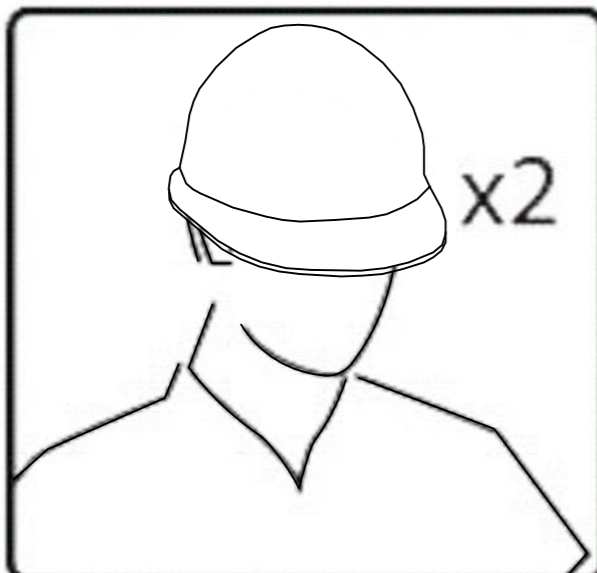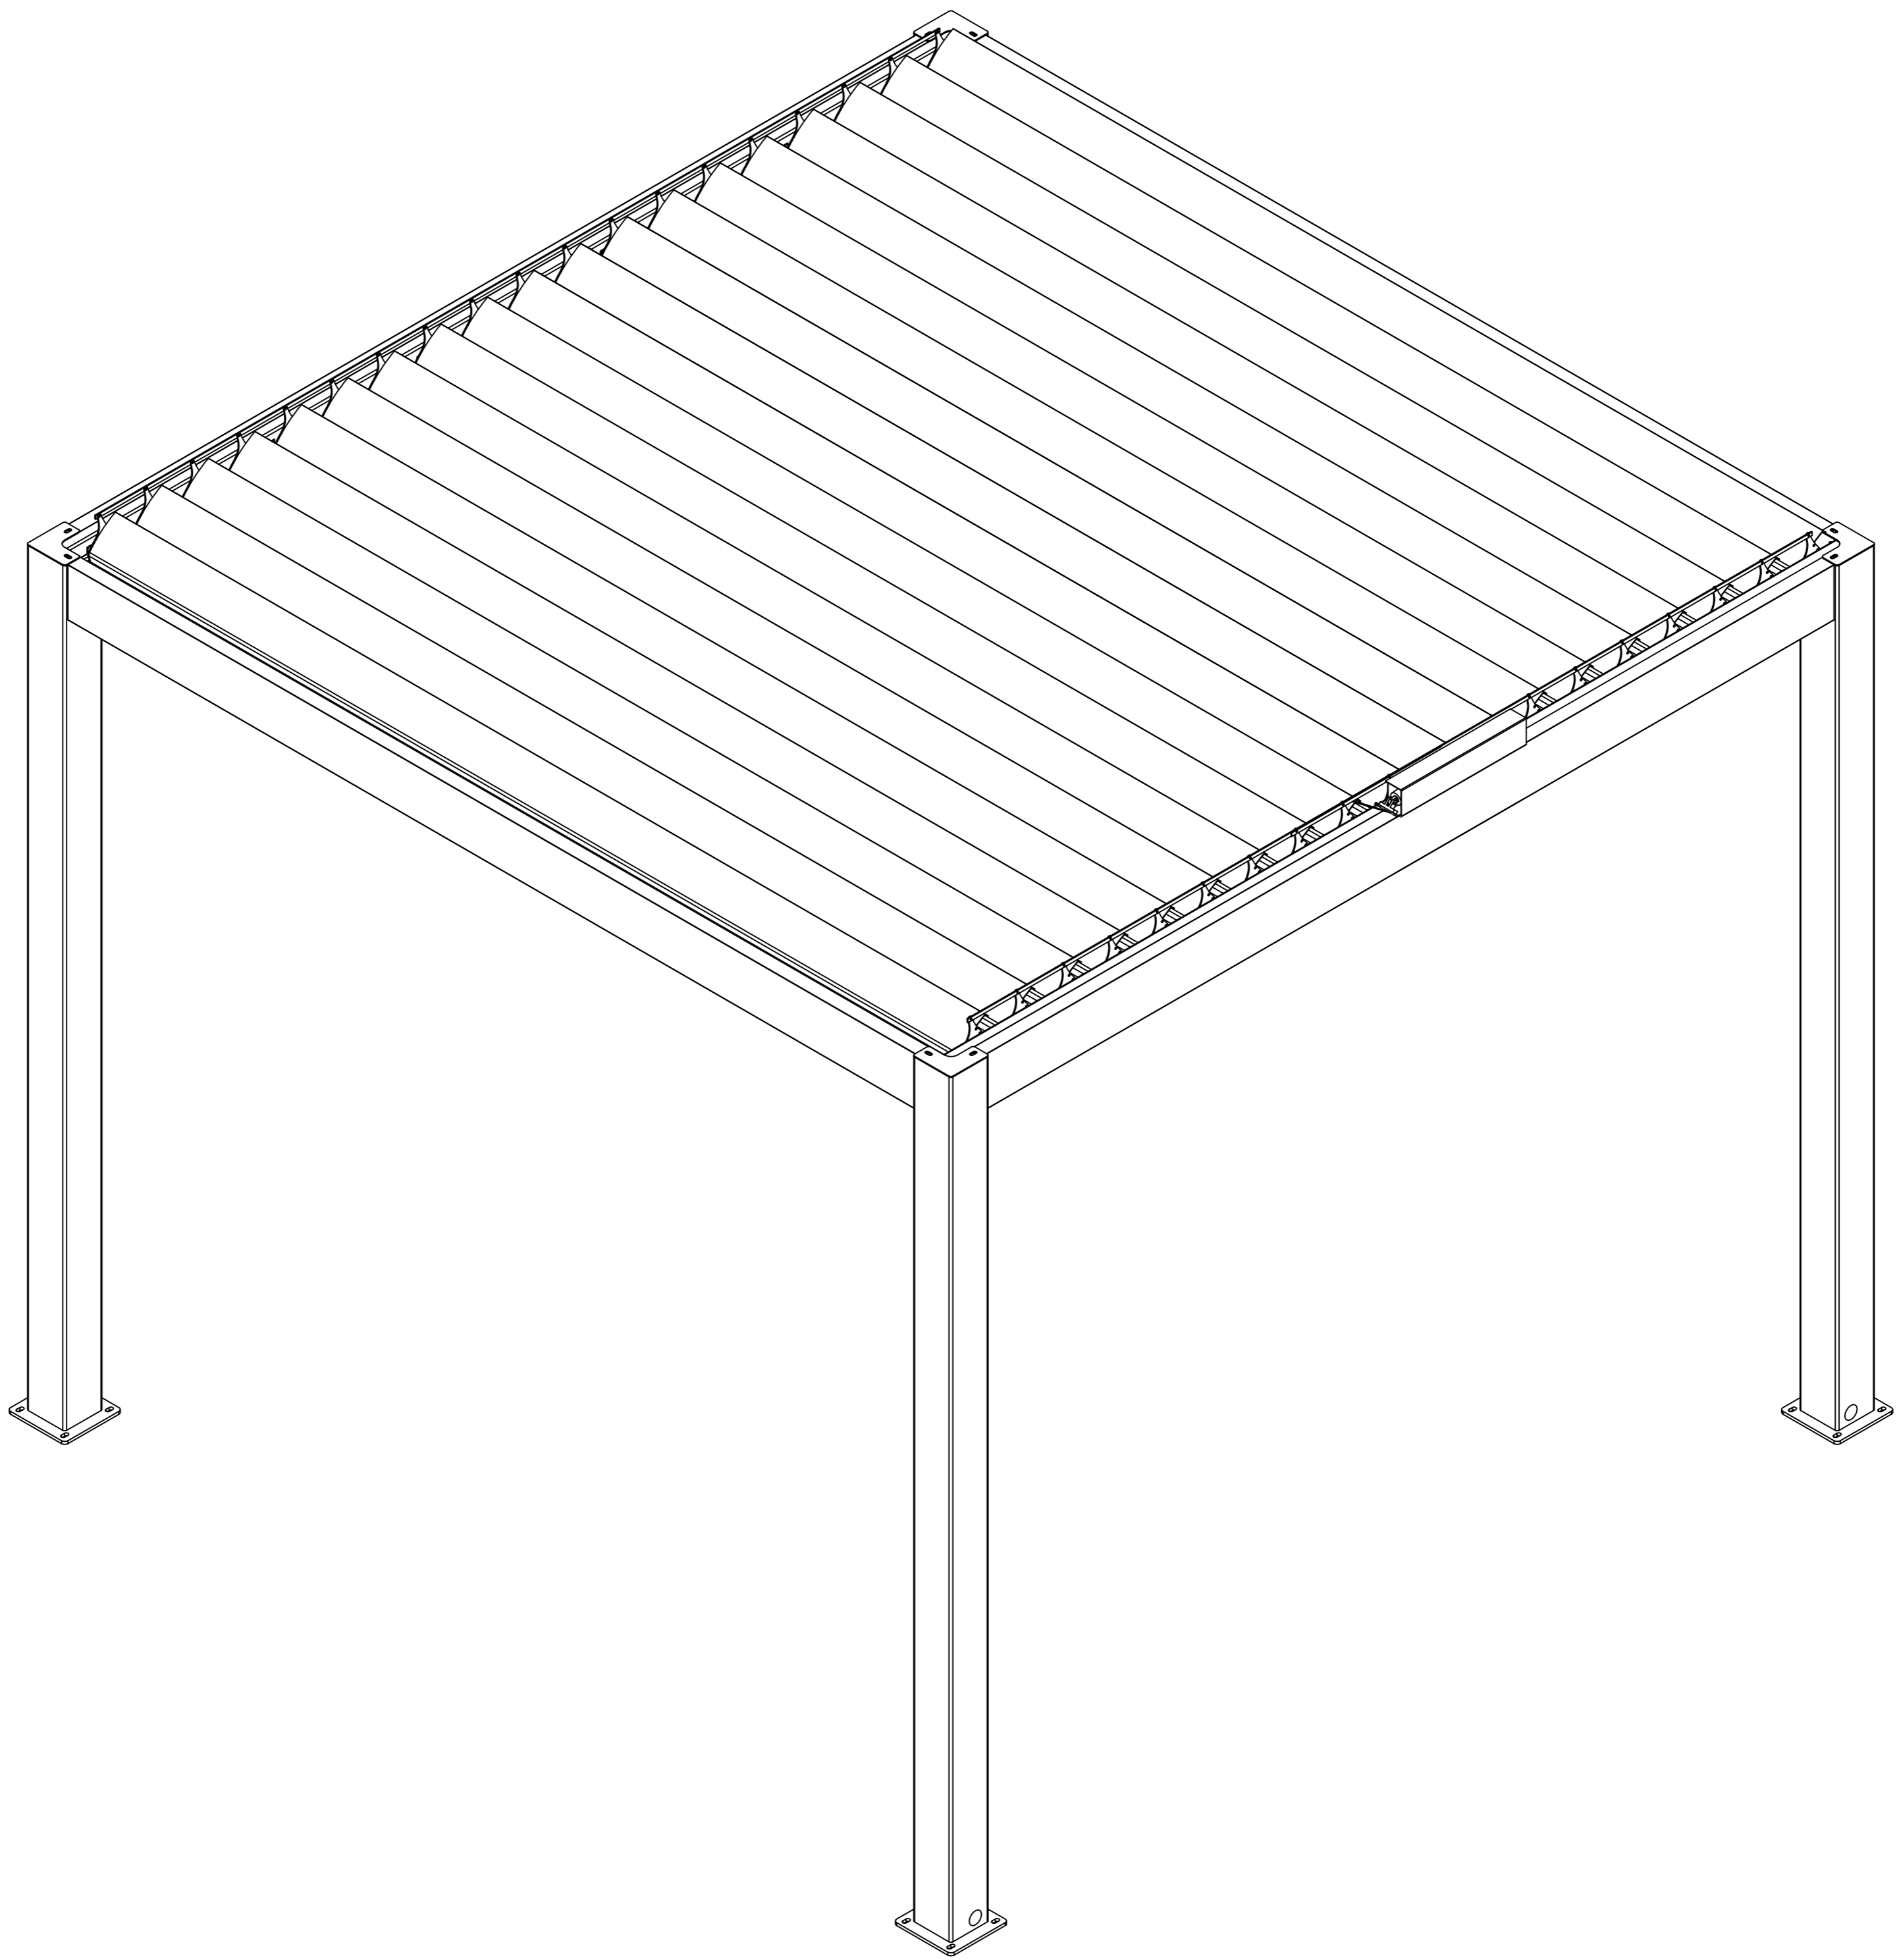













3x4m

	Item	Qty	Item	Qty	Item	Qty
Carton 1/4	3B-01/ 01B	4	3B-11	4	3B-12	4
	3B-13	4	3B-14	1	3B-18	1
	3B-19	8	3B-20	50	3B-20B	4
	3B-21	16	3B-22	24	3B-23	10
	3B-24	1	3B-30	1	3B-31	1
	3B-48	23	3B-48B	4	3B-49	23
	3B-49B	4	3B-51	216	3B-57	4
	3B-58	1	3B-59	1	3B-60	1
	3B-46a	1	3B-46b	3		
Carton 2/4	3B-02	1	3B-03	1	3B-04	2
	3B-08A/ B	2	3B-09	2		
Carton 3/4	3B-06	14	3B-07	4		
Carton 3/4	3B-06	9				



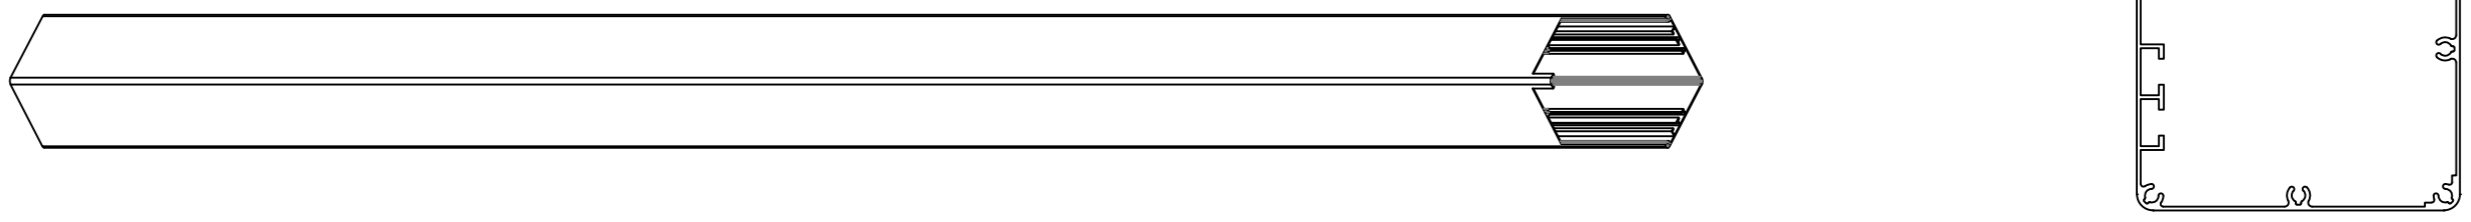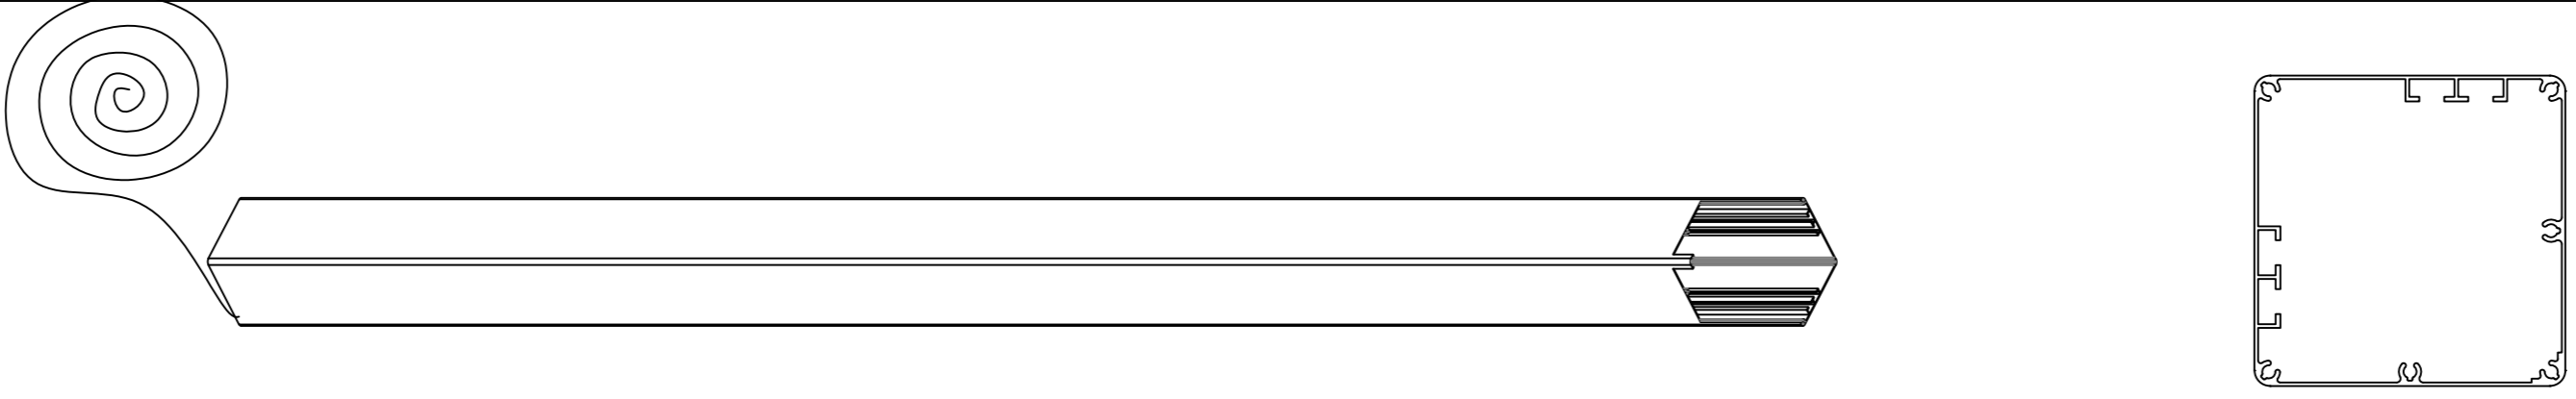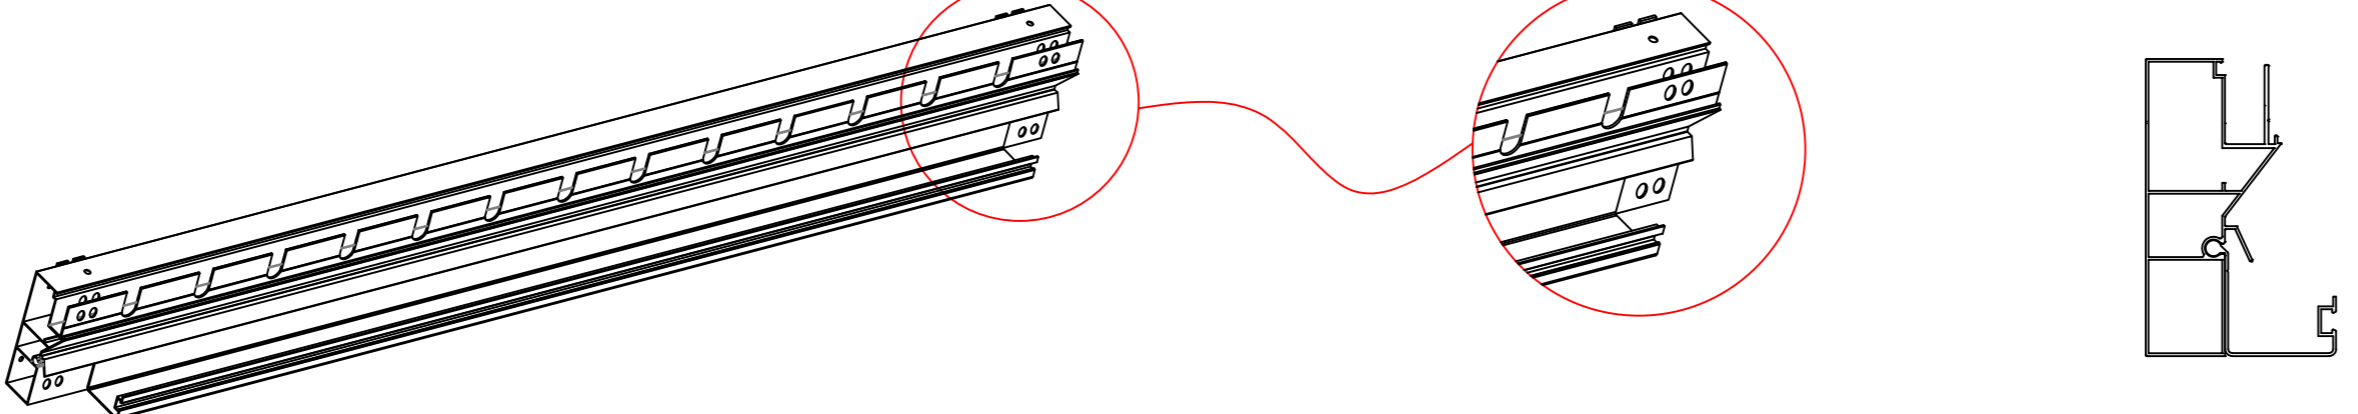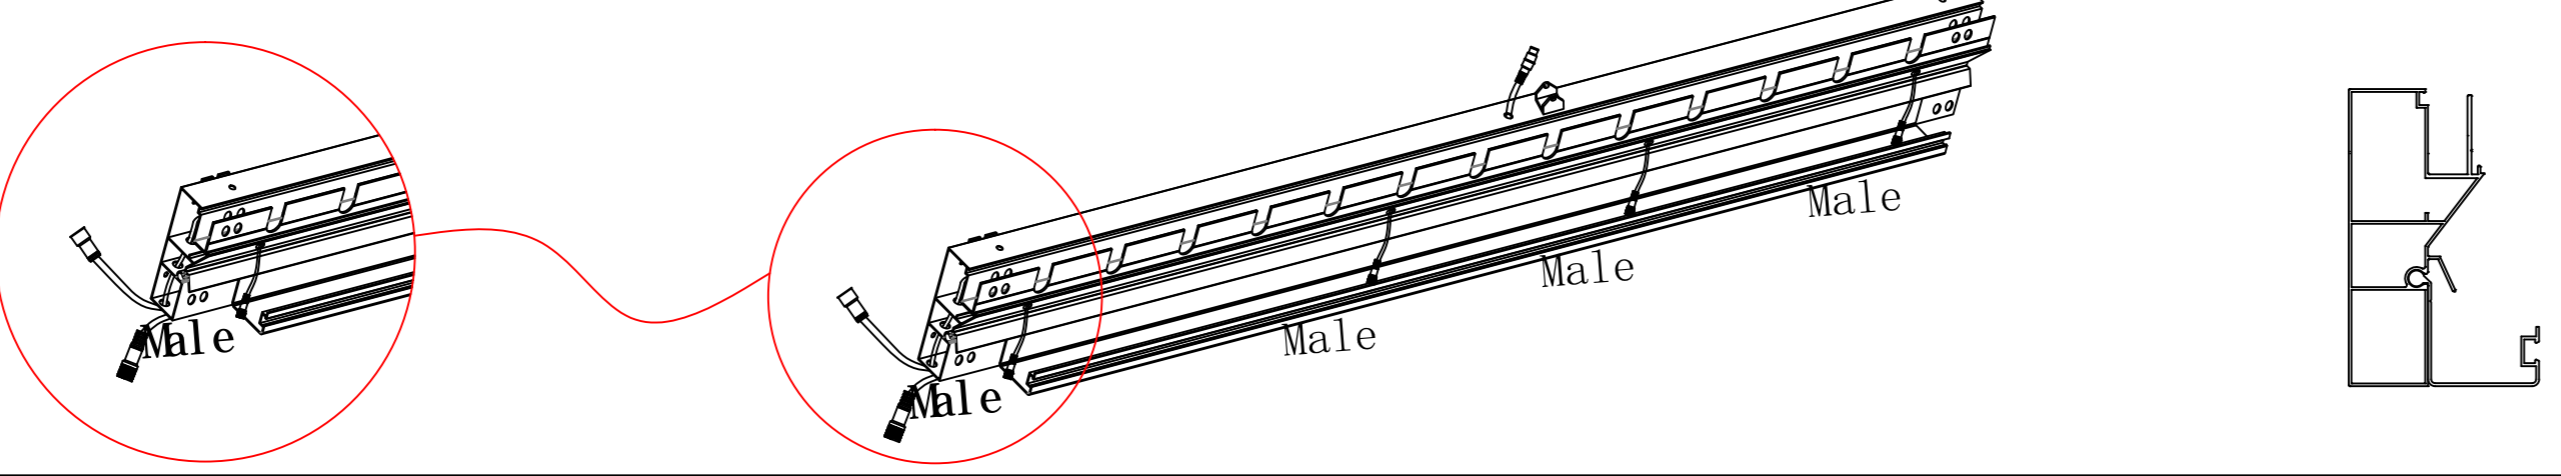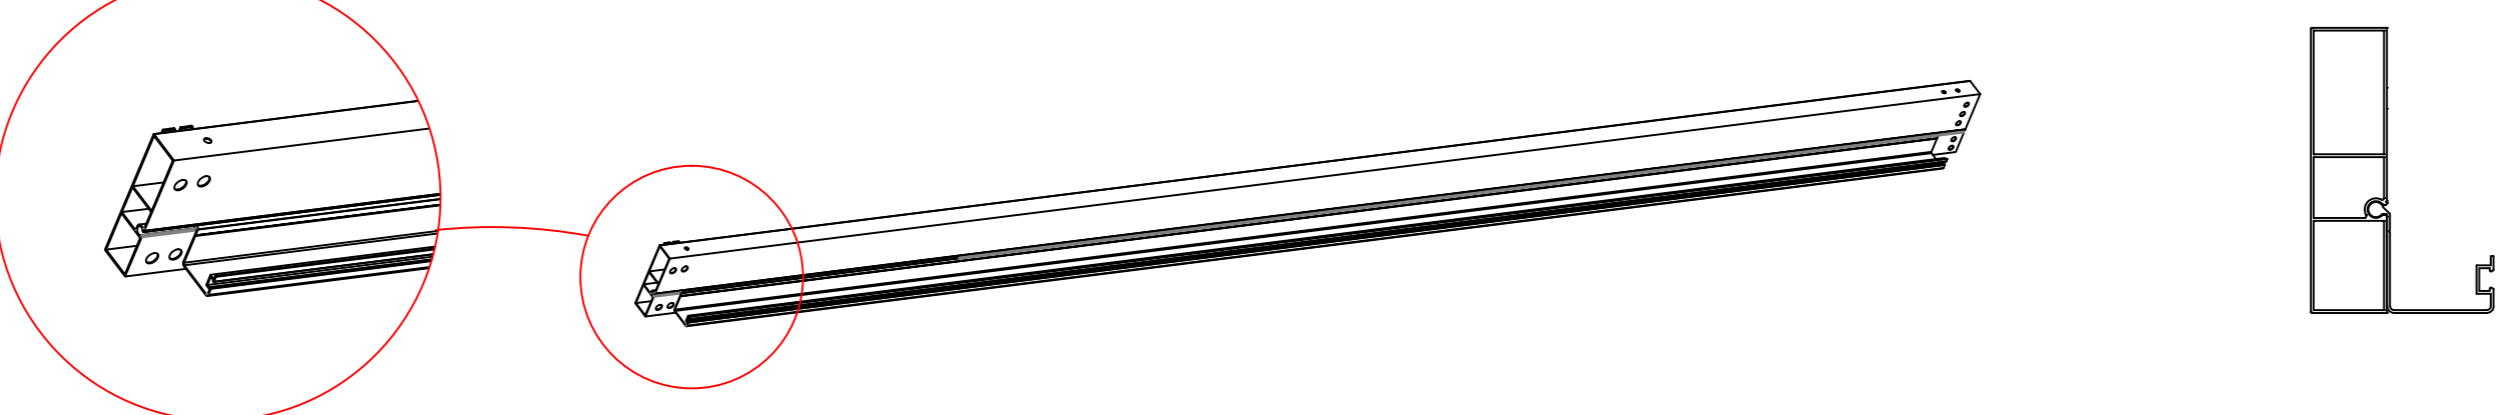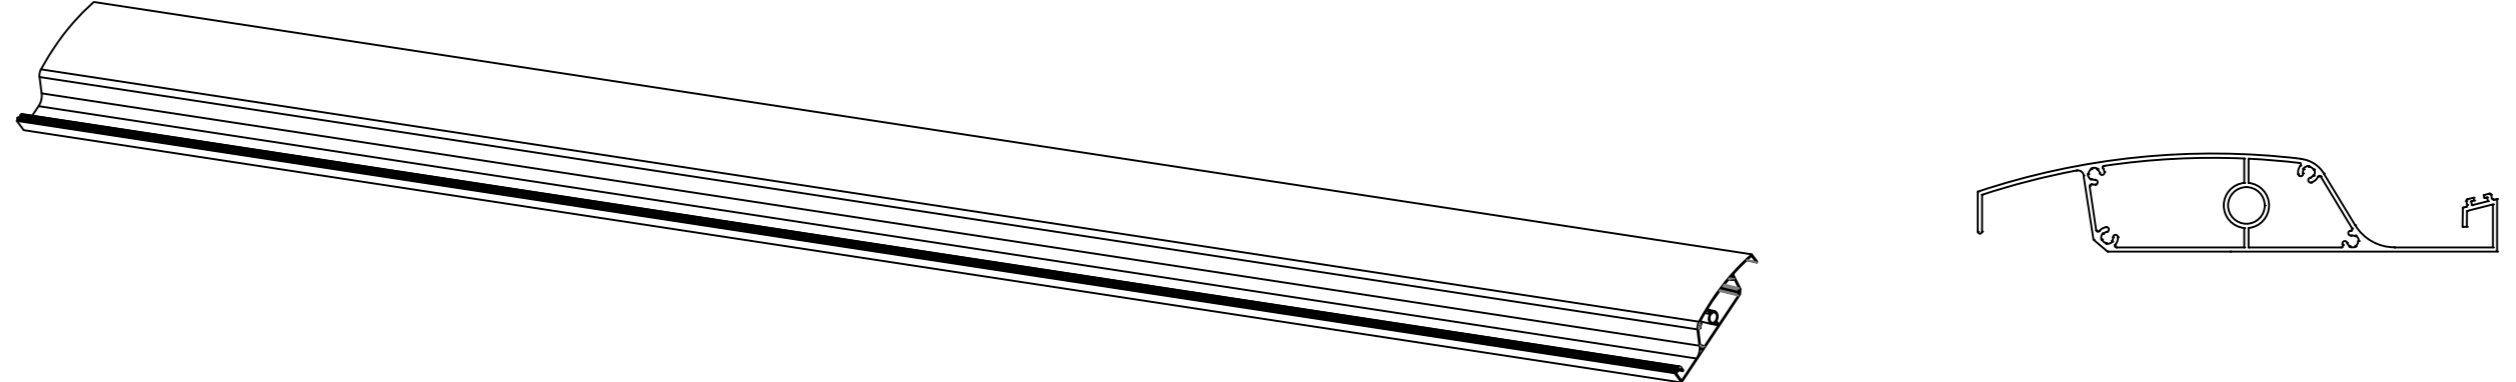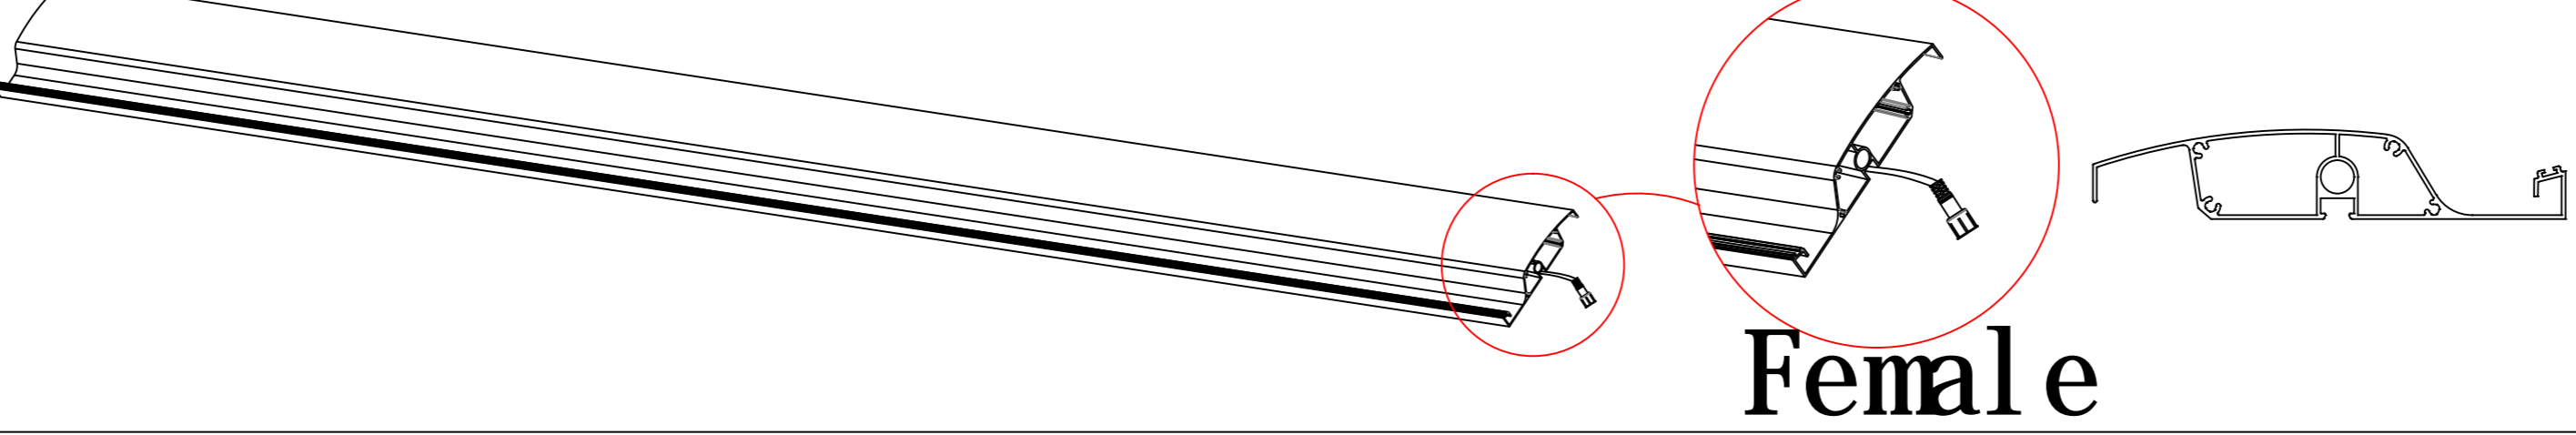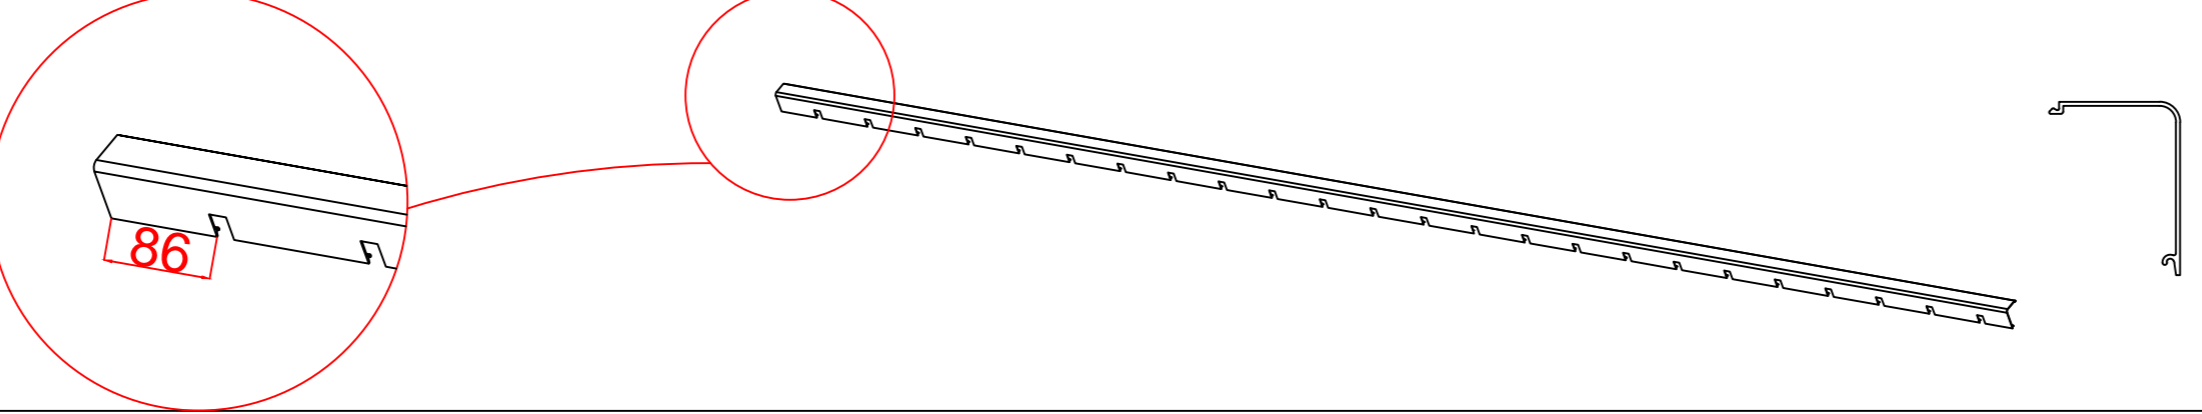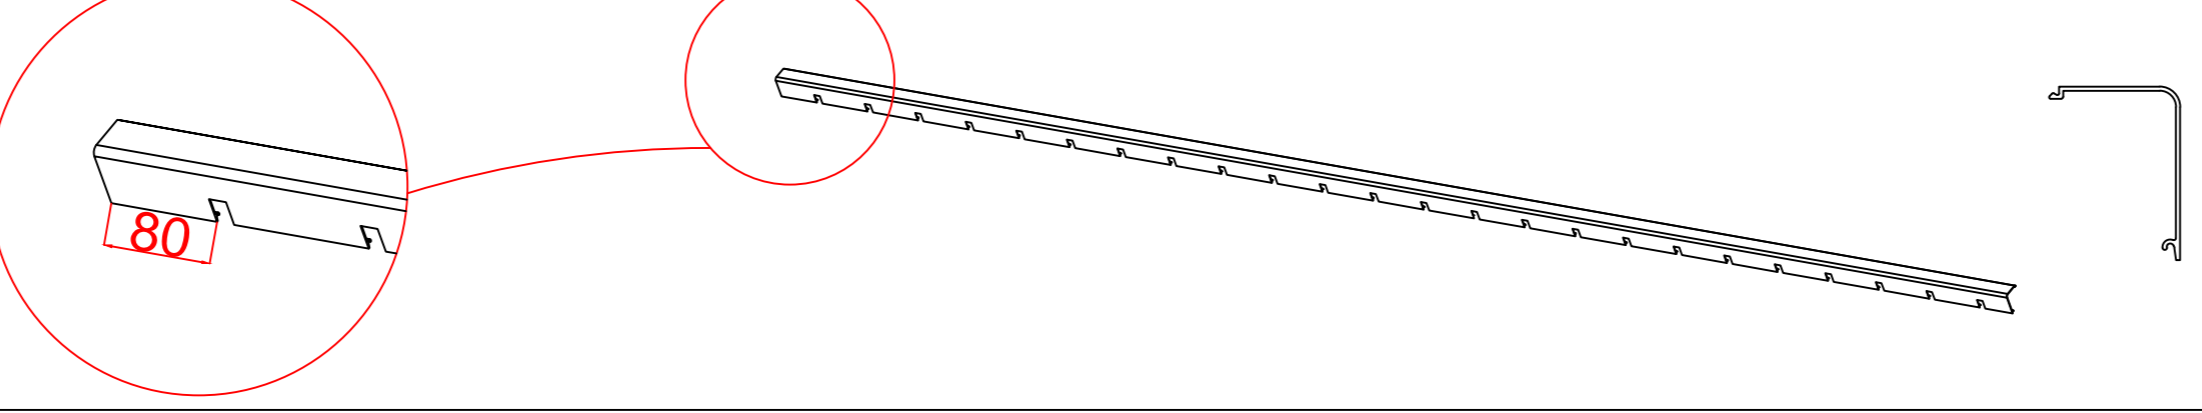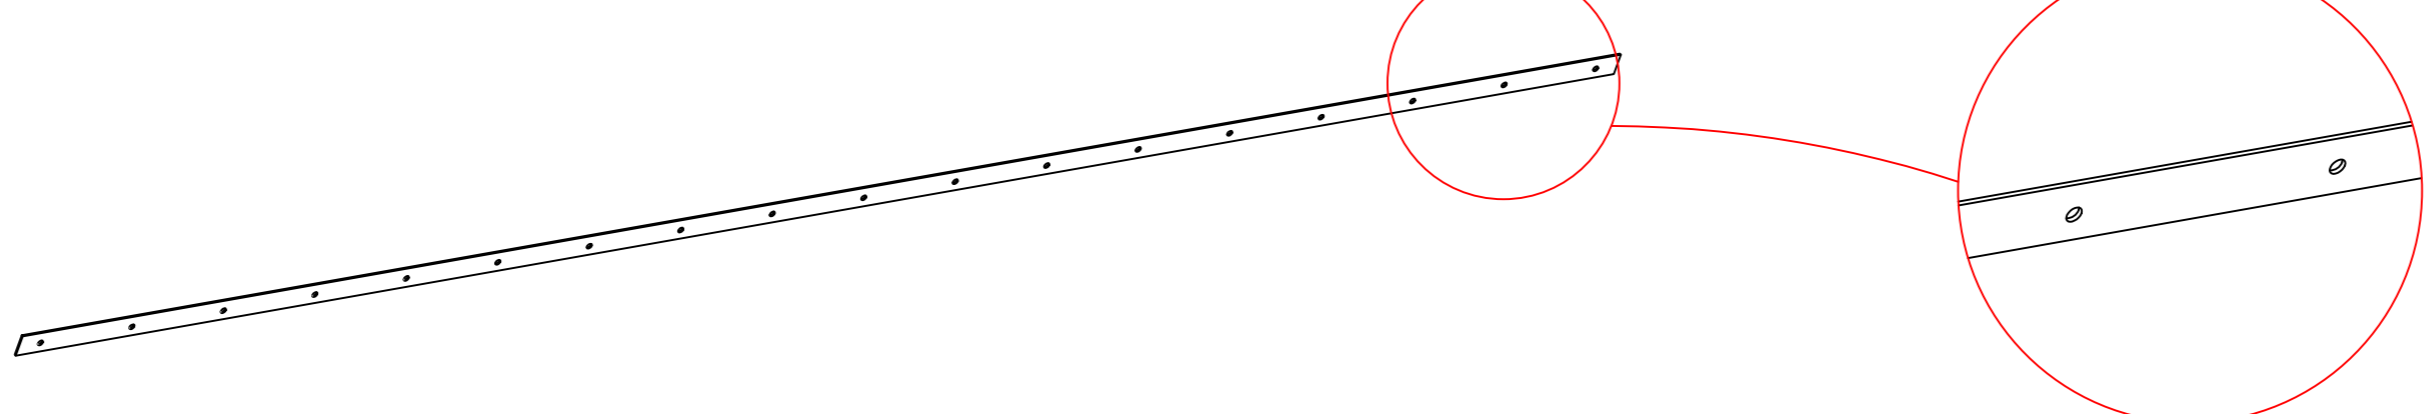

Item	Drawings	Qty
3B-01		3
3B-01B		1
3B-02		1
3B-03		1
3B-04		2
3B-06		23
3B-07		4
3B-08A		1
3B-08B		1
3B-09		2






Item	Drawings	Qty
3B-11		4
3B-12		4
3B-13		4
3B-14		1
3B-18		1
3B-19	 M8*20	8
3B-20	 5-12-M4	50+2
3B-20B	 5-16-M4	4+2
3B-21	 M10*80	16
3B-22	 M5.5*60	24+2
3B-23	 M4.2*19	10+2
3B-24		1
3B-30		1

Item	Drawings	Qty
3B-31		1
3B-46a		1
3B-46b		3
3B-48		23
3B-48B		4
3B-49		23
3B-49B		4
3B-51	 M4.2*25	216+4
3B-57		4
3B-58		1
3B-59	 M5*20	1
3B-60	 M4.2*19/8pcs	1






3x4m

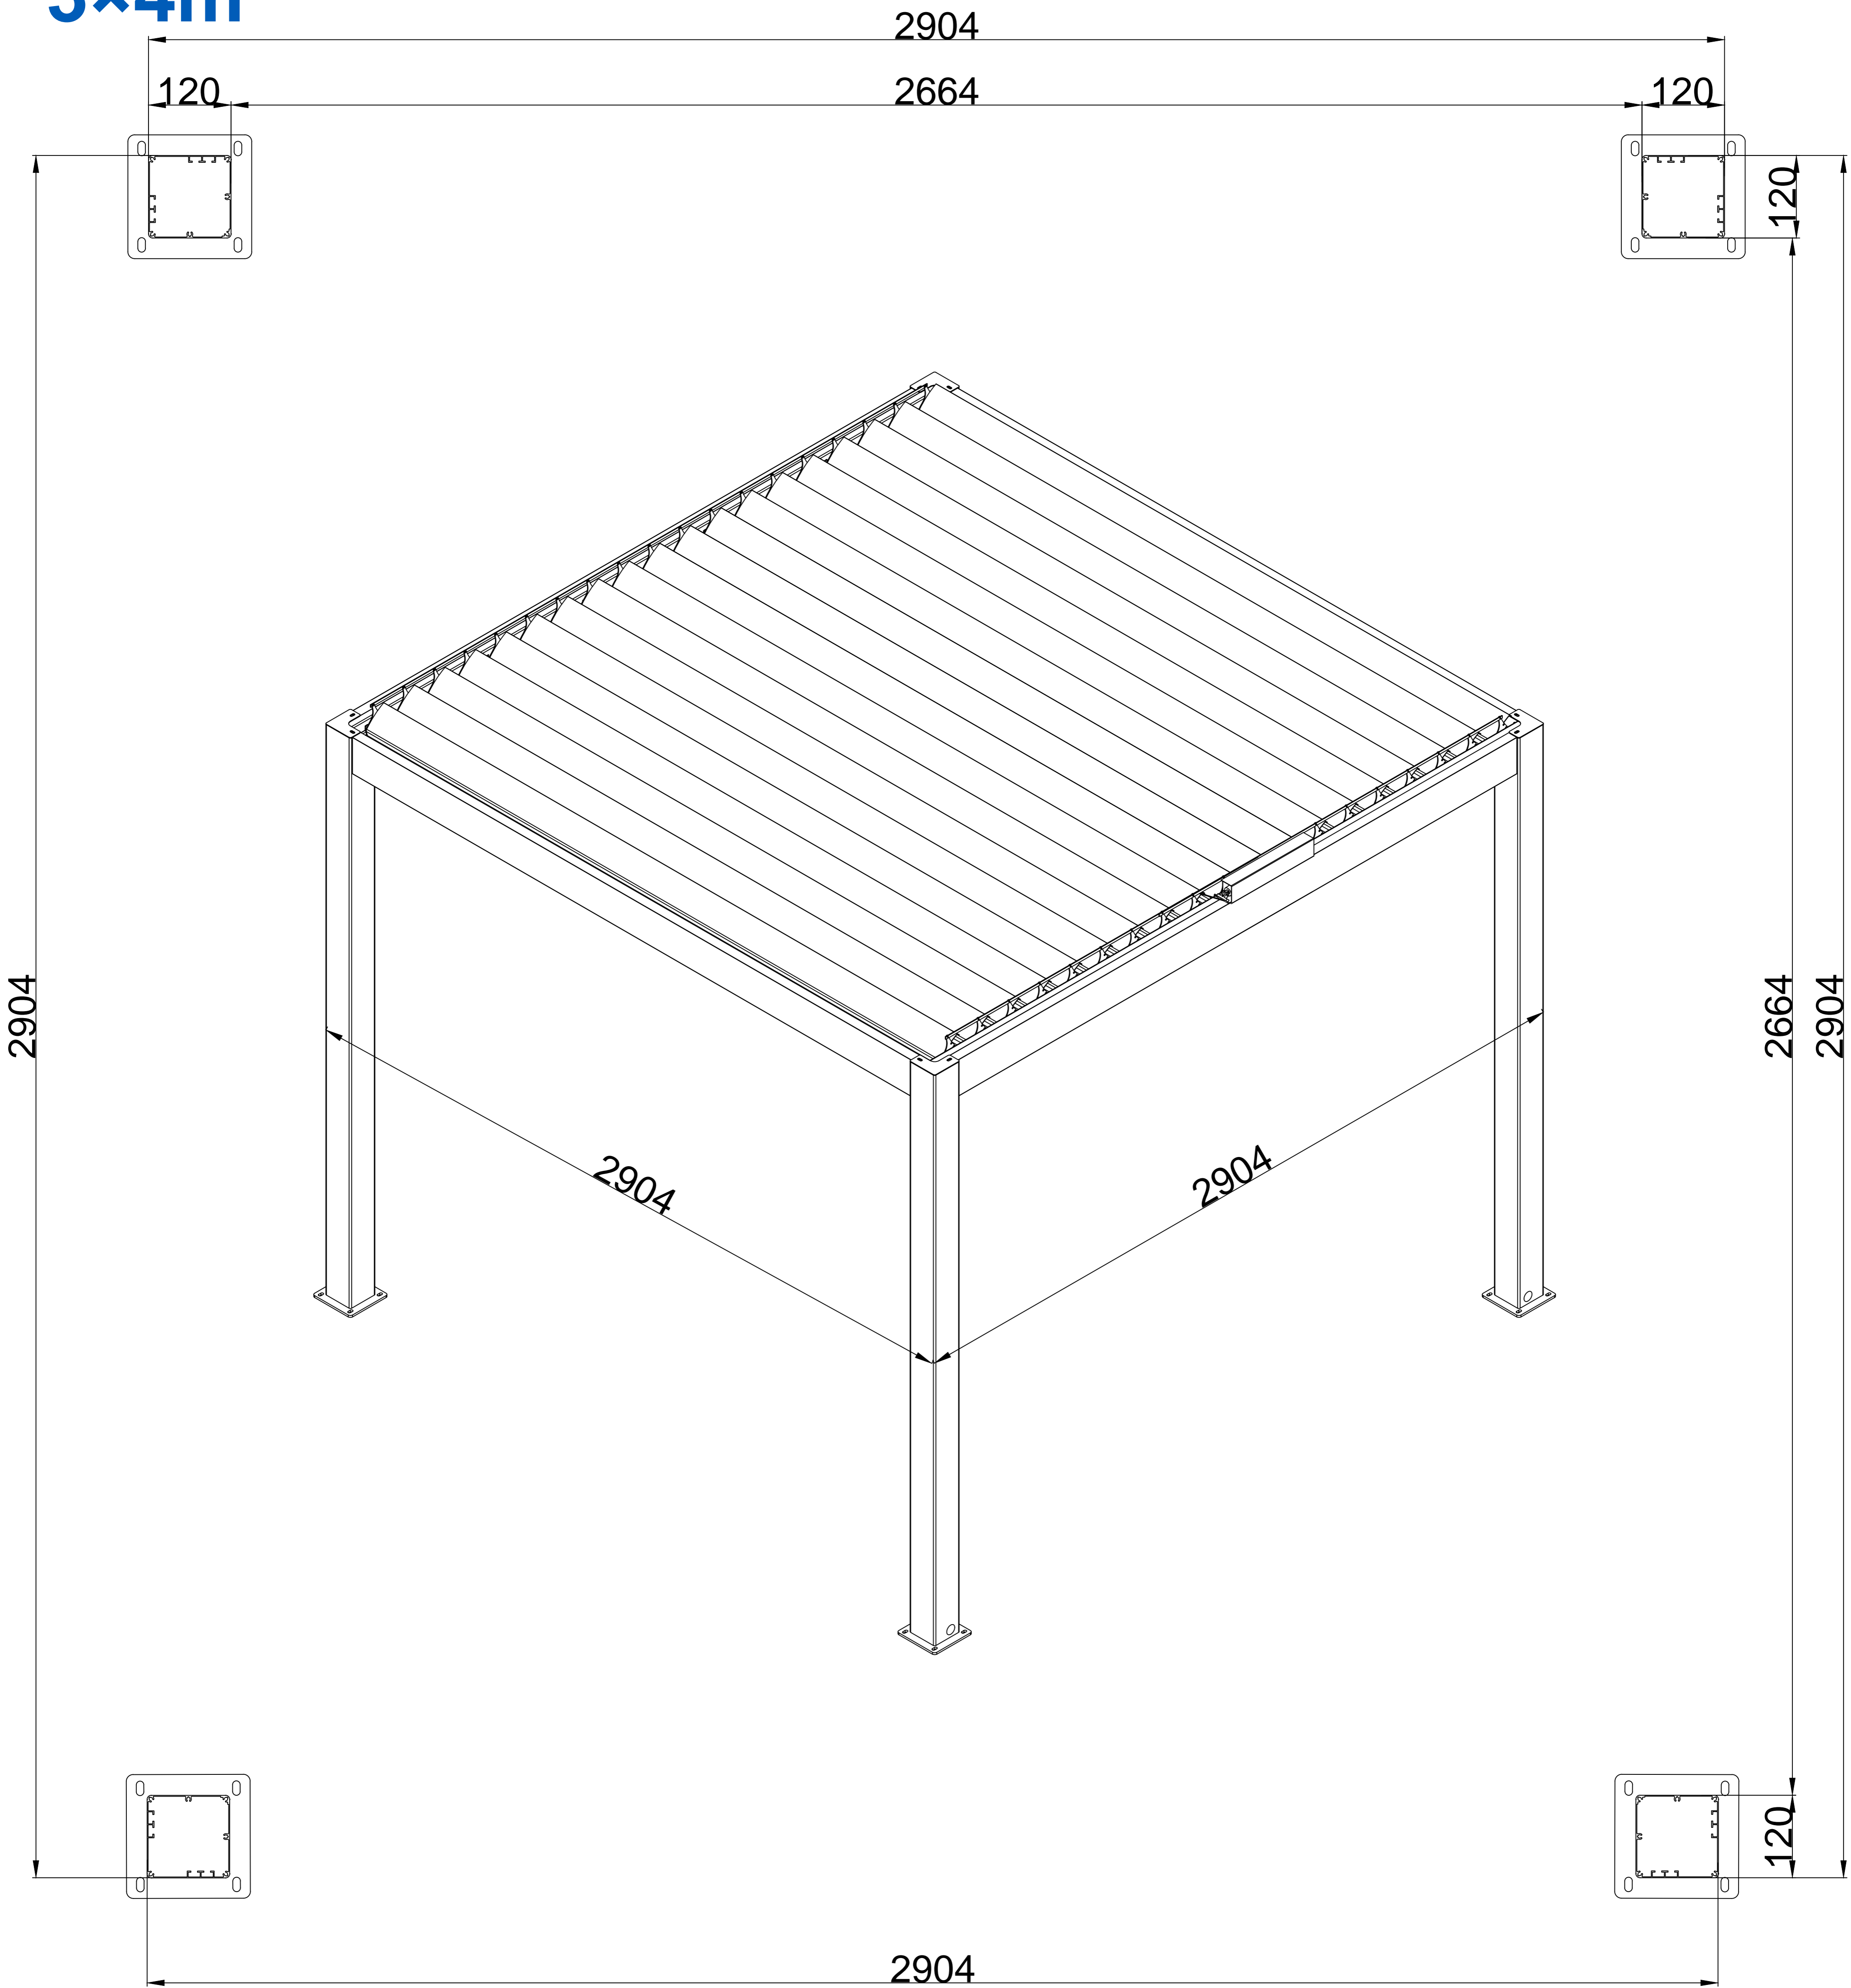

3*4-4



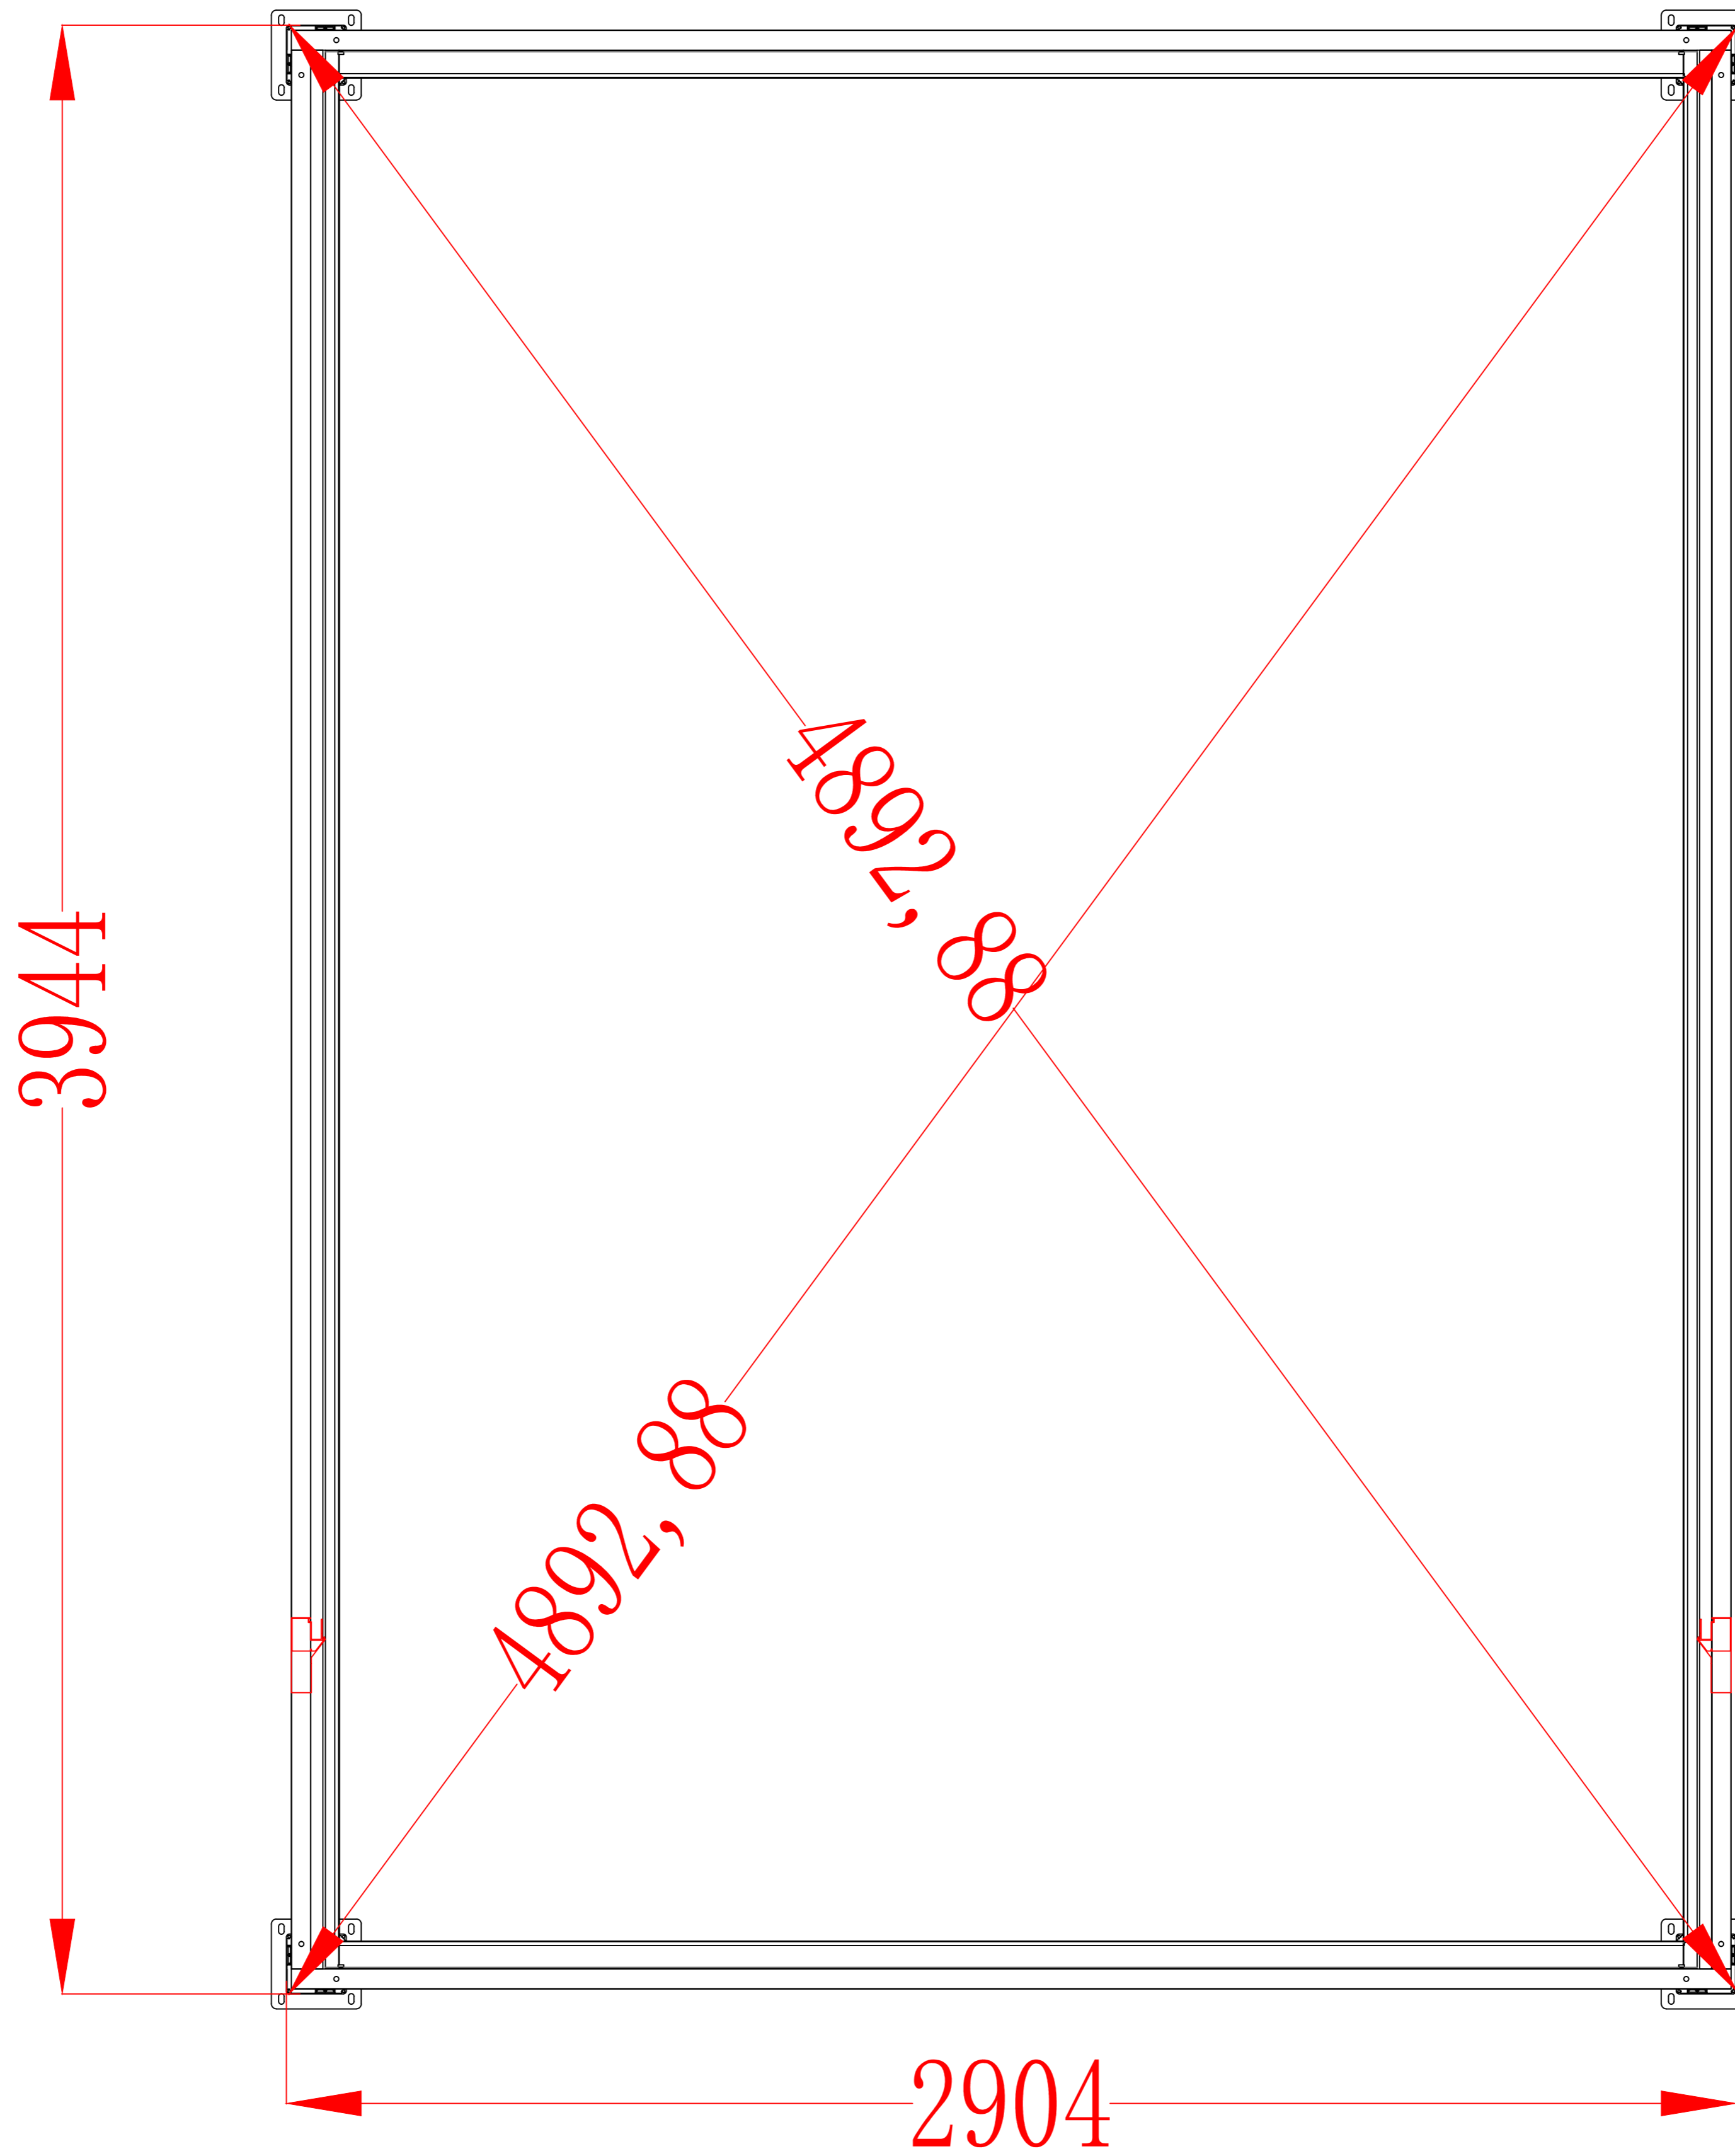


Before installing the bottom expansion screws, please be sure to correct the frame size








During the installation process, if you encounter any uncertainties, please refer to the installation instructions on the product page of the website.

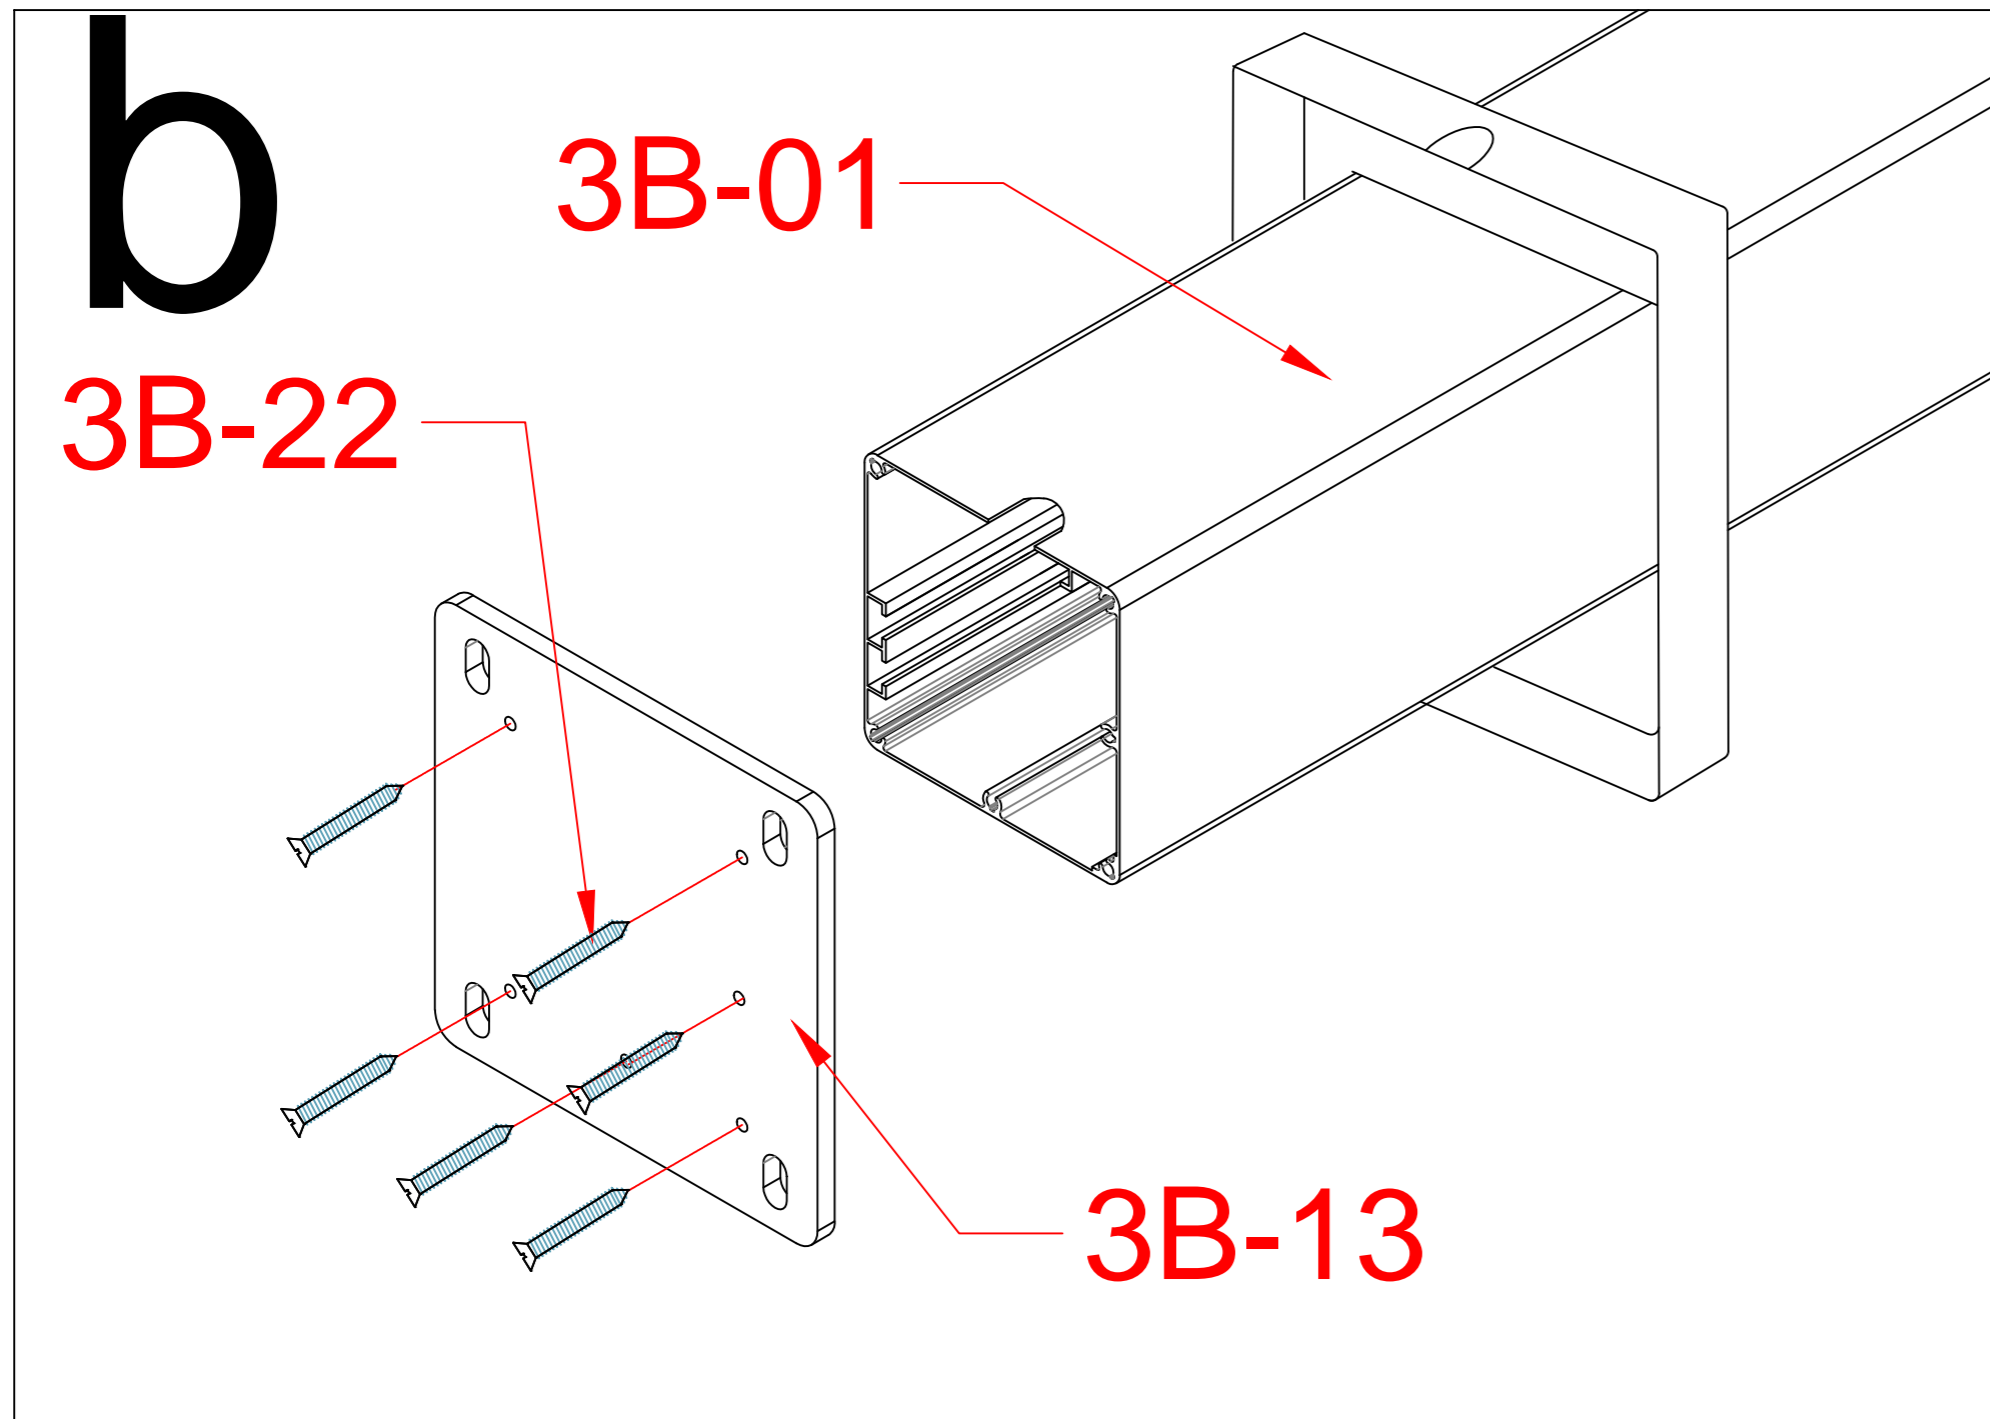

Before installing the base plate, please connect the wires first


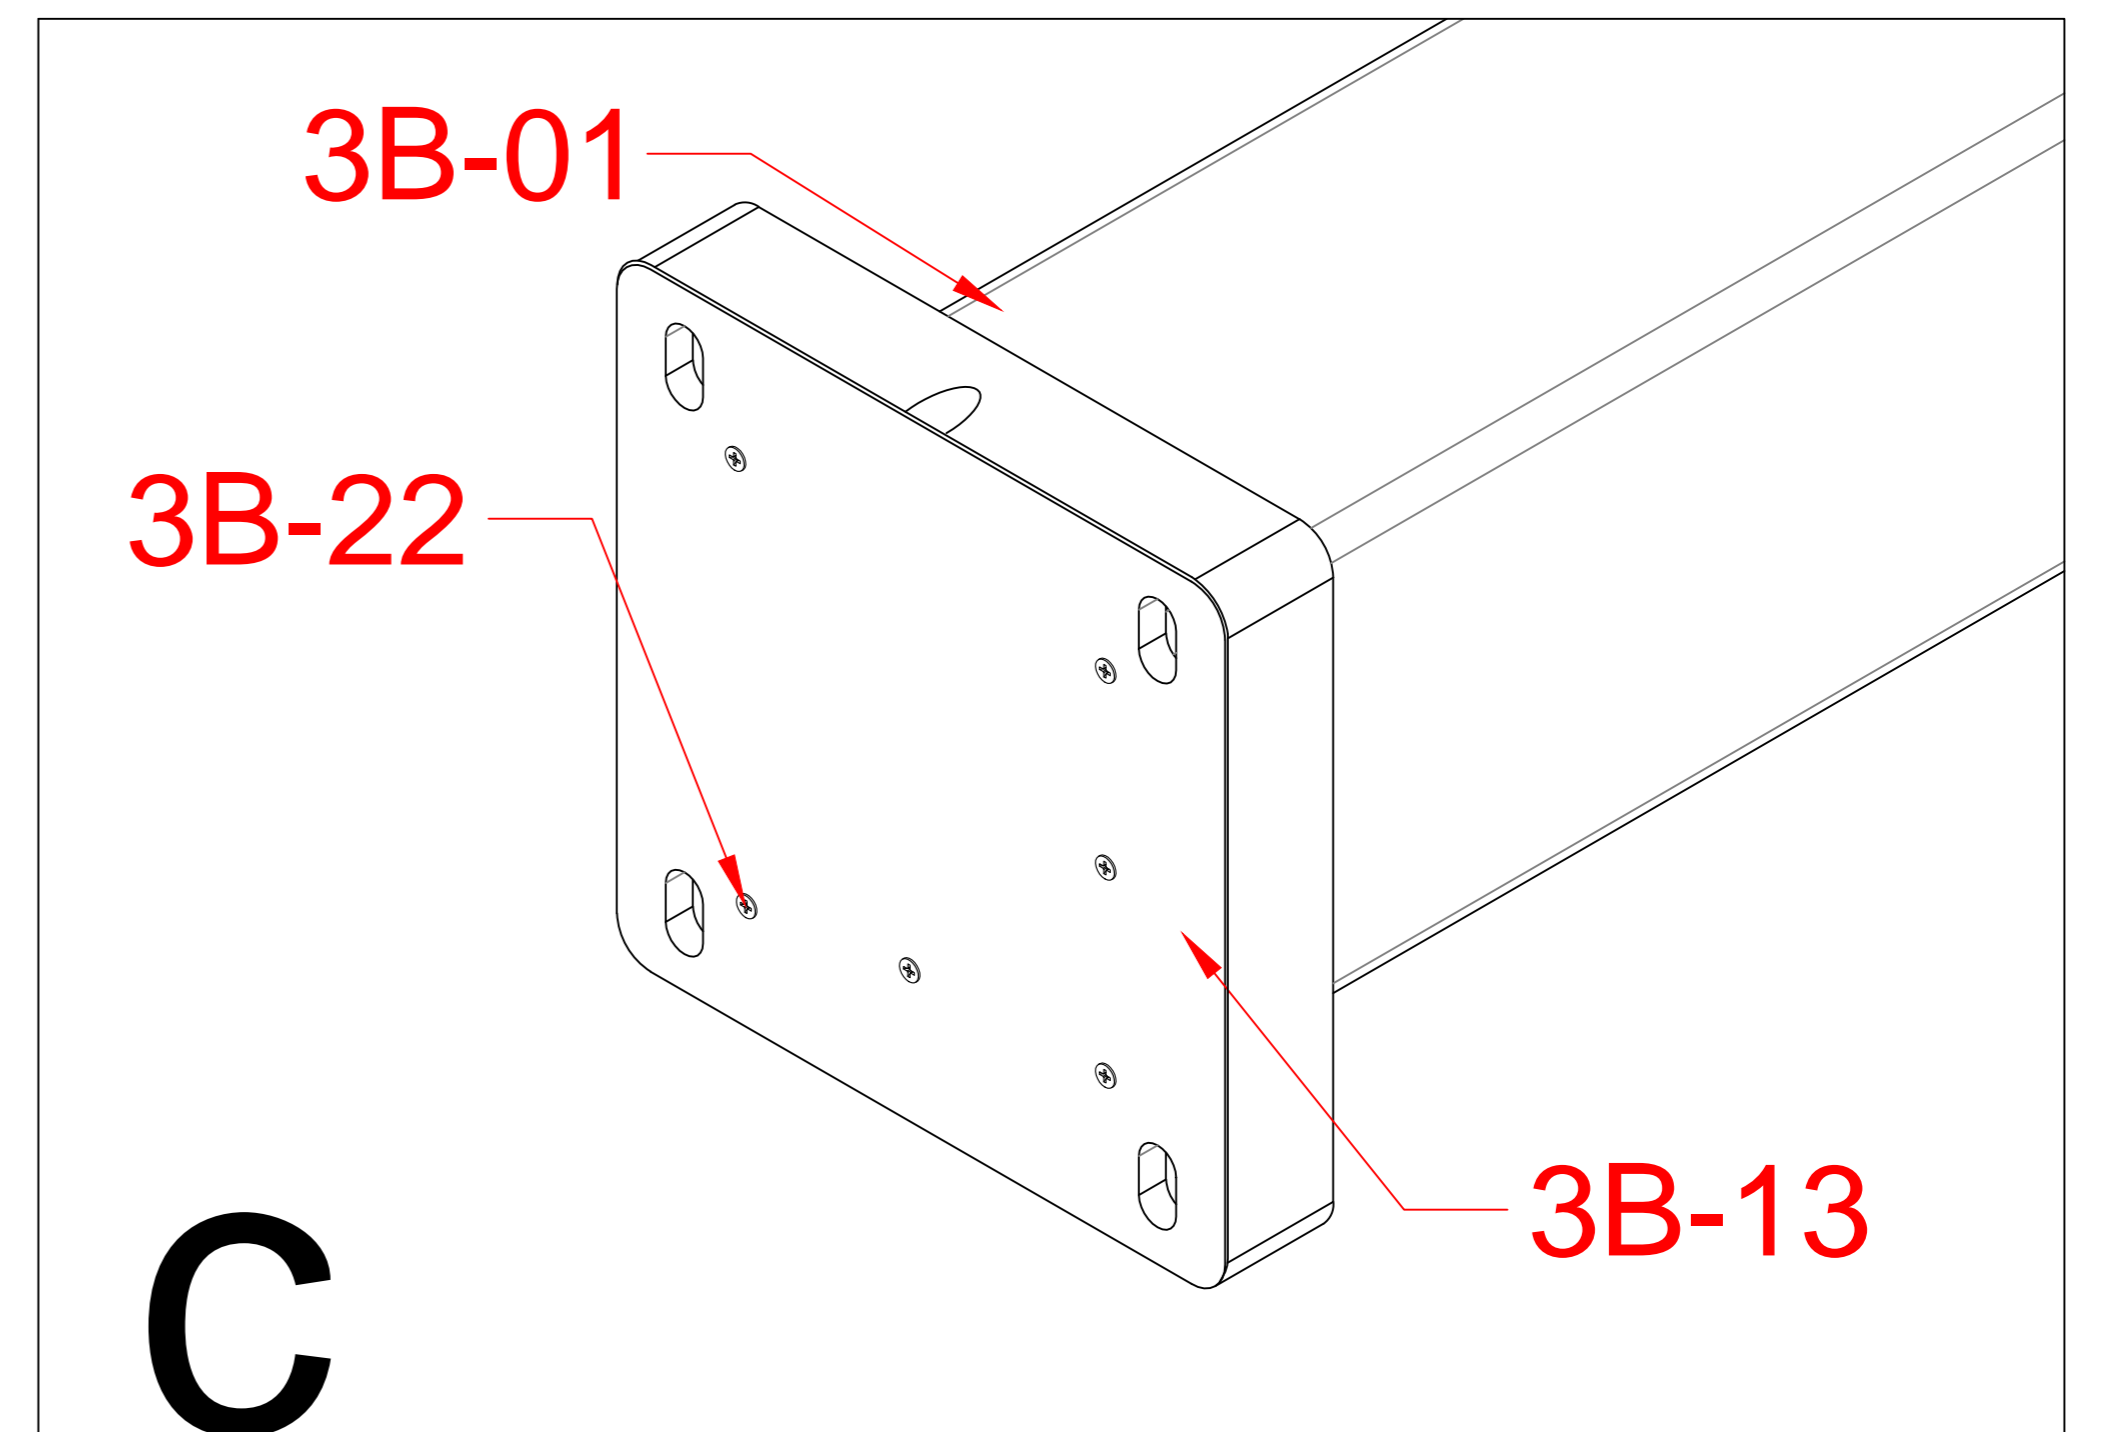
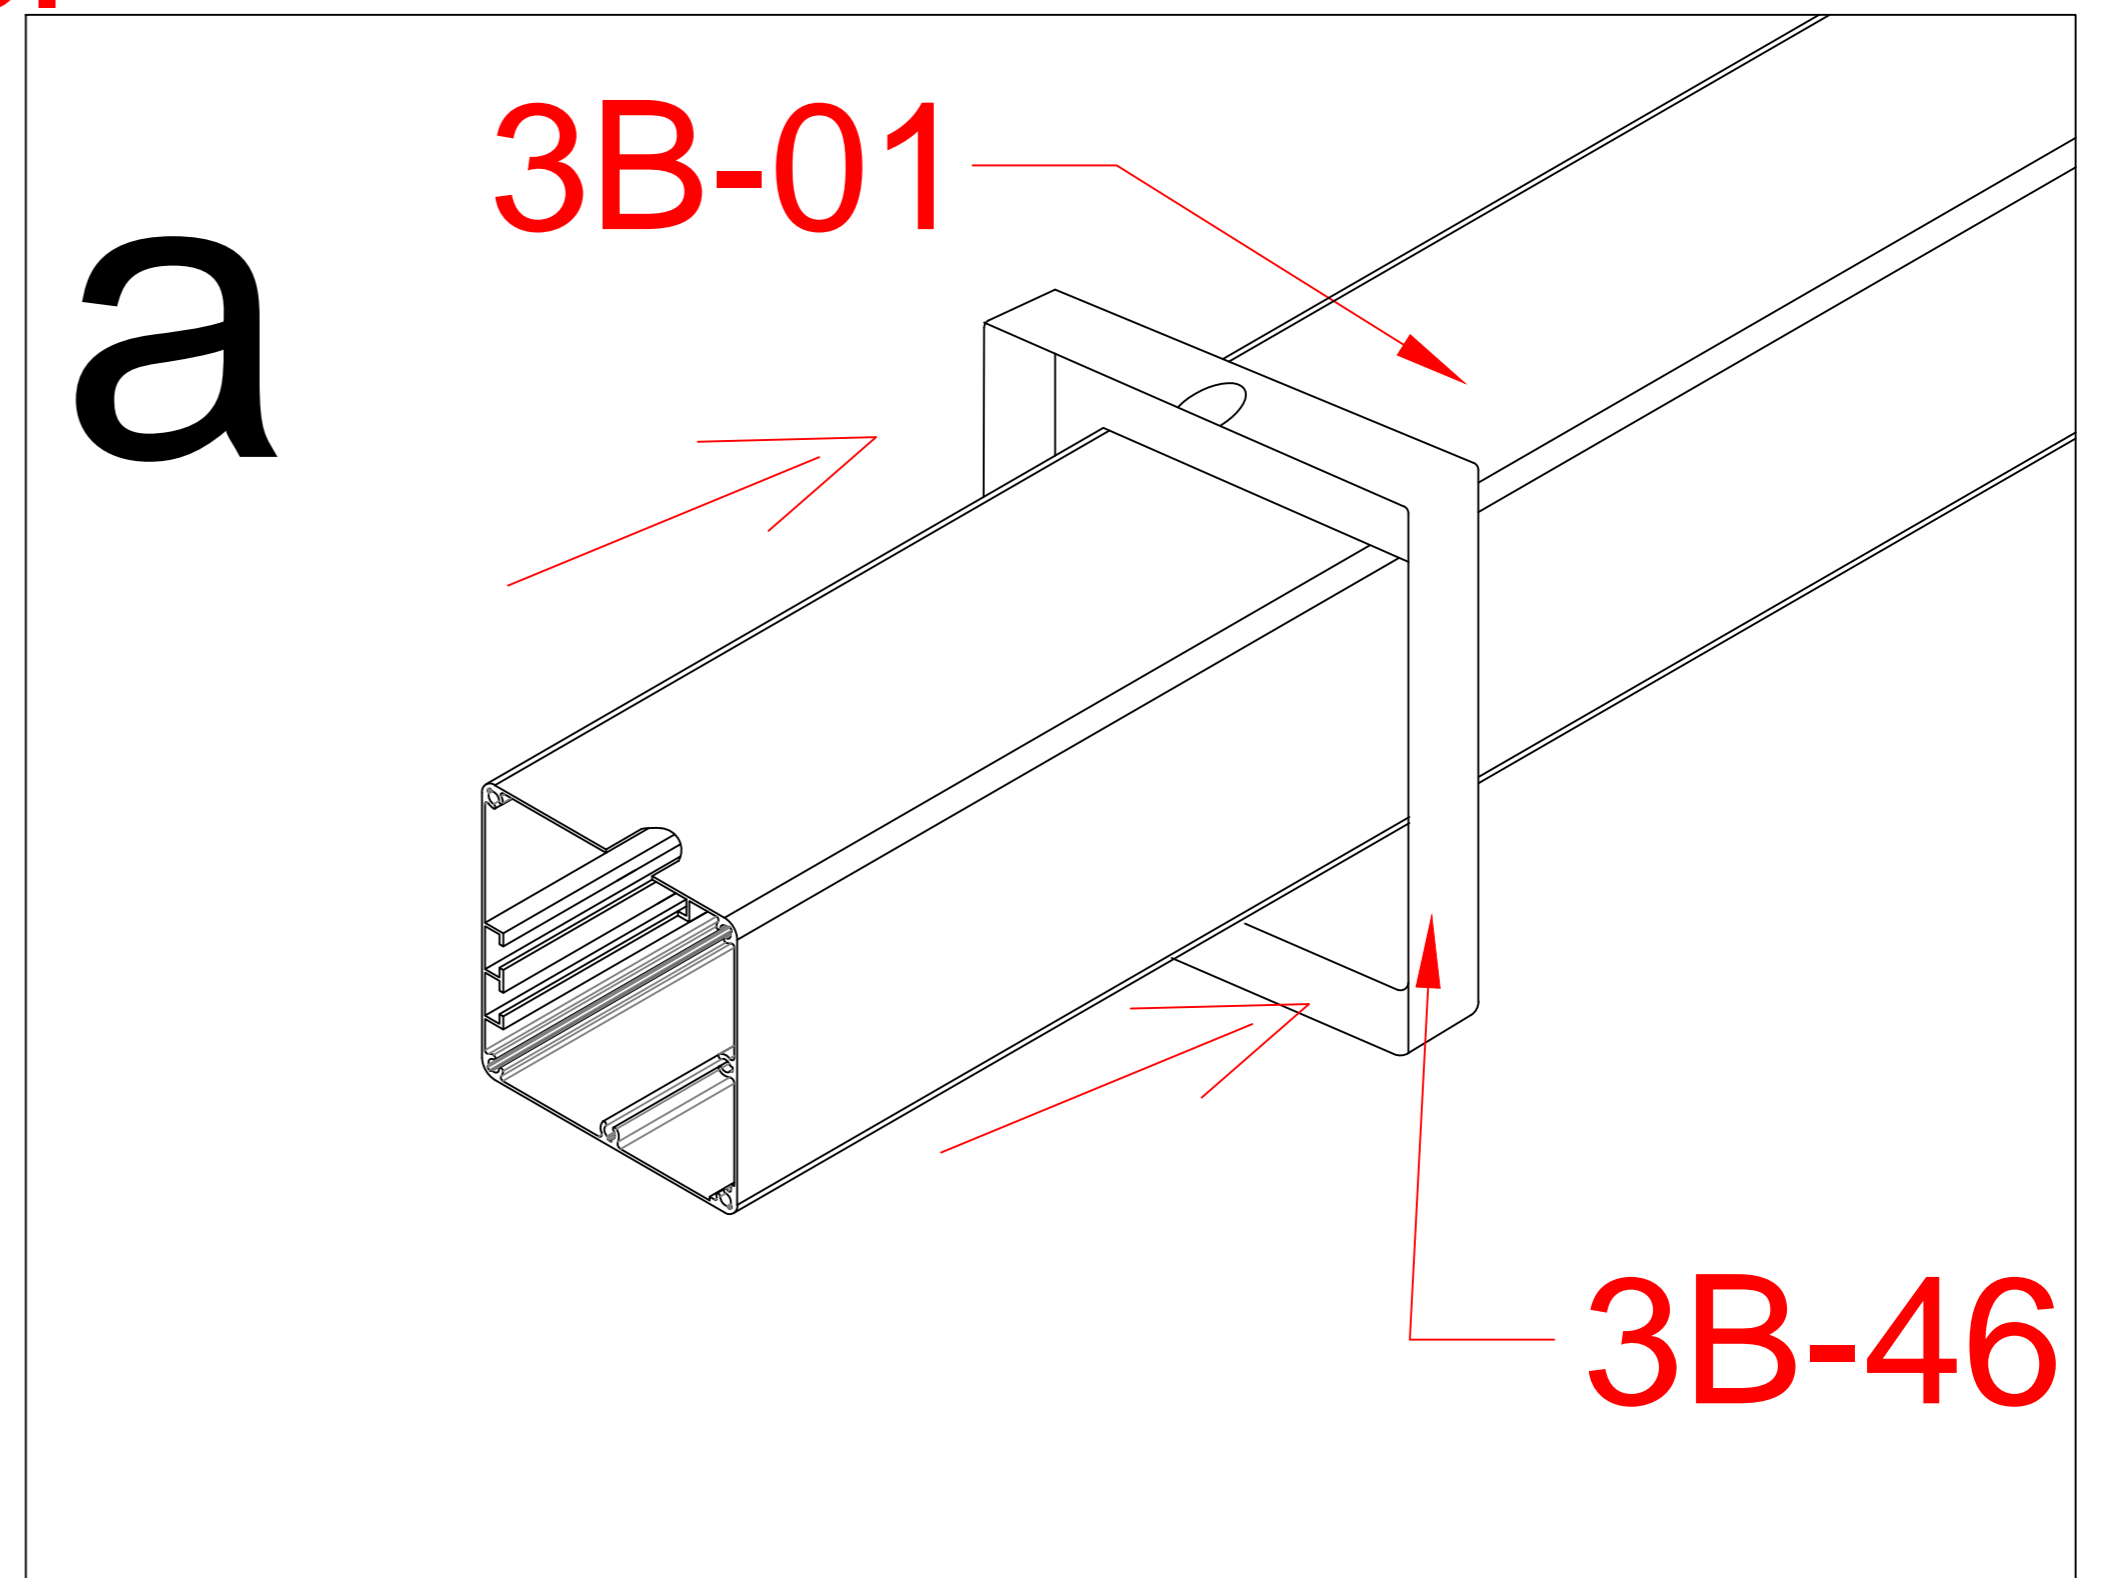


Post containing electrical wires, please use base plate 3B-46A.



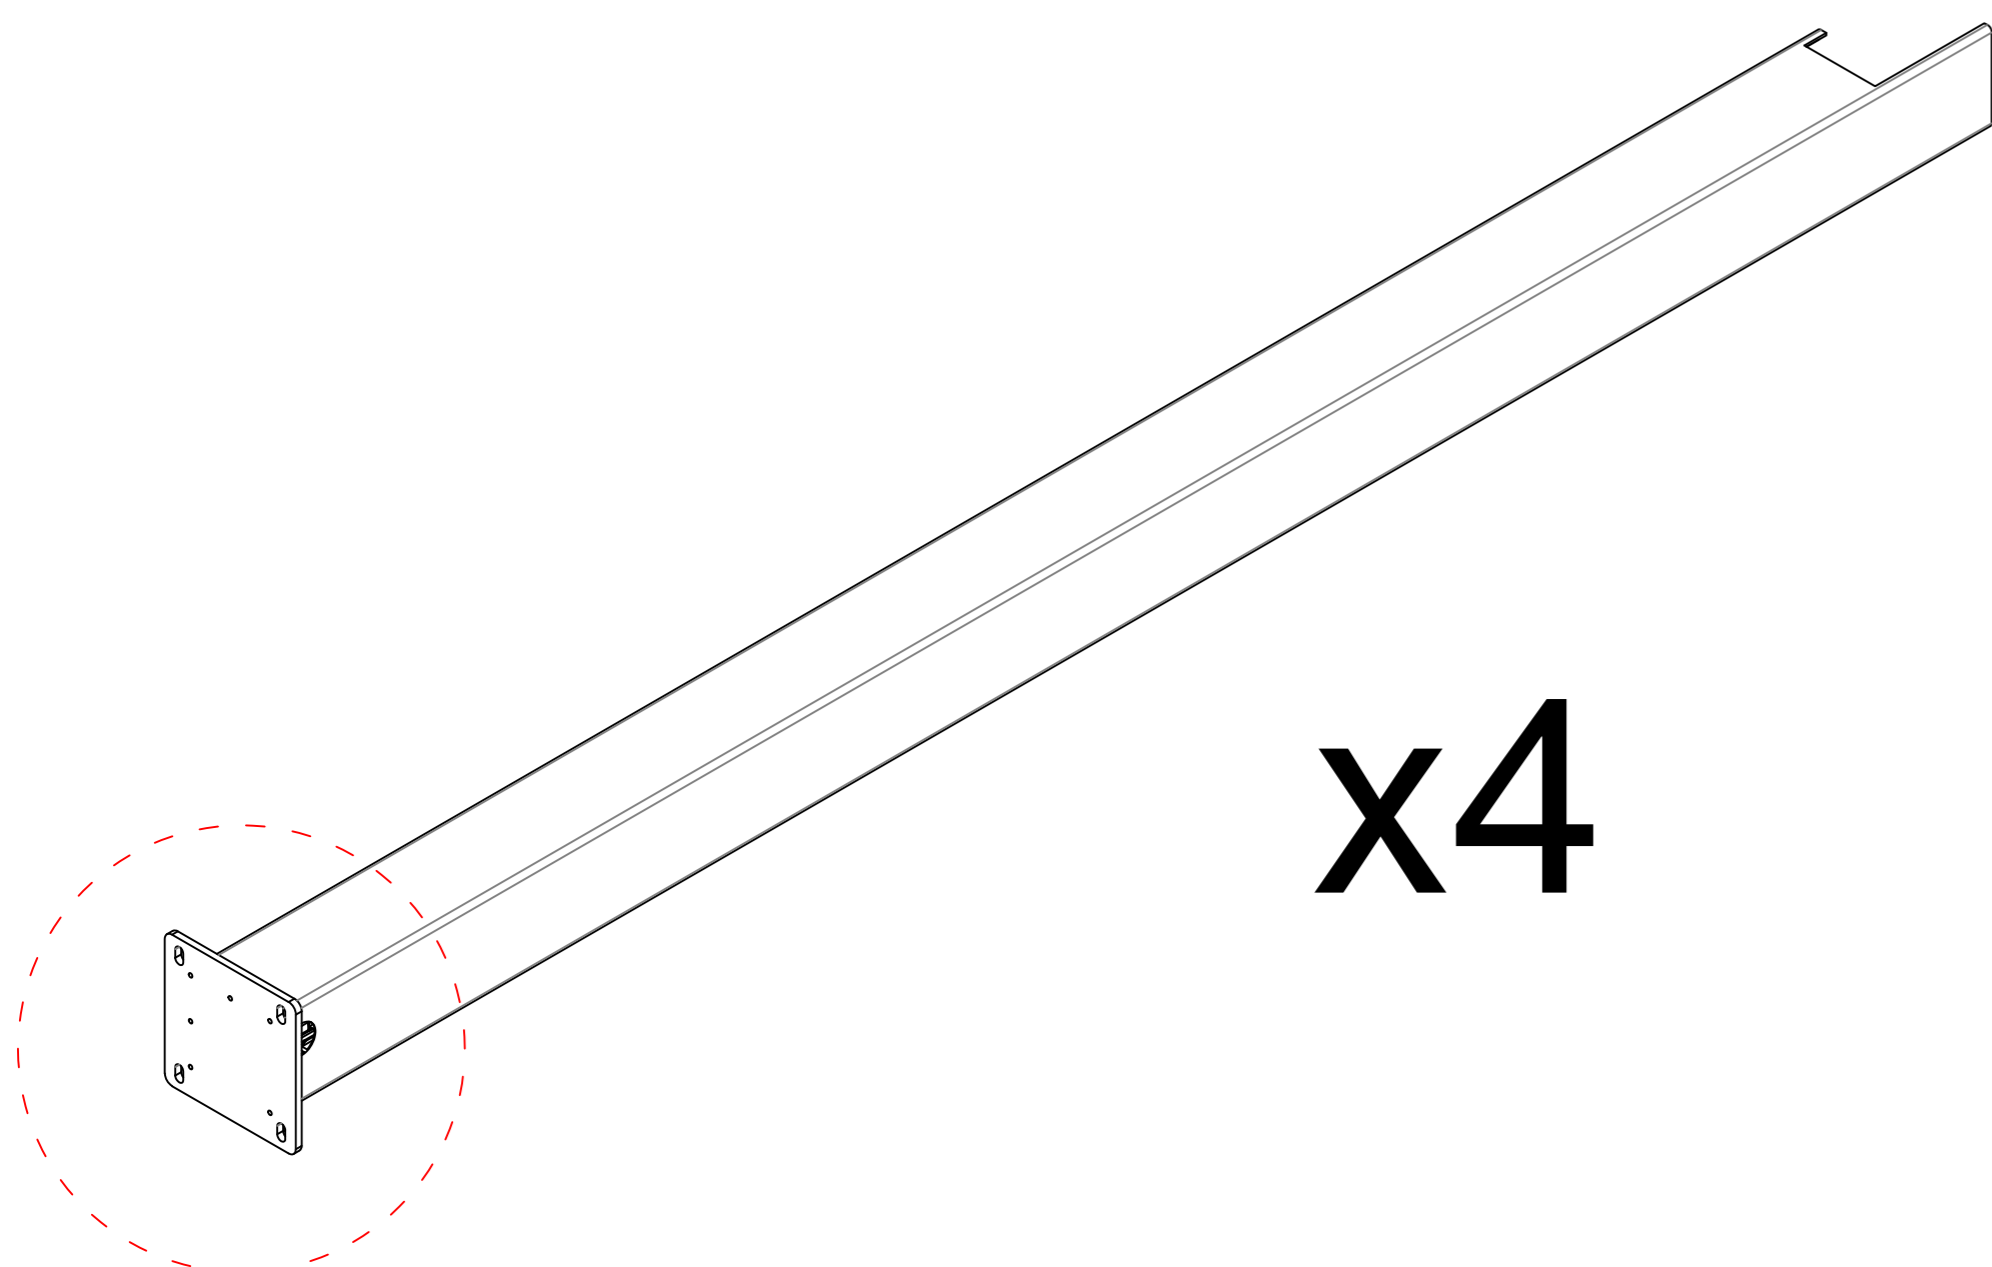


3B-46a		3
3B-46b		1
3B-01/ 01B		4
3B-13		4
3B-22	 M5.5*60	24



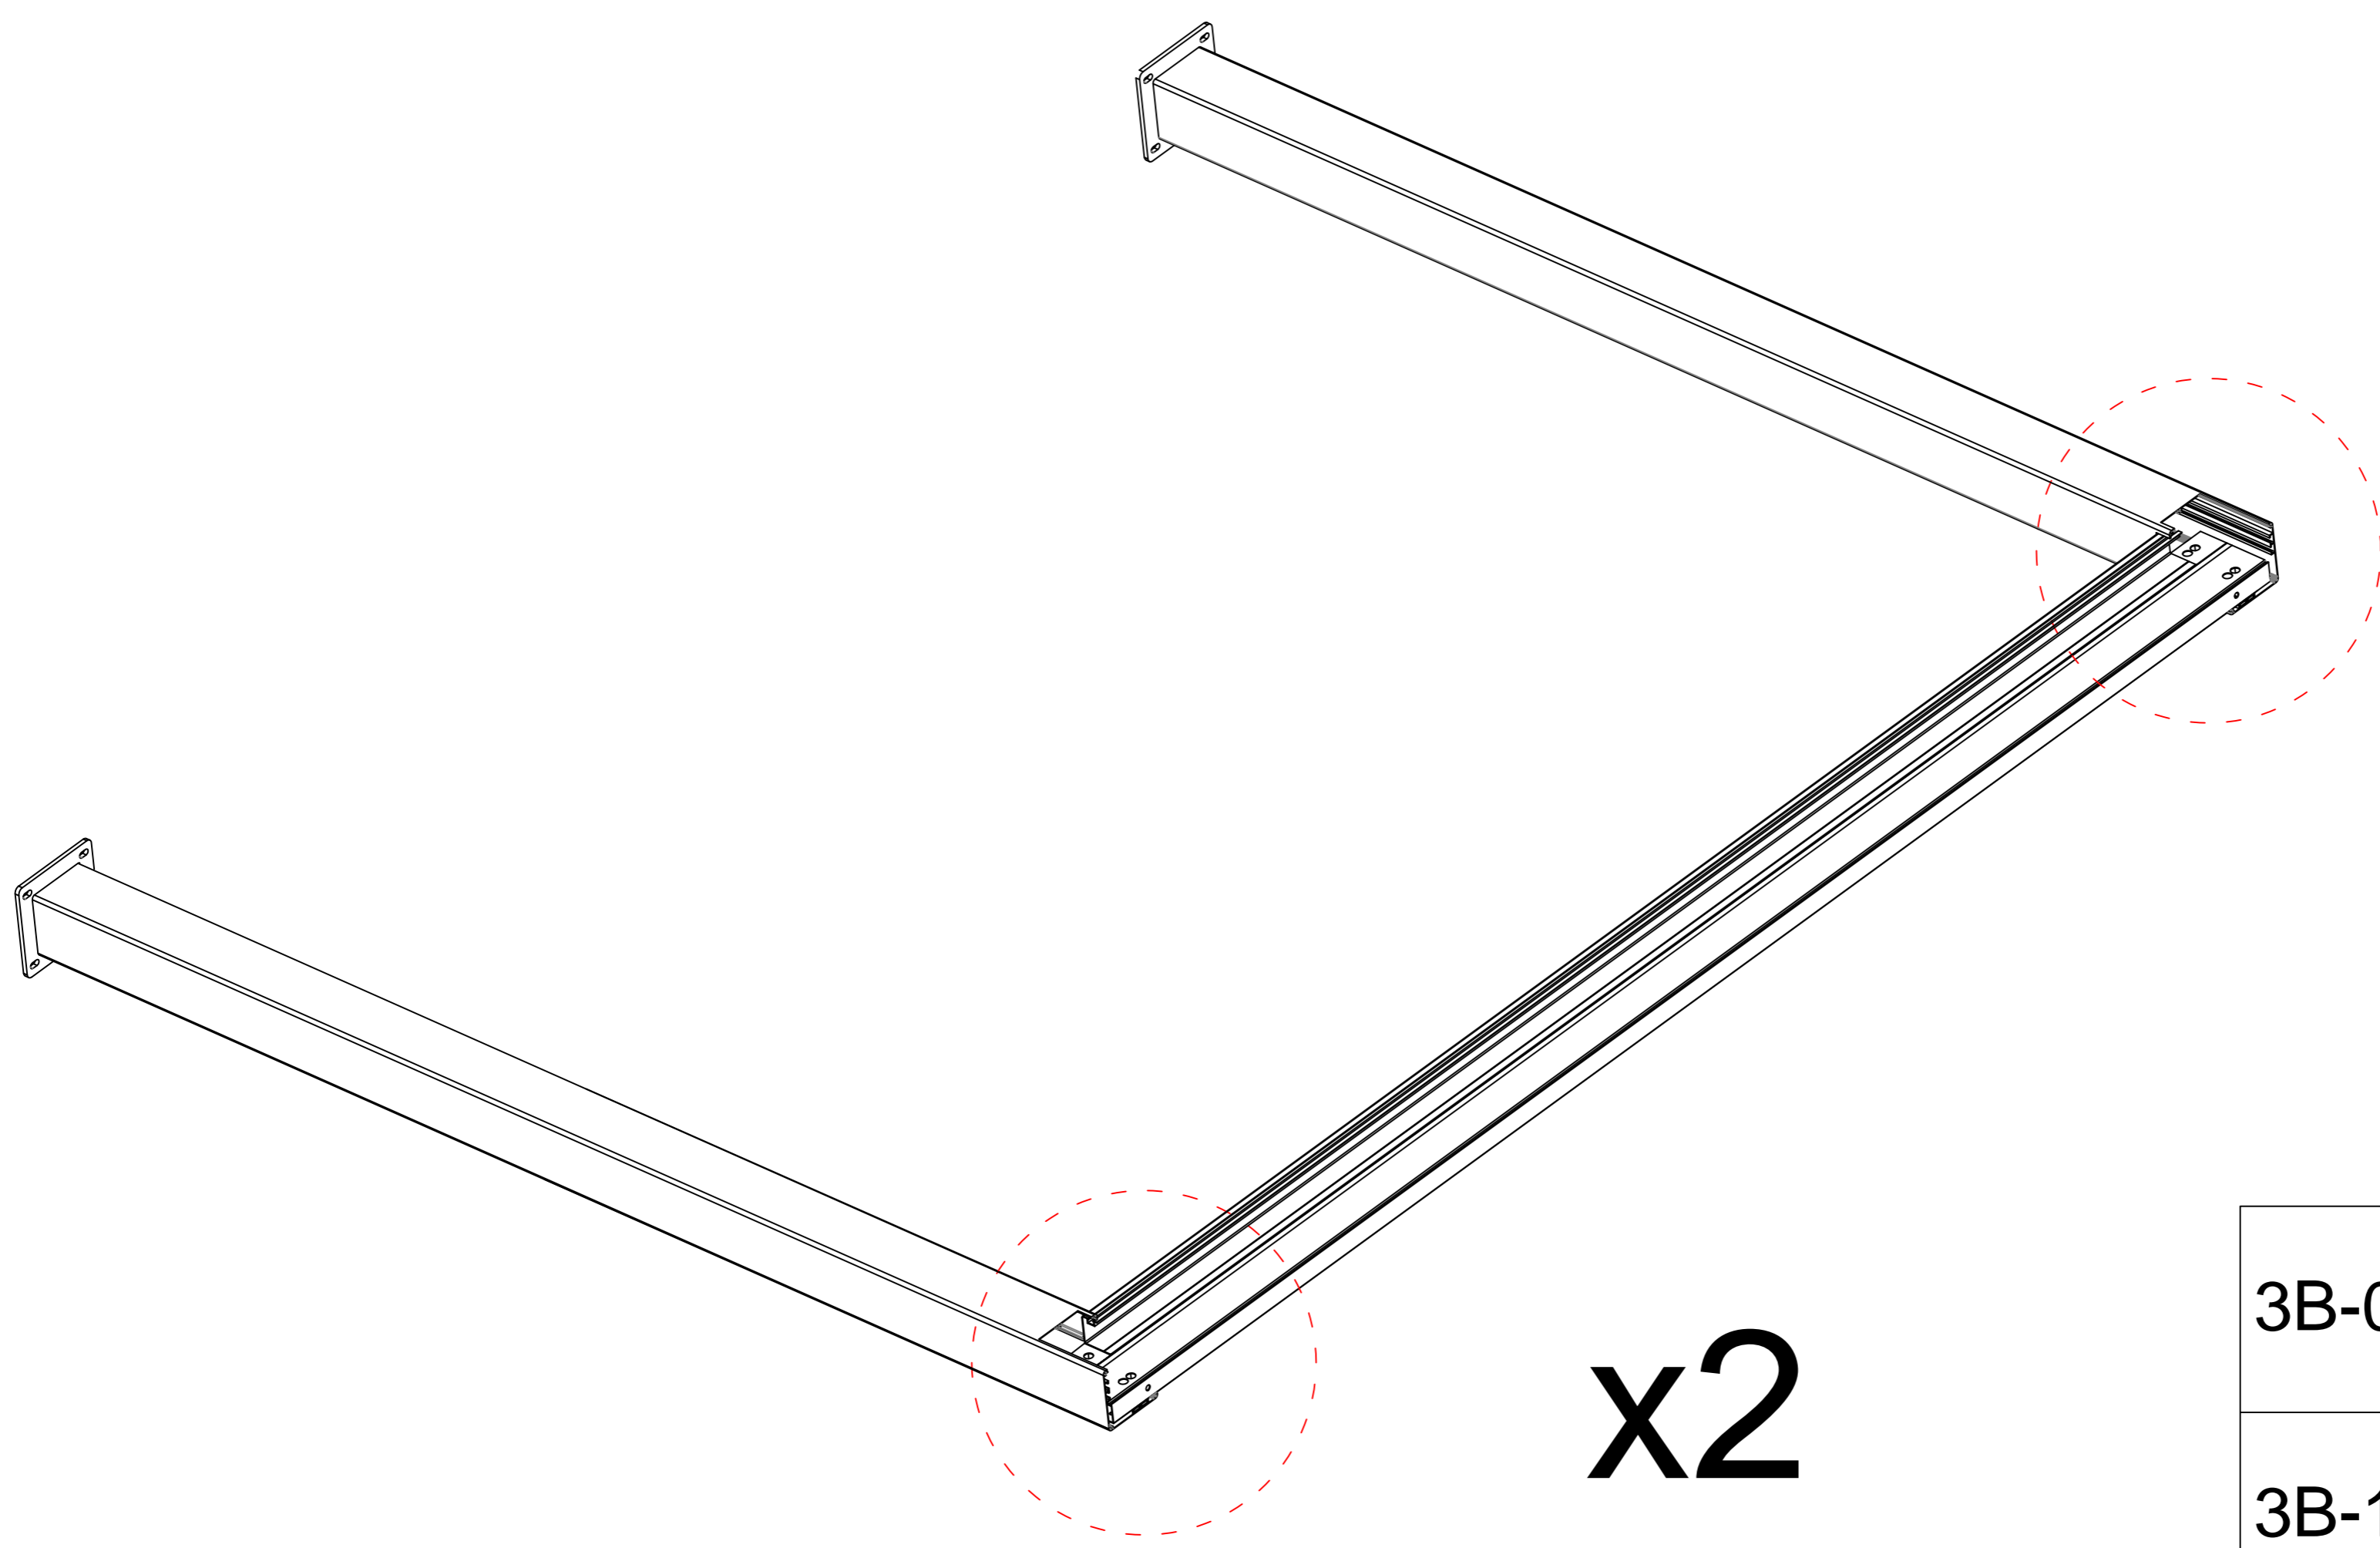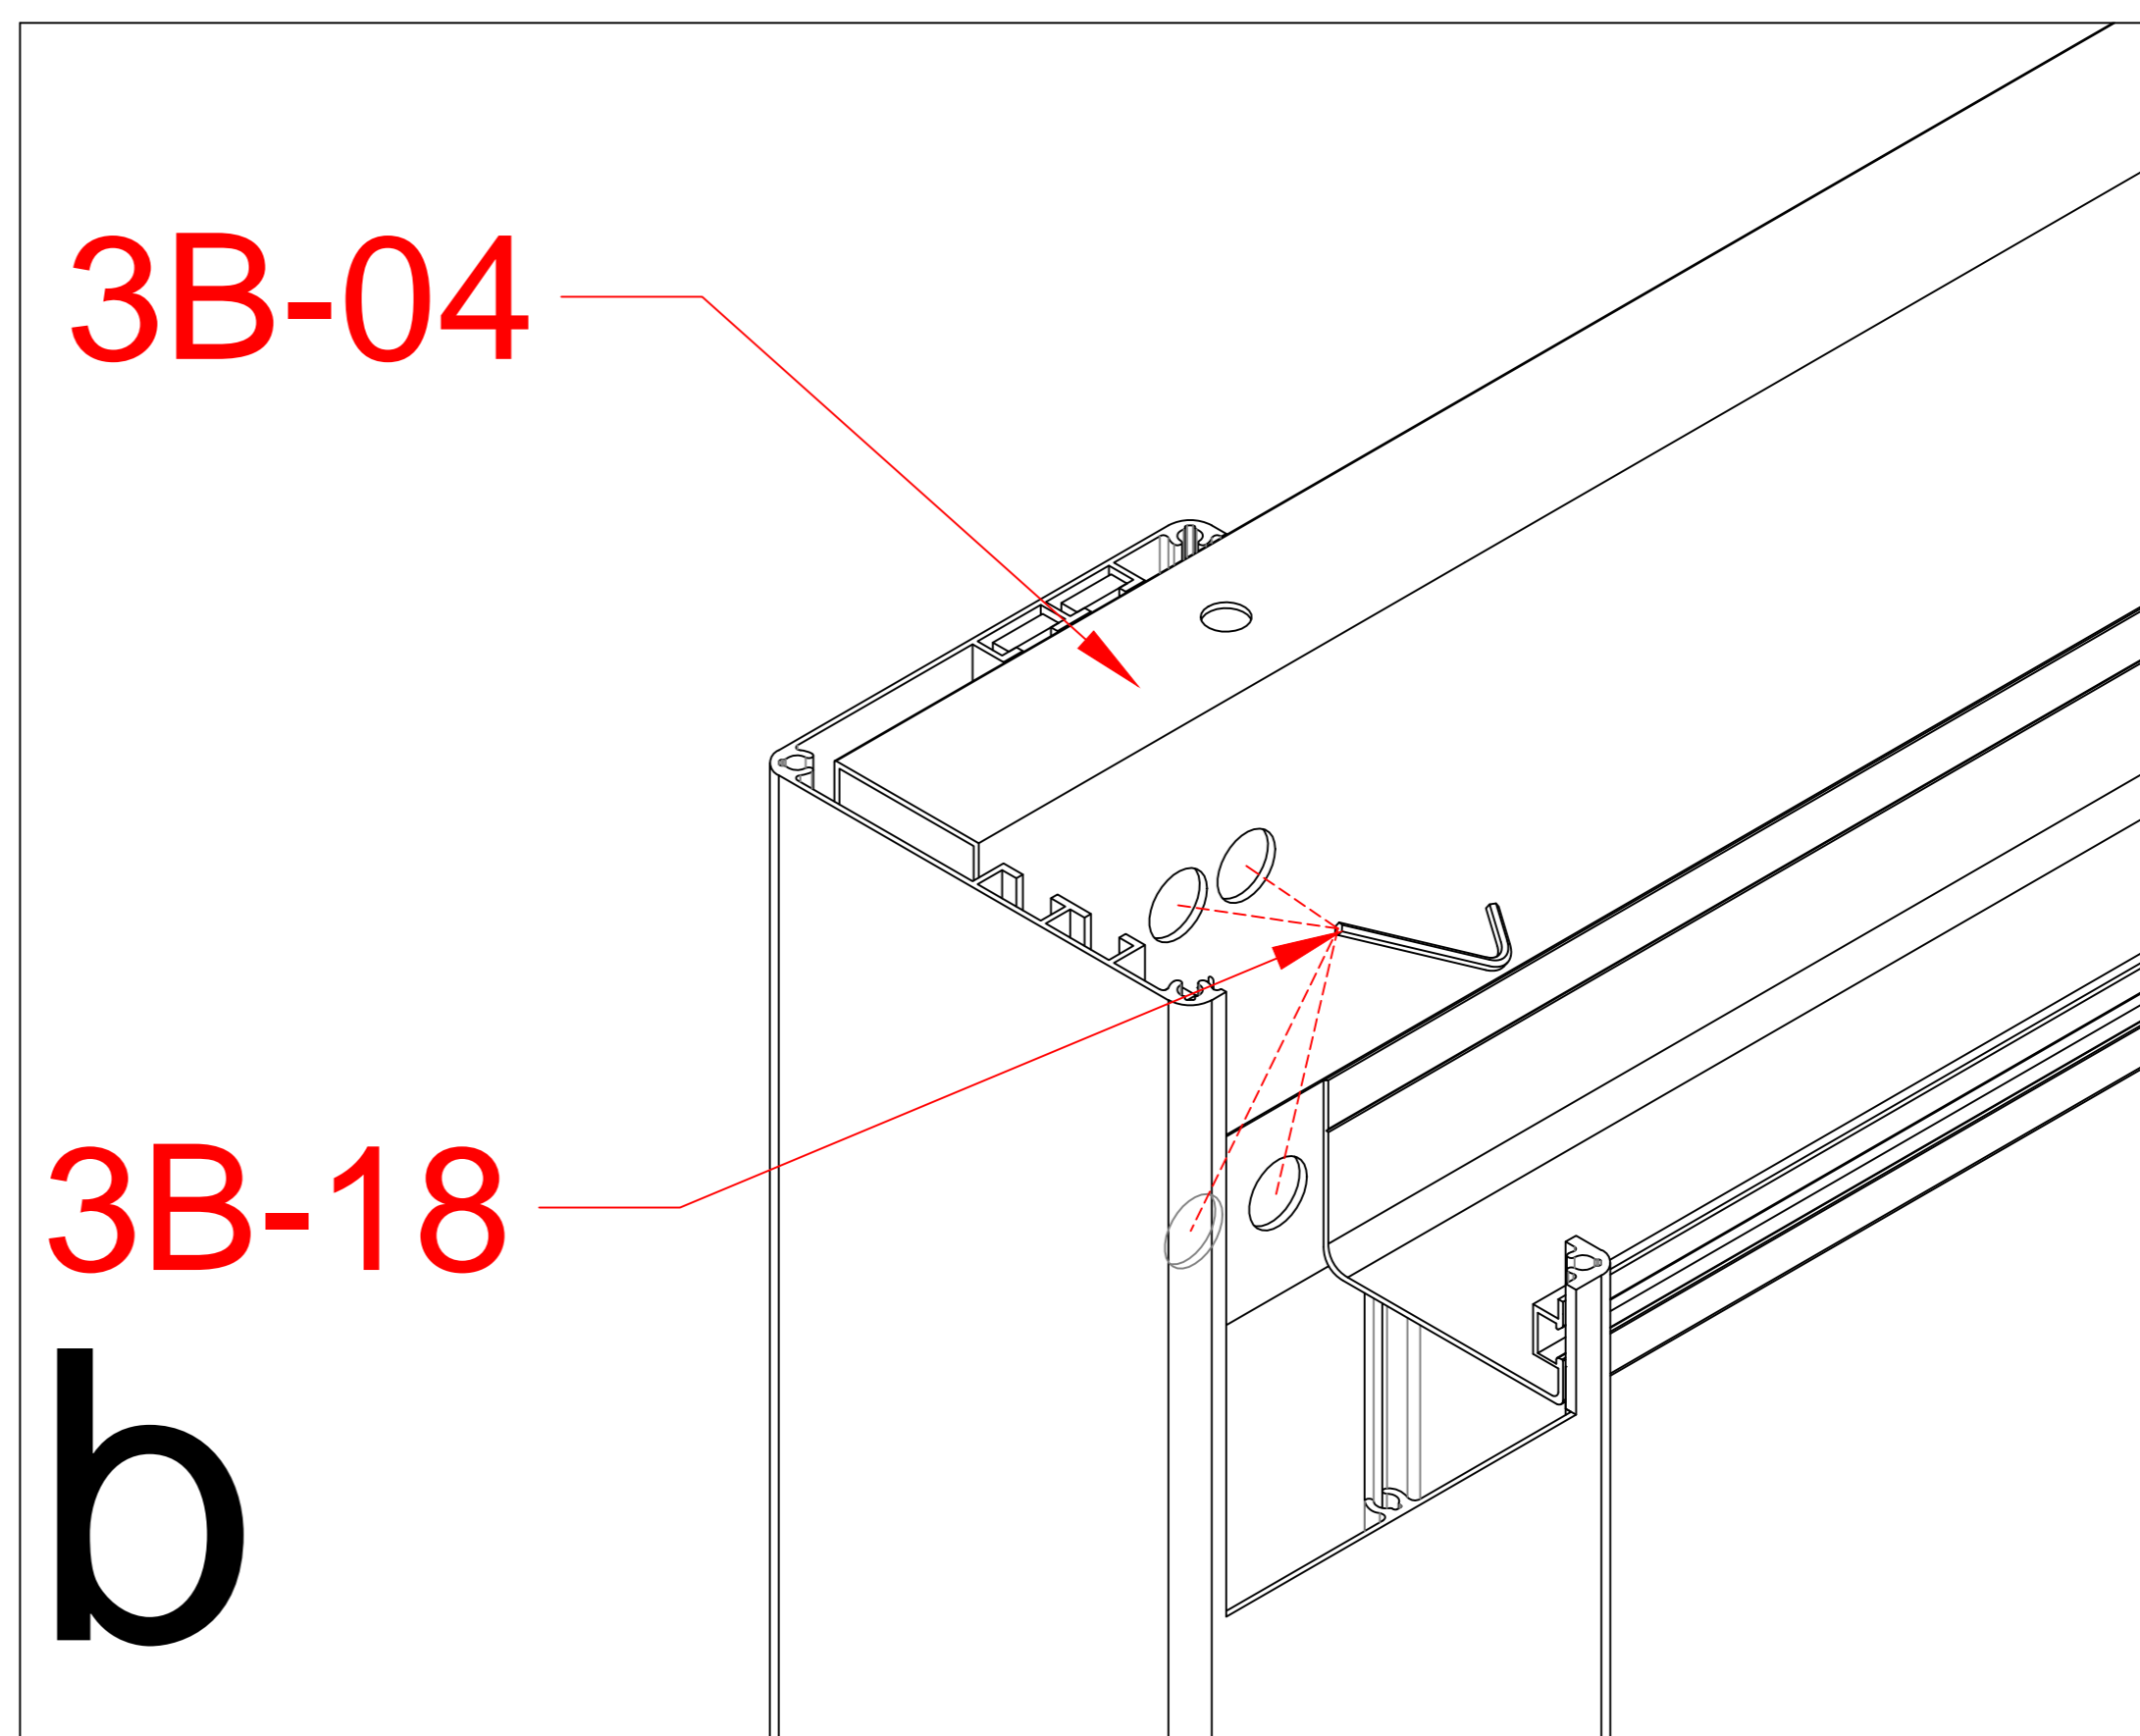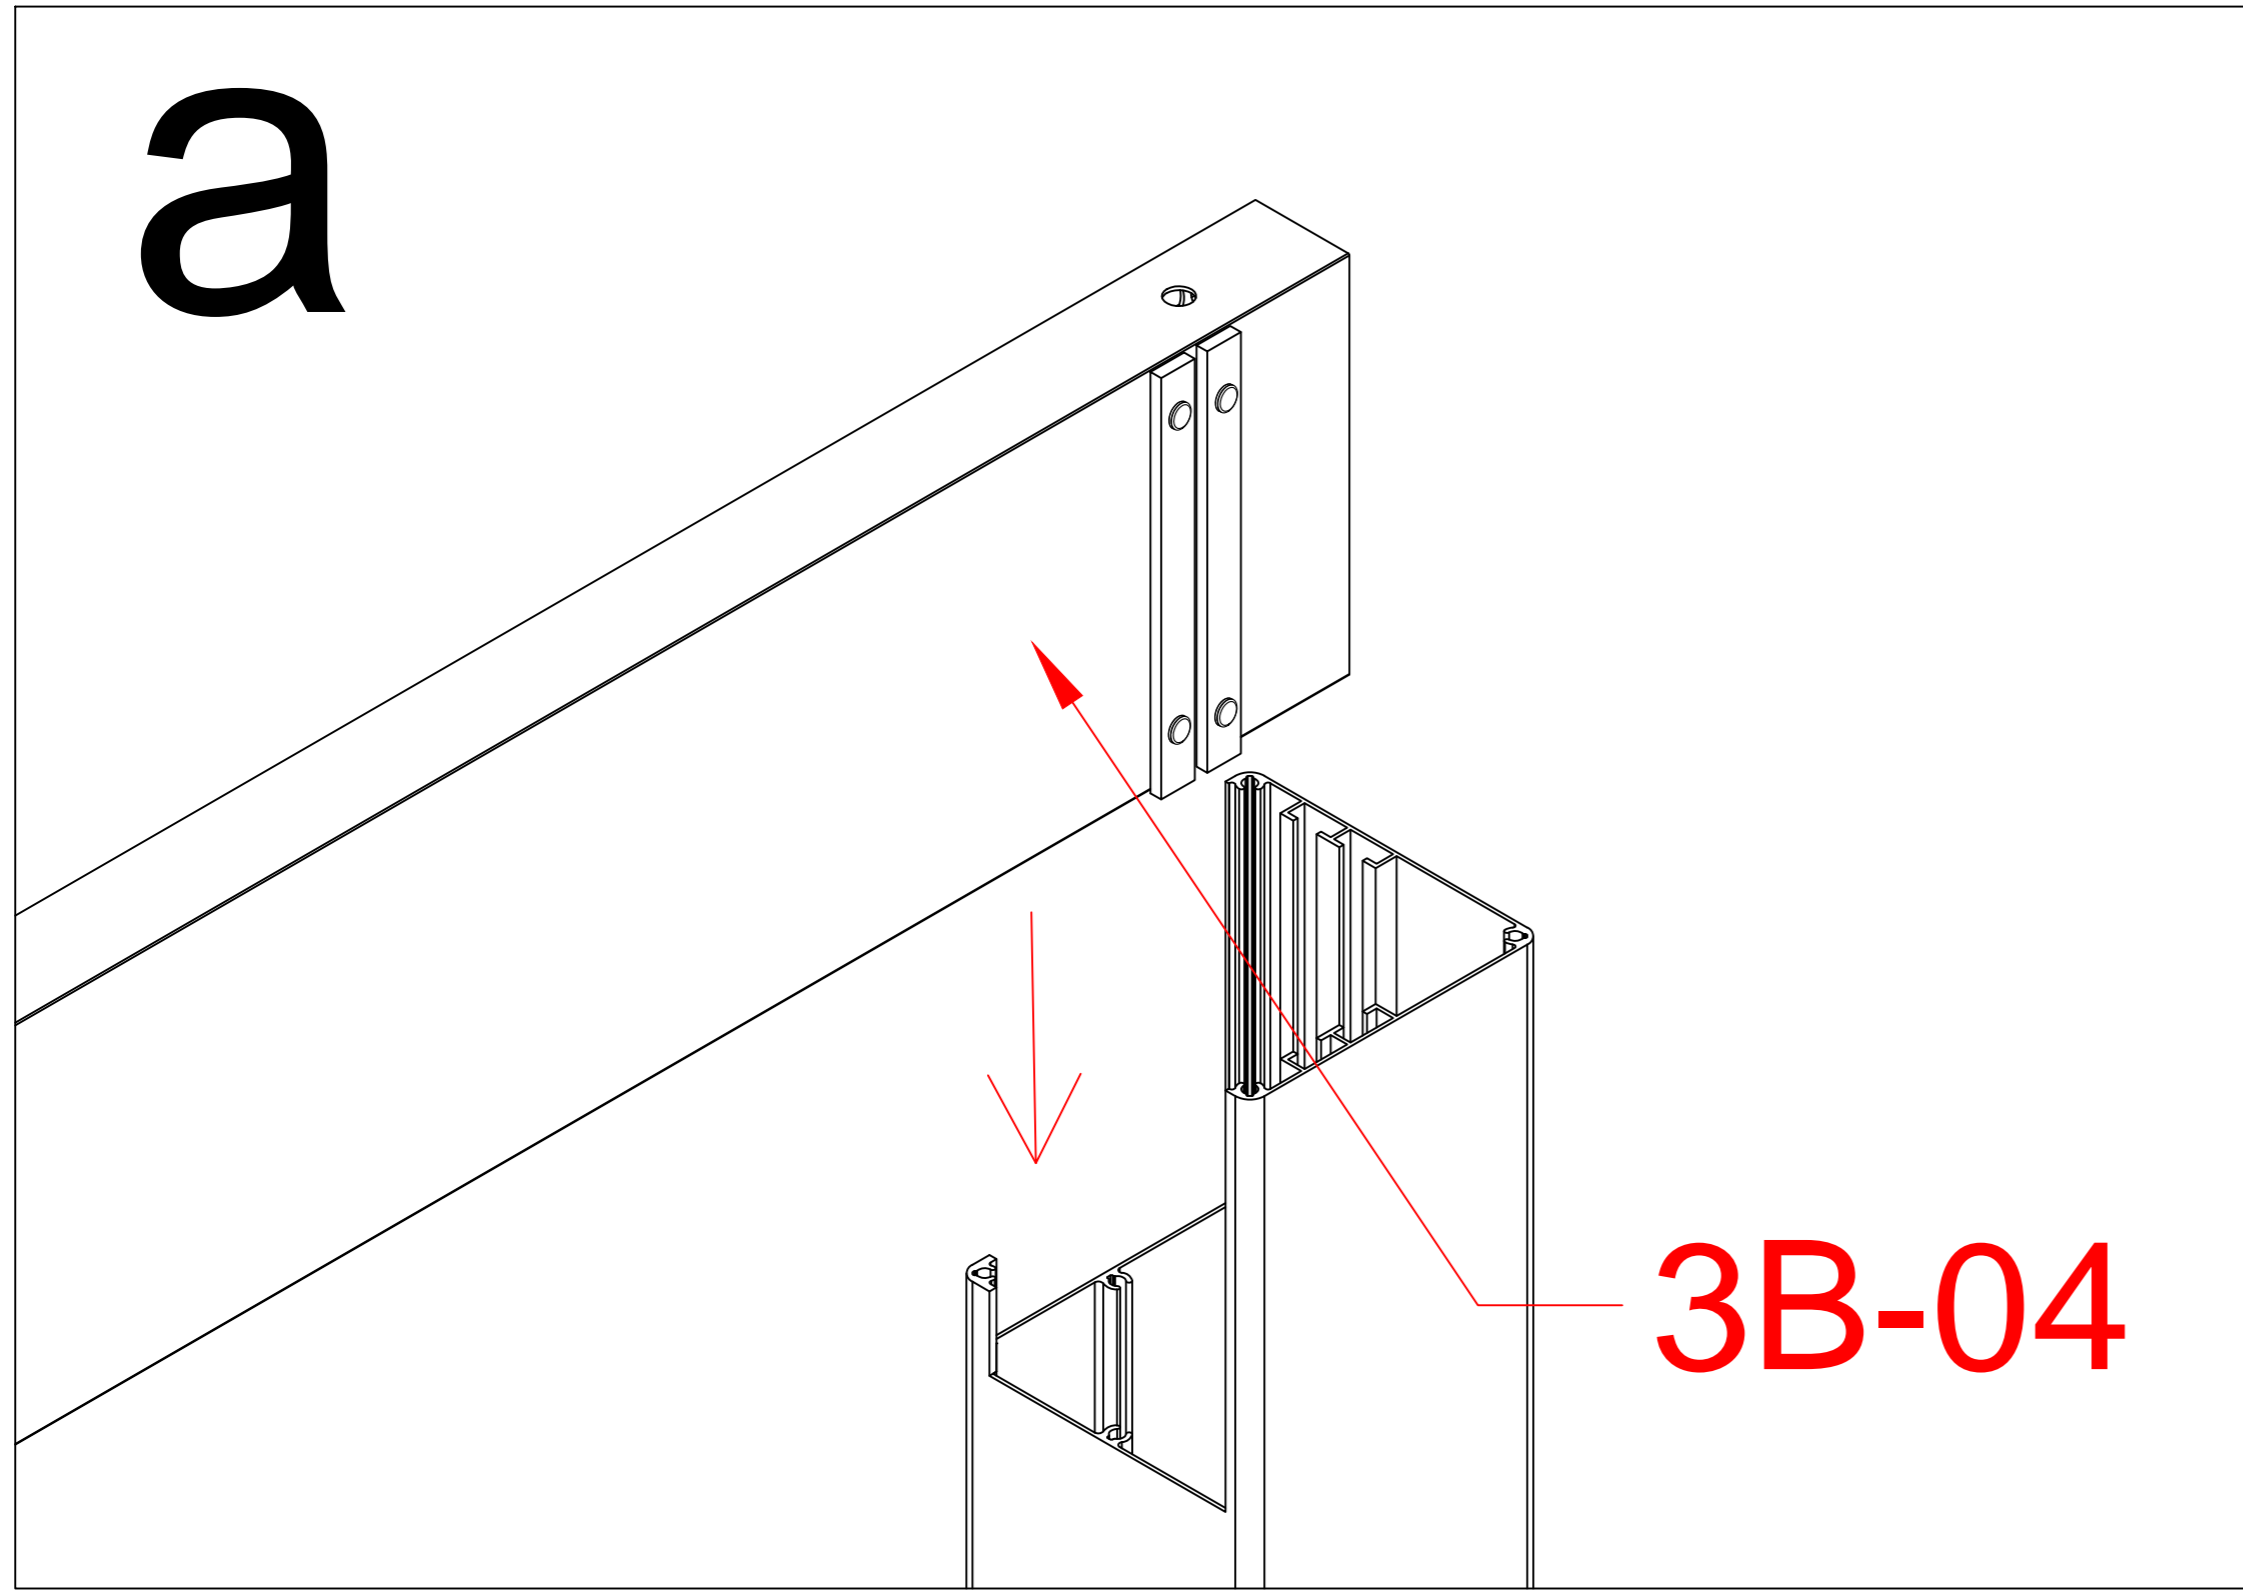

3B-04		2
3B-18		1

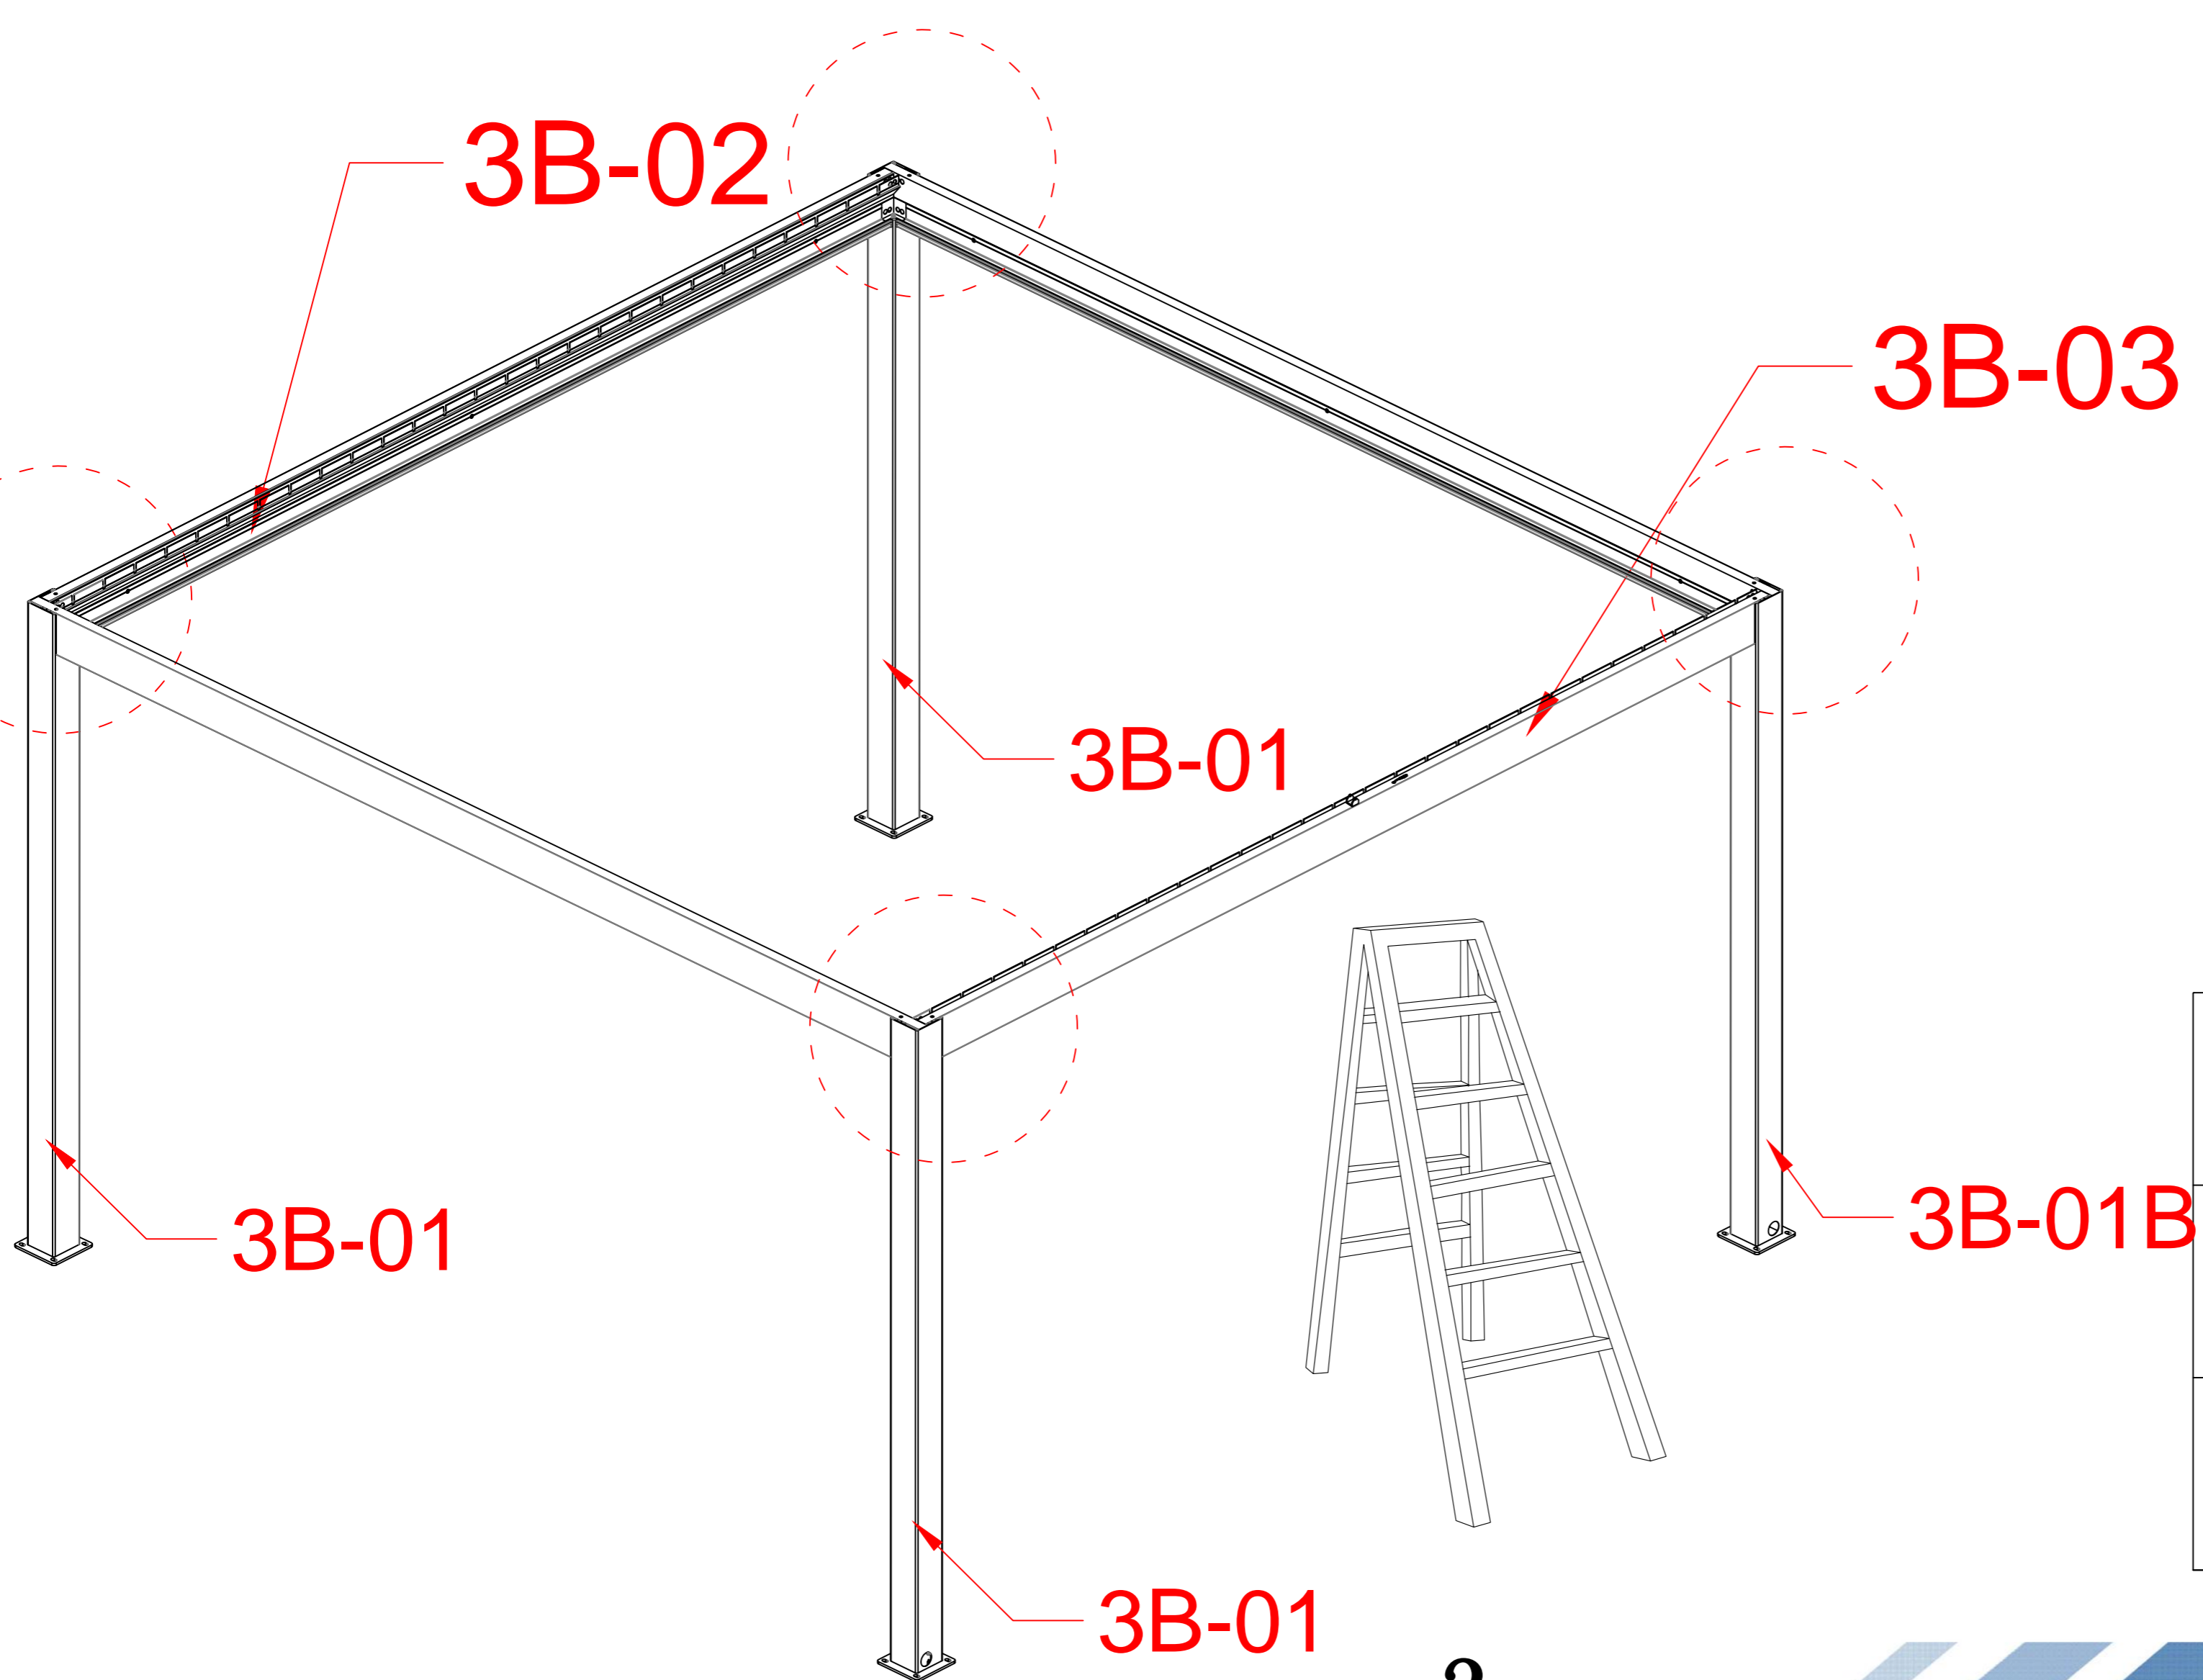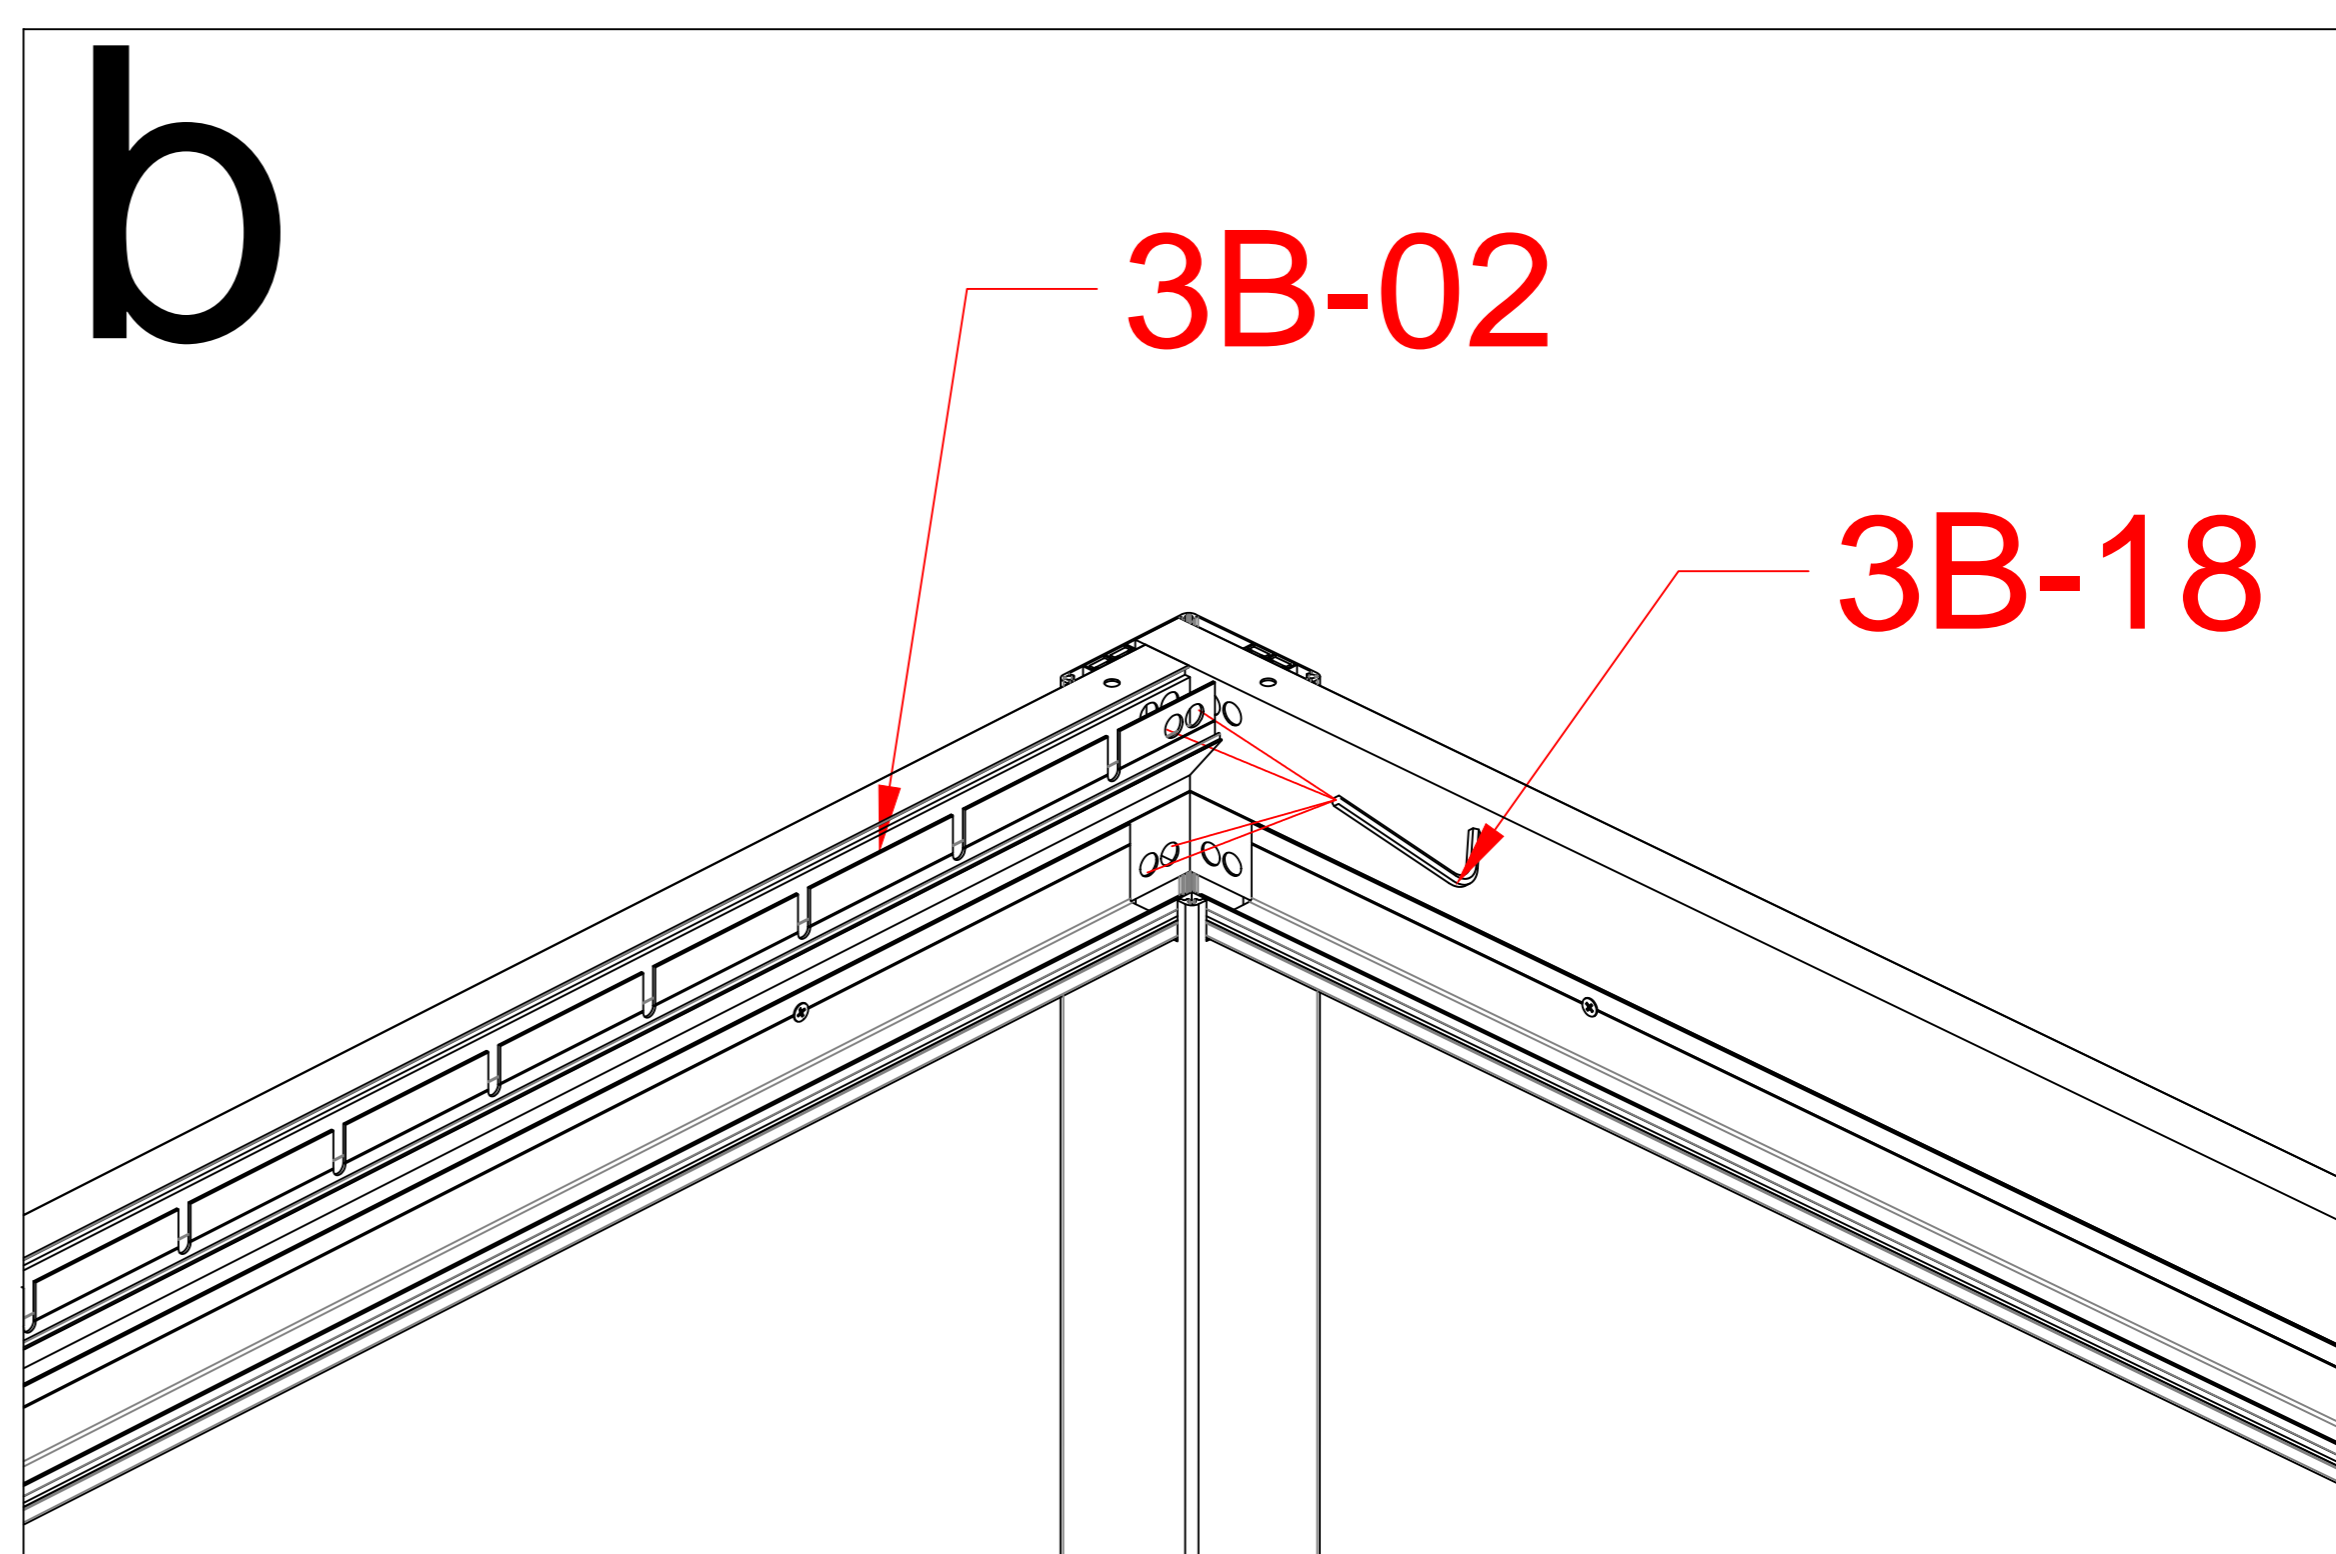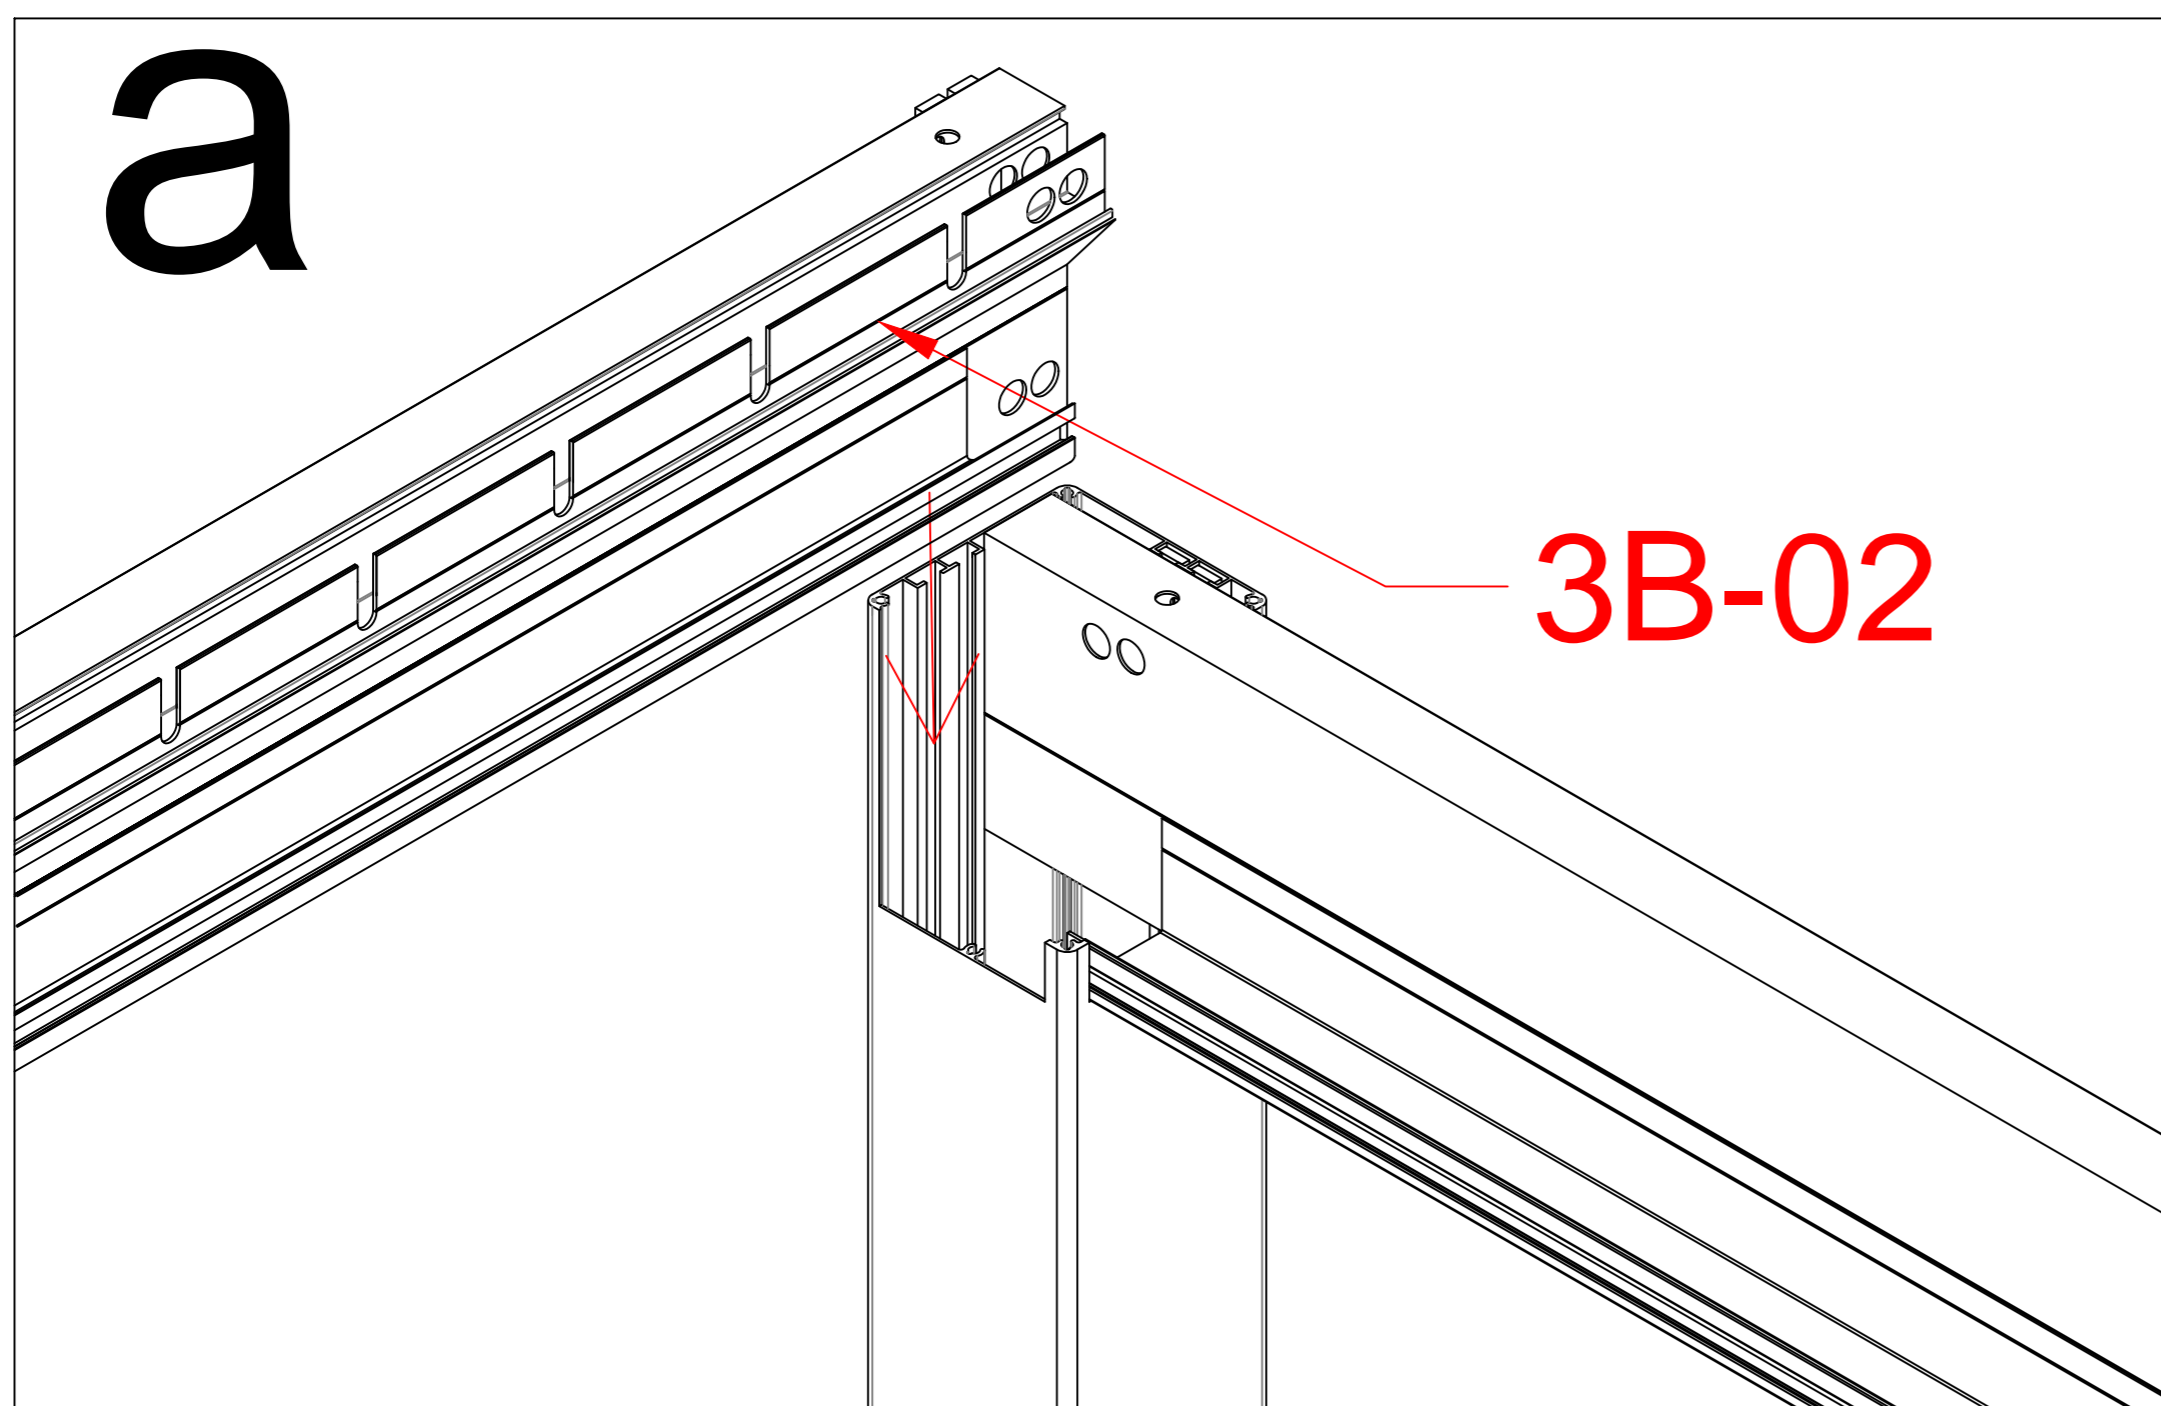

3


3B-02		1
3B-03		1
3B-18		1







a


3B-21

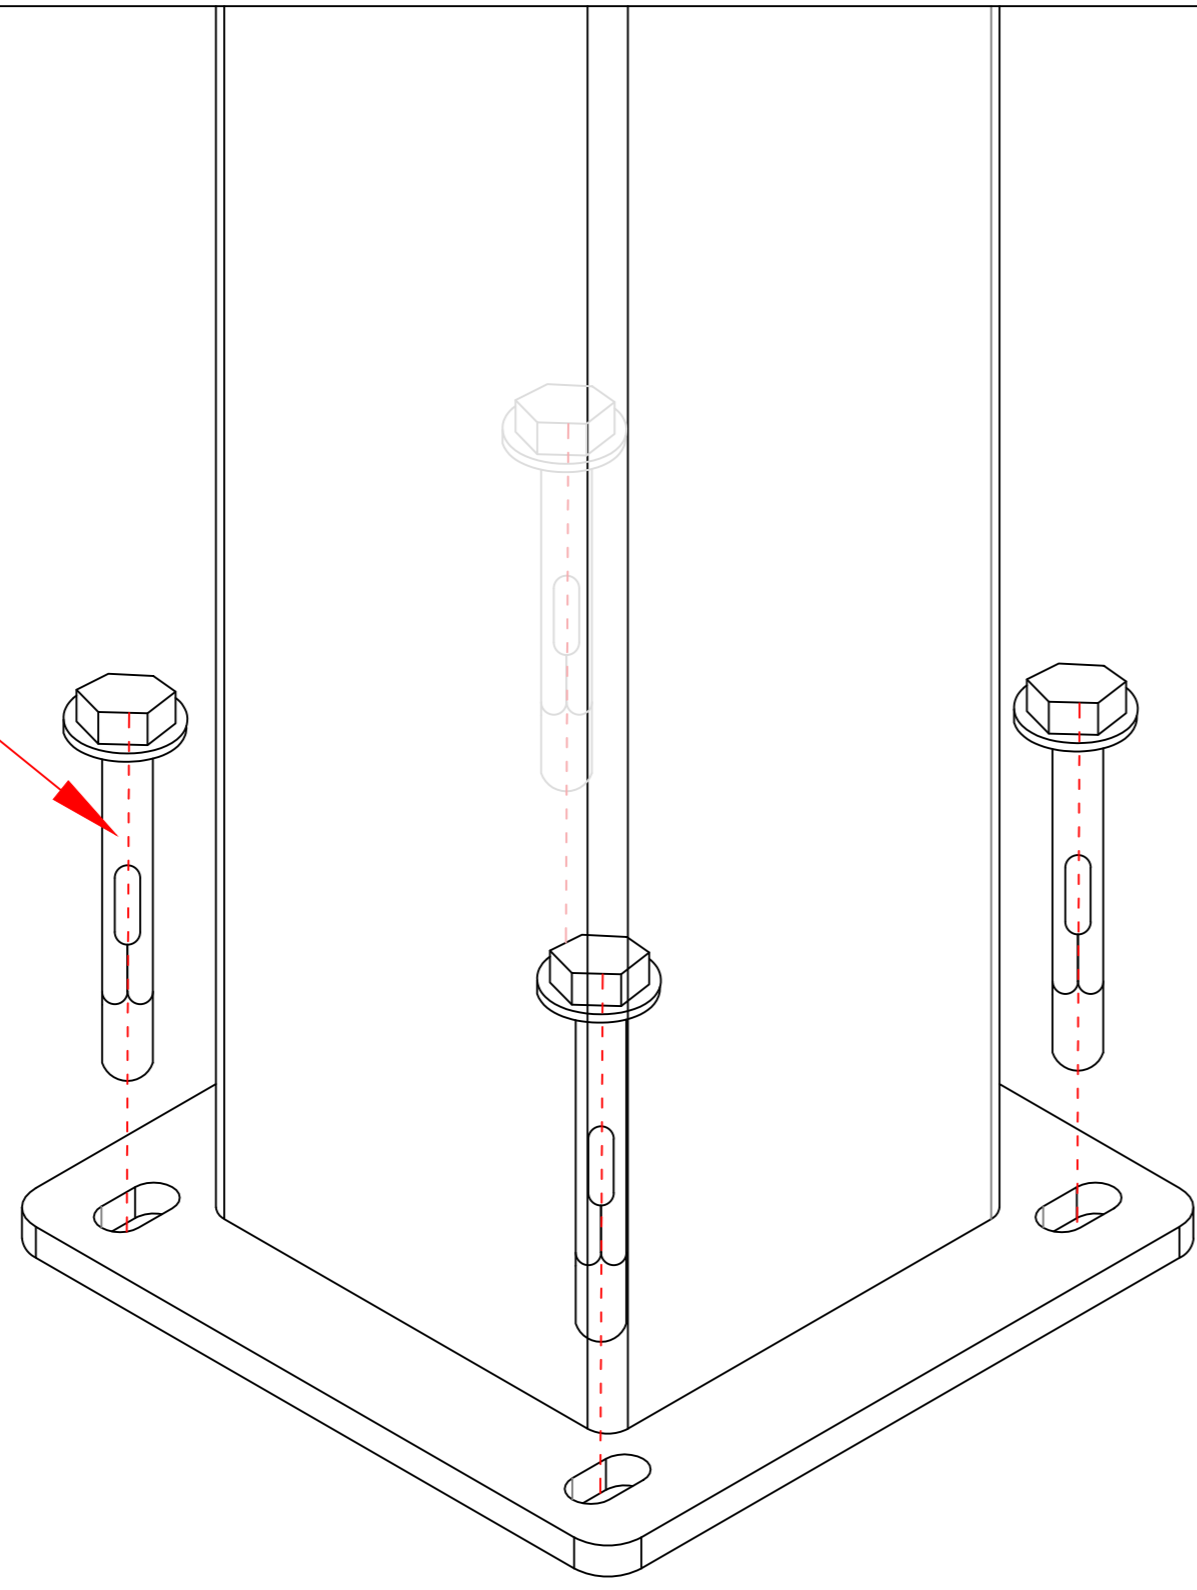





b




3B-21

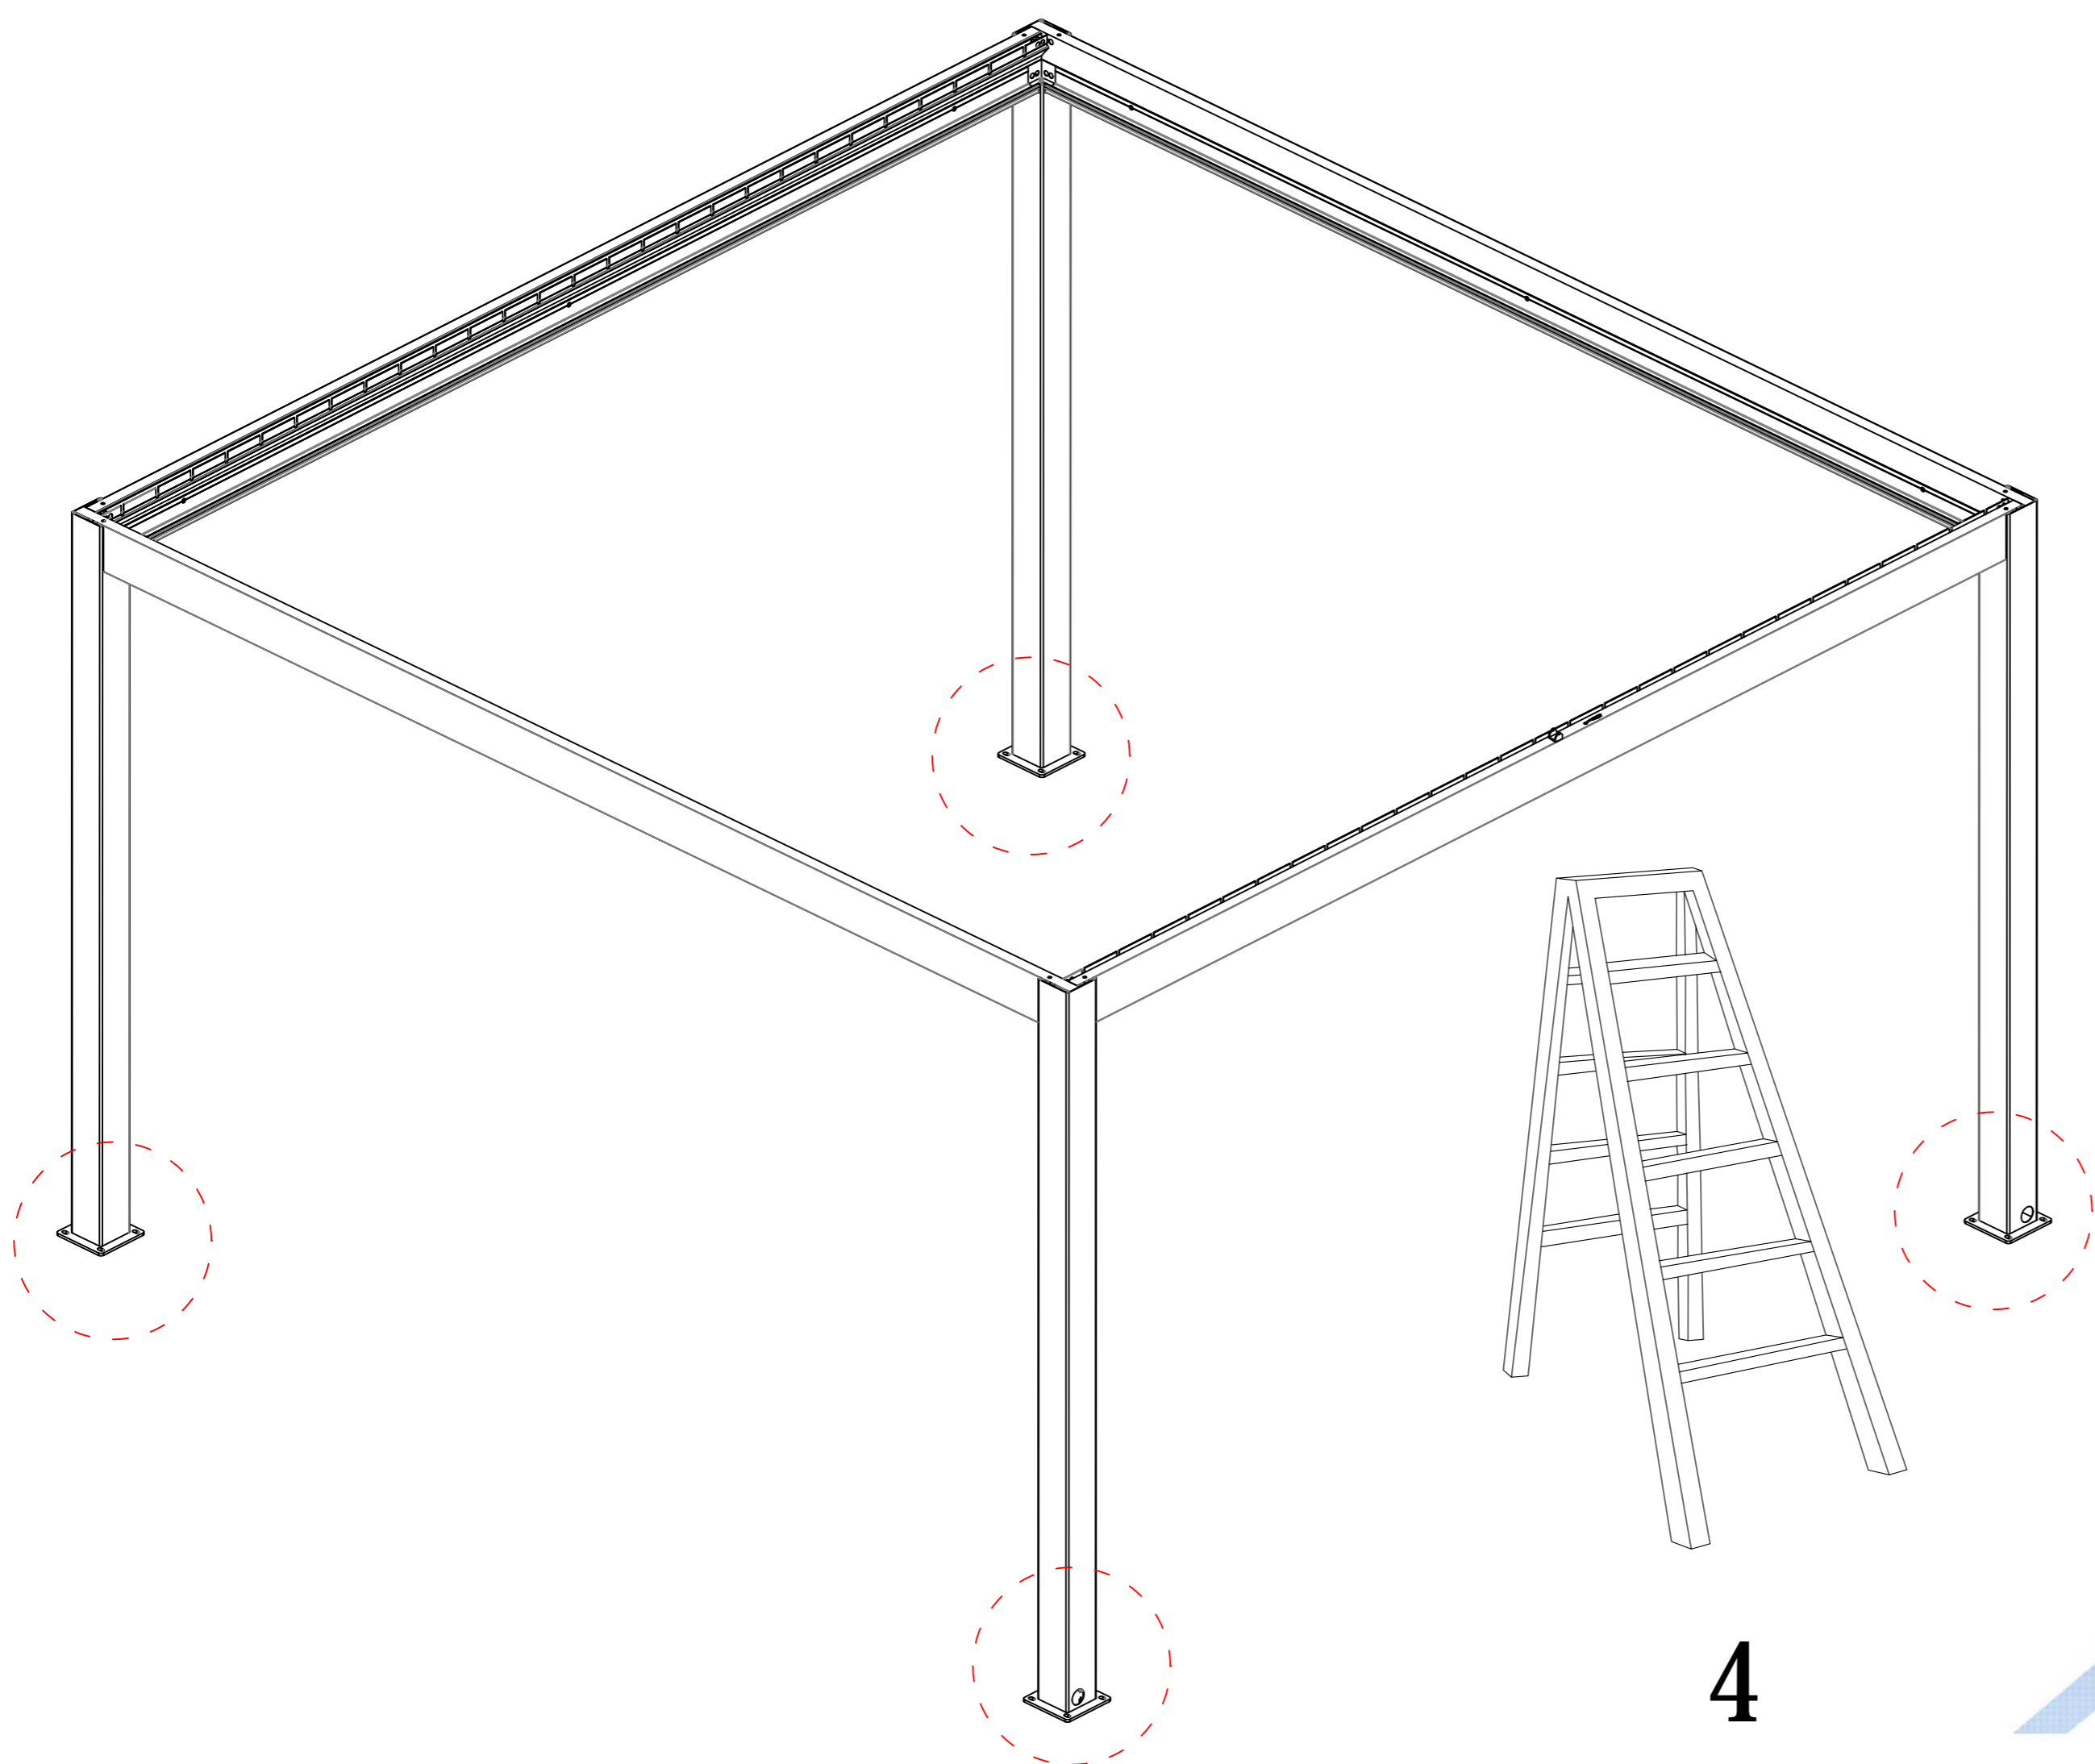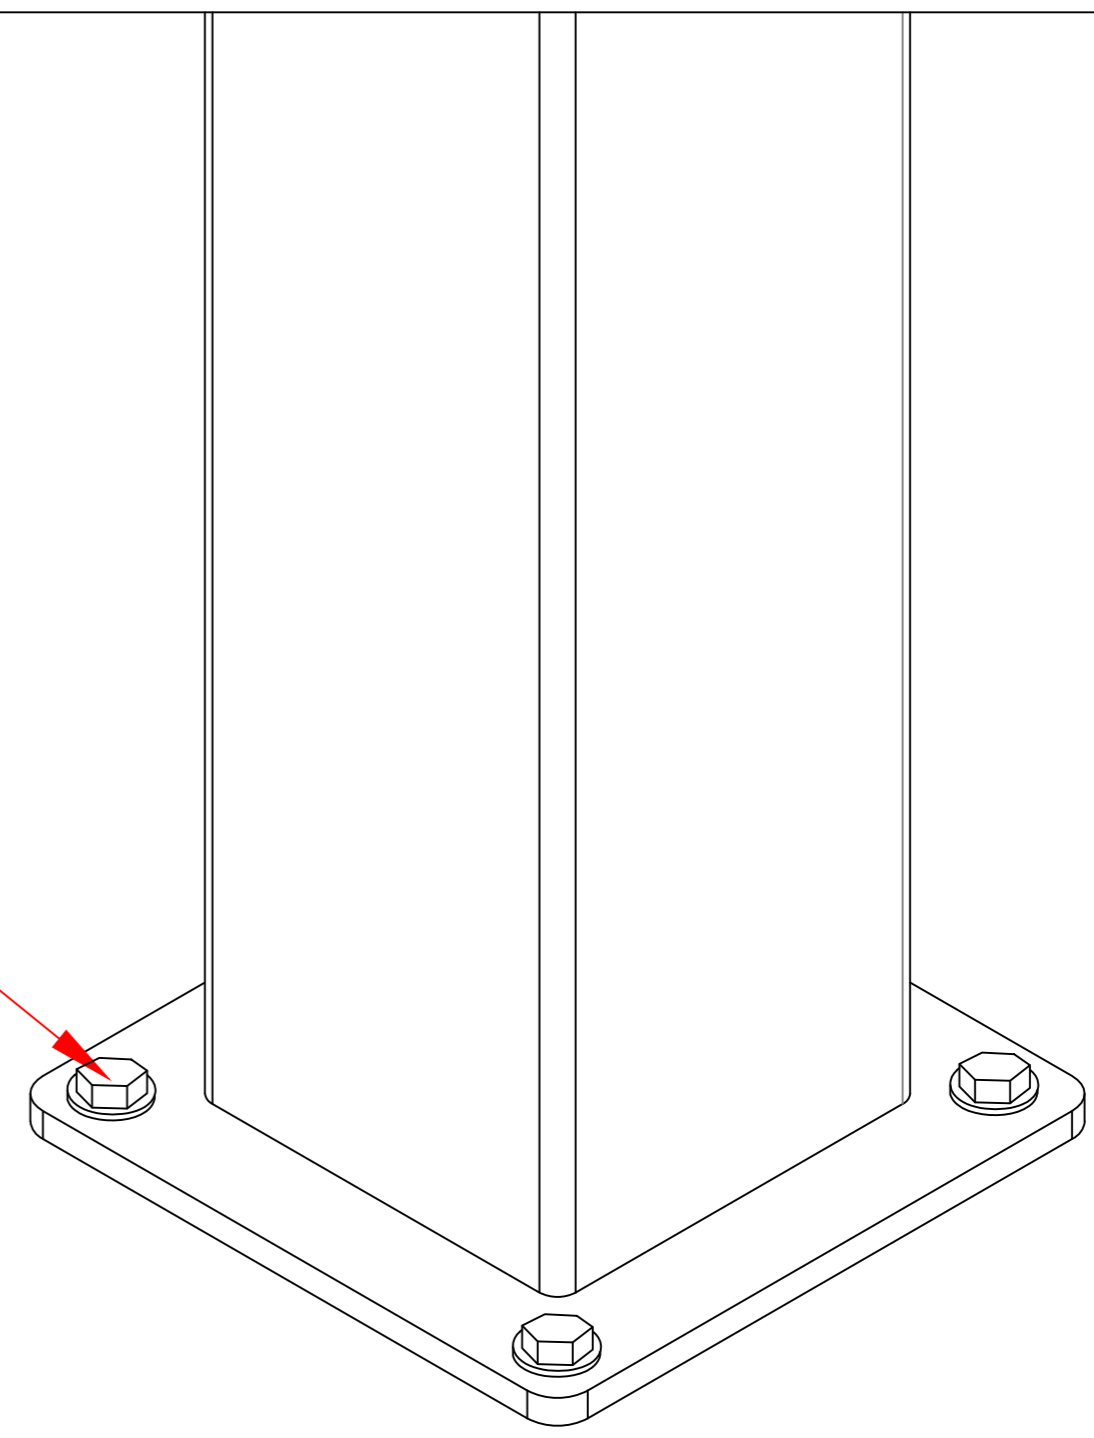




3B-21		16
-------	---	----



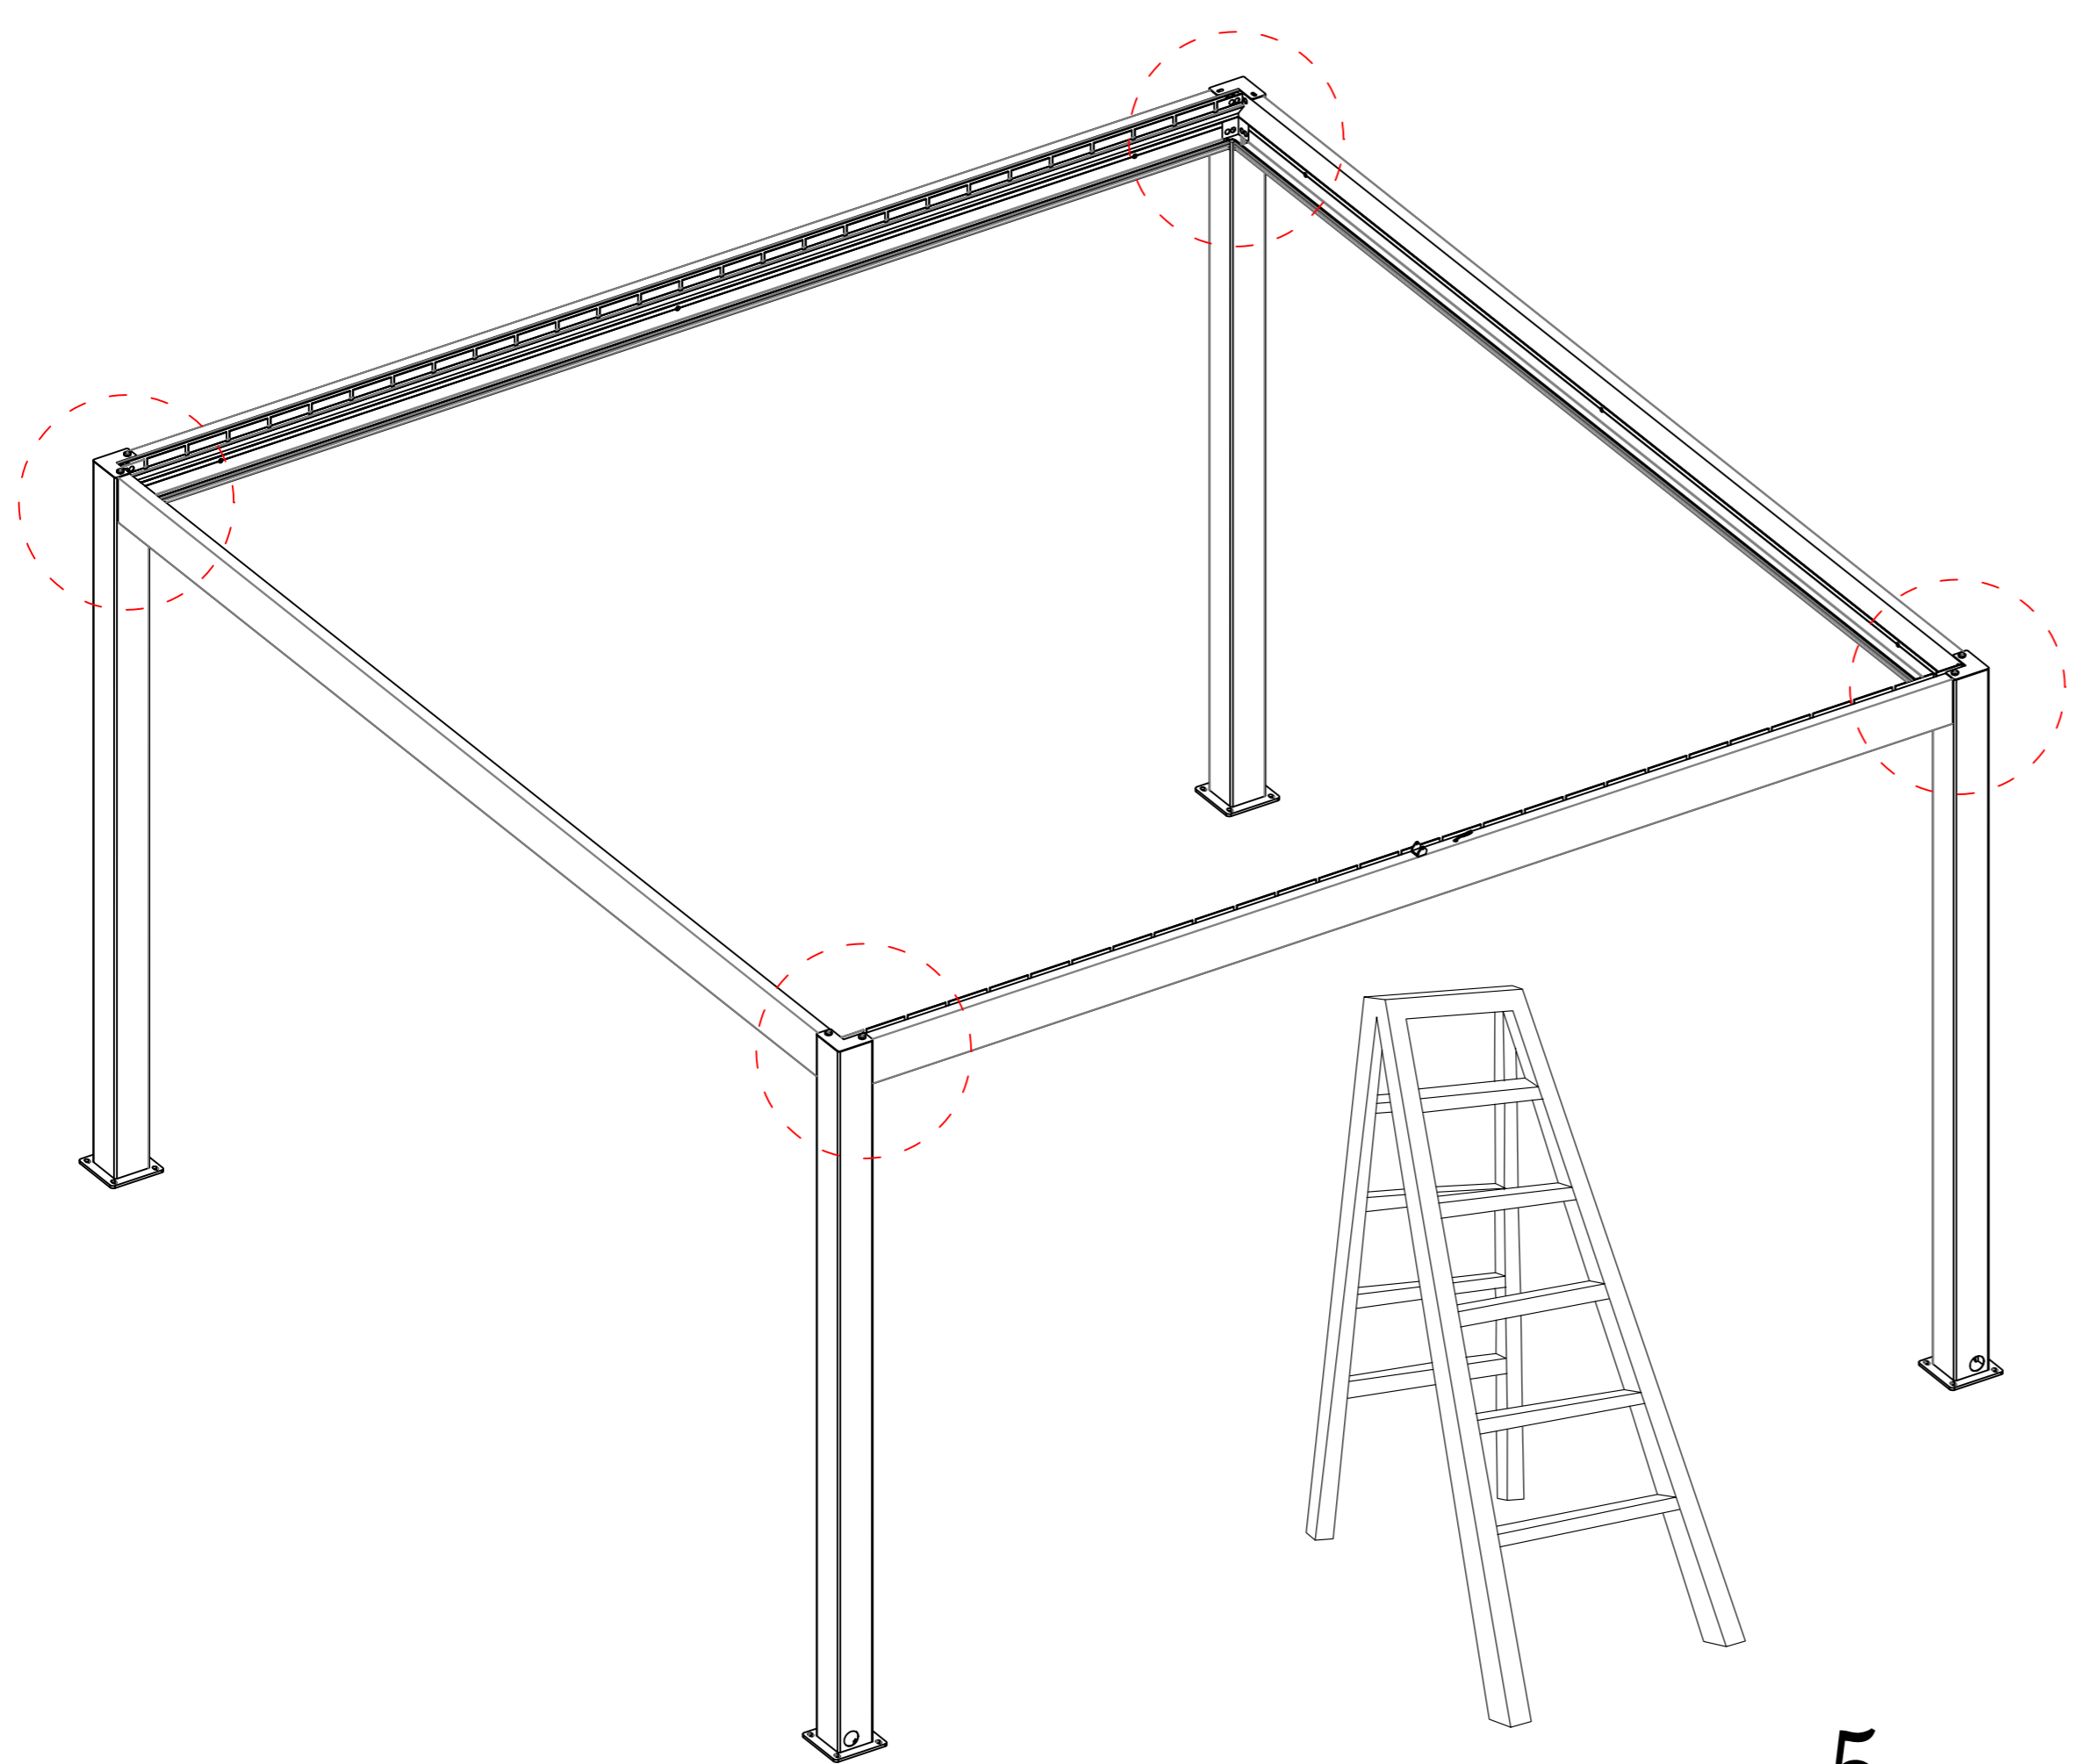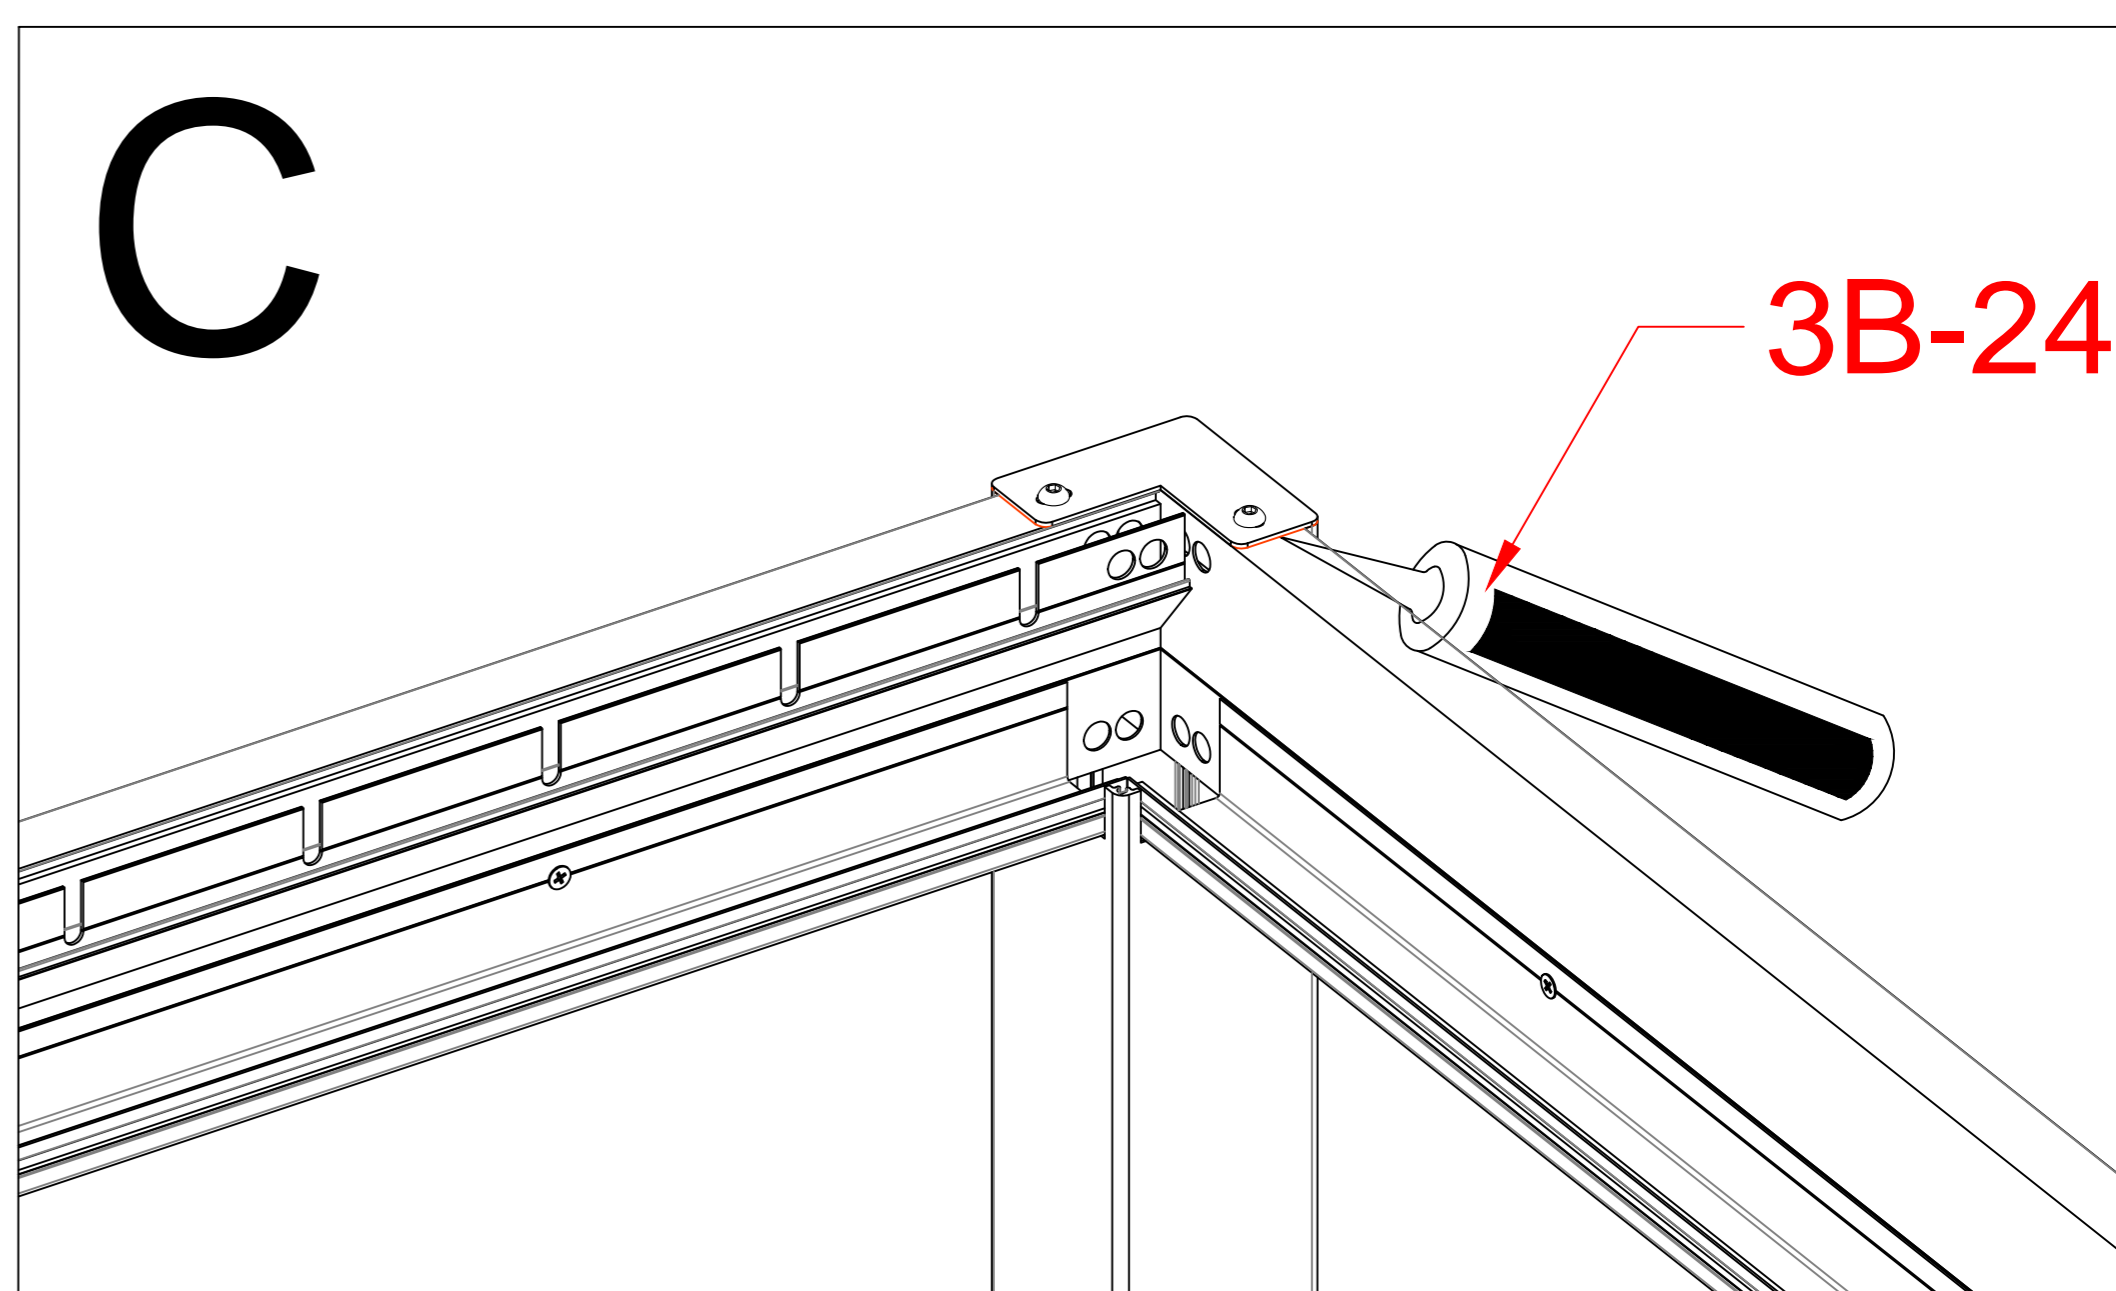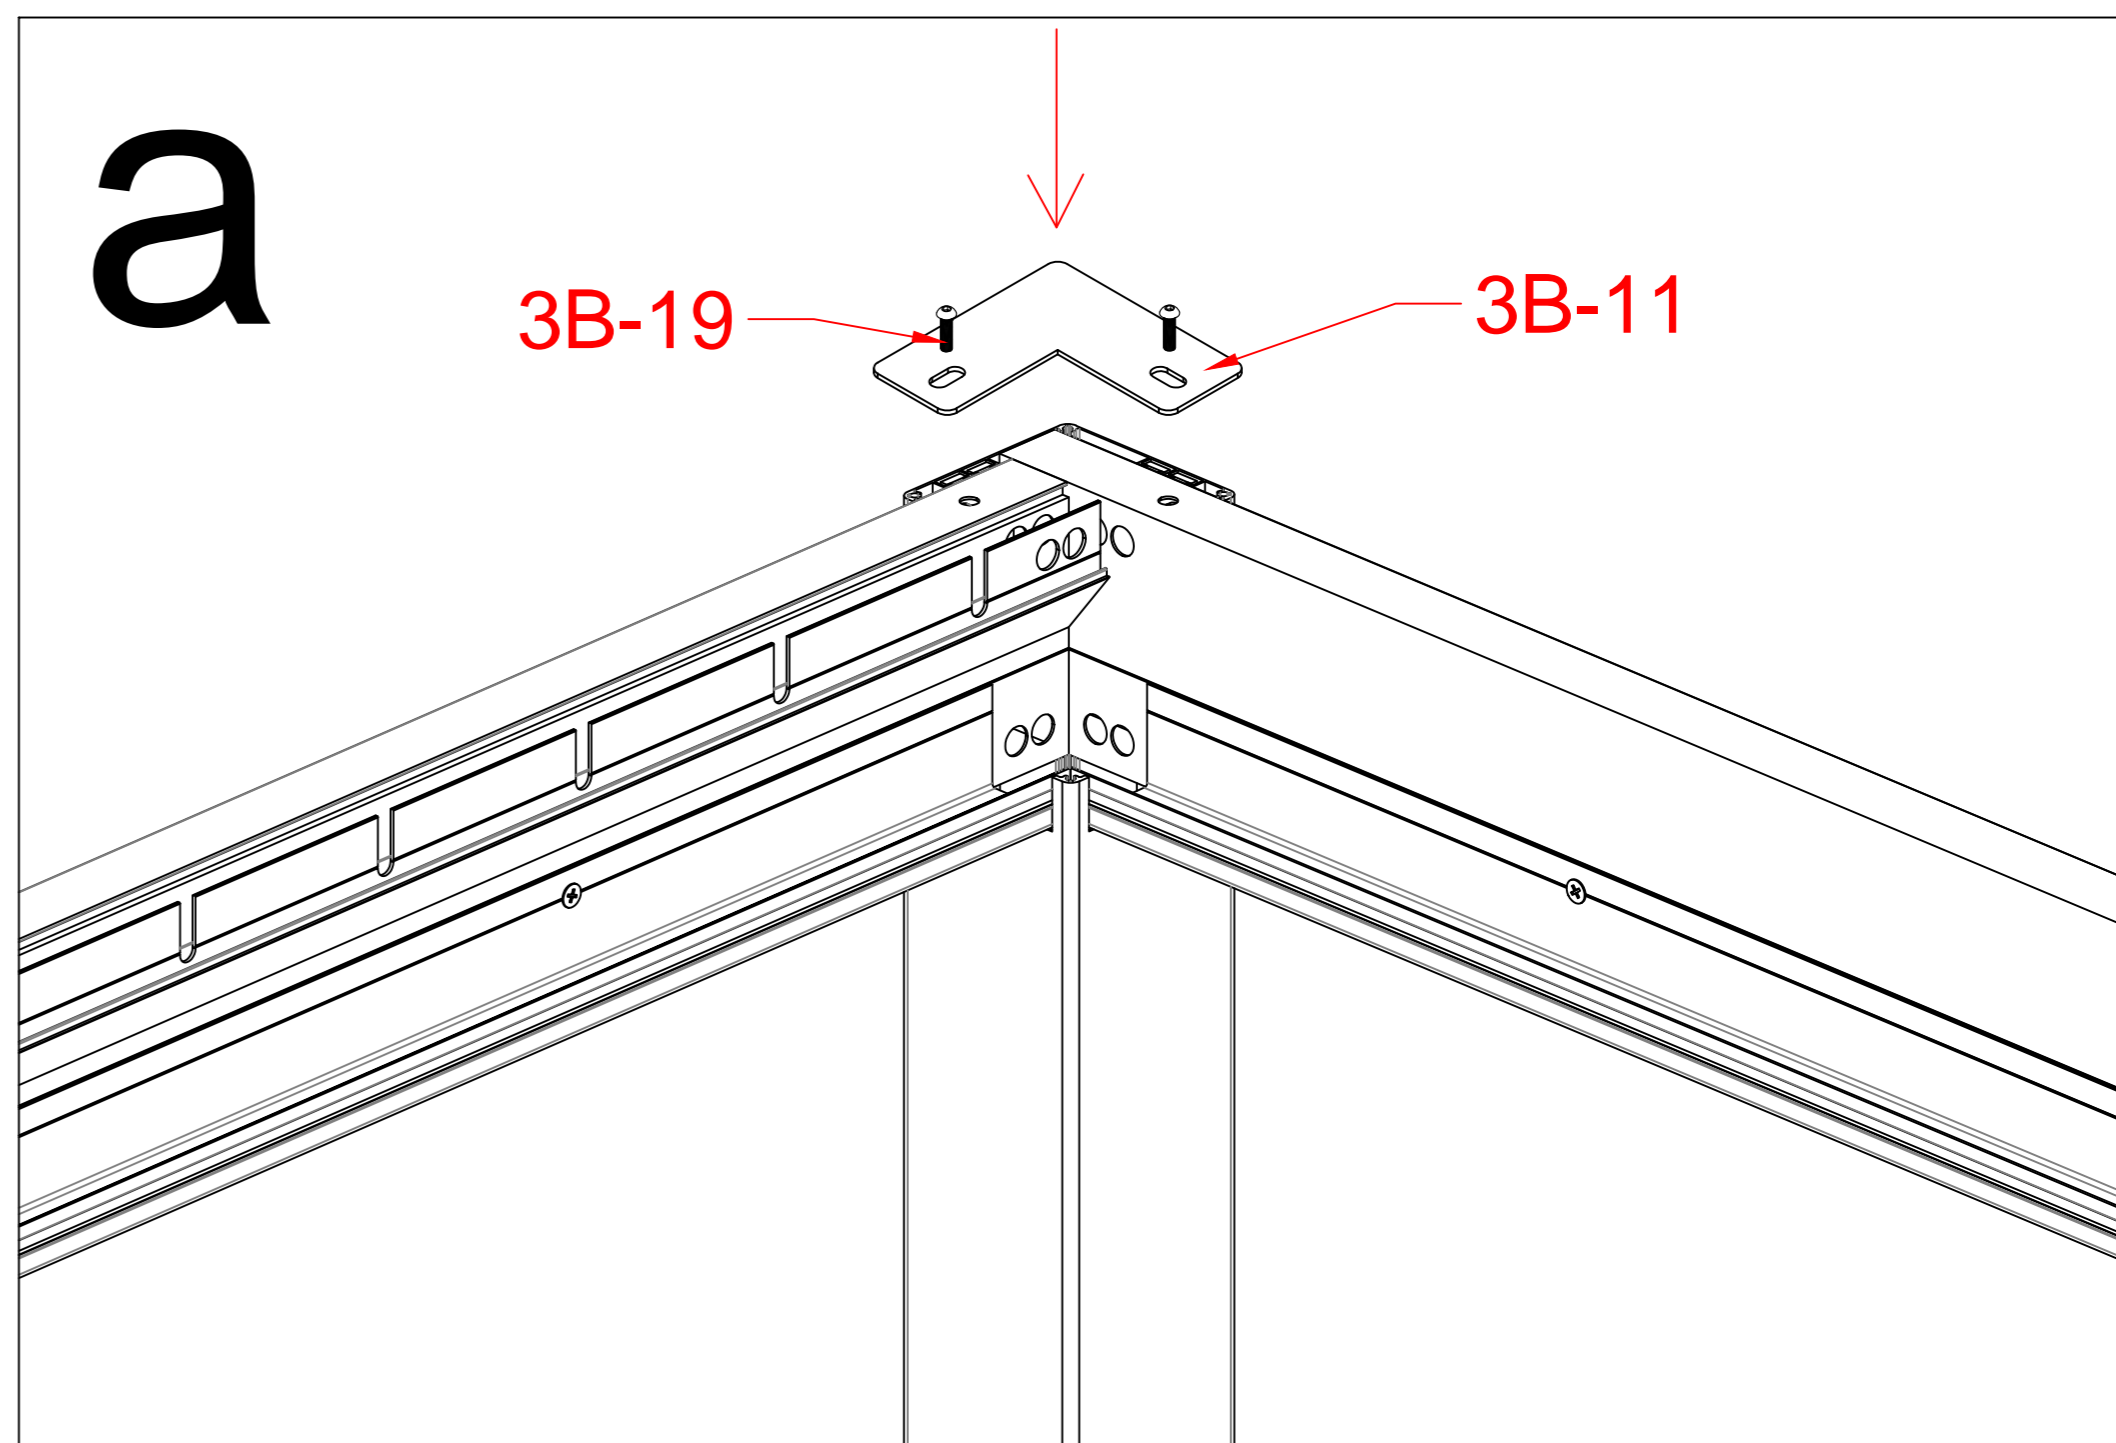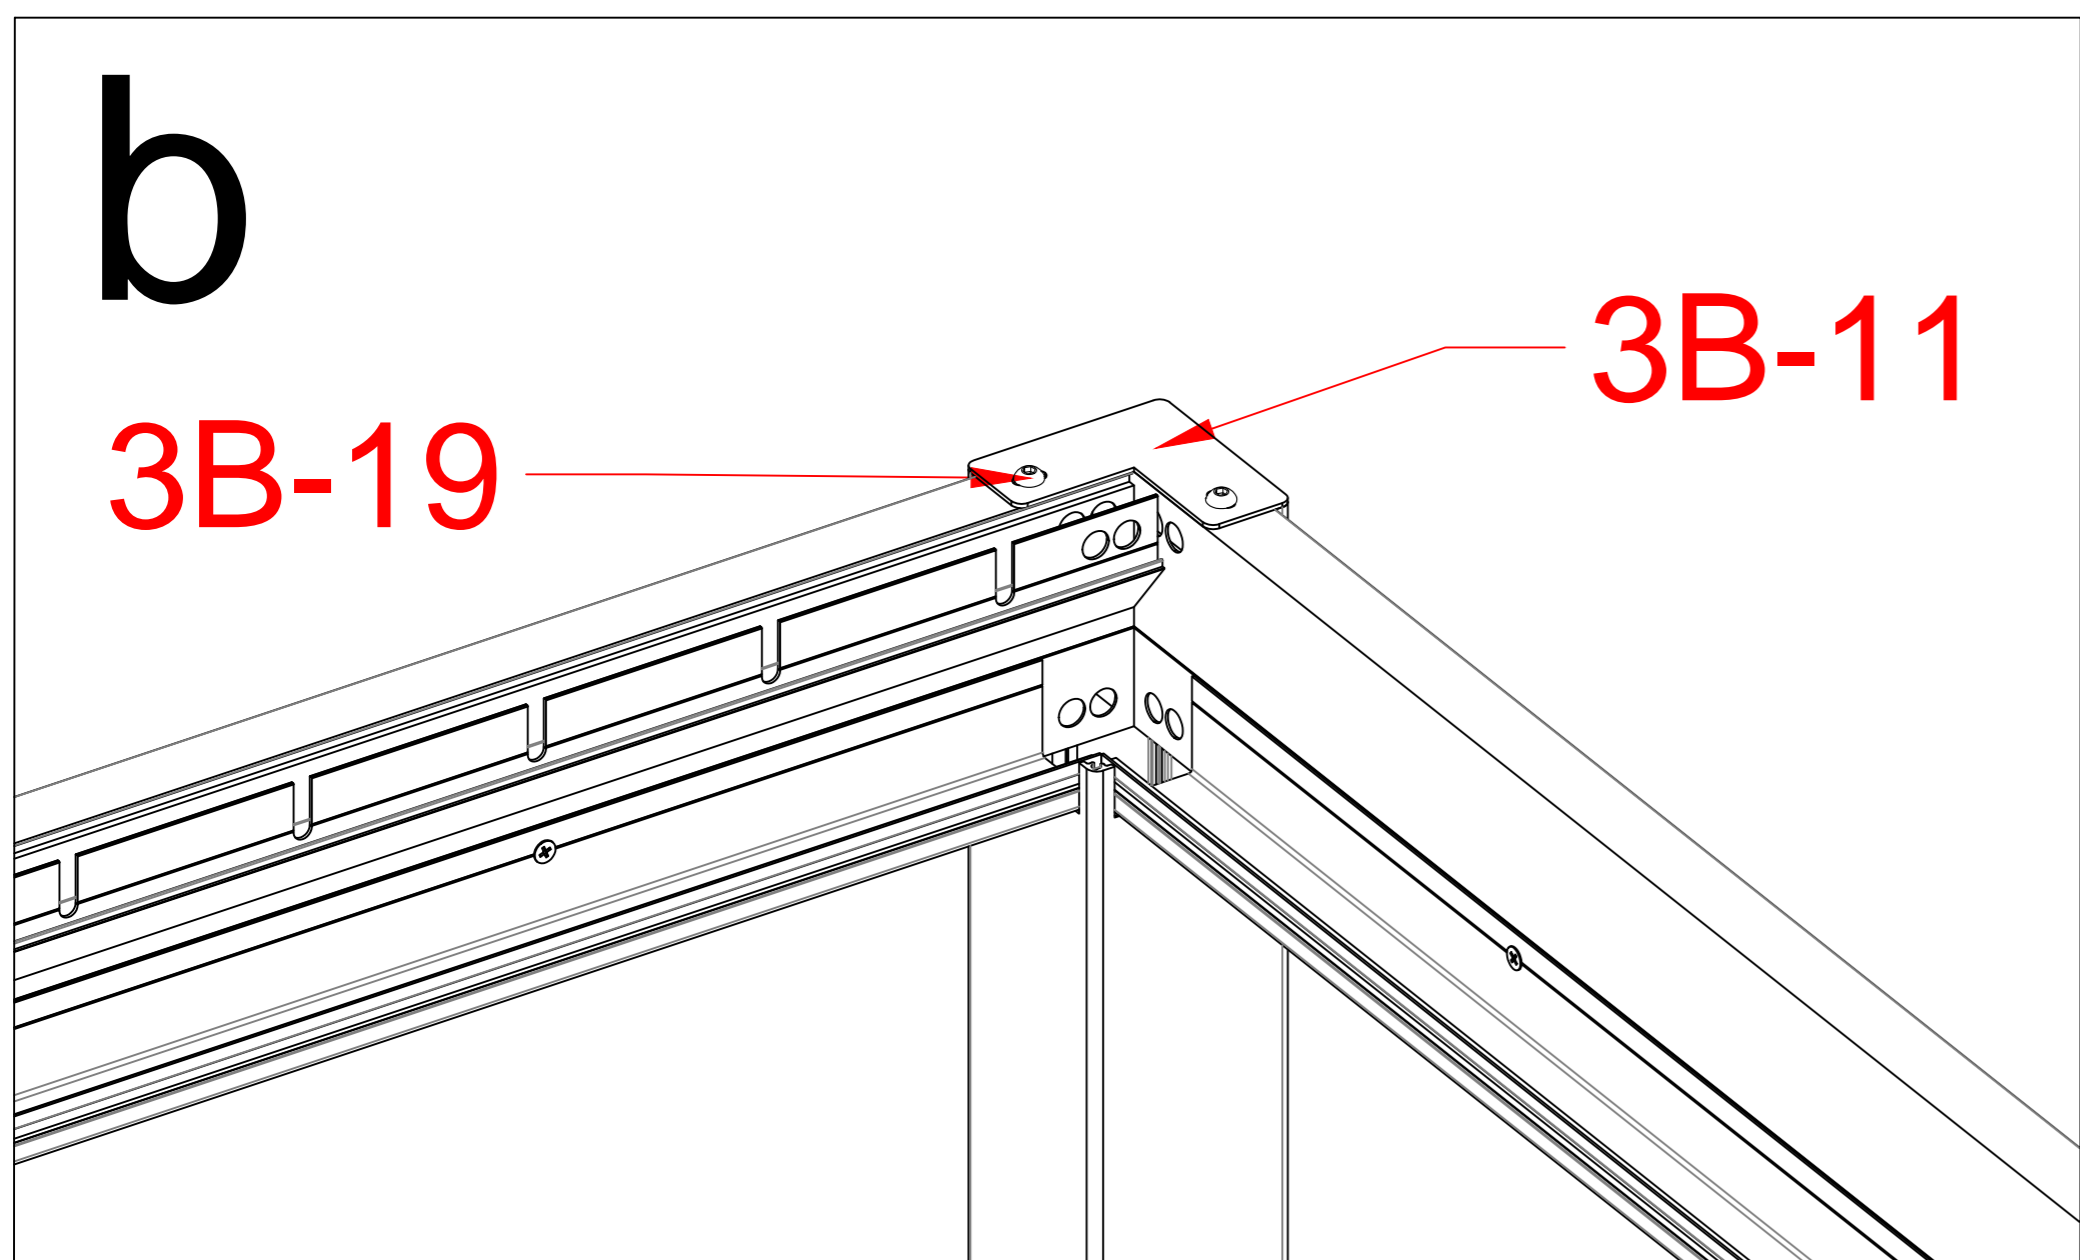

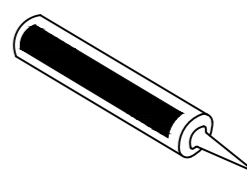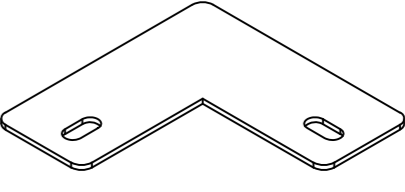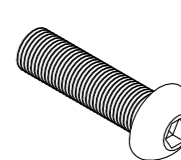3B-24		1
3B-11		4
3B-19		8



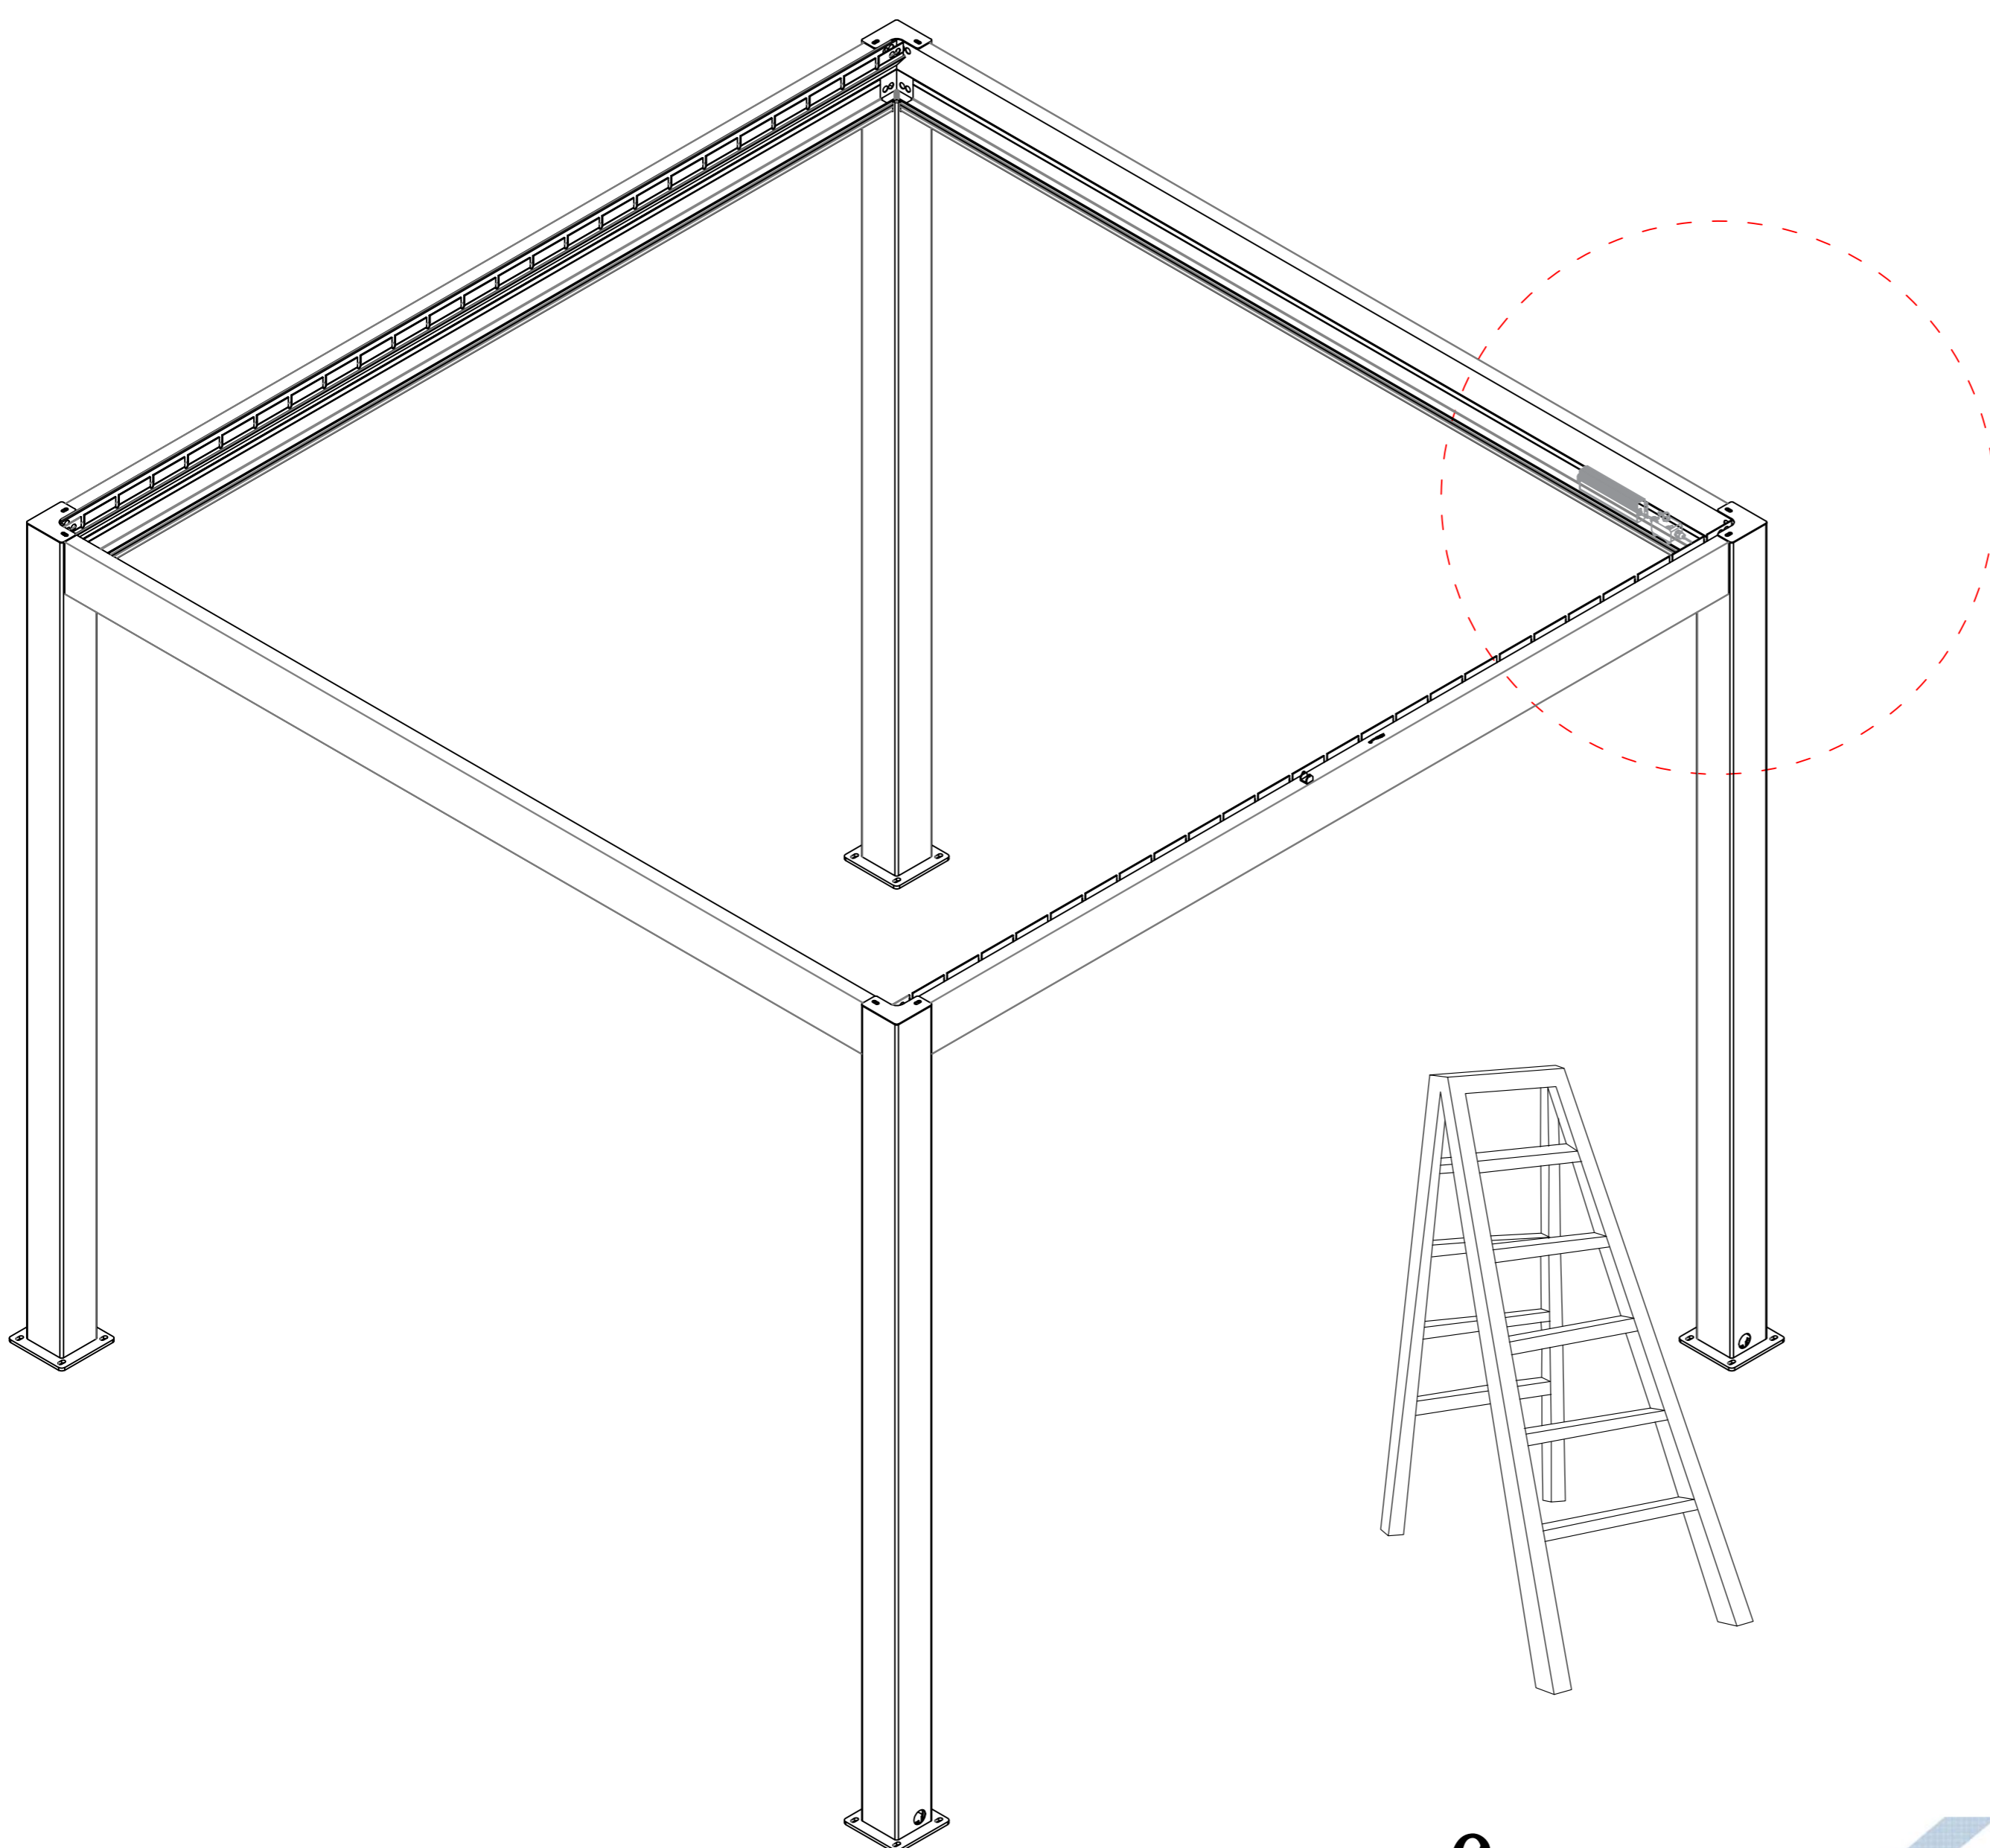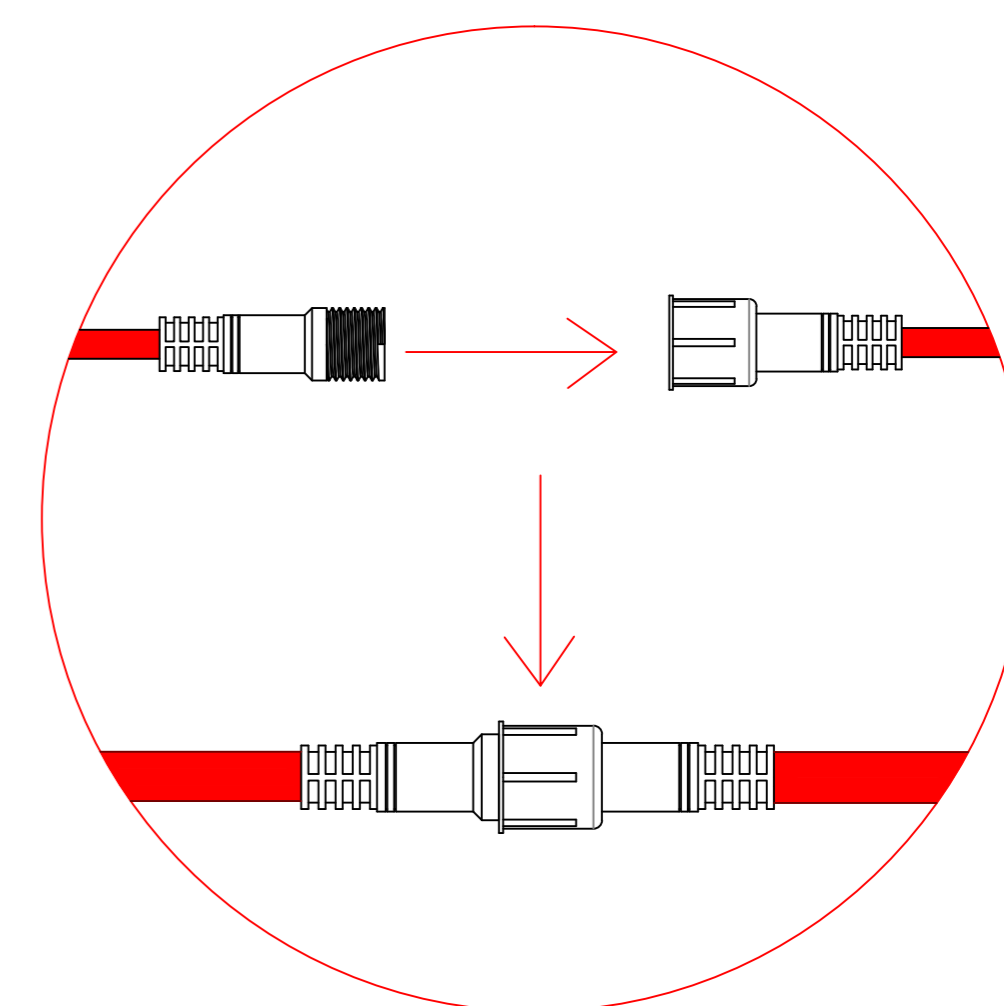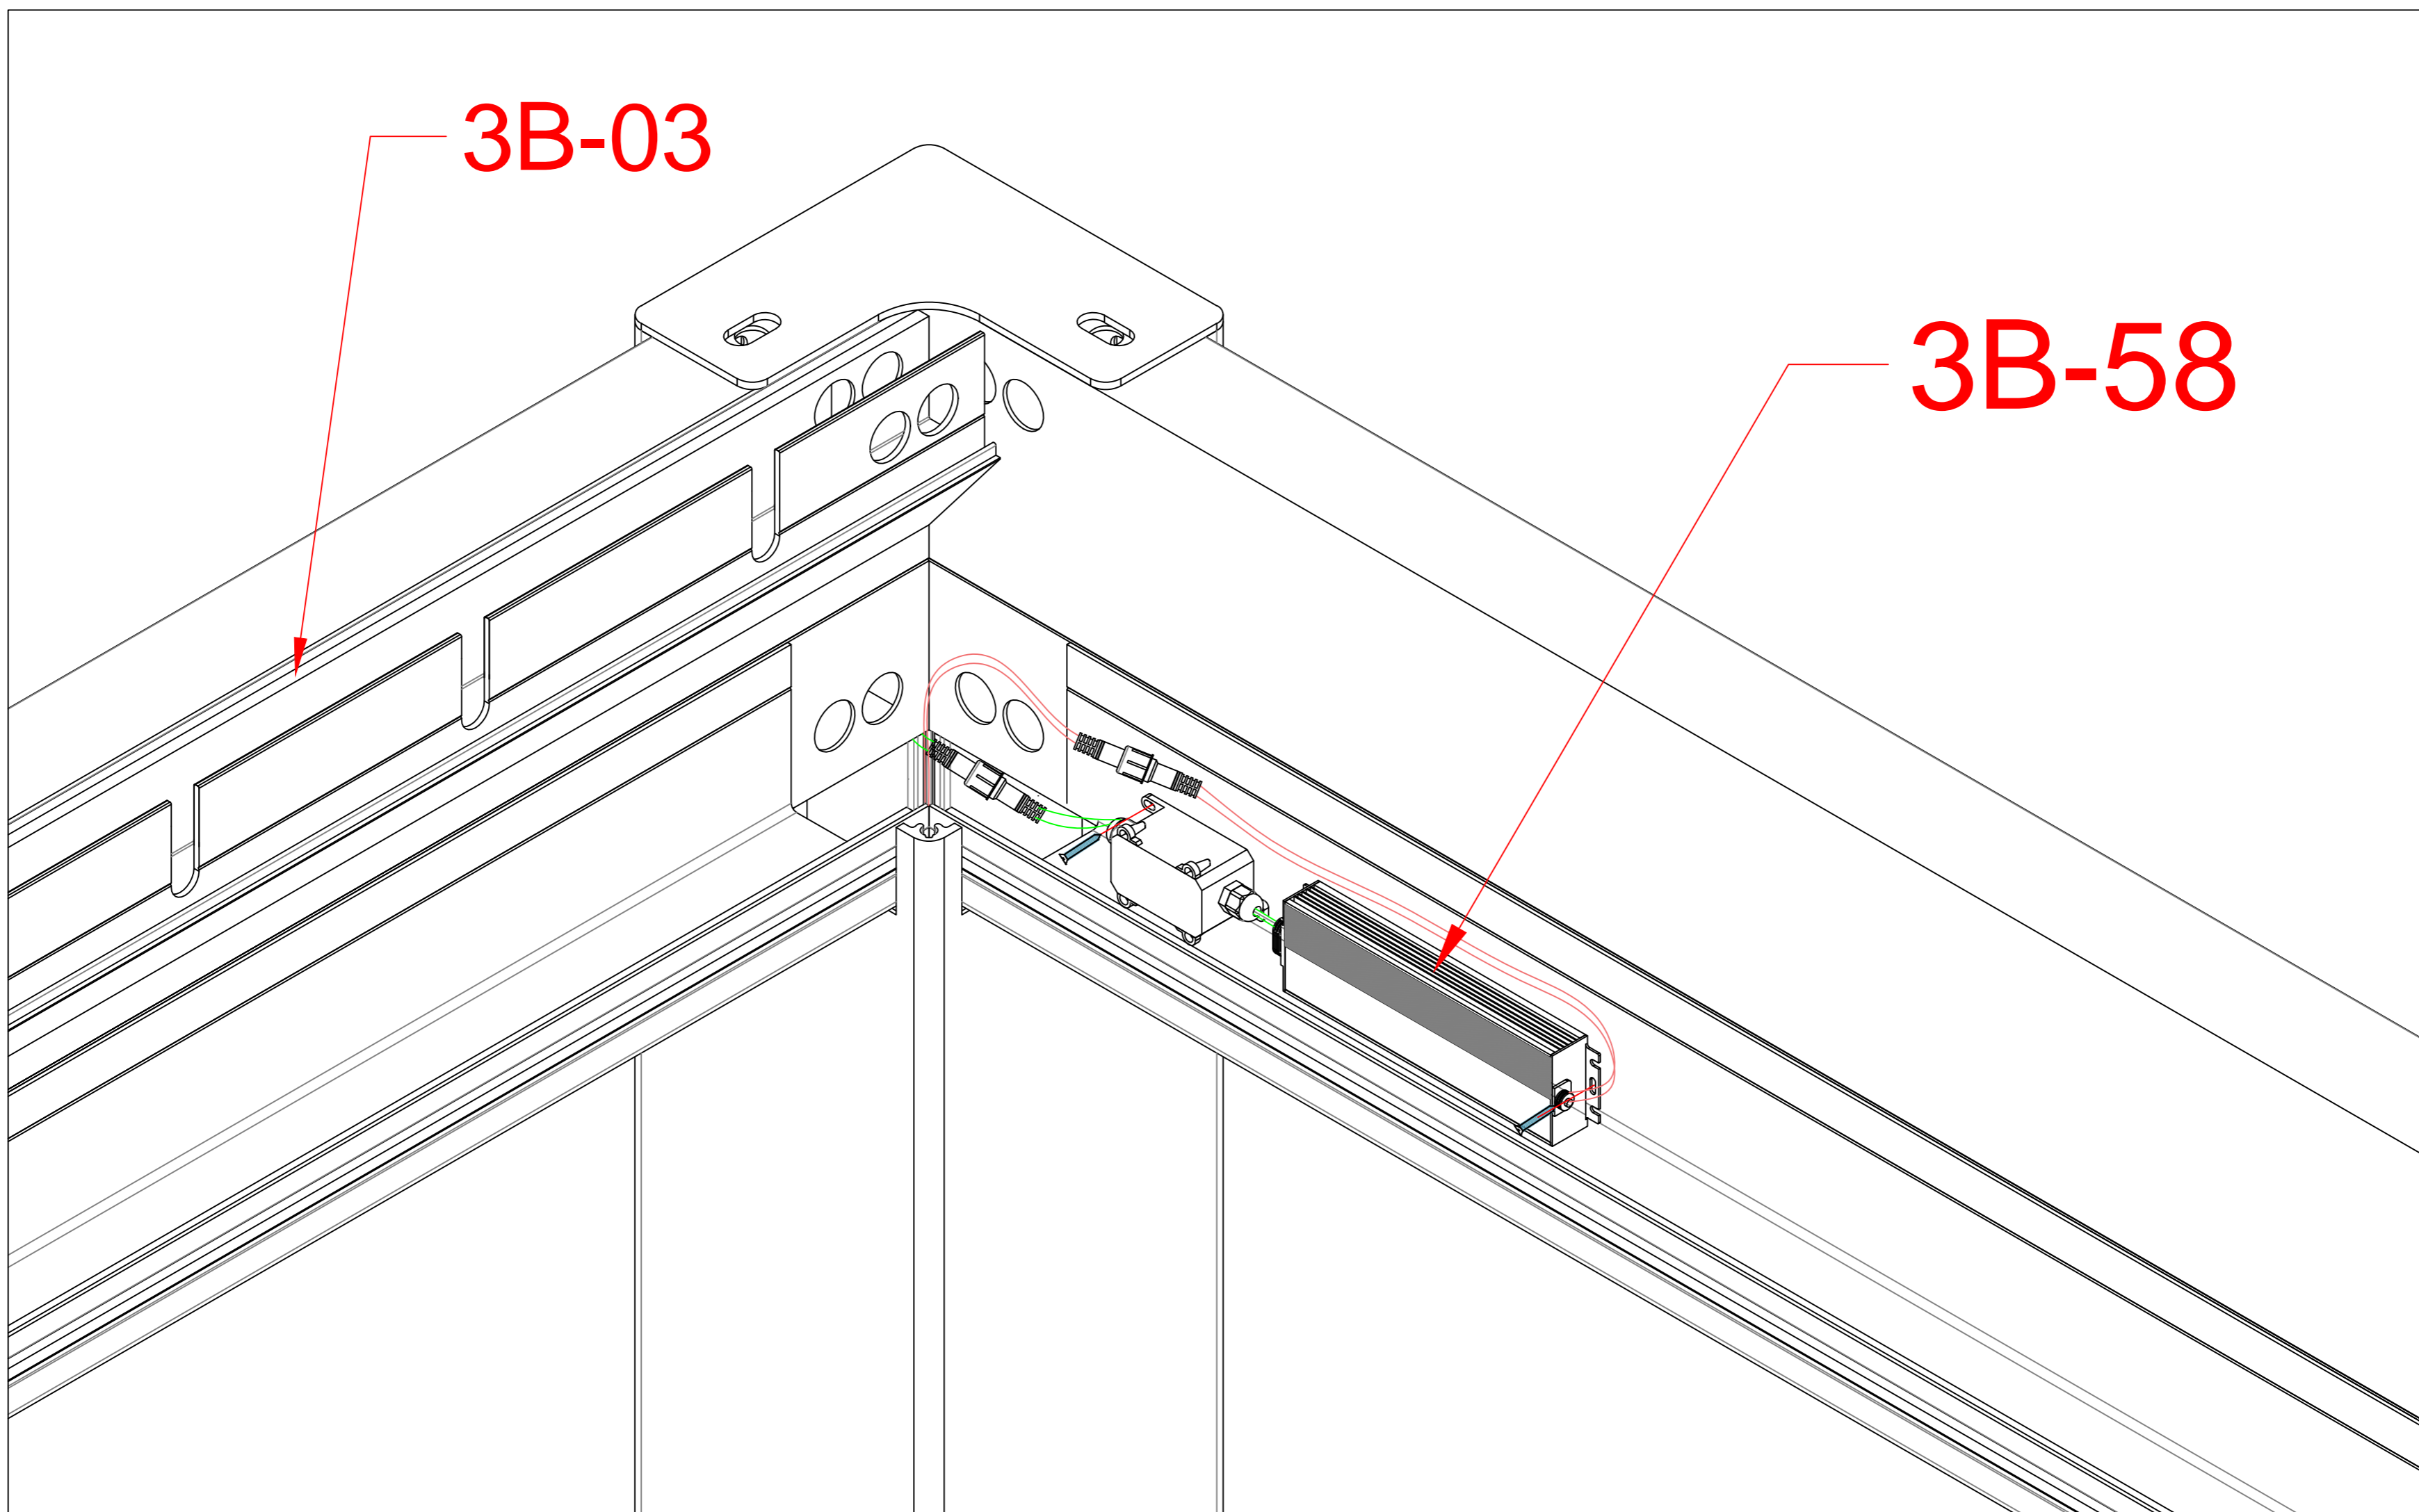


6

3B-58		1
-------	--	---









a






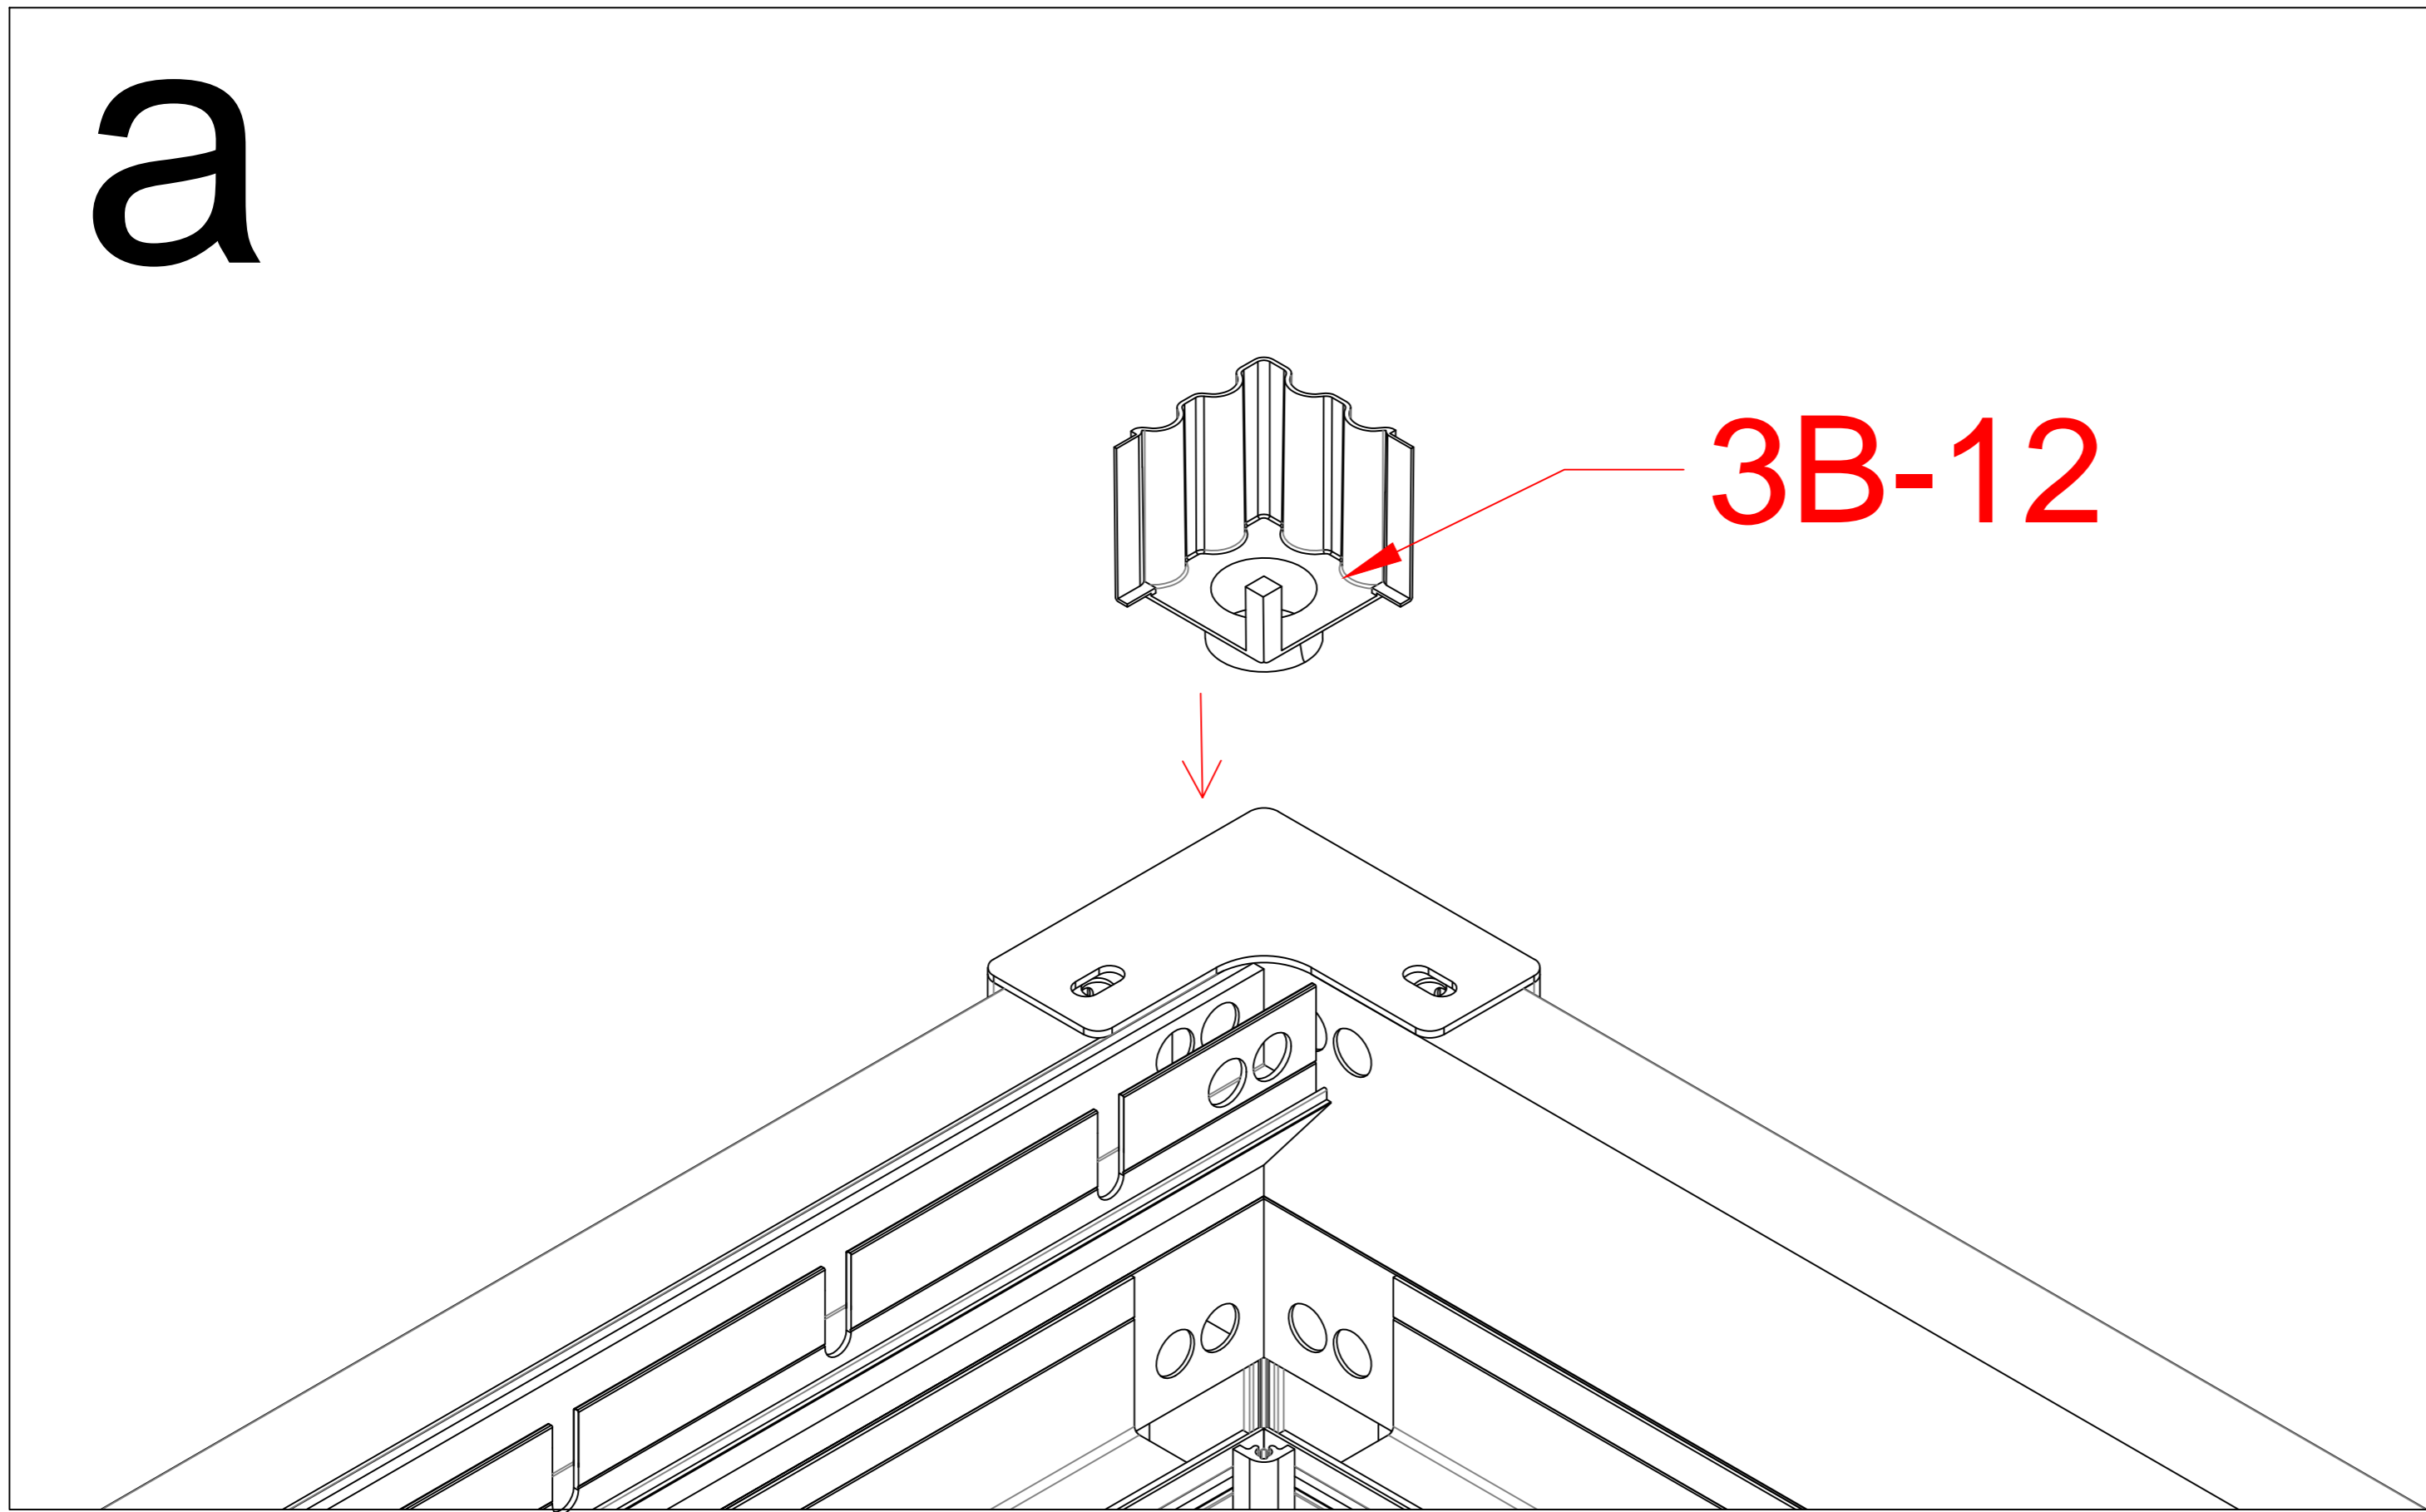


b

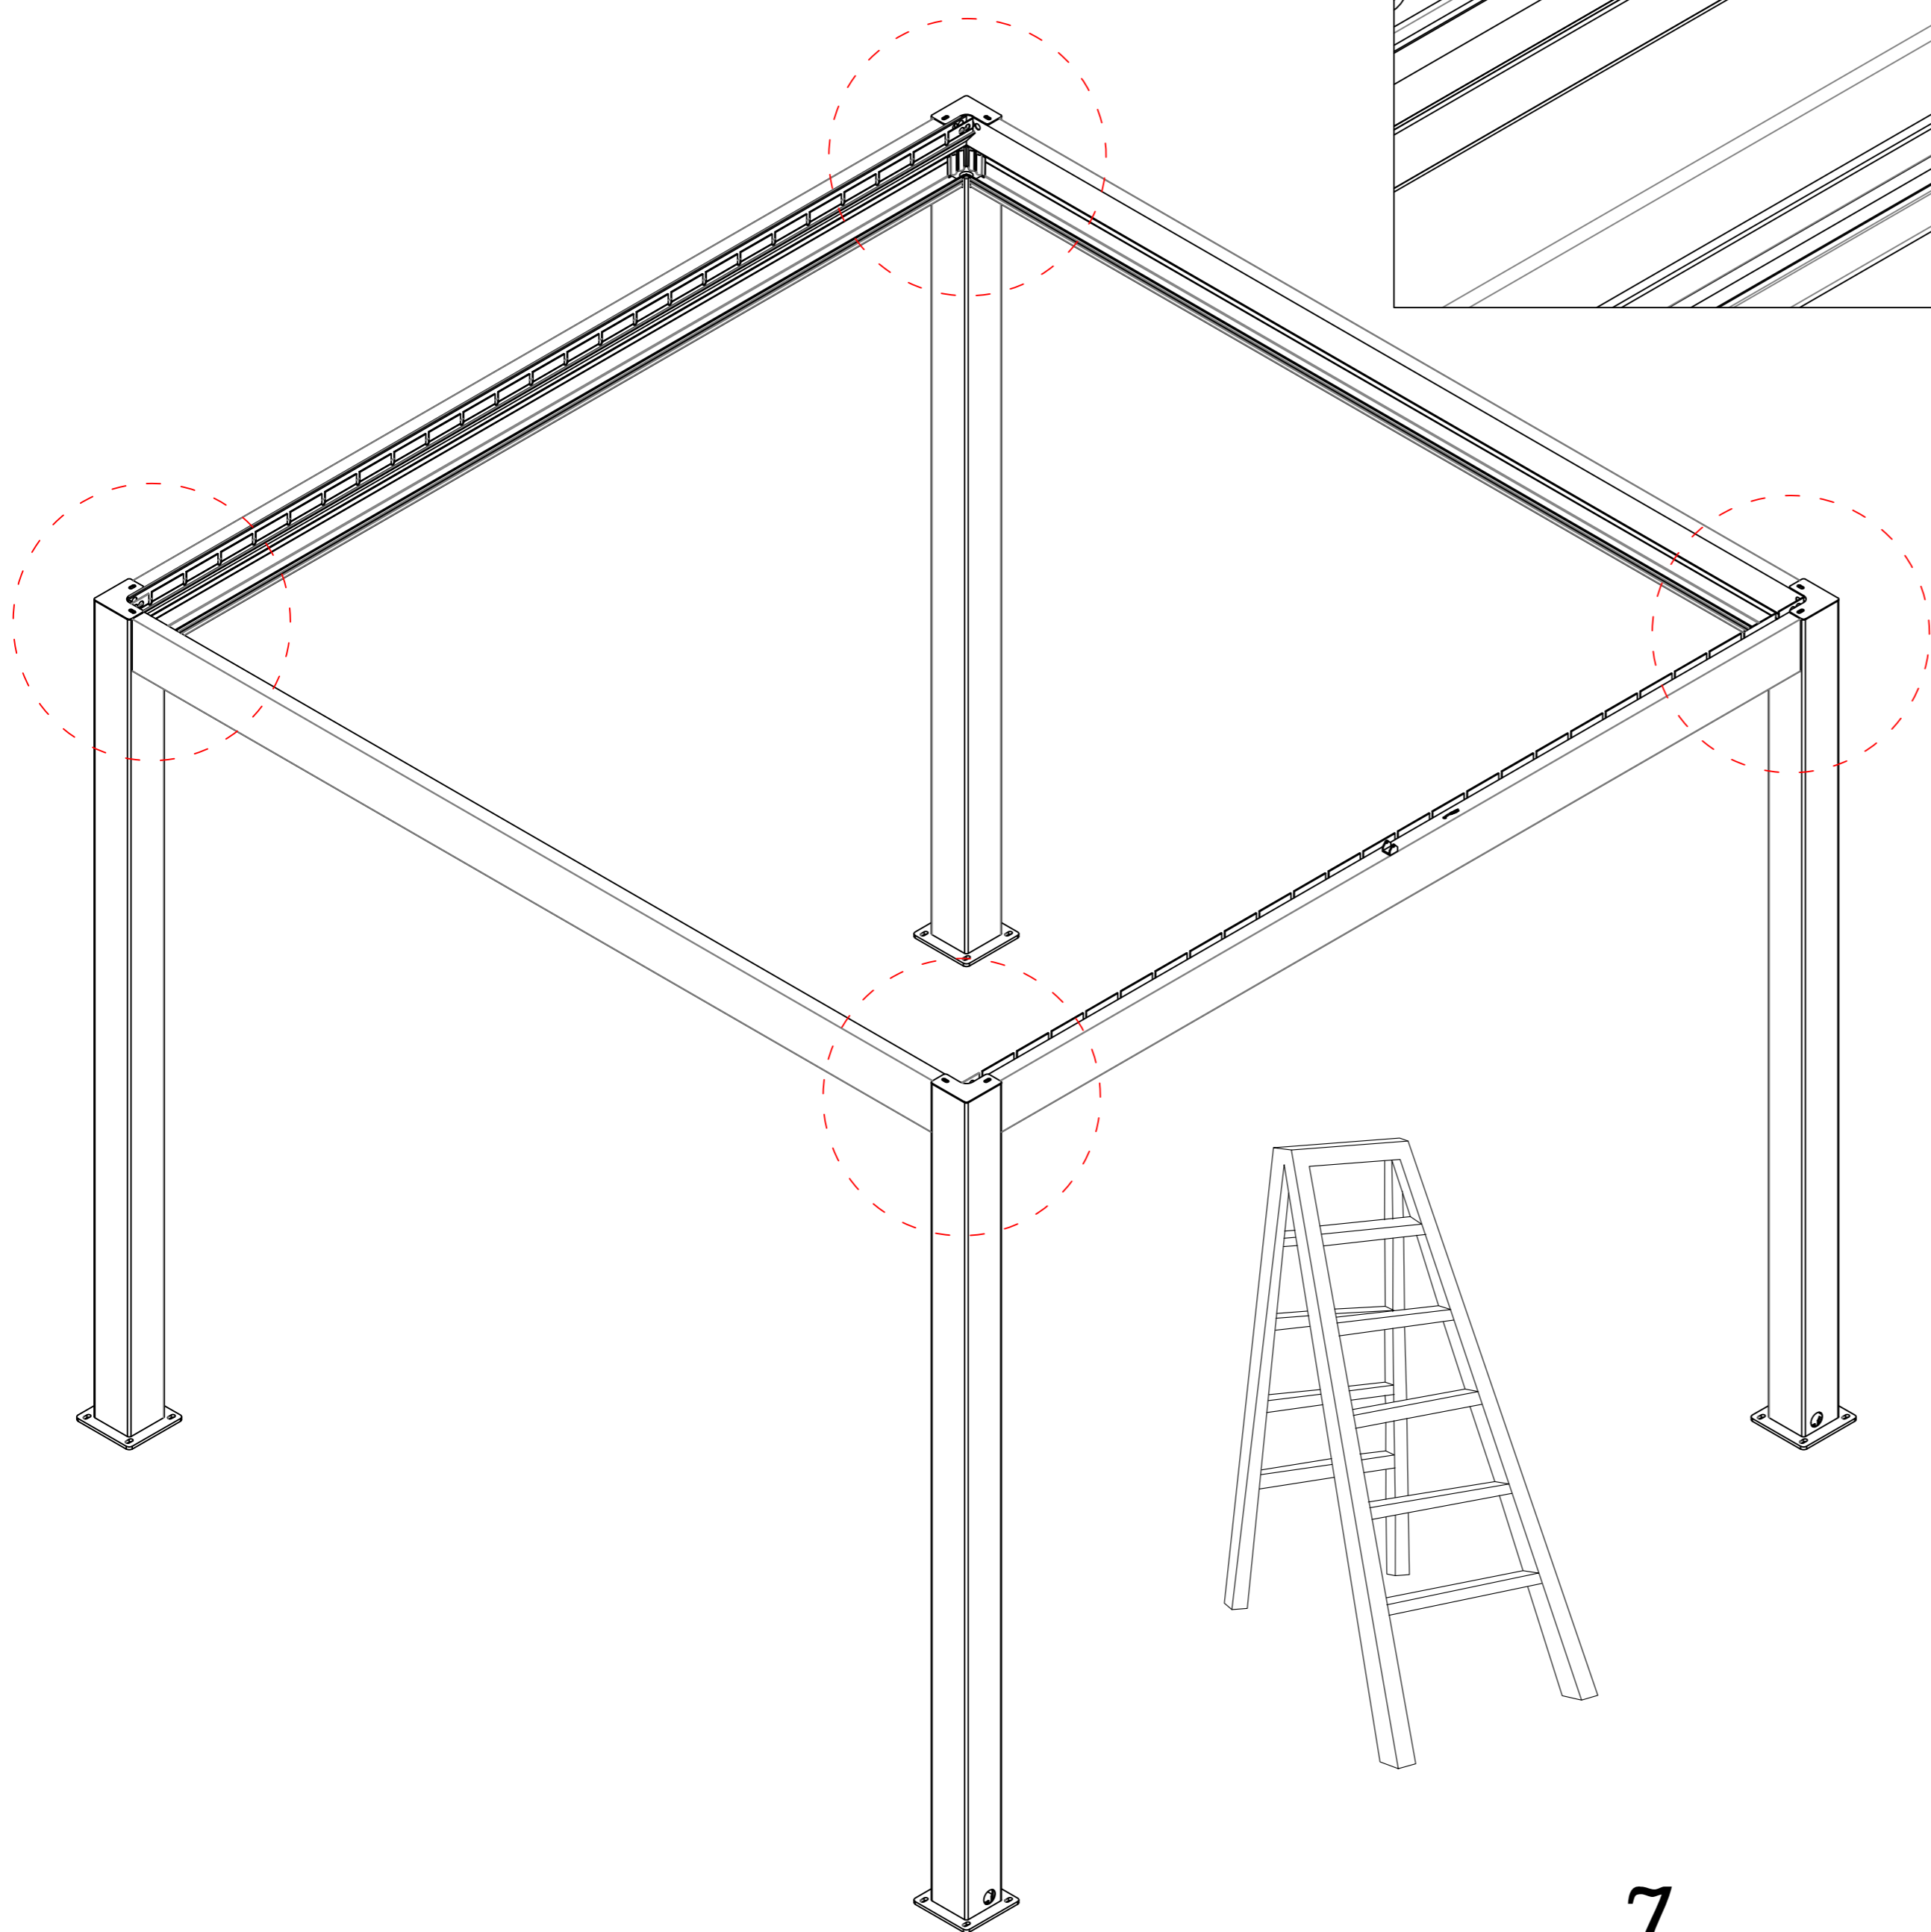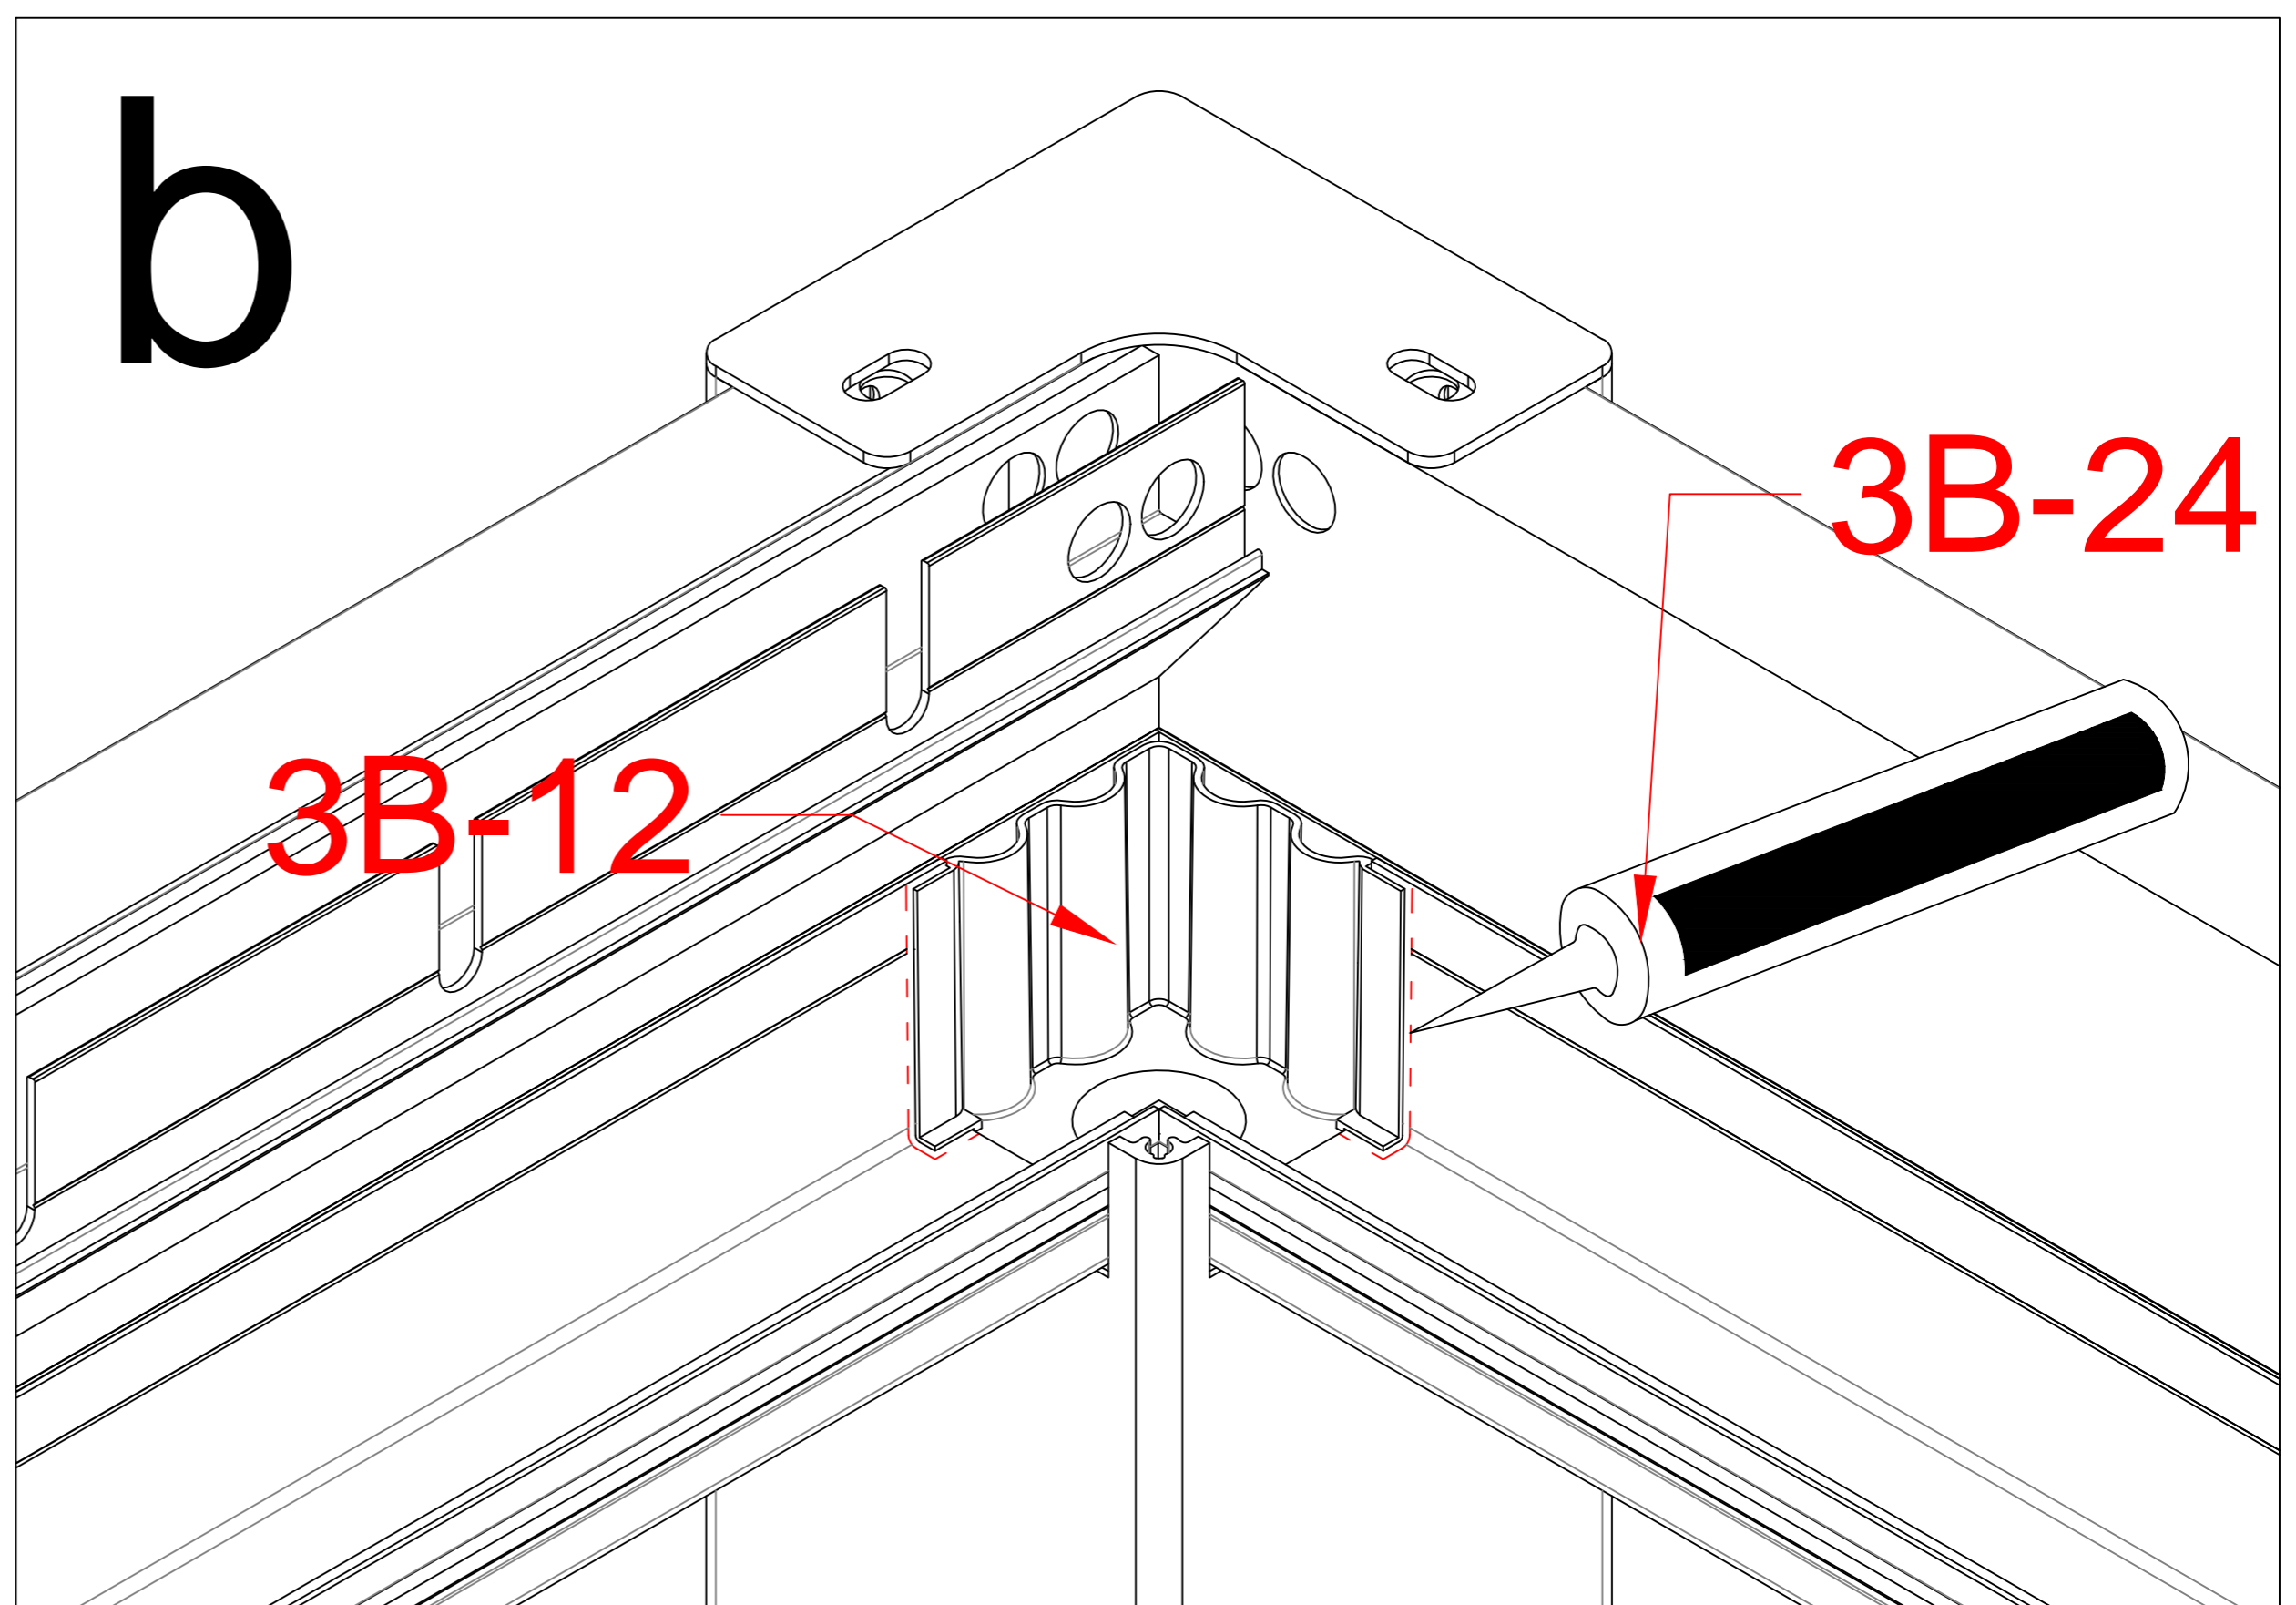




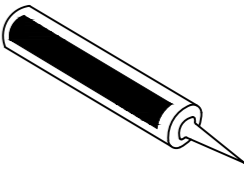
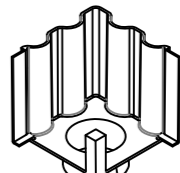
3B-24		1
3B-12		4



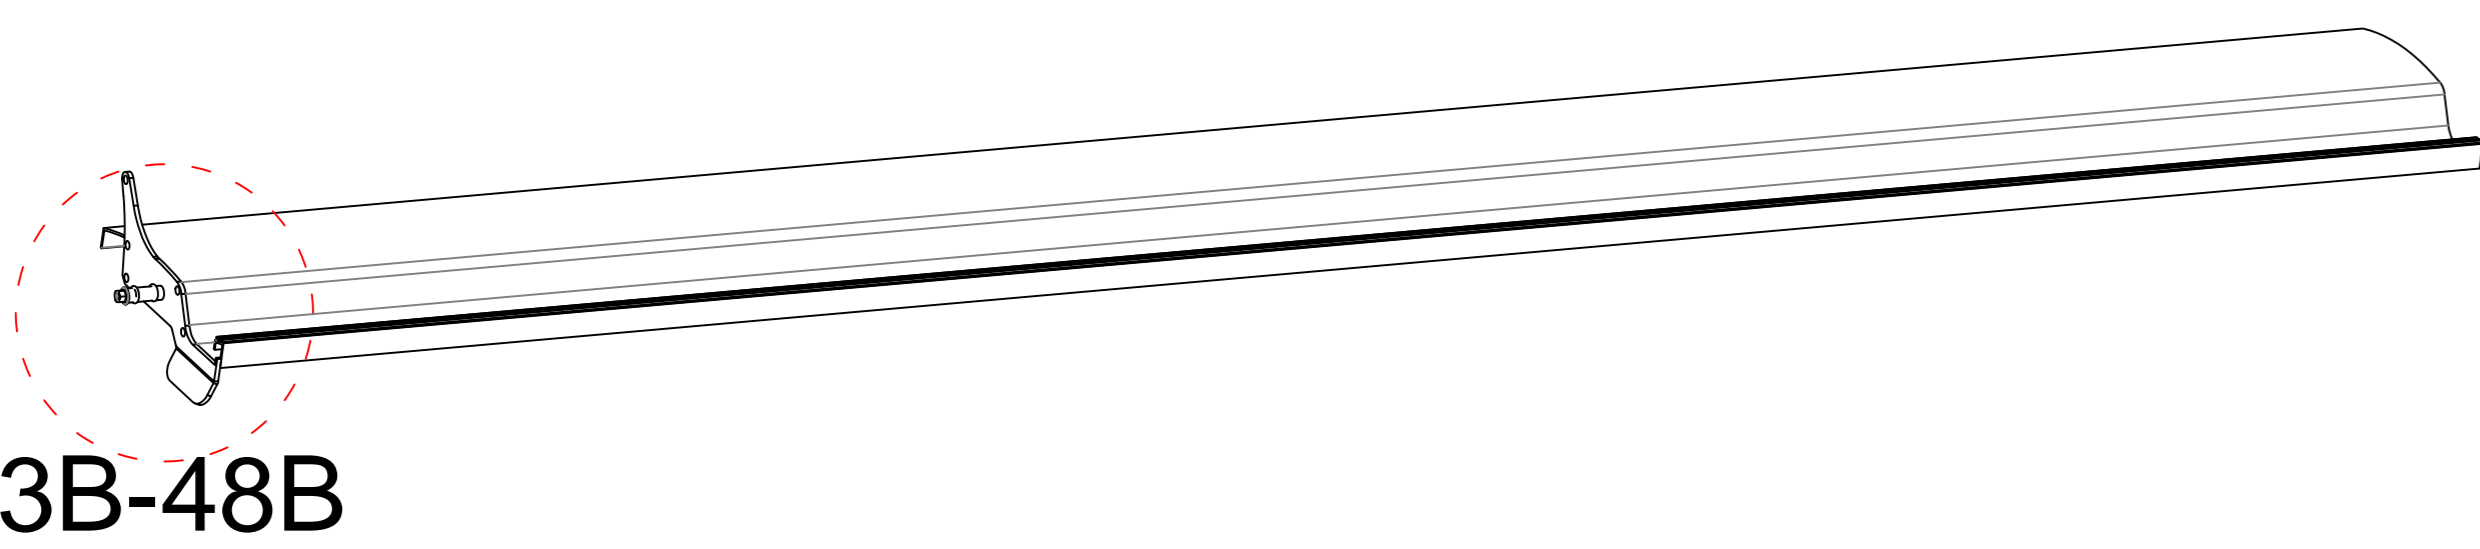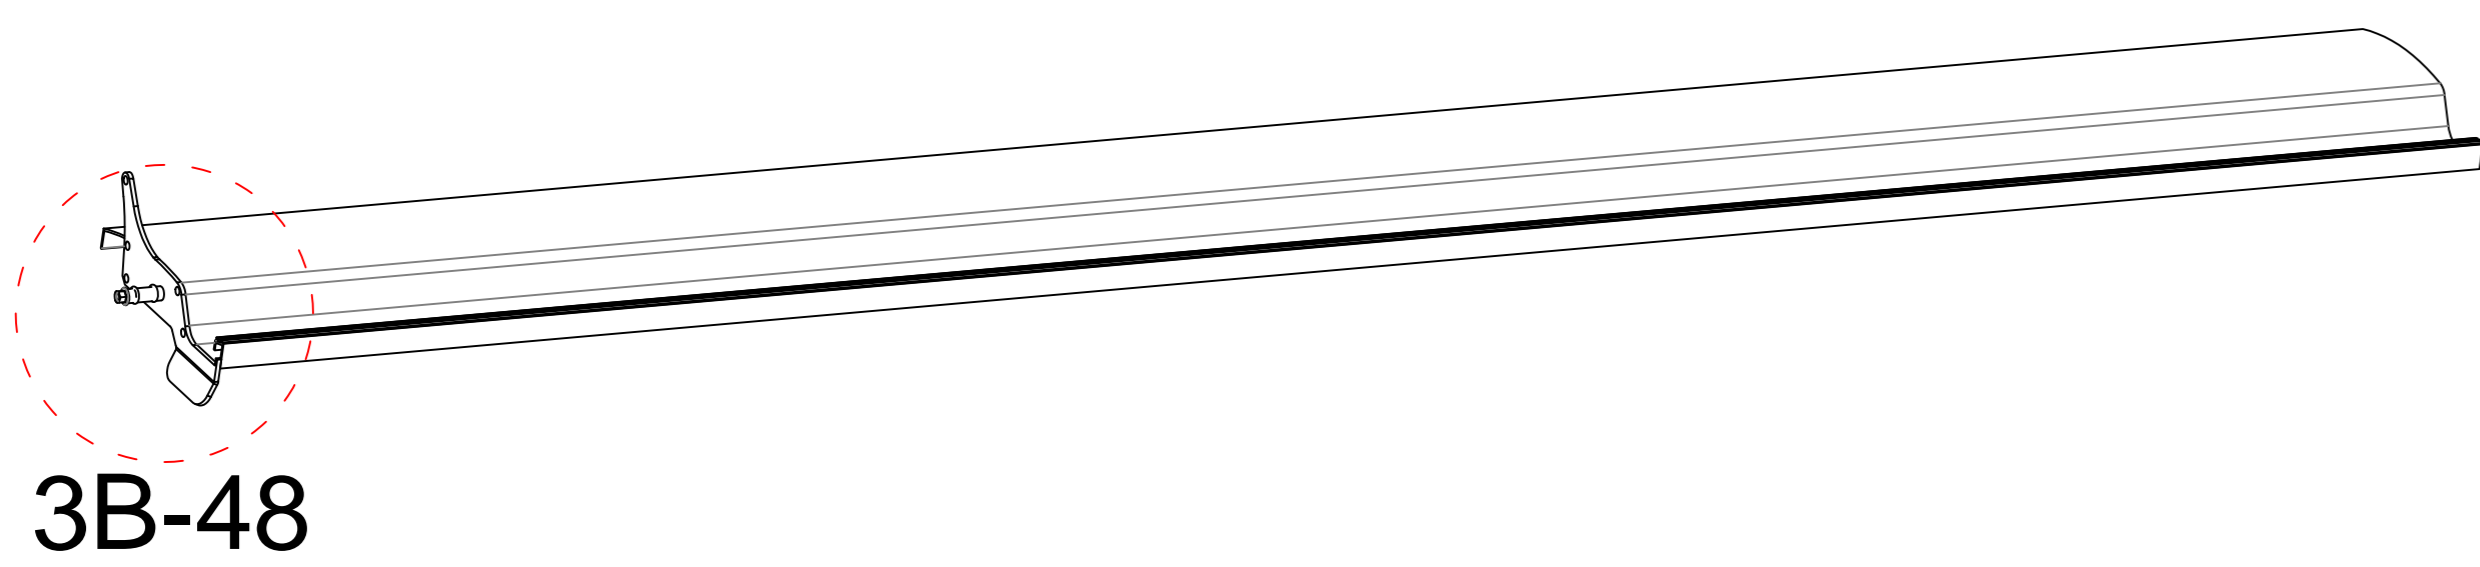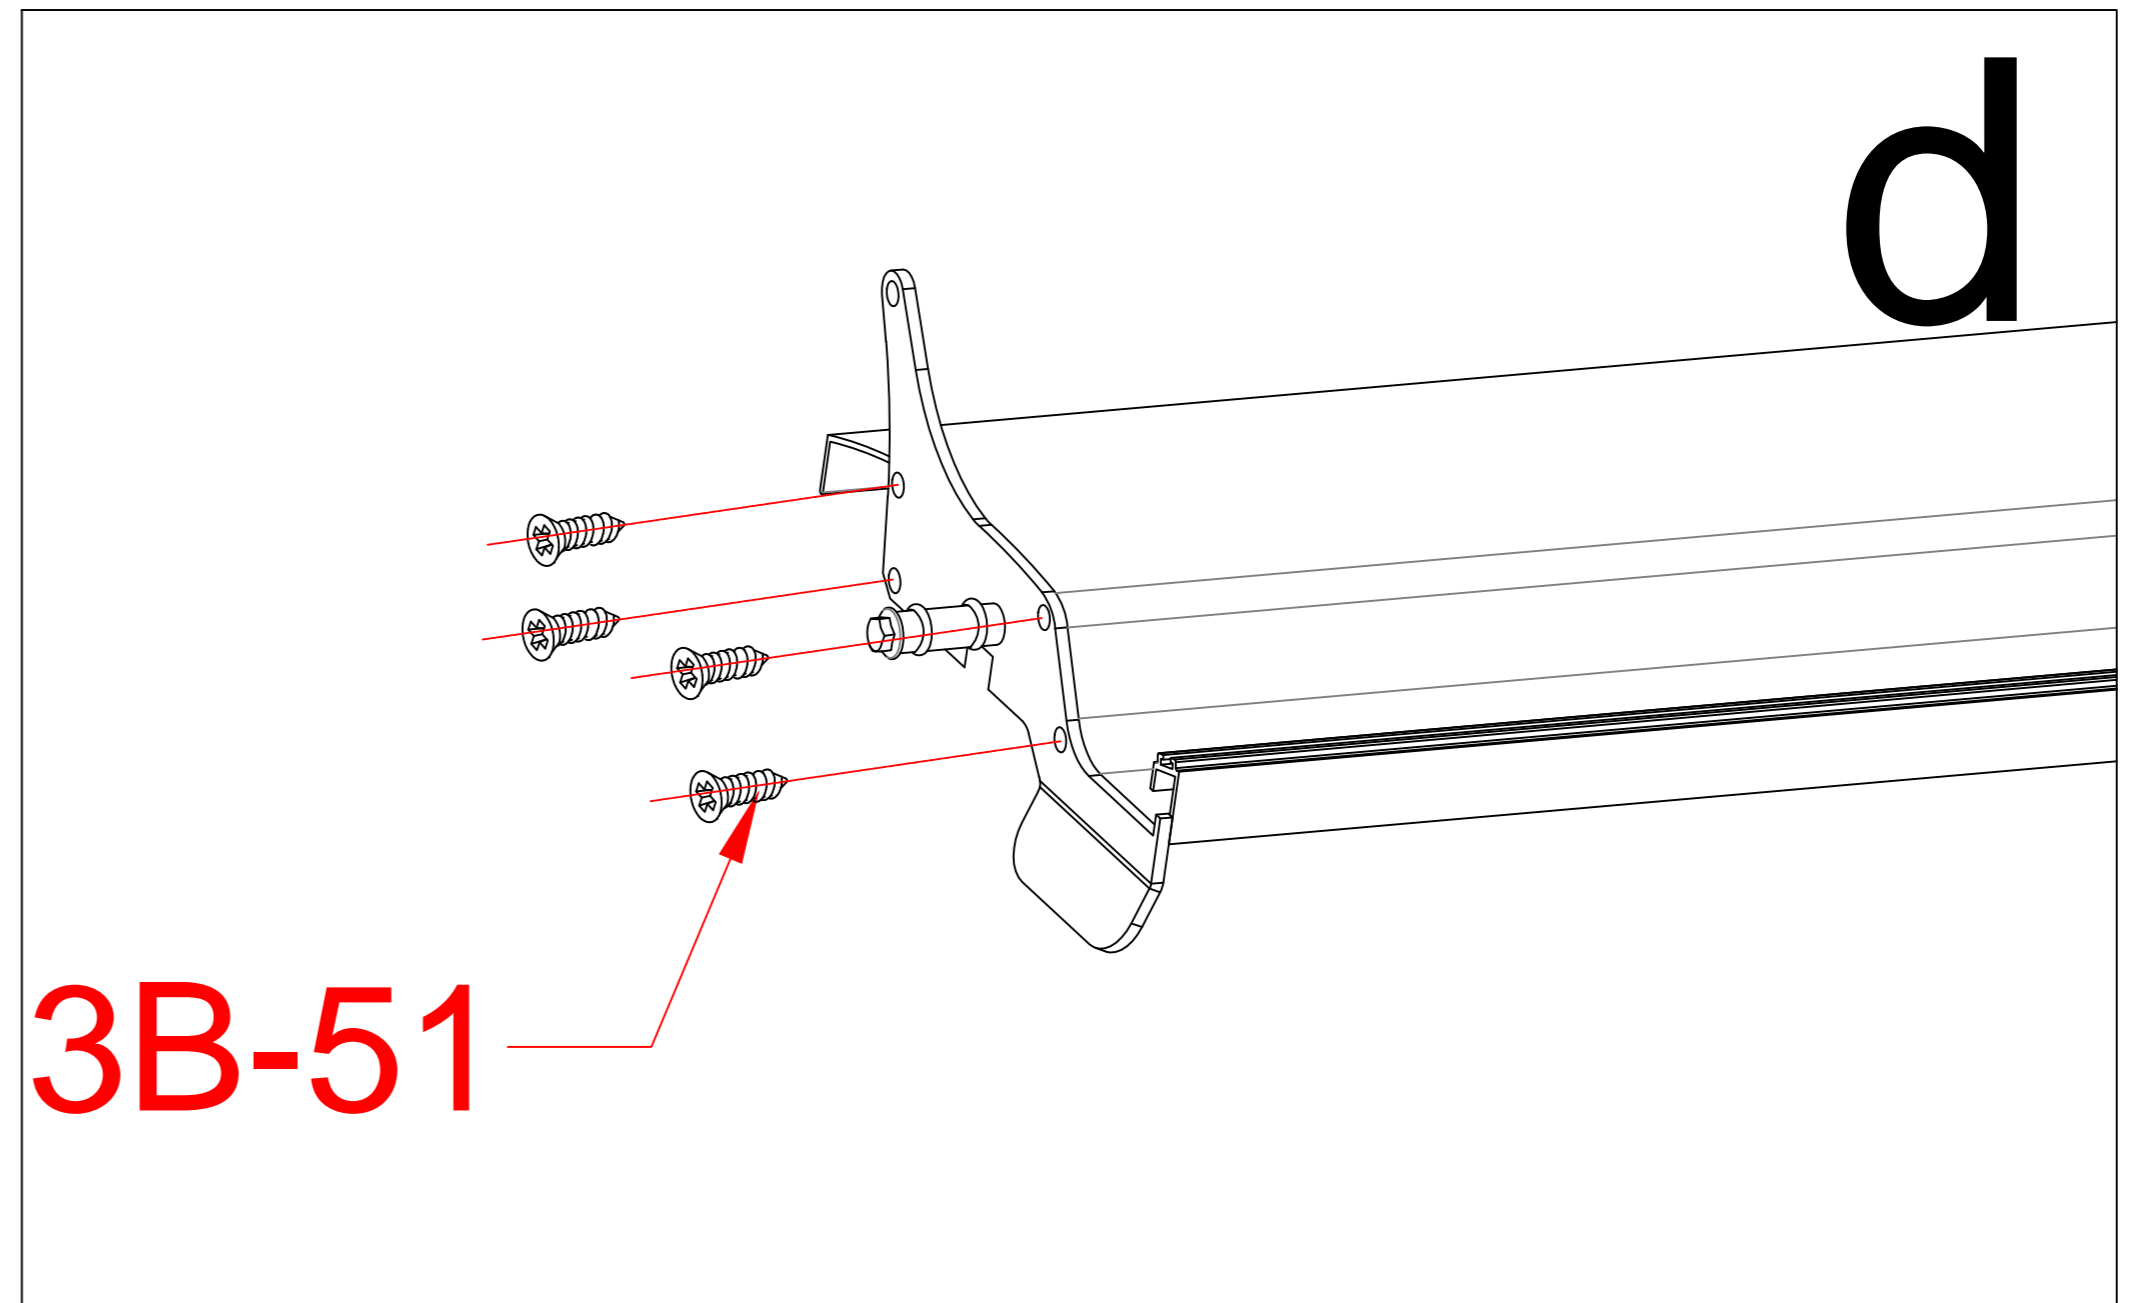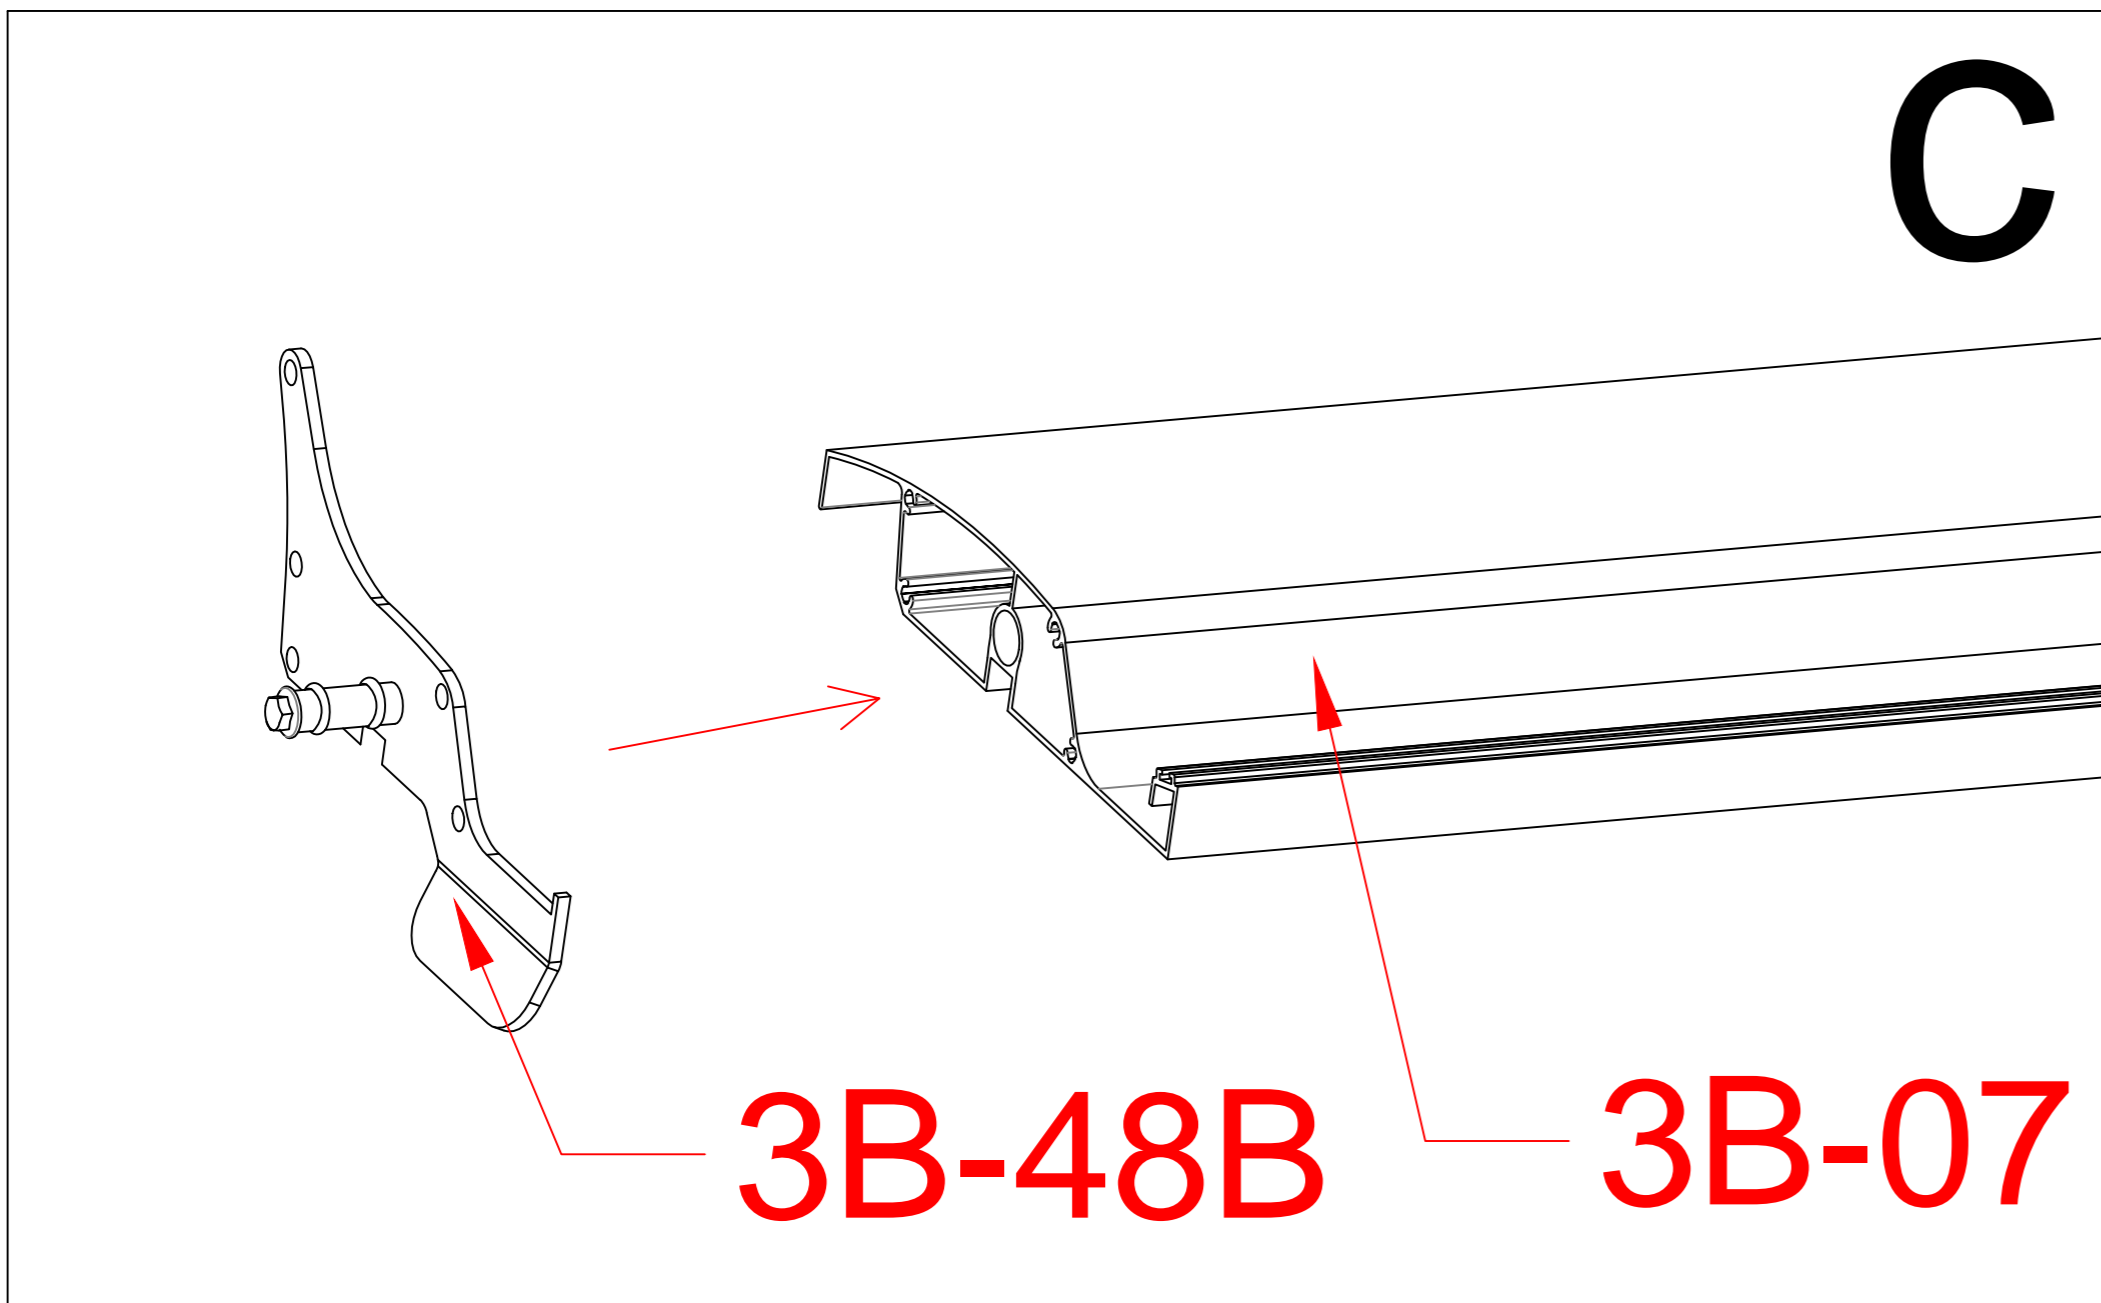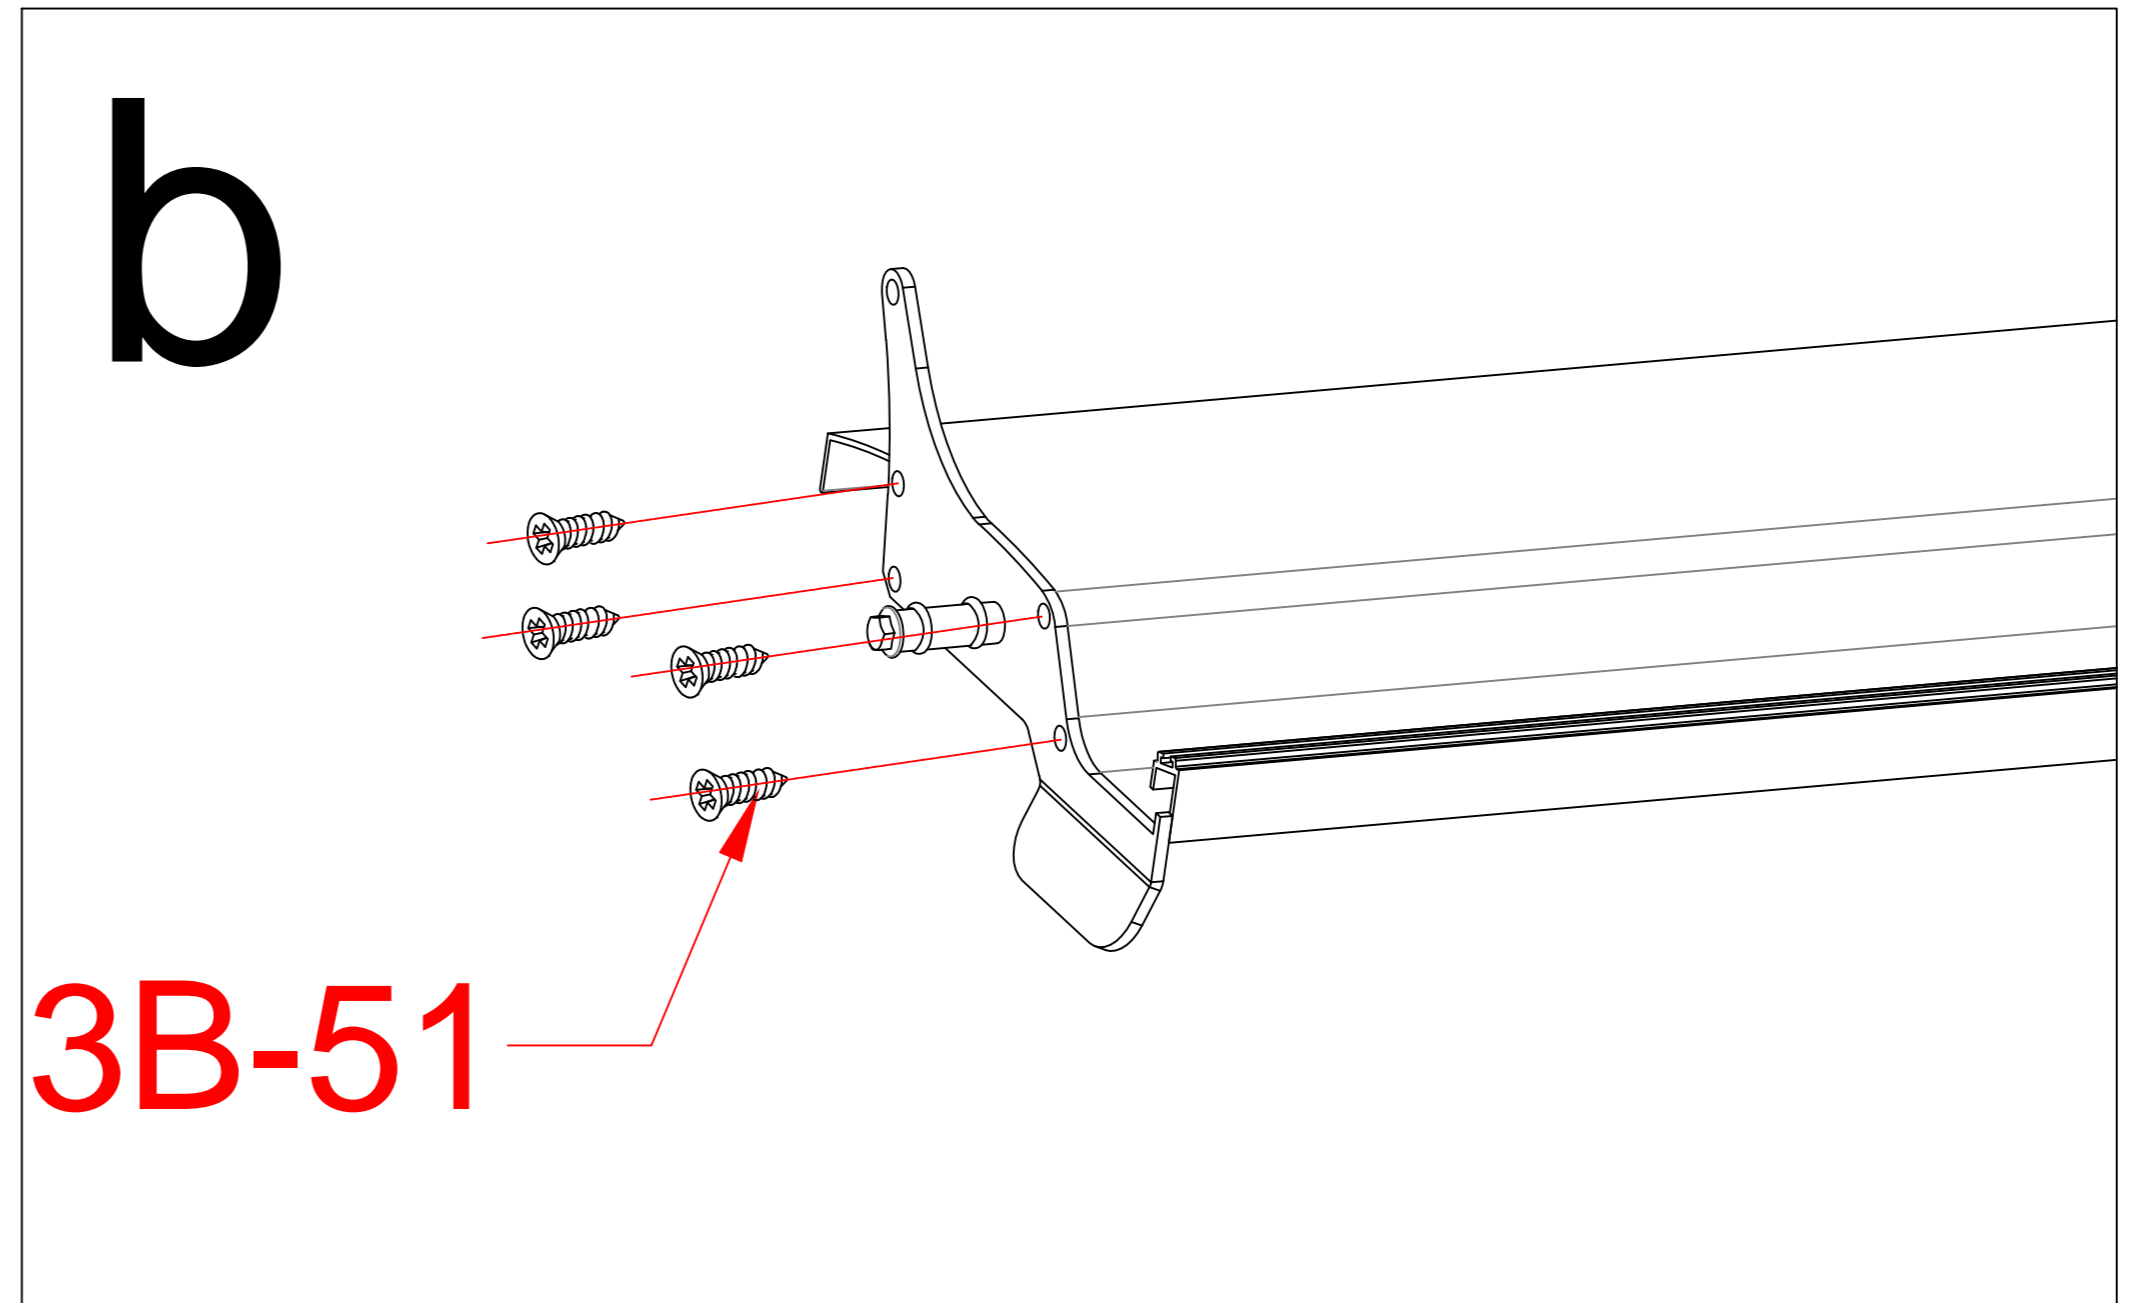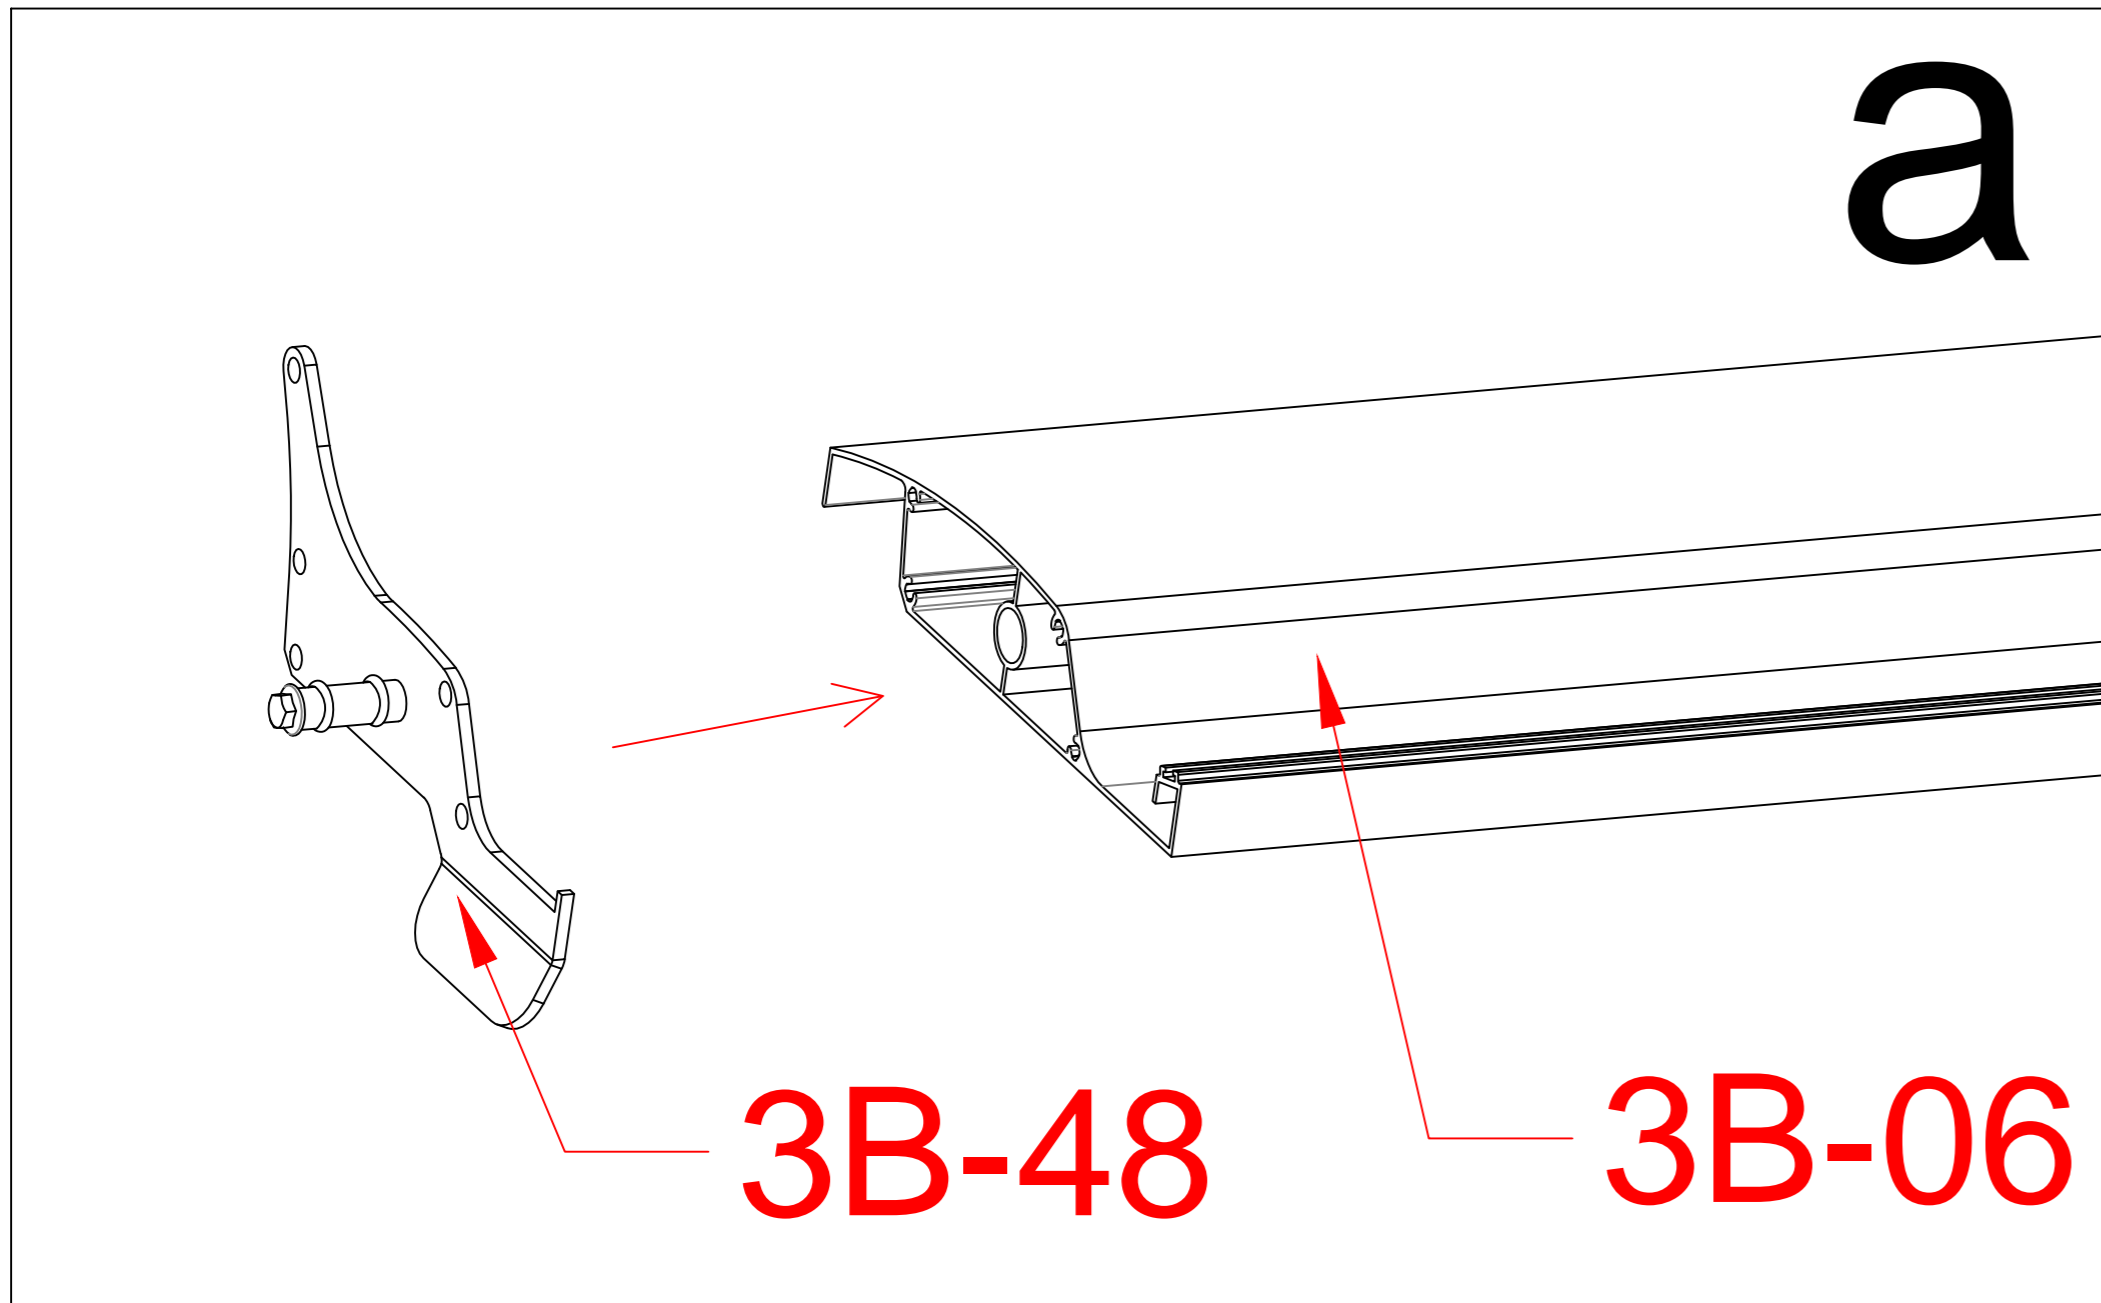





3B-51	
3B-06	
3B-48	
3B-07	
3B-48B	



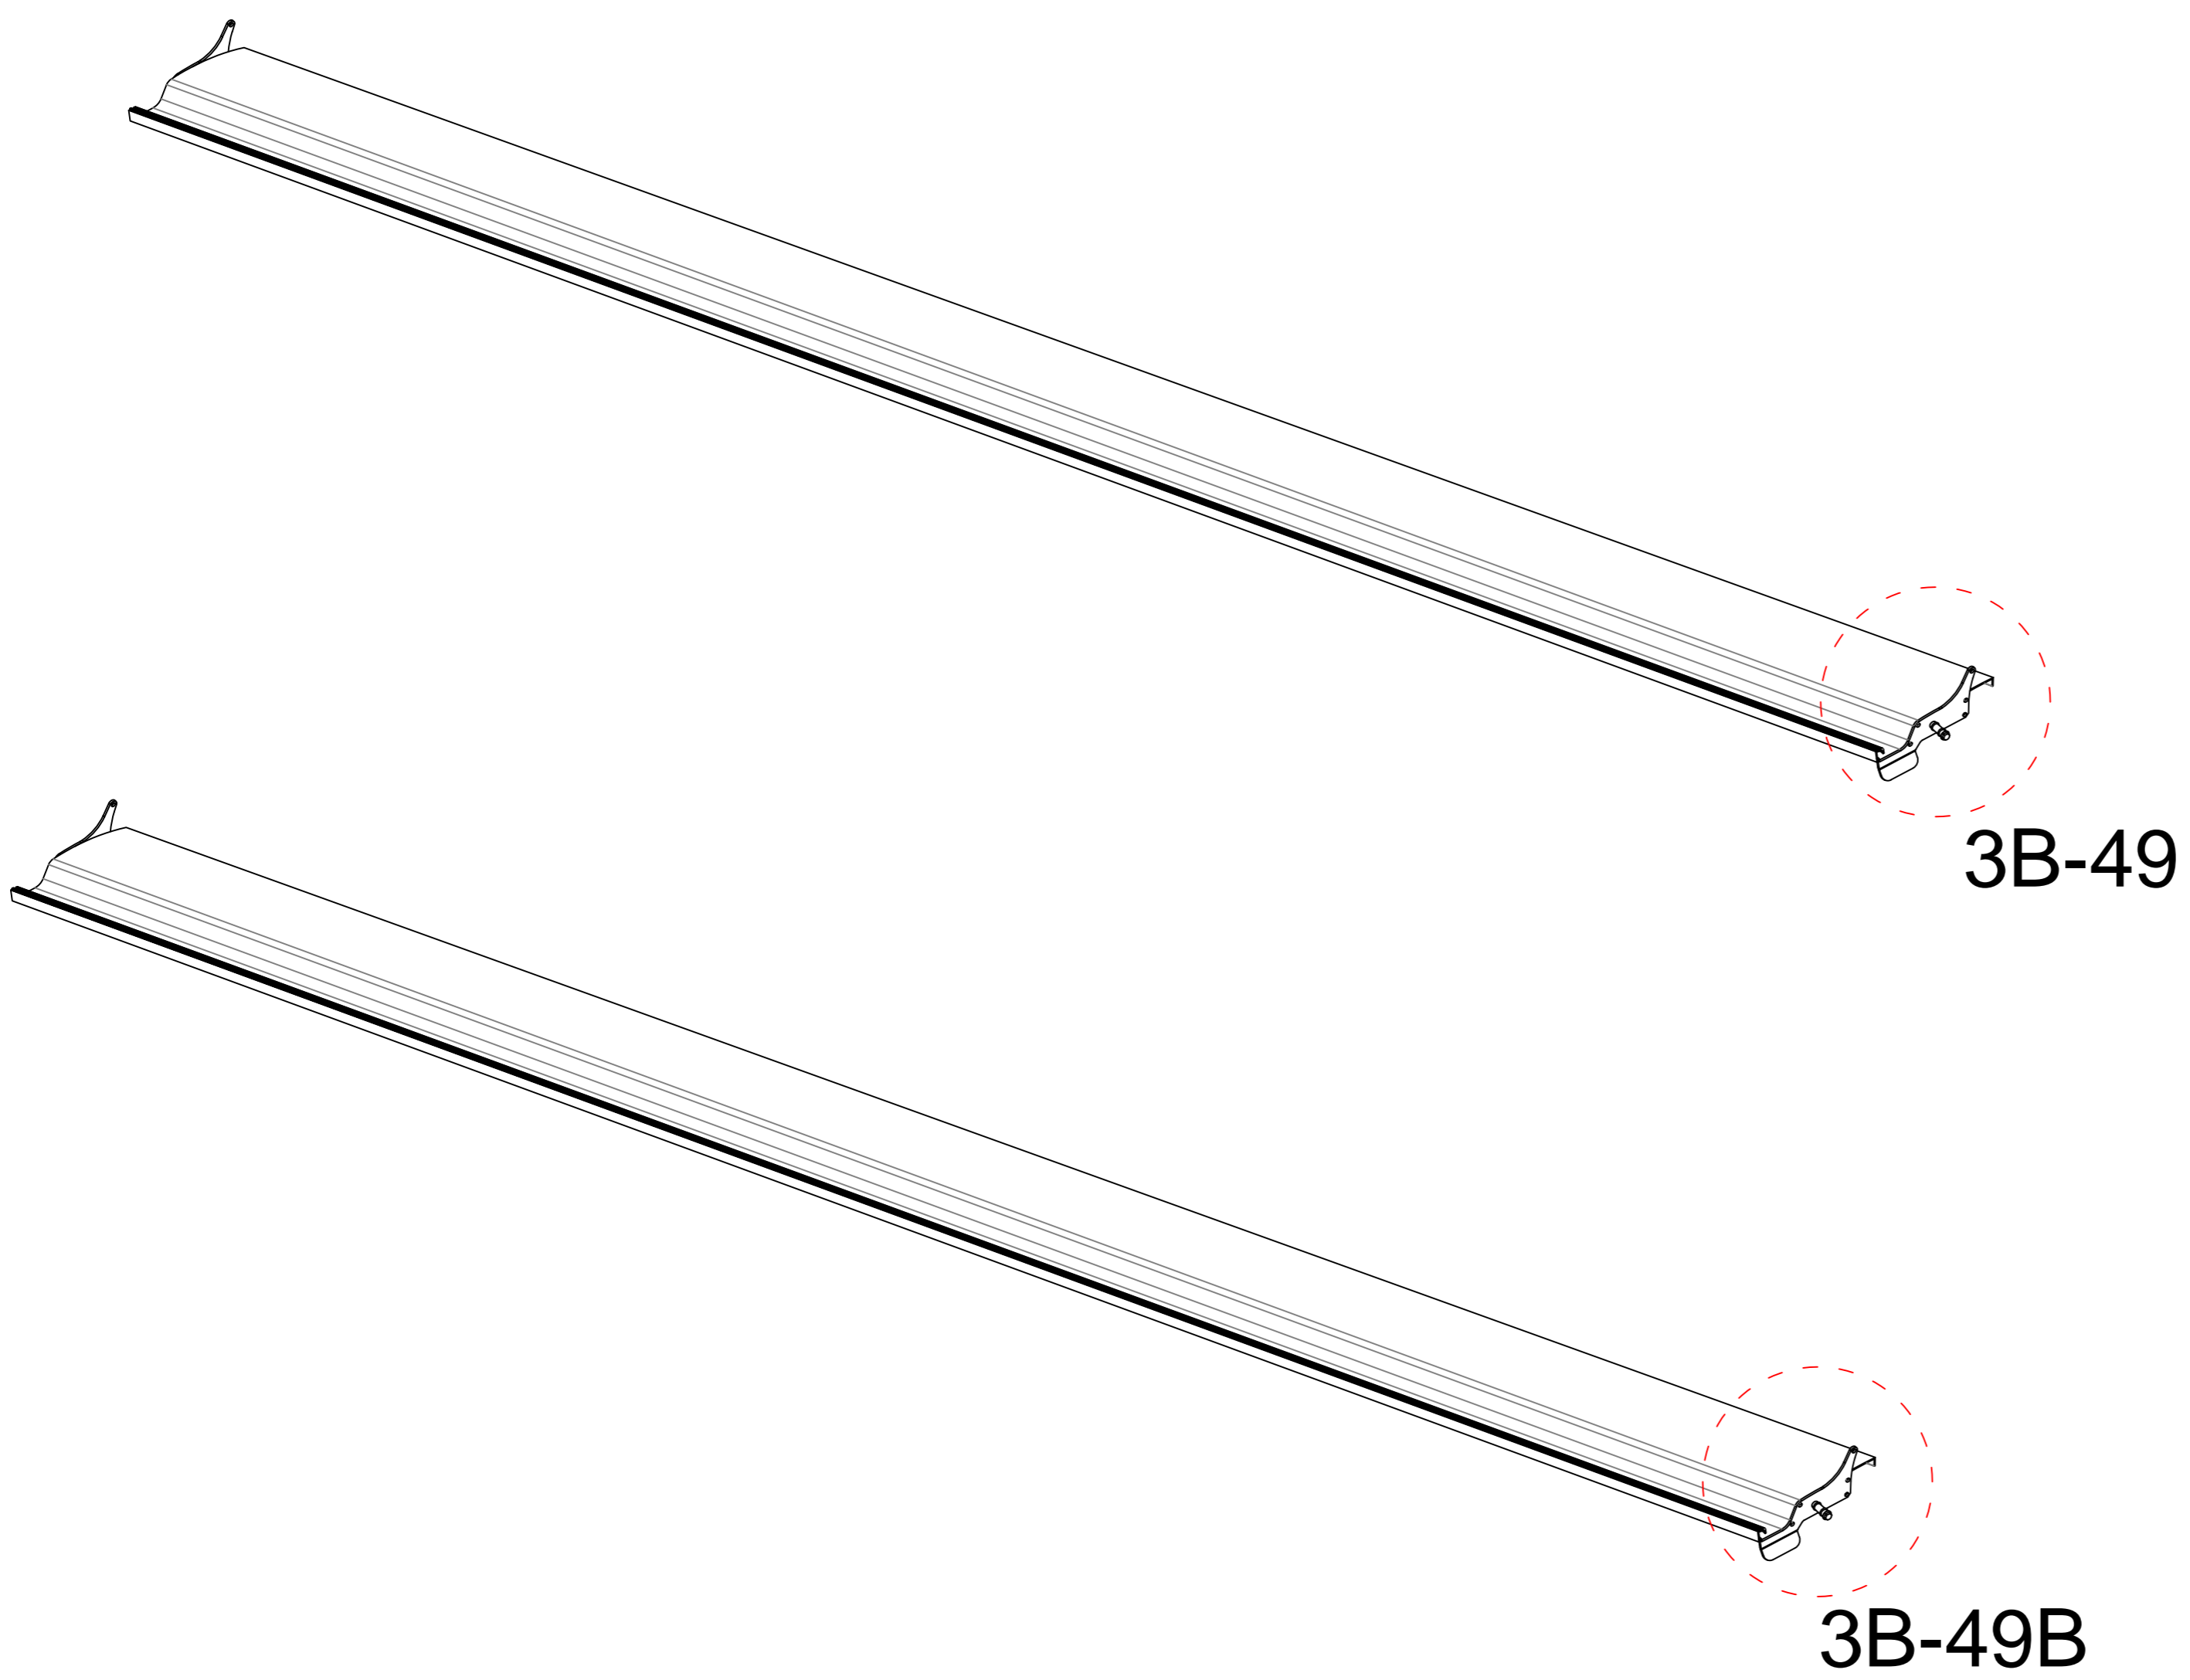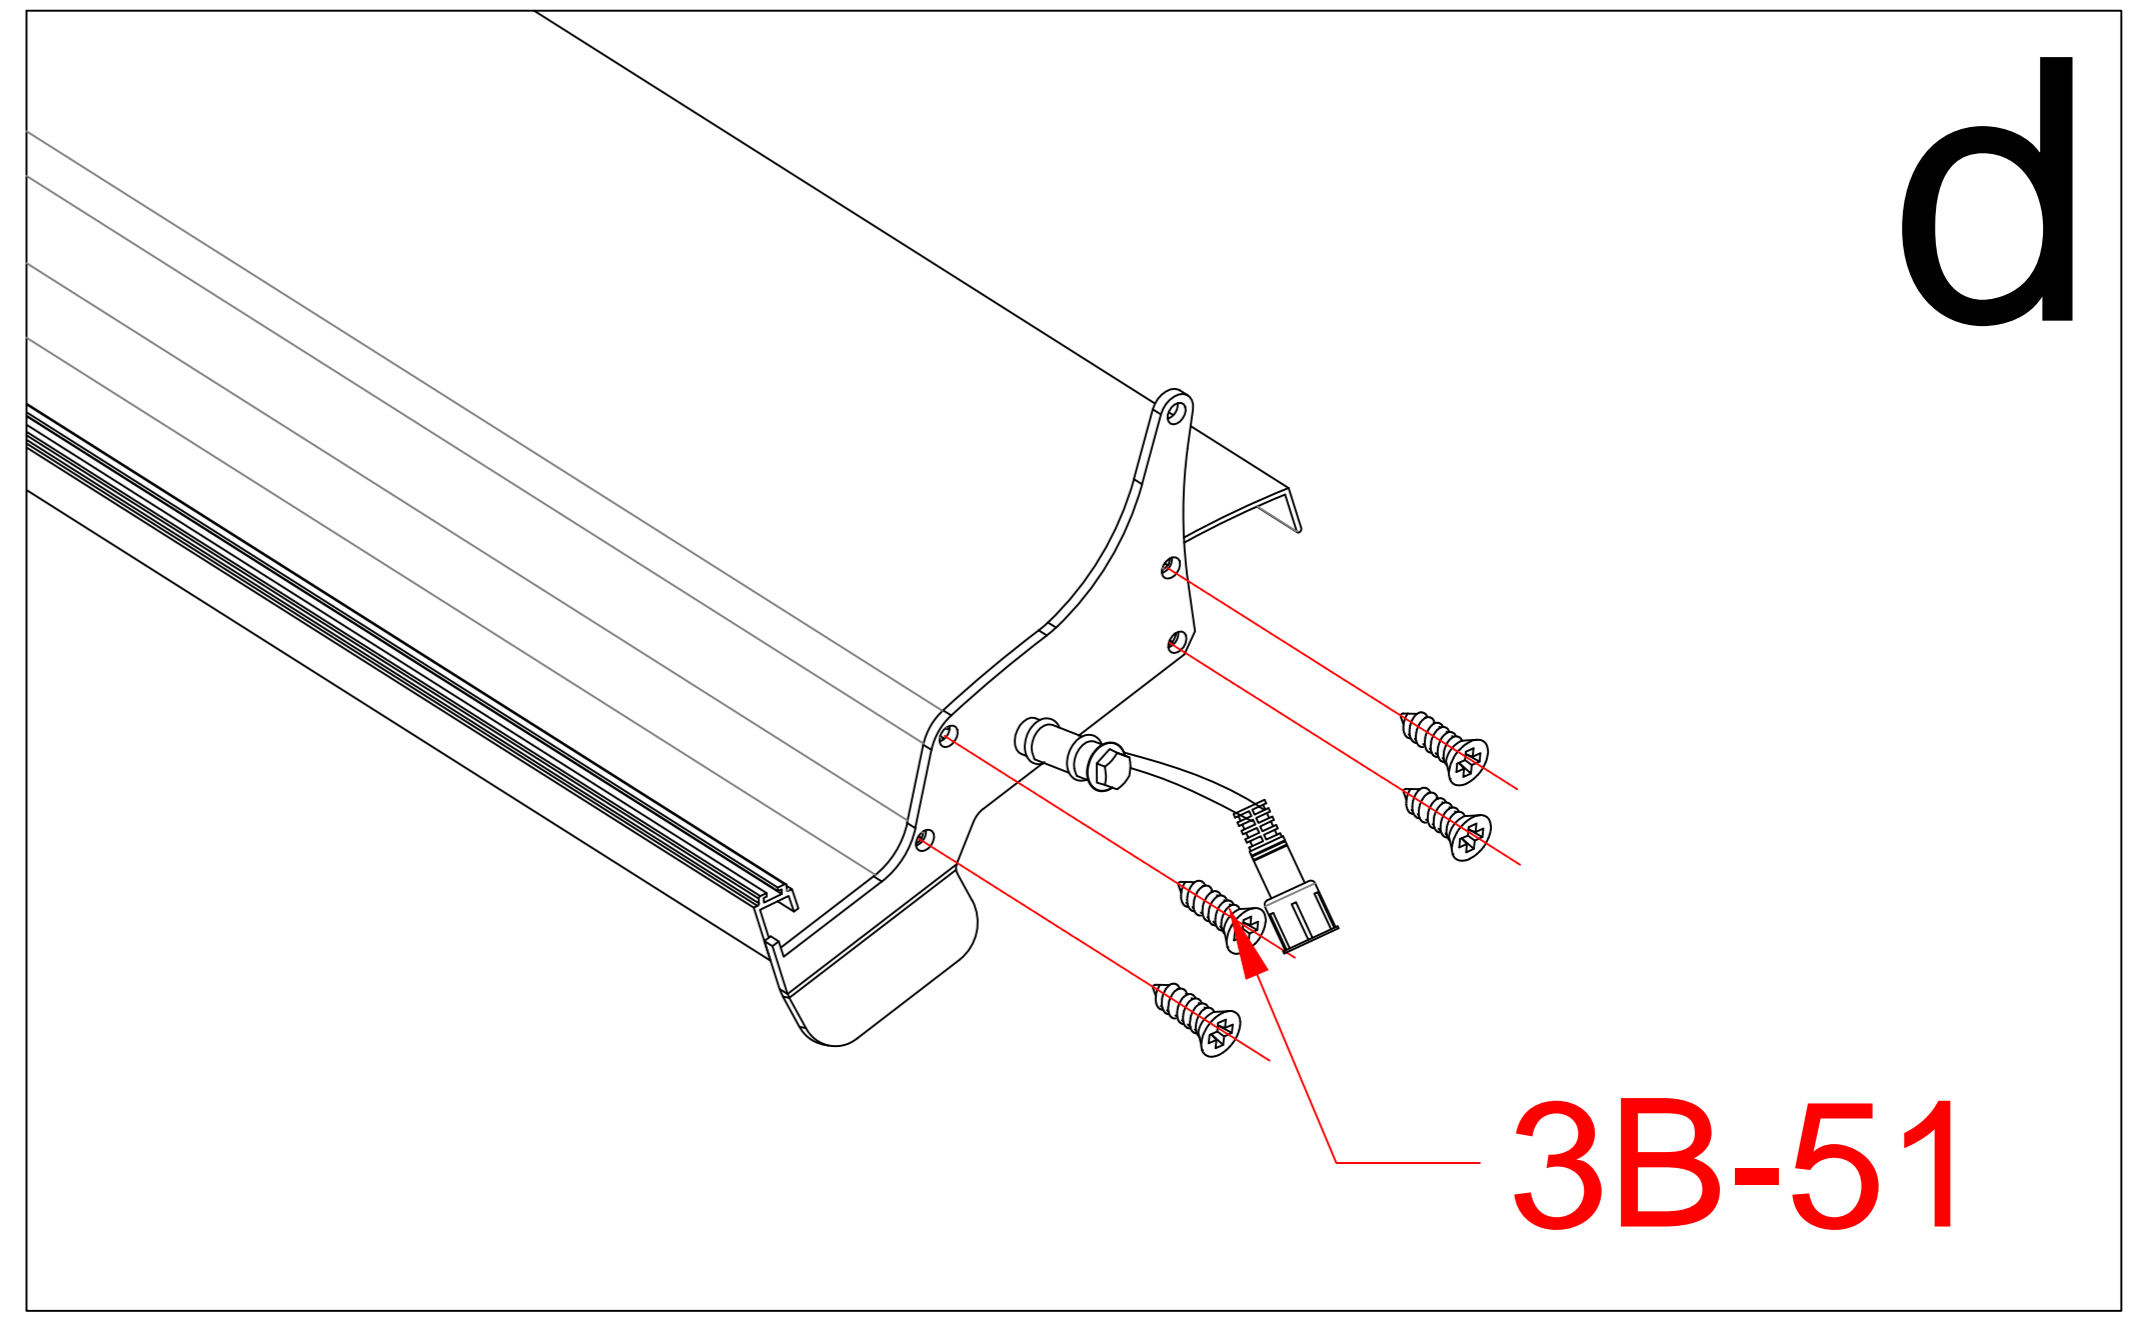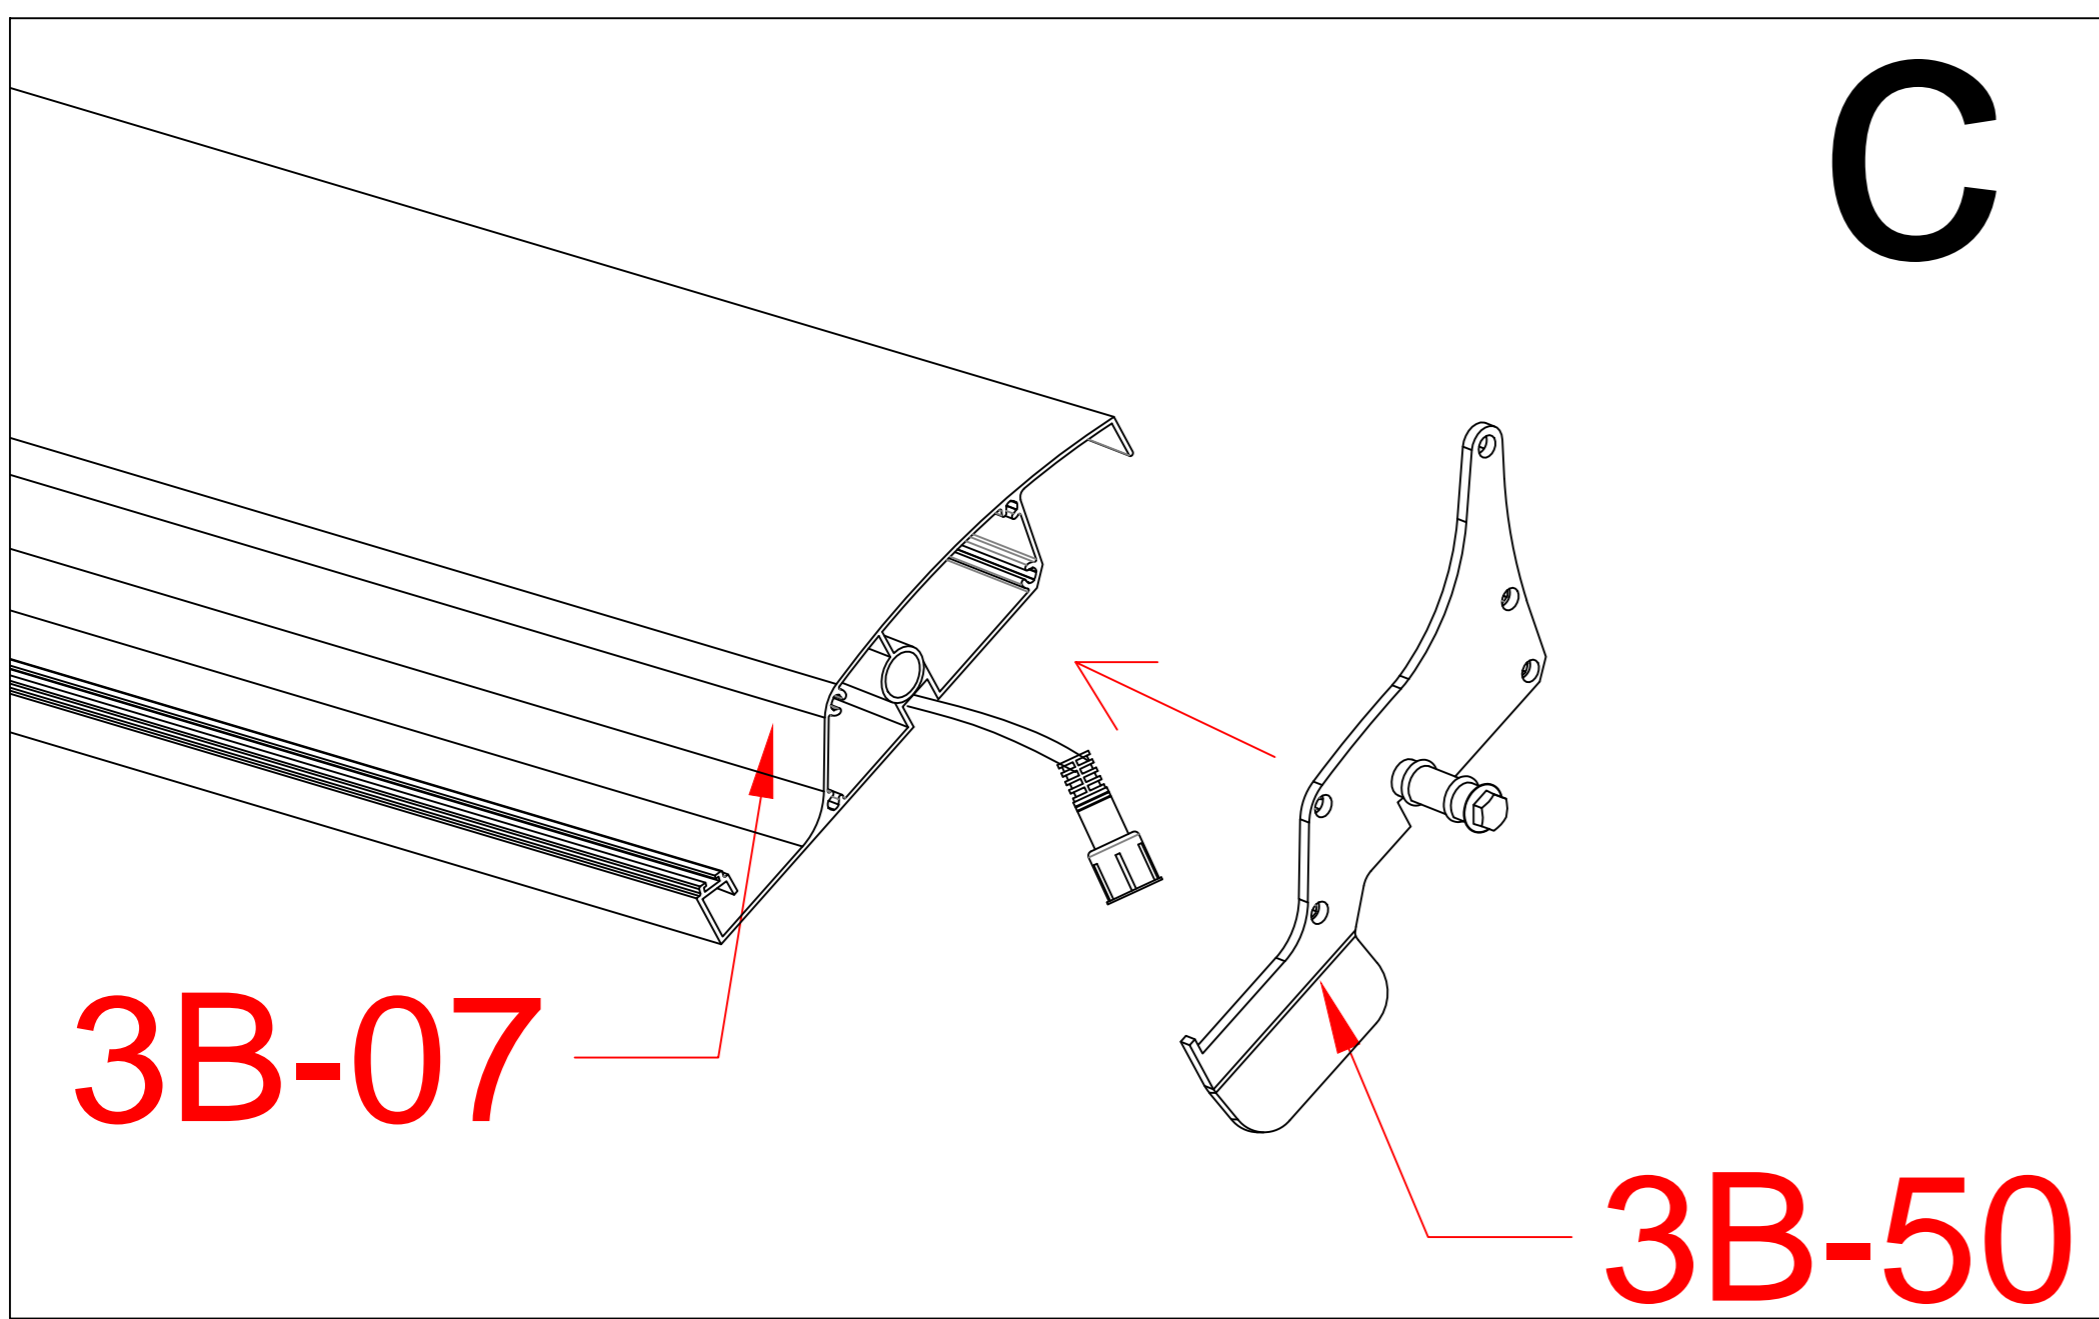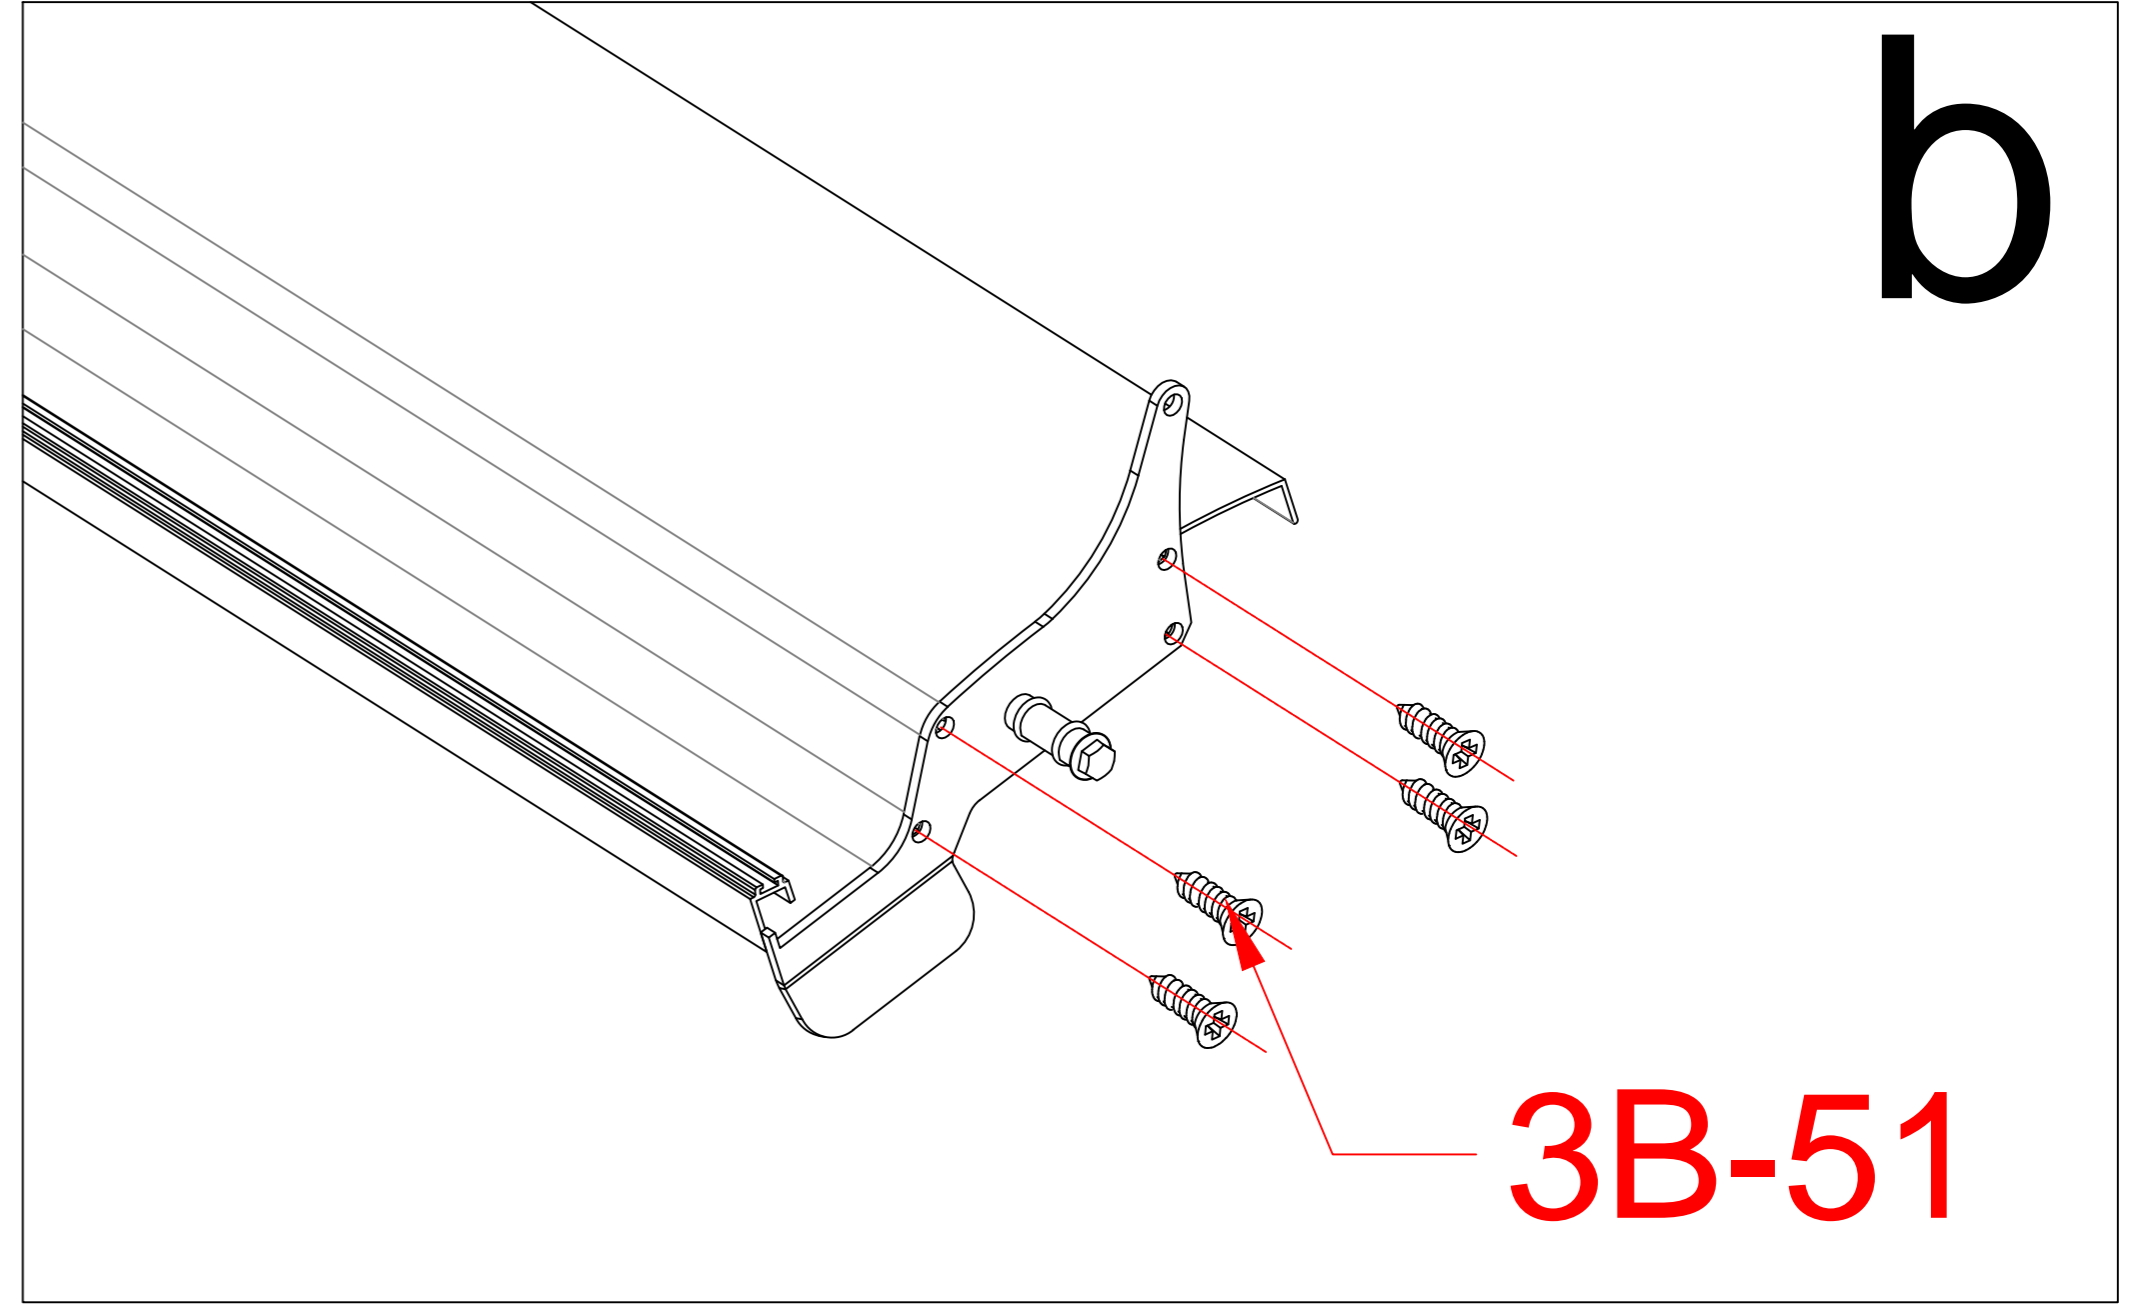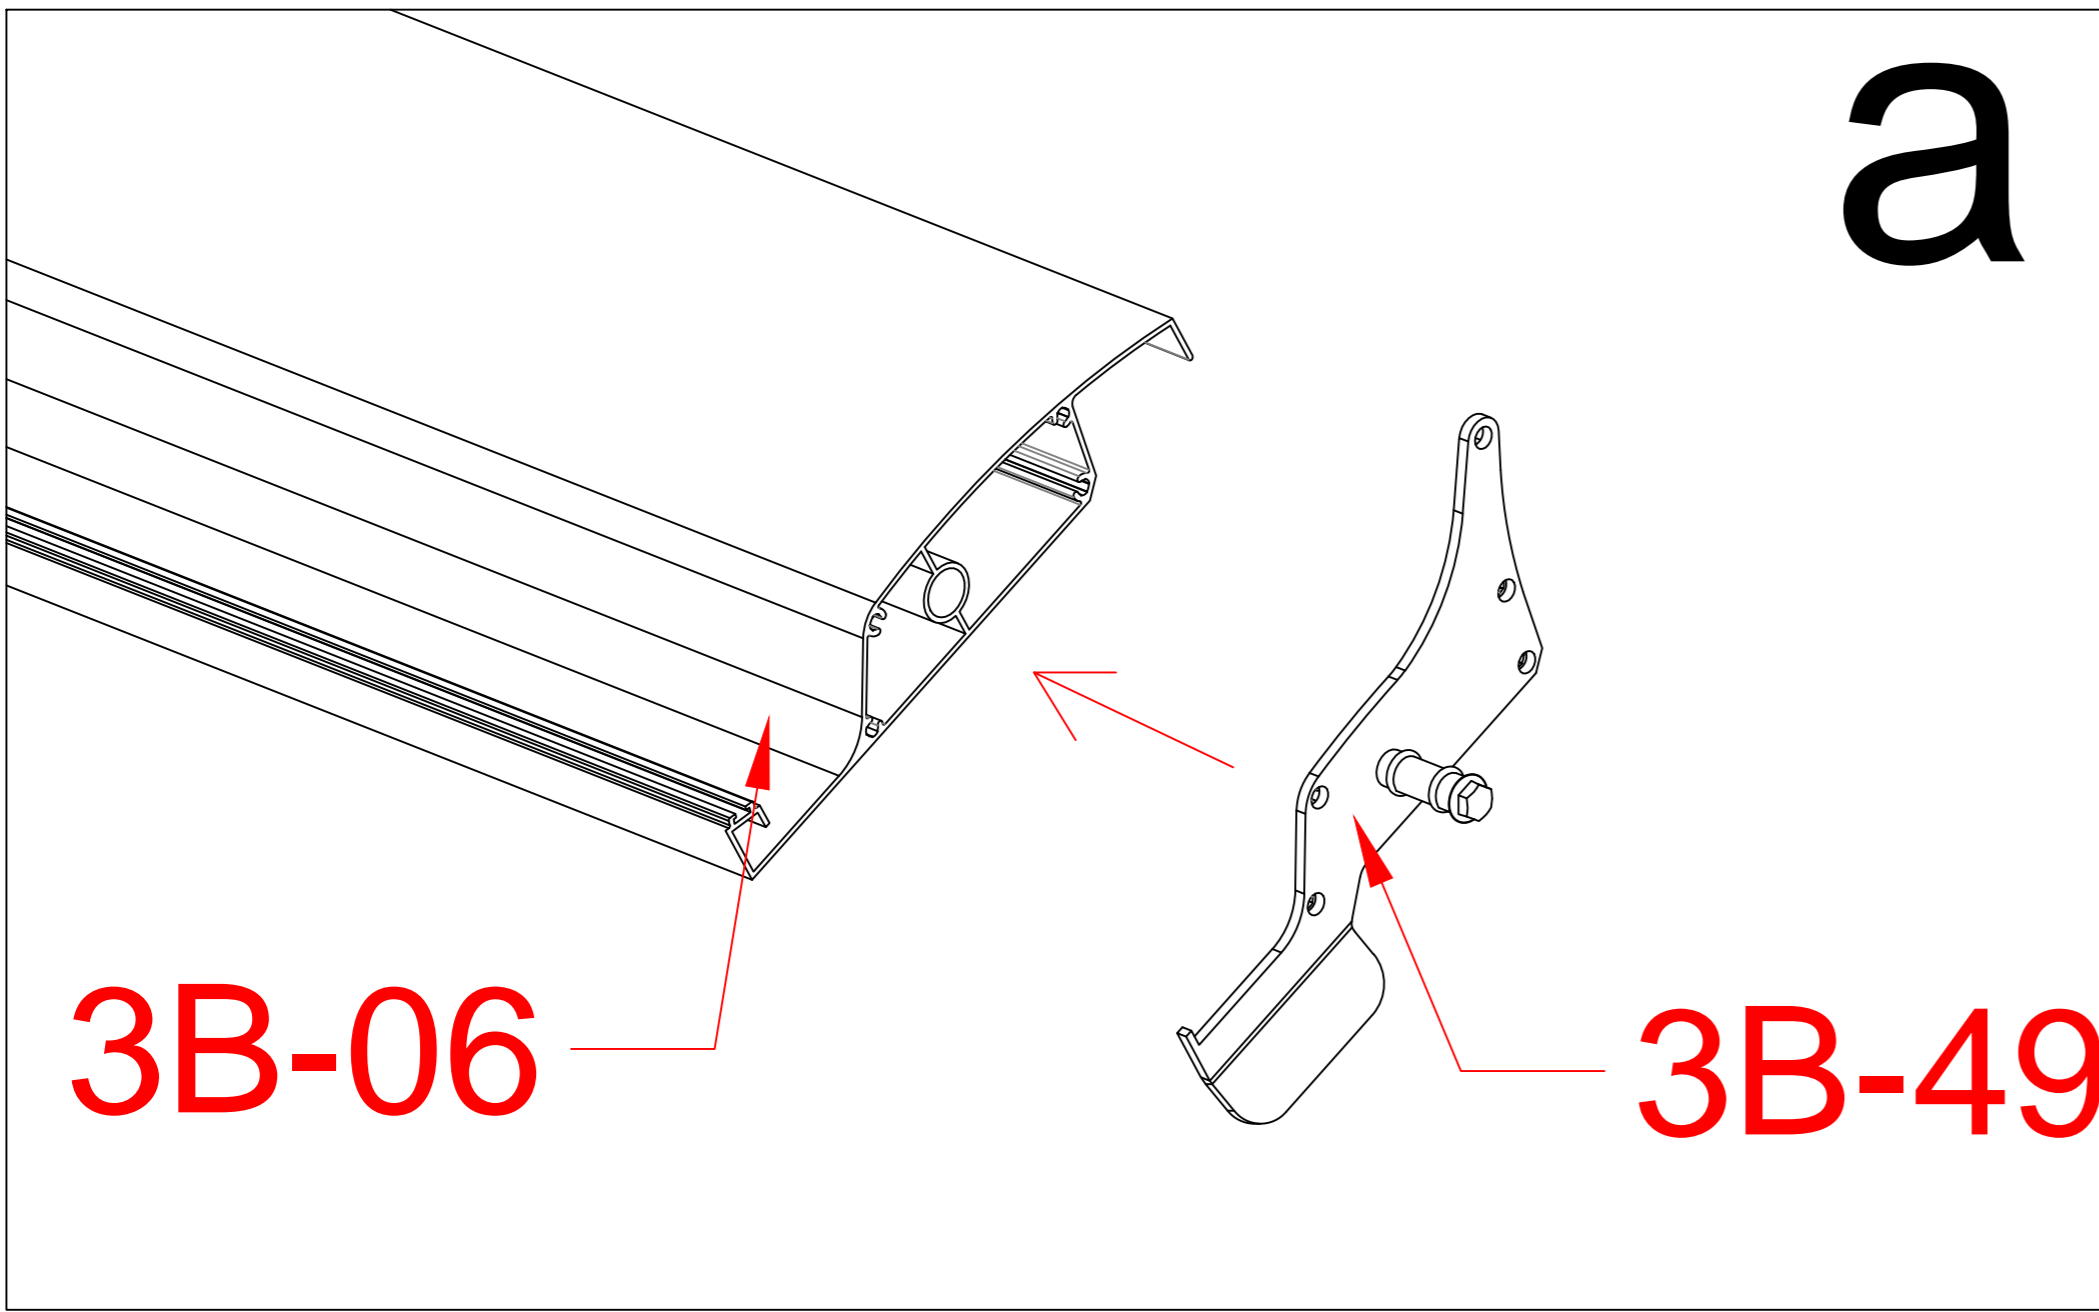


3B-49	
3B-49B	
3B-51	



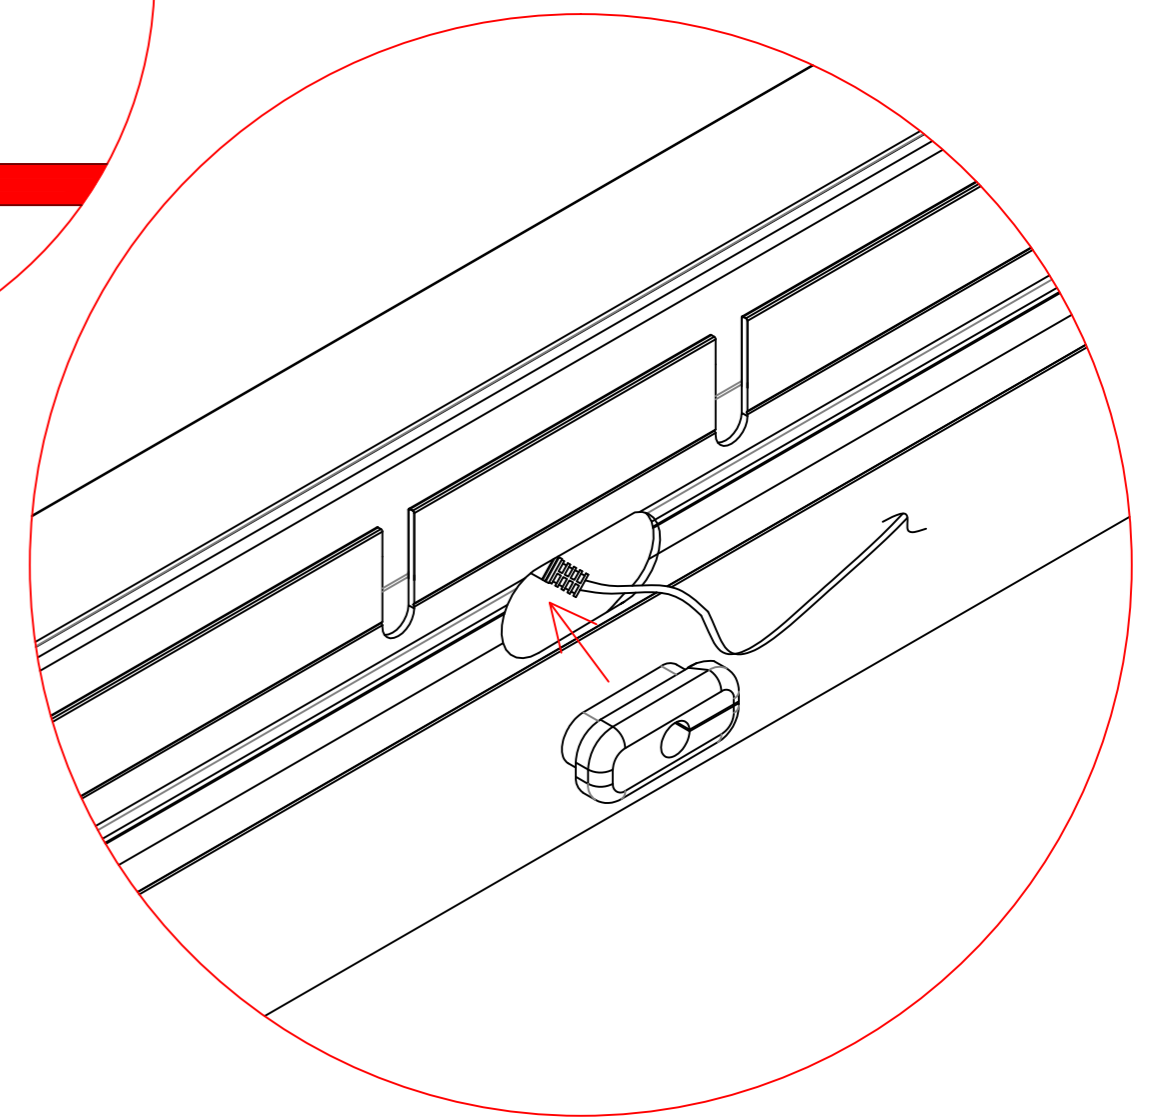
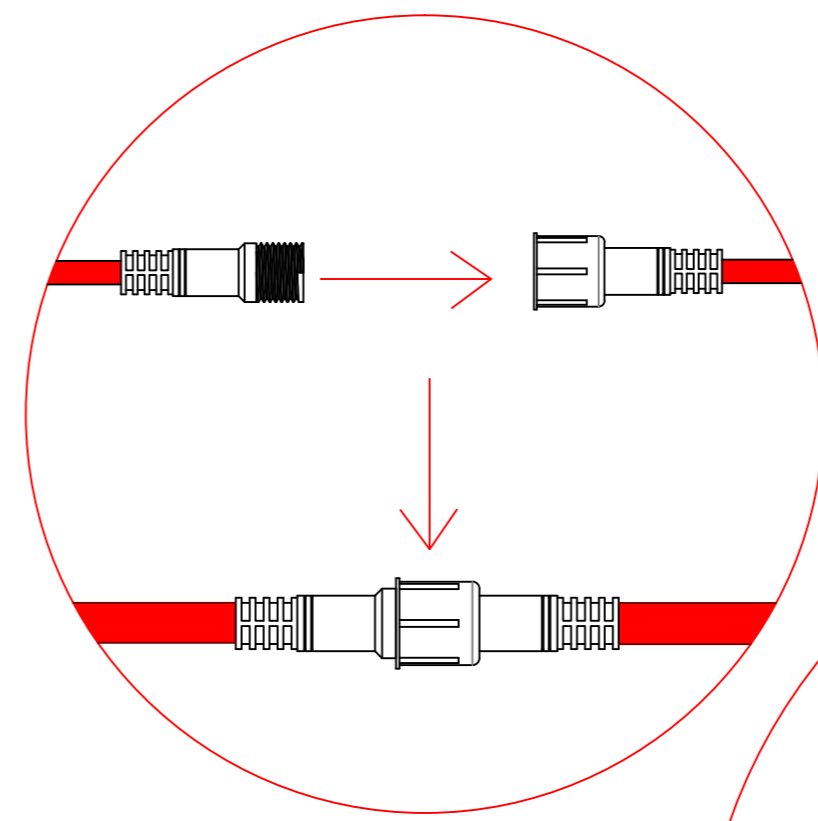
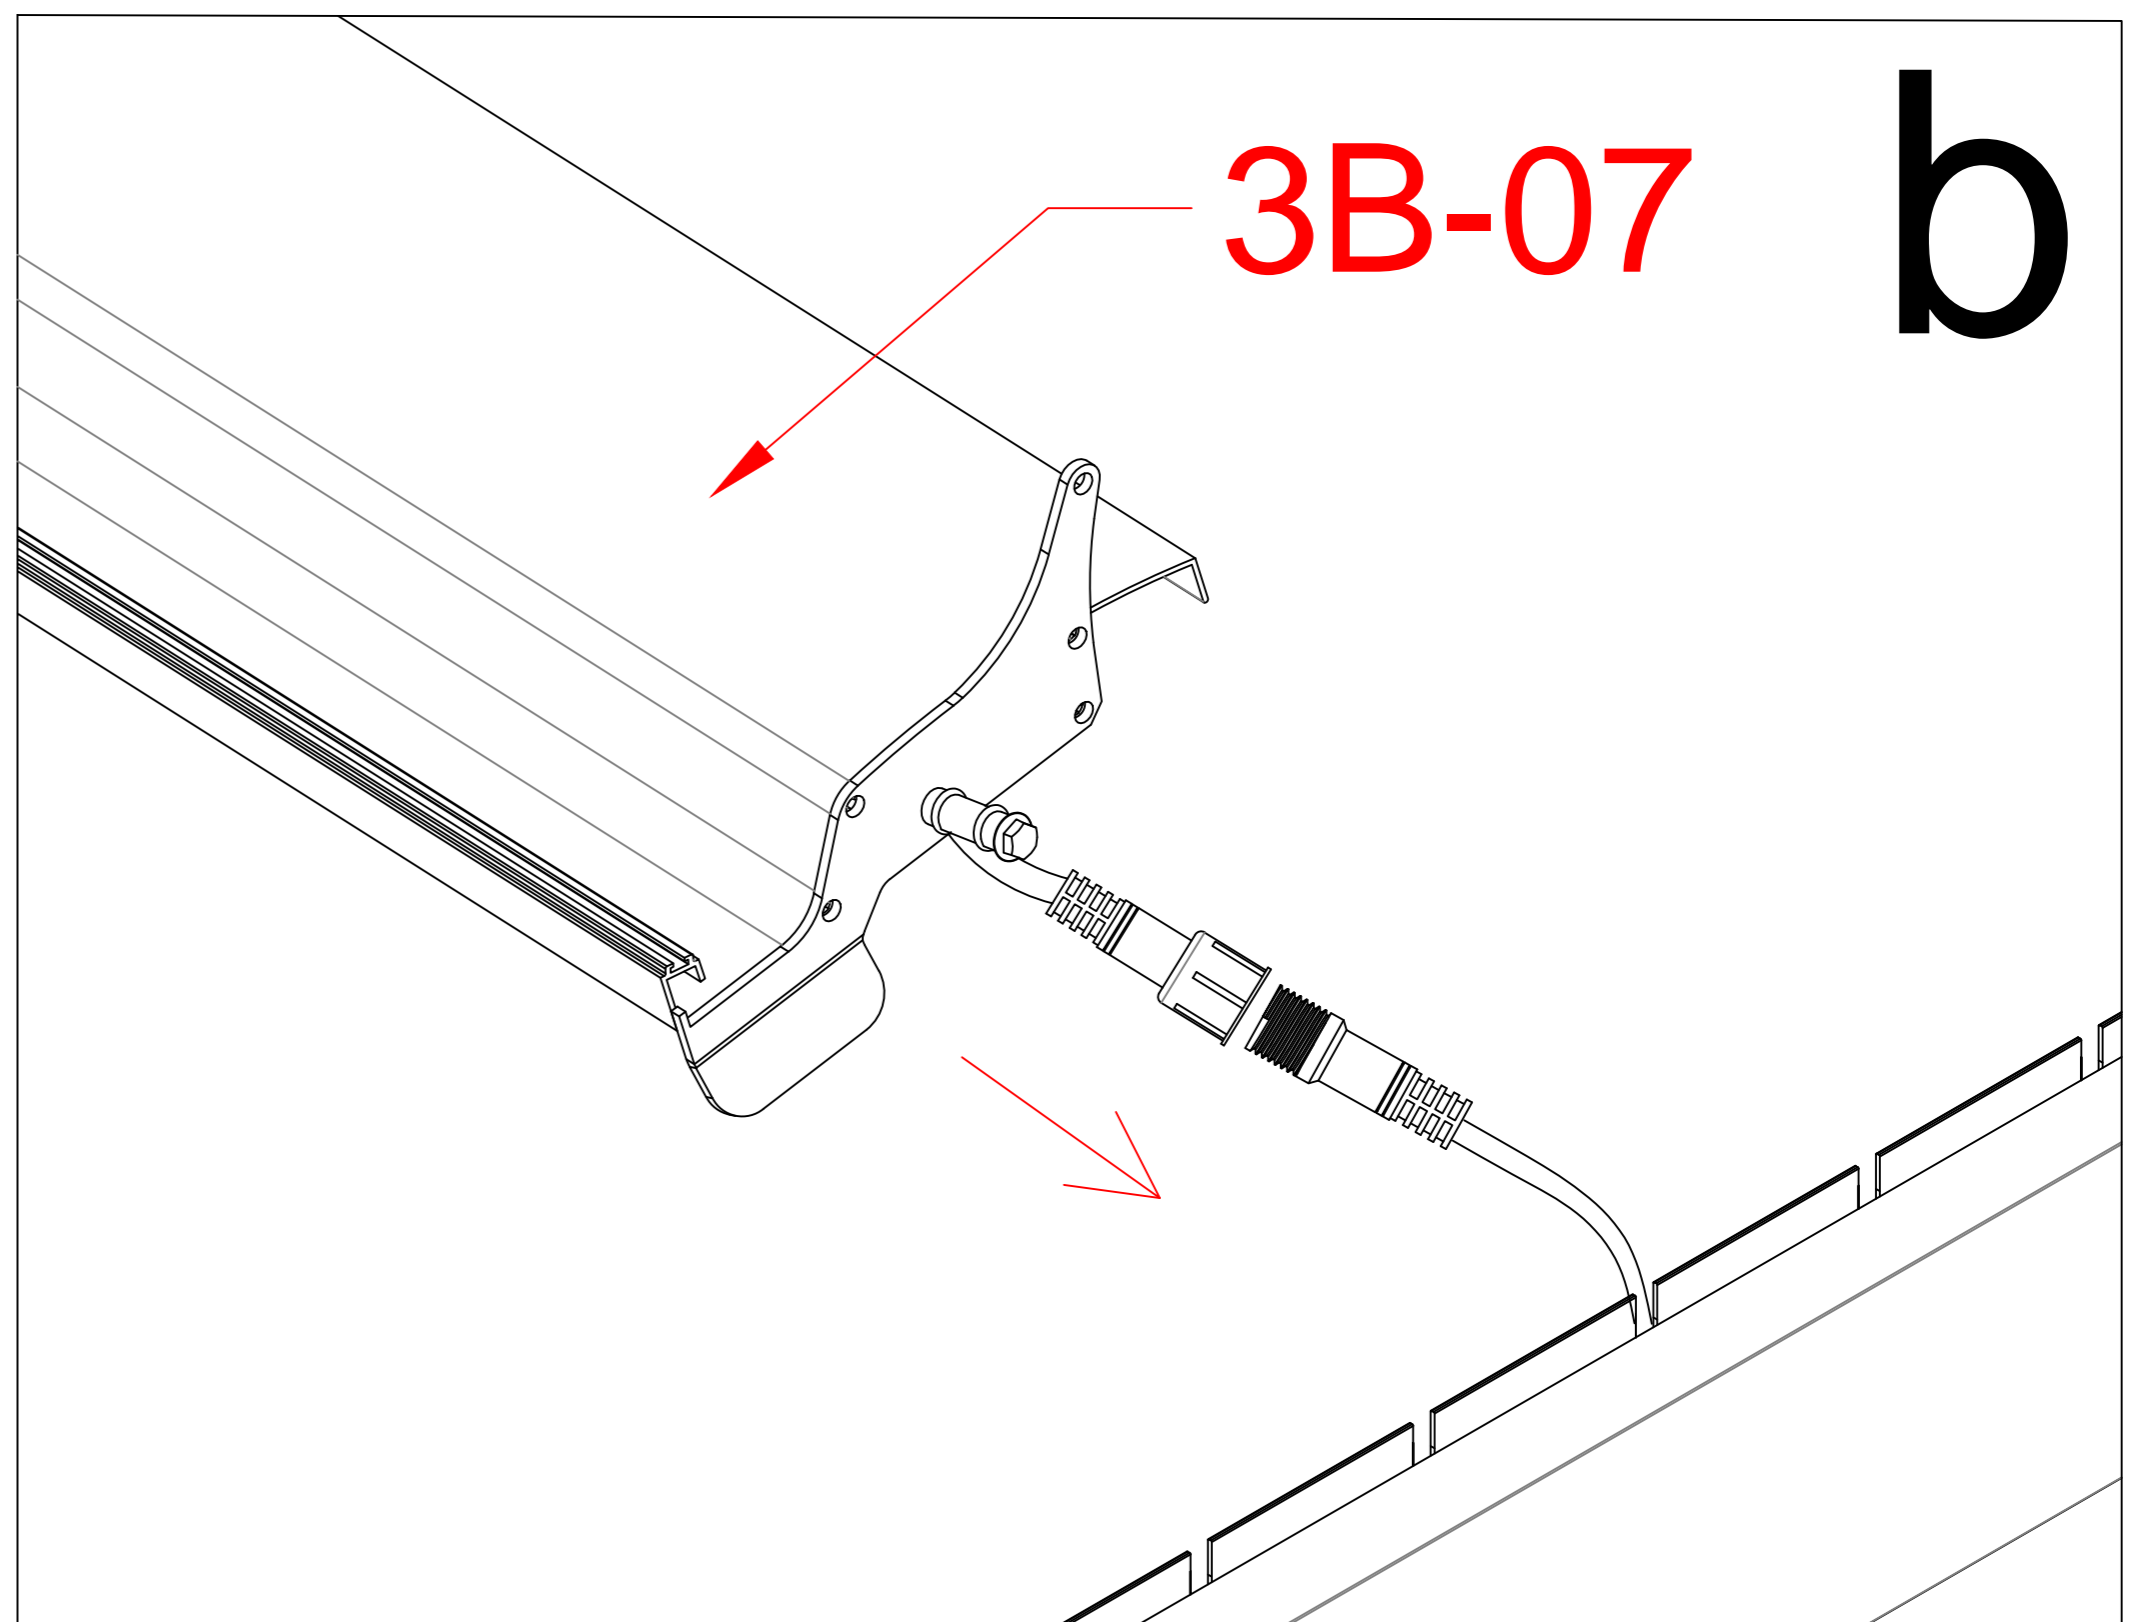
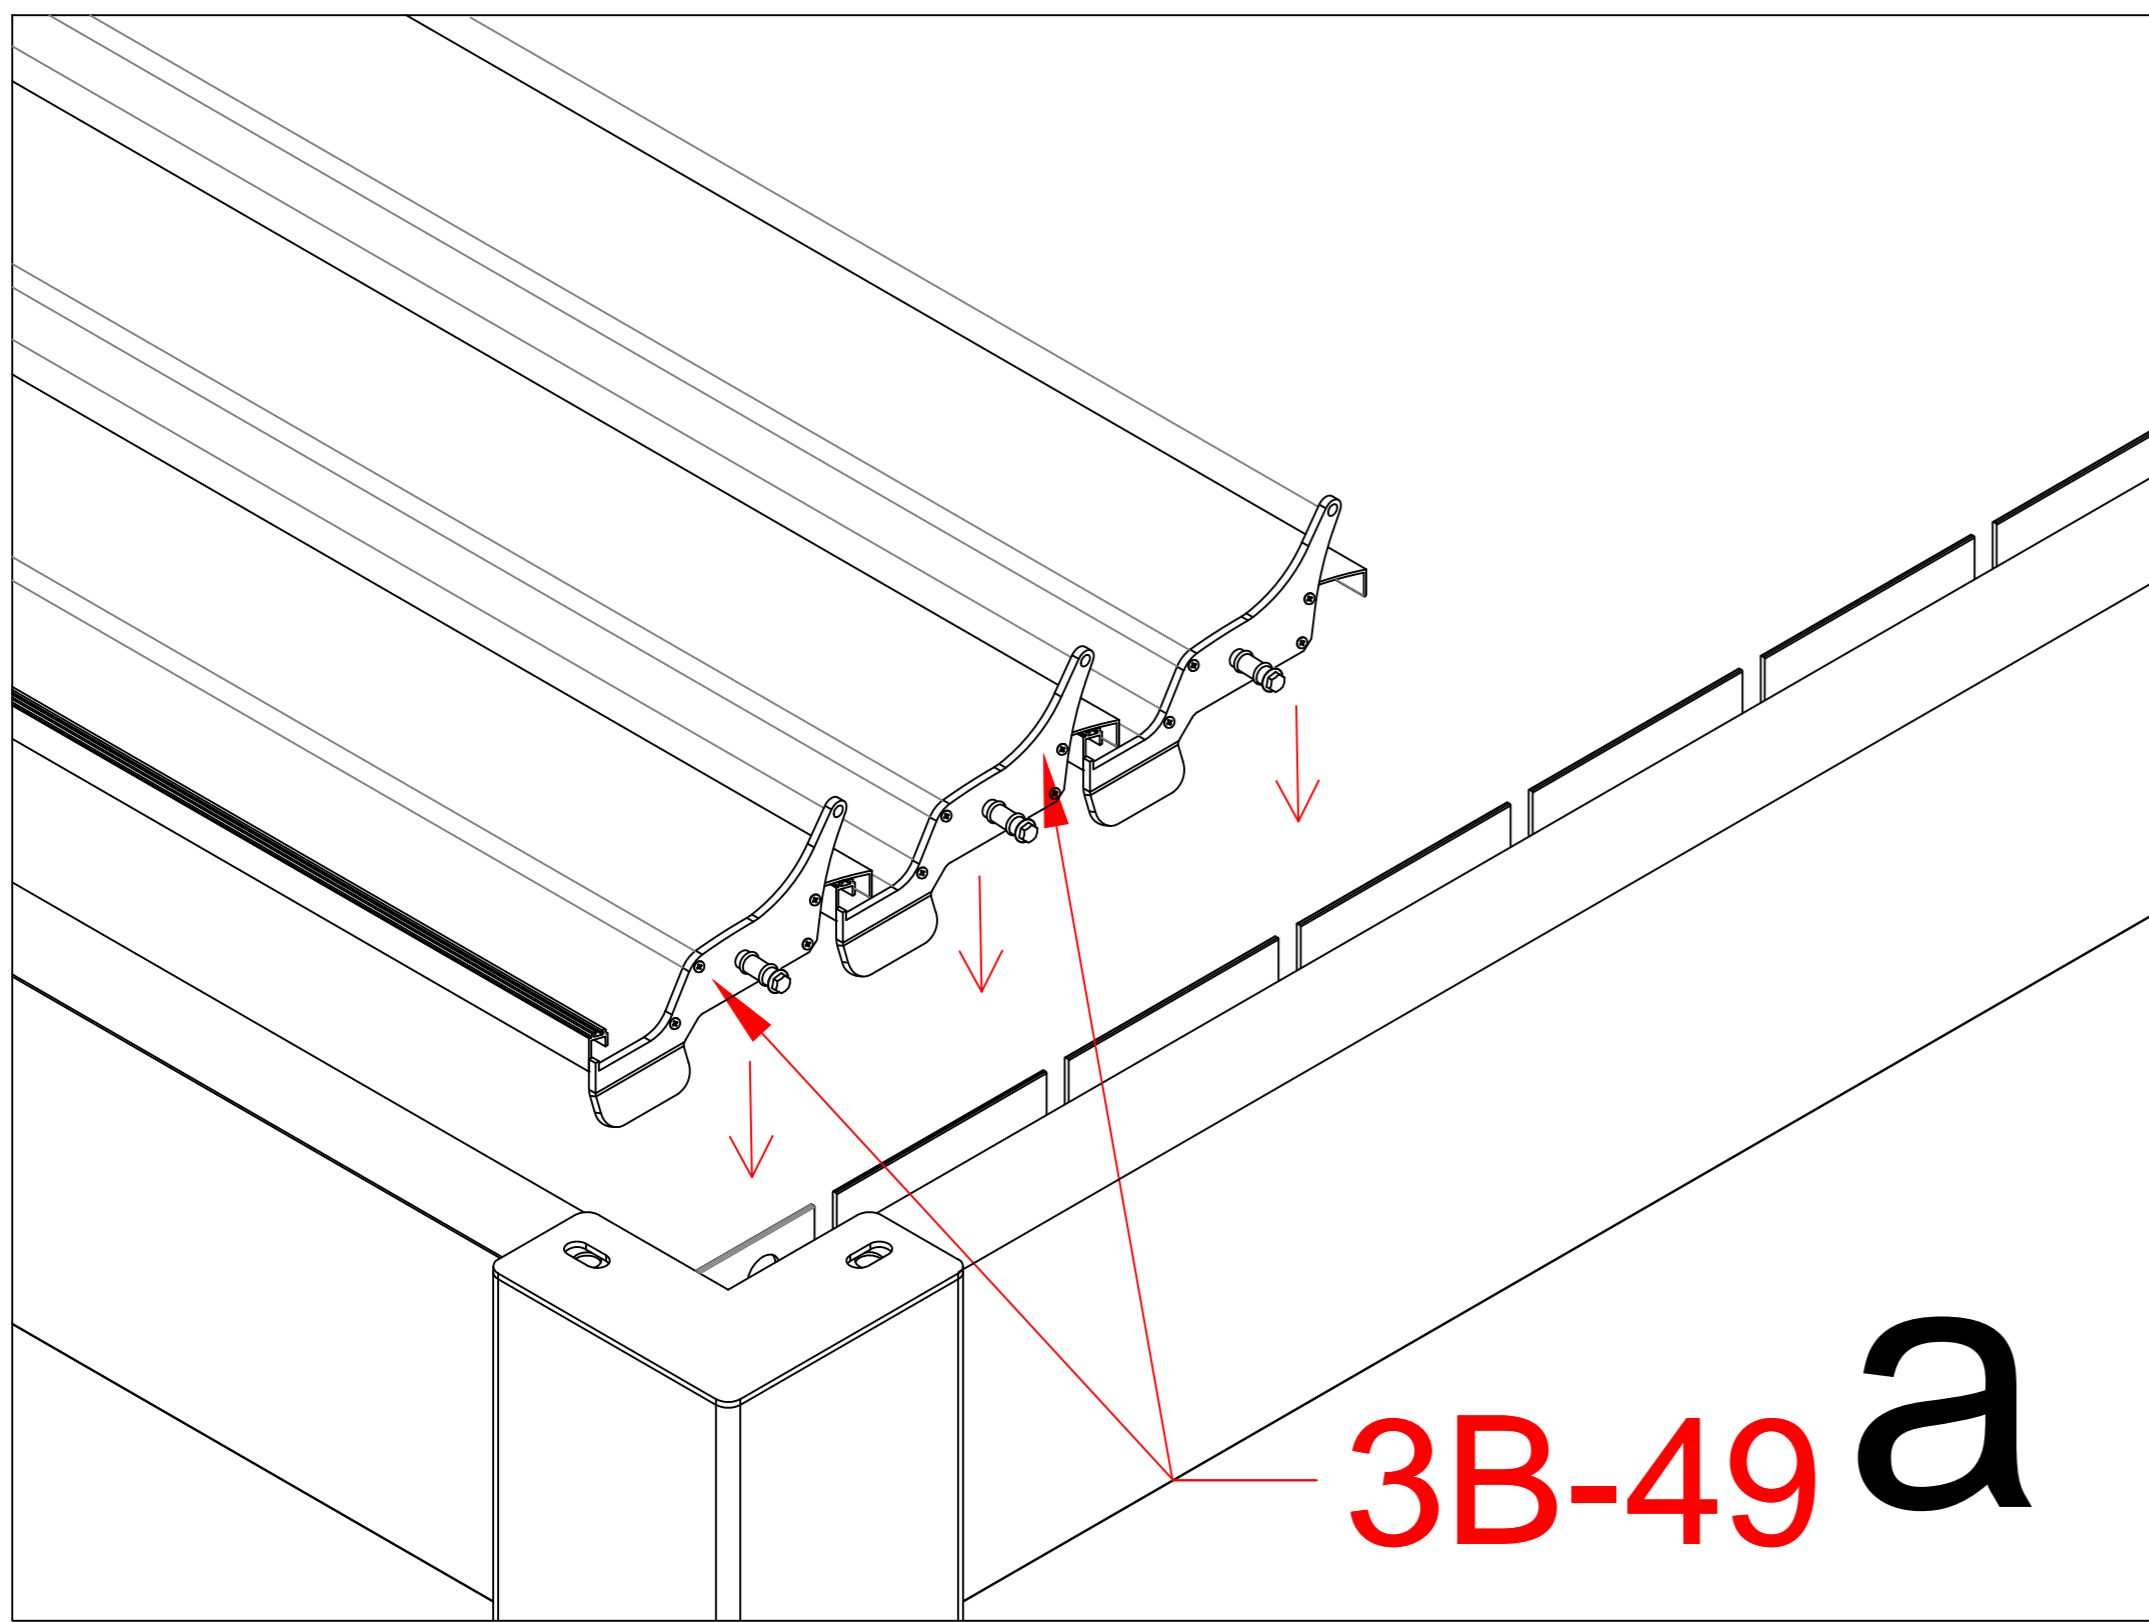




Connecting the male and female connectors, then put them into the holes in the main beam, and finally insert the plugs.

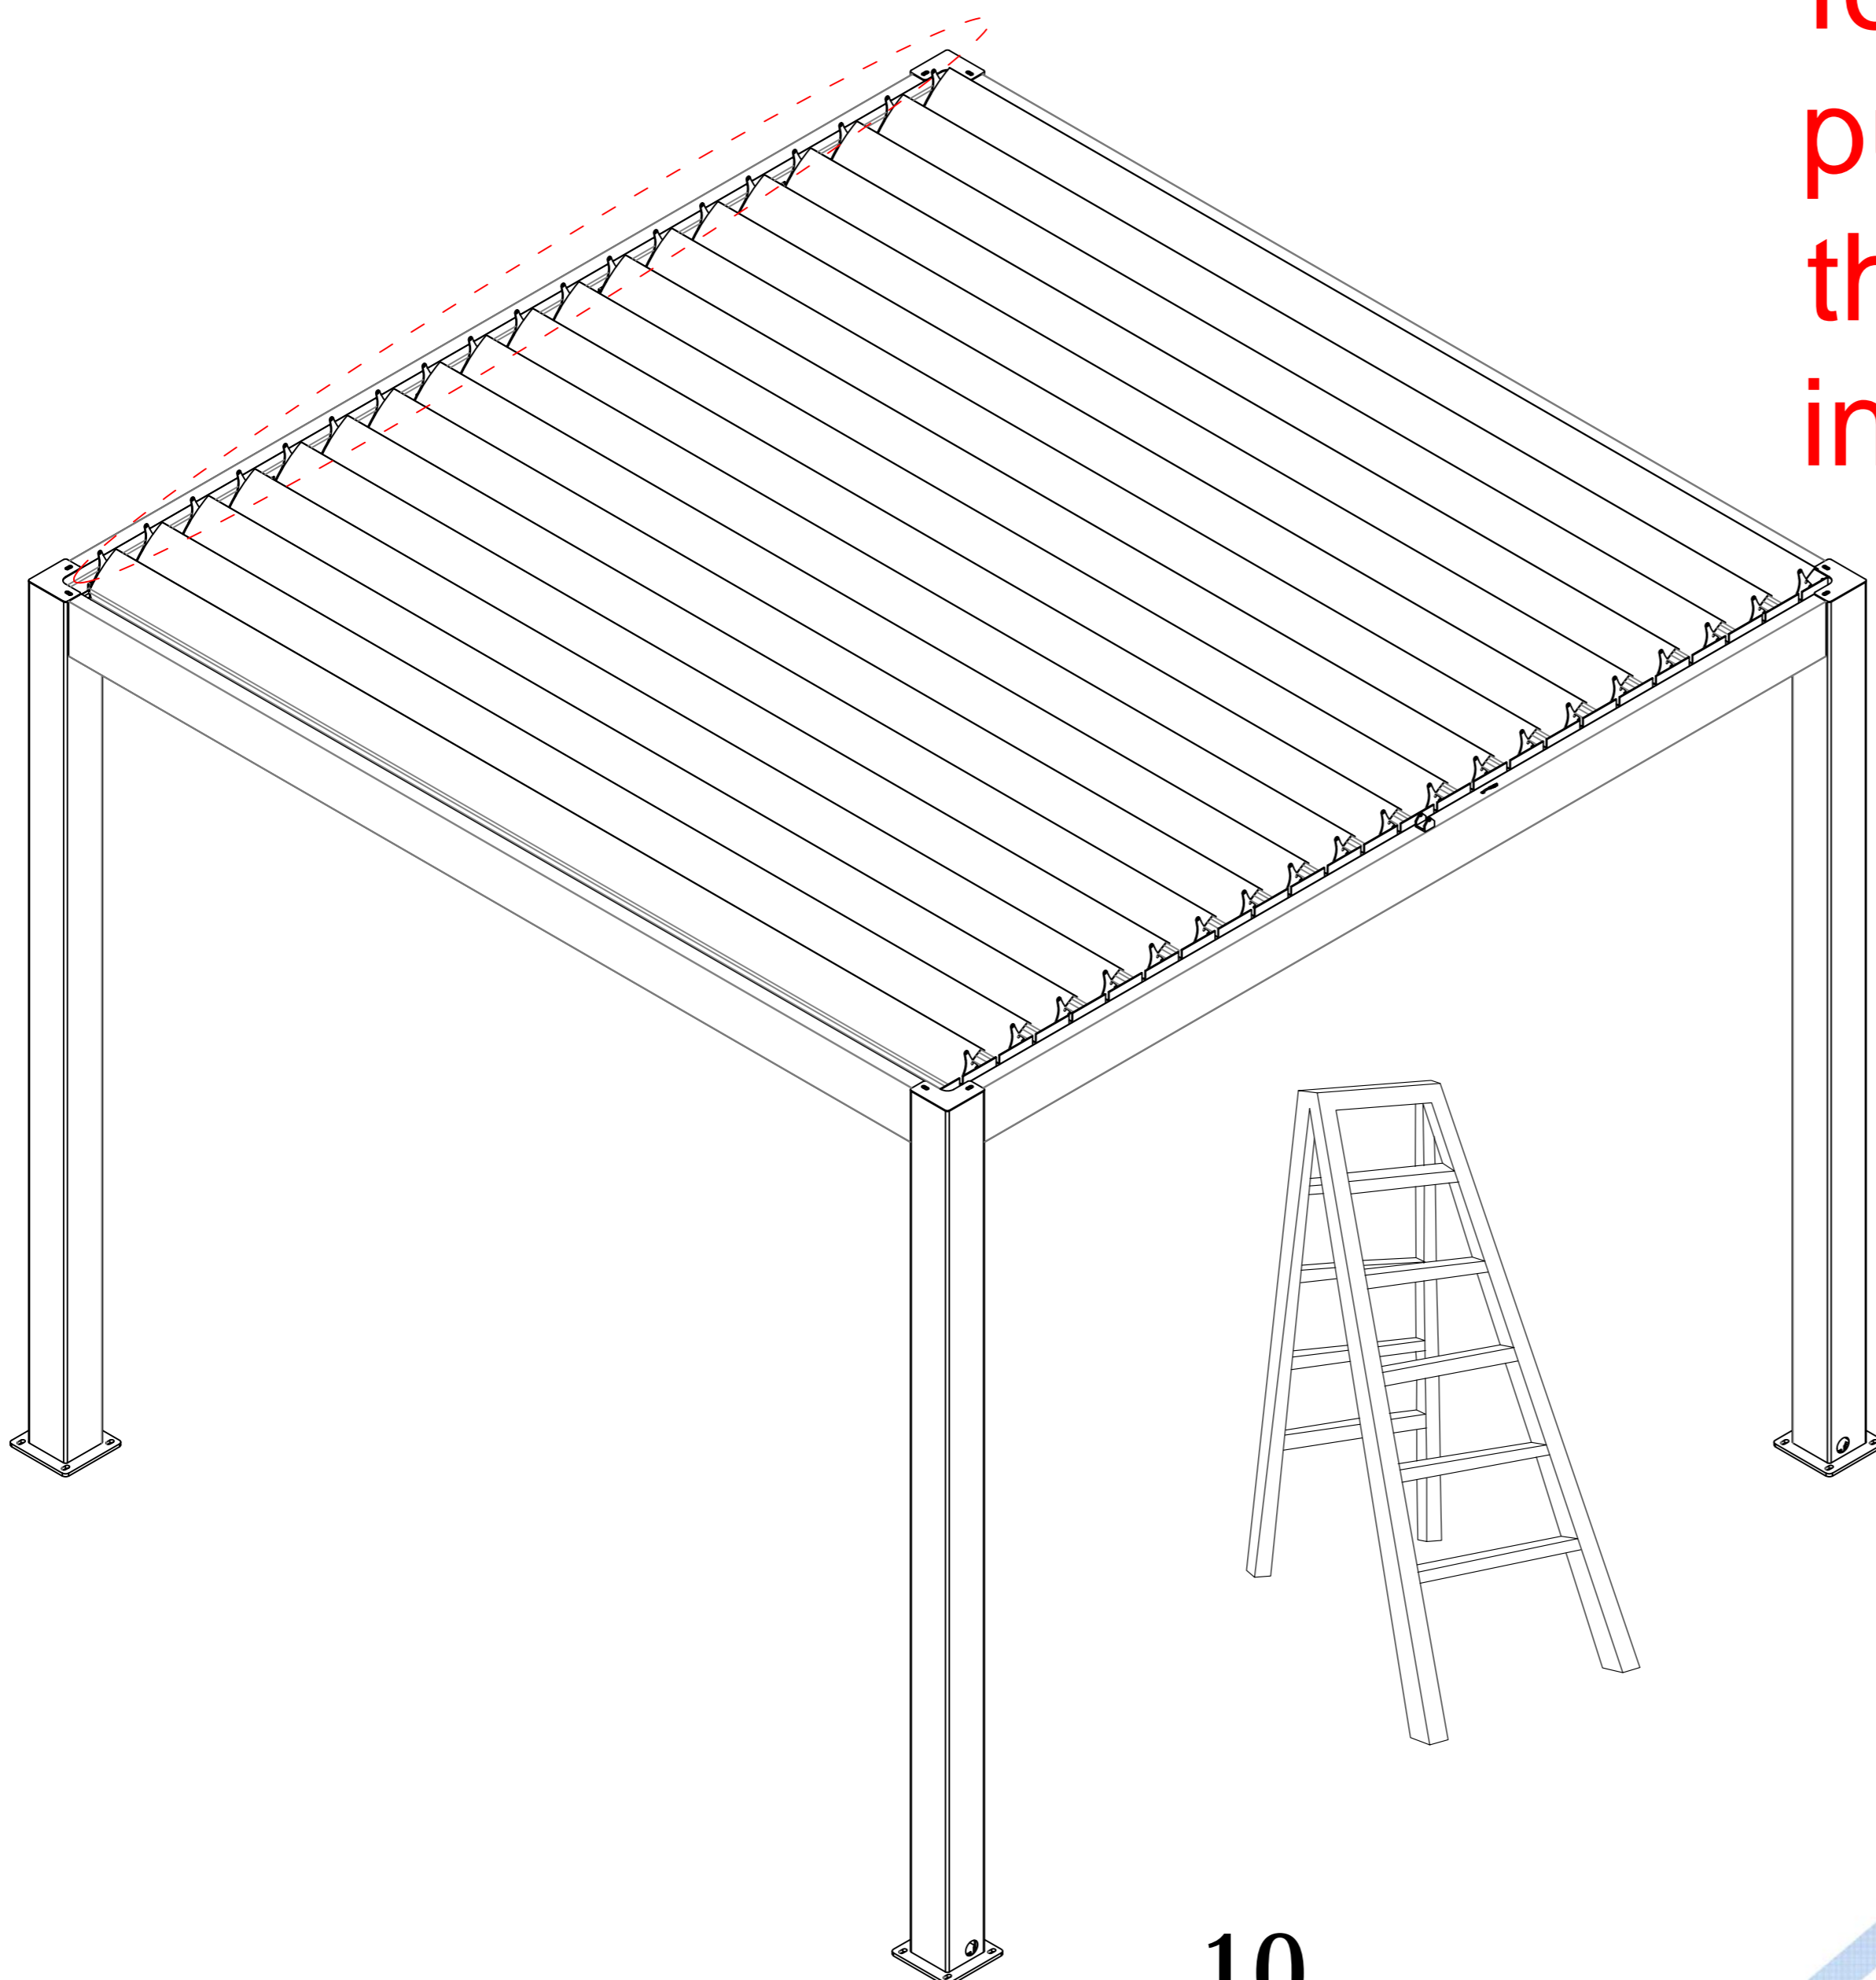





3B-57	
3B-06	
3B-07	



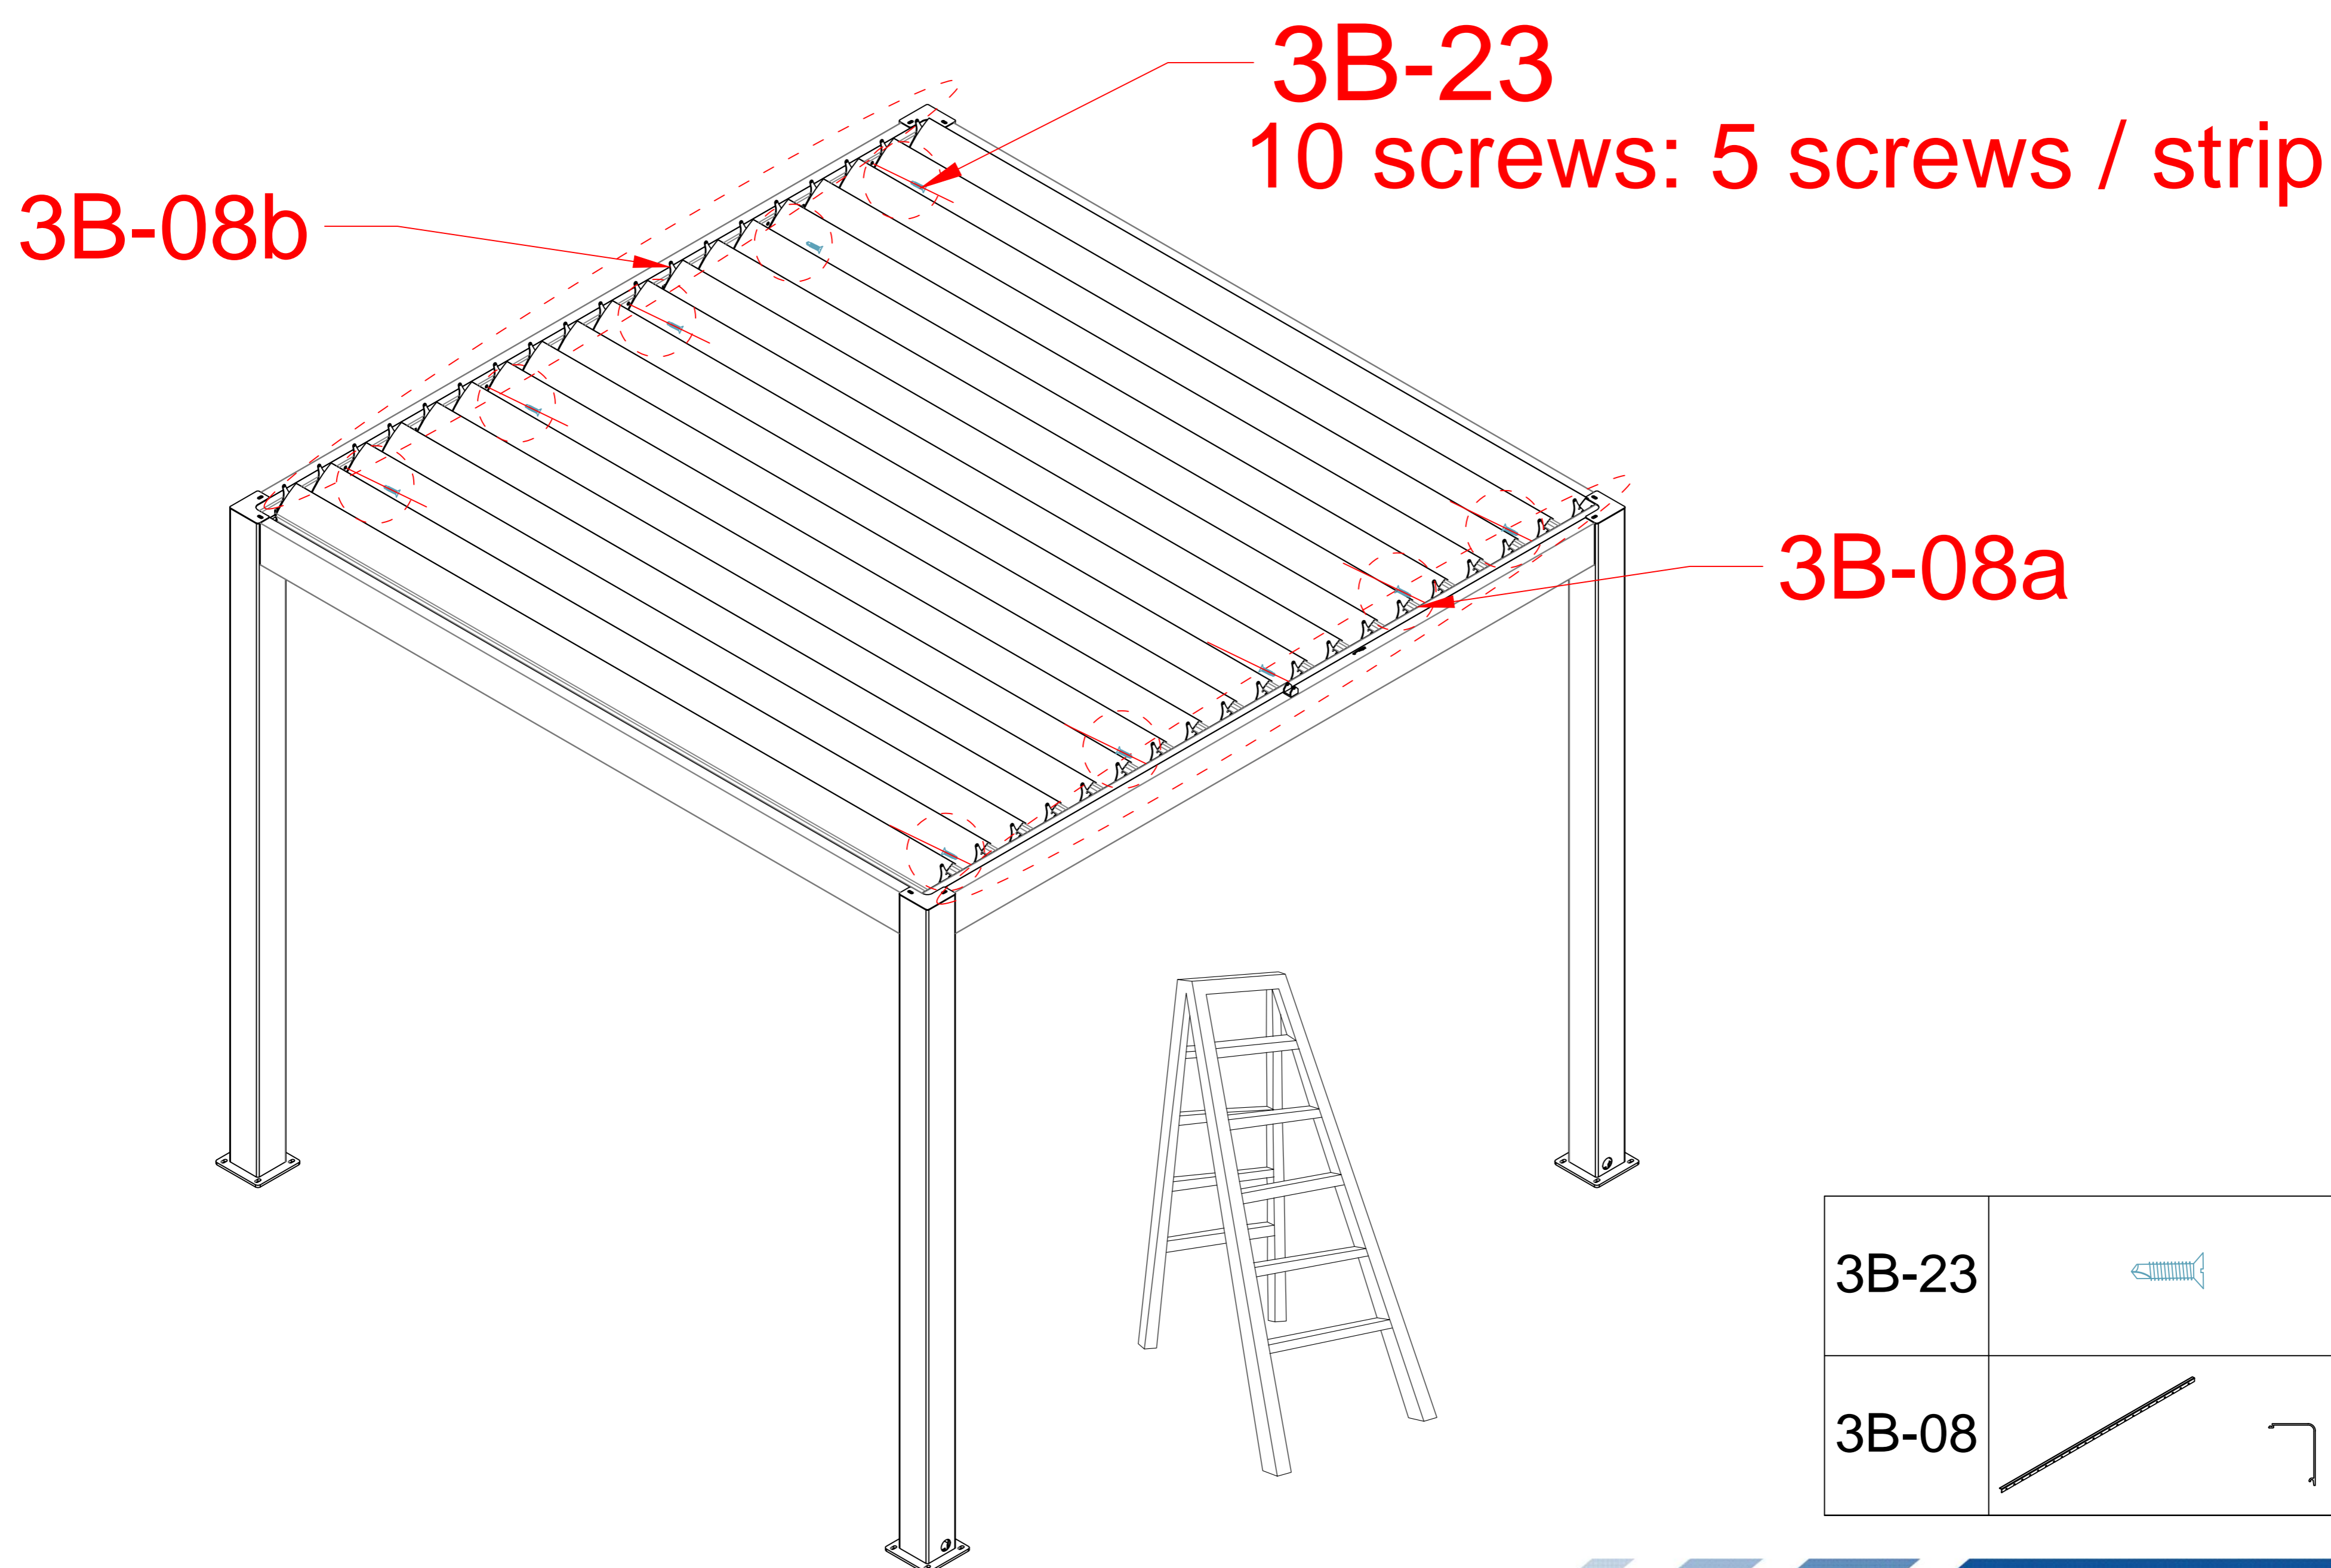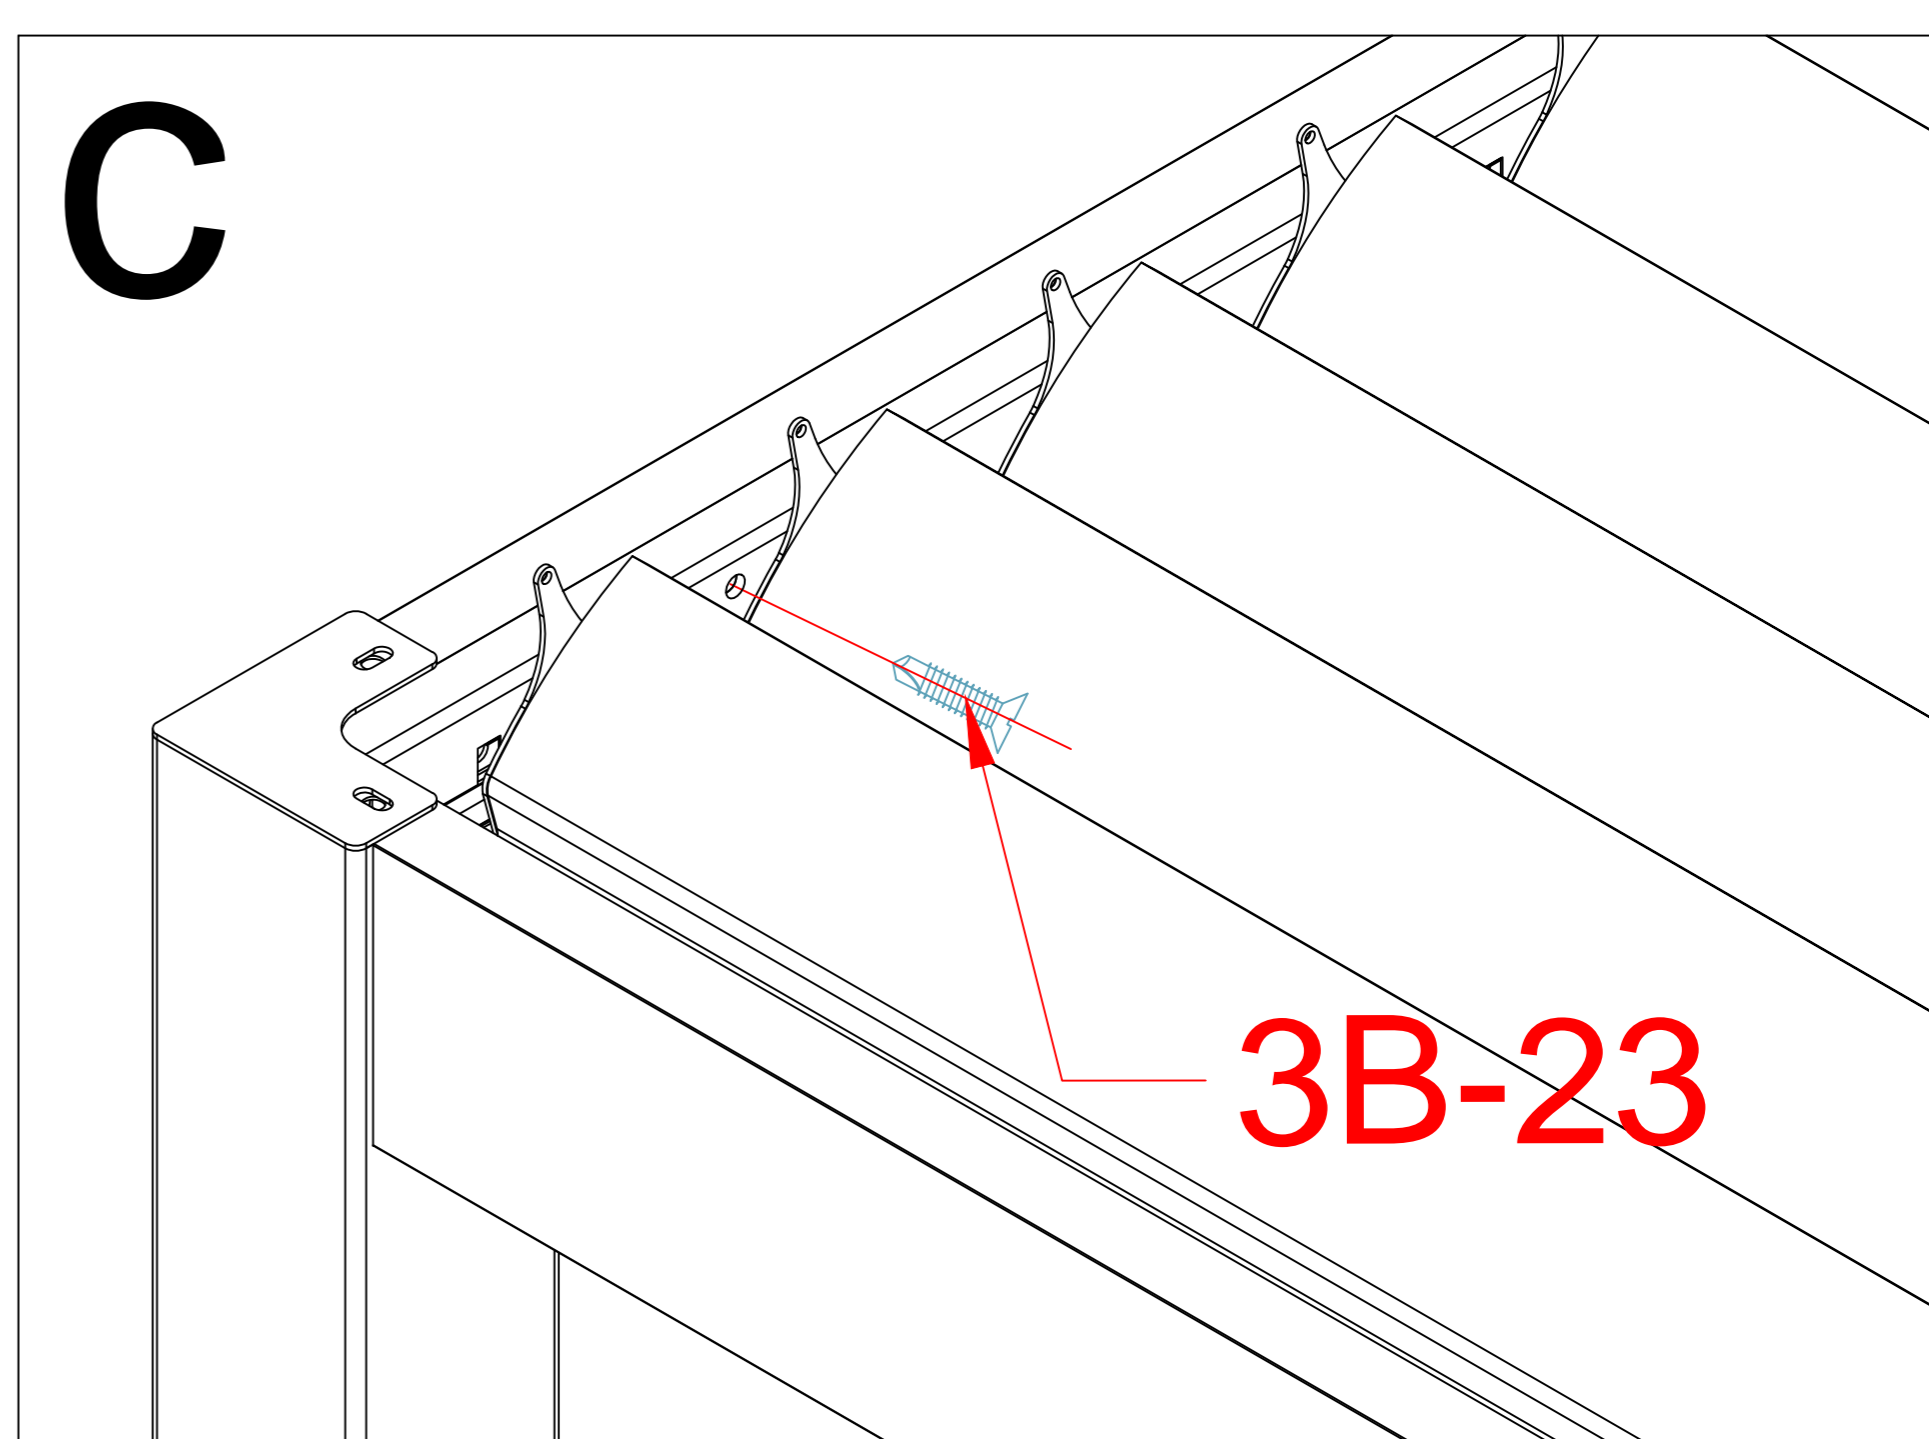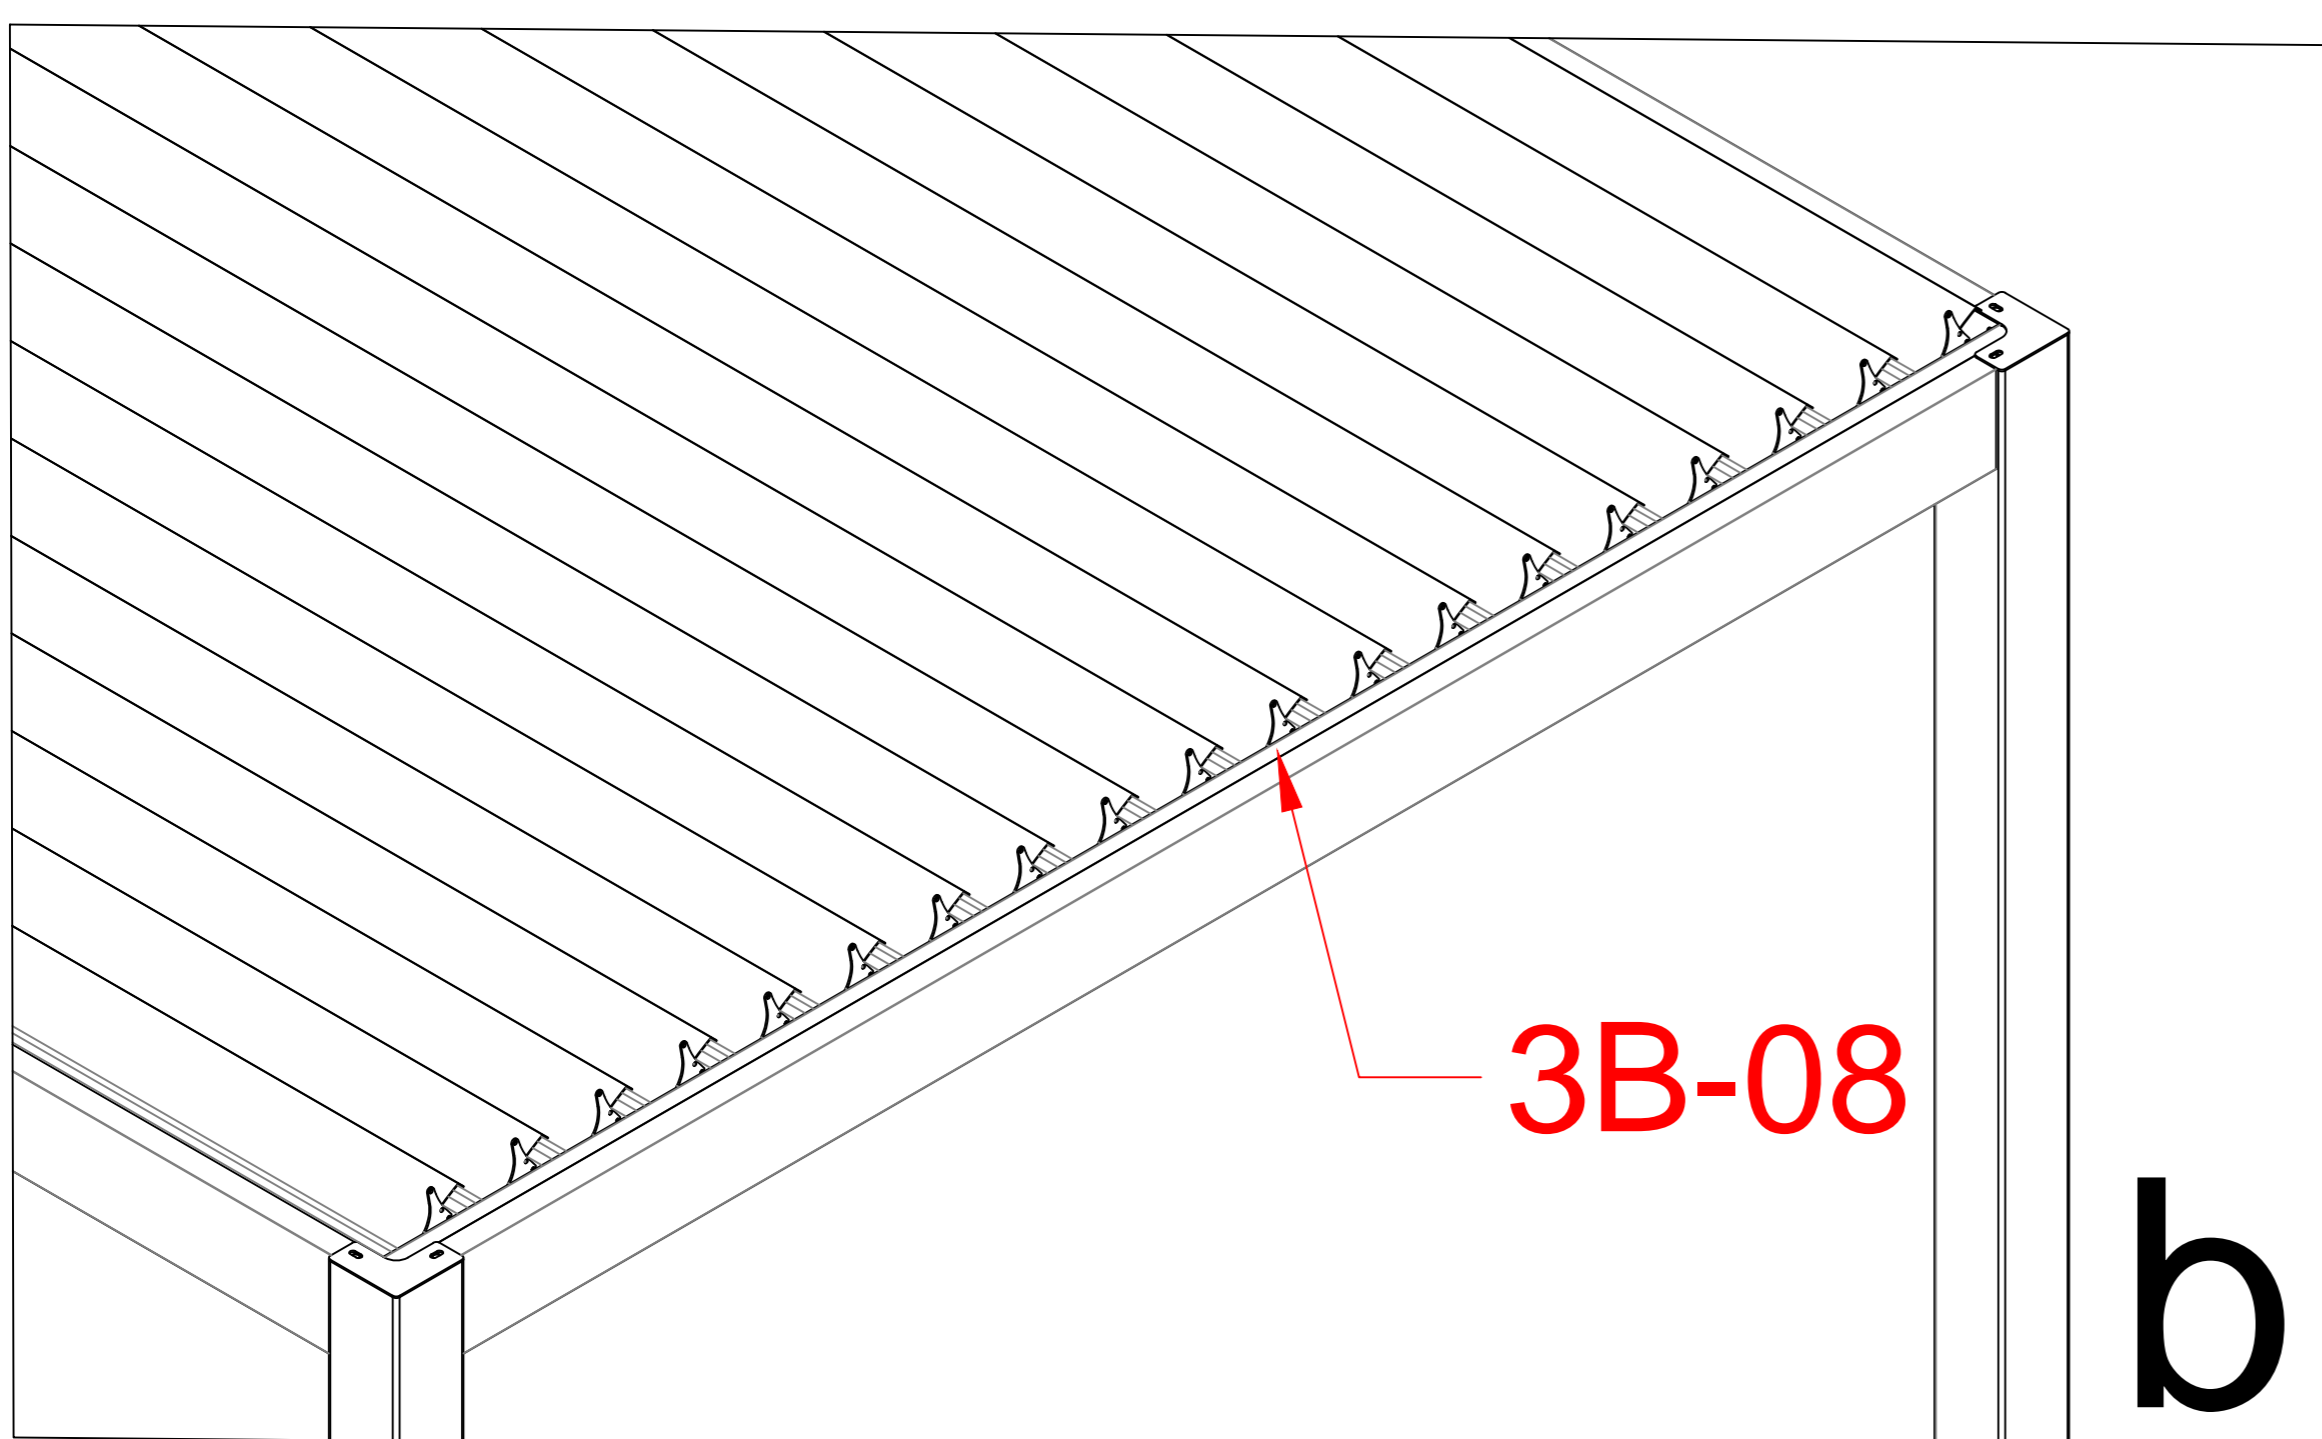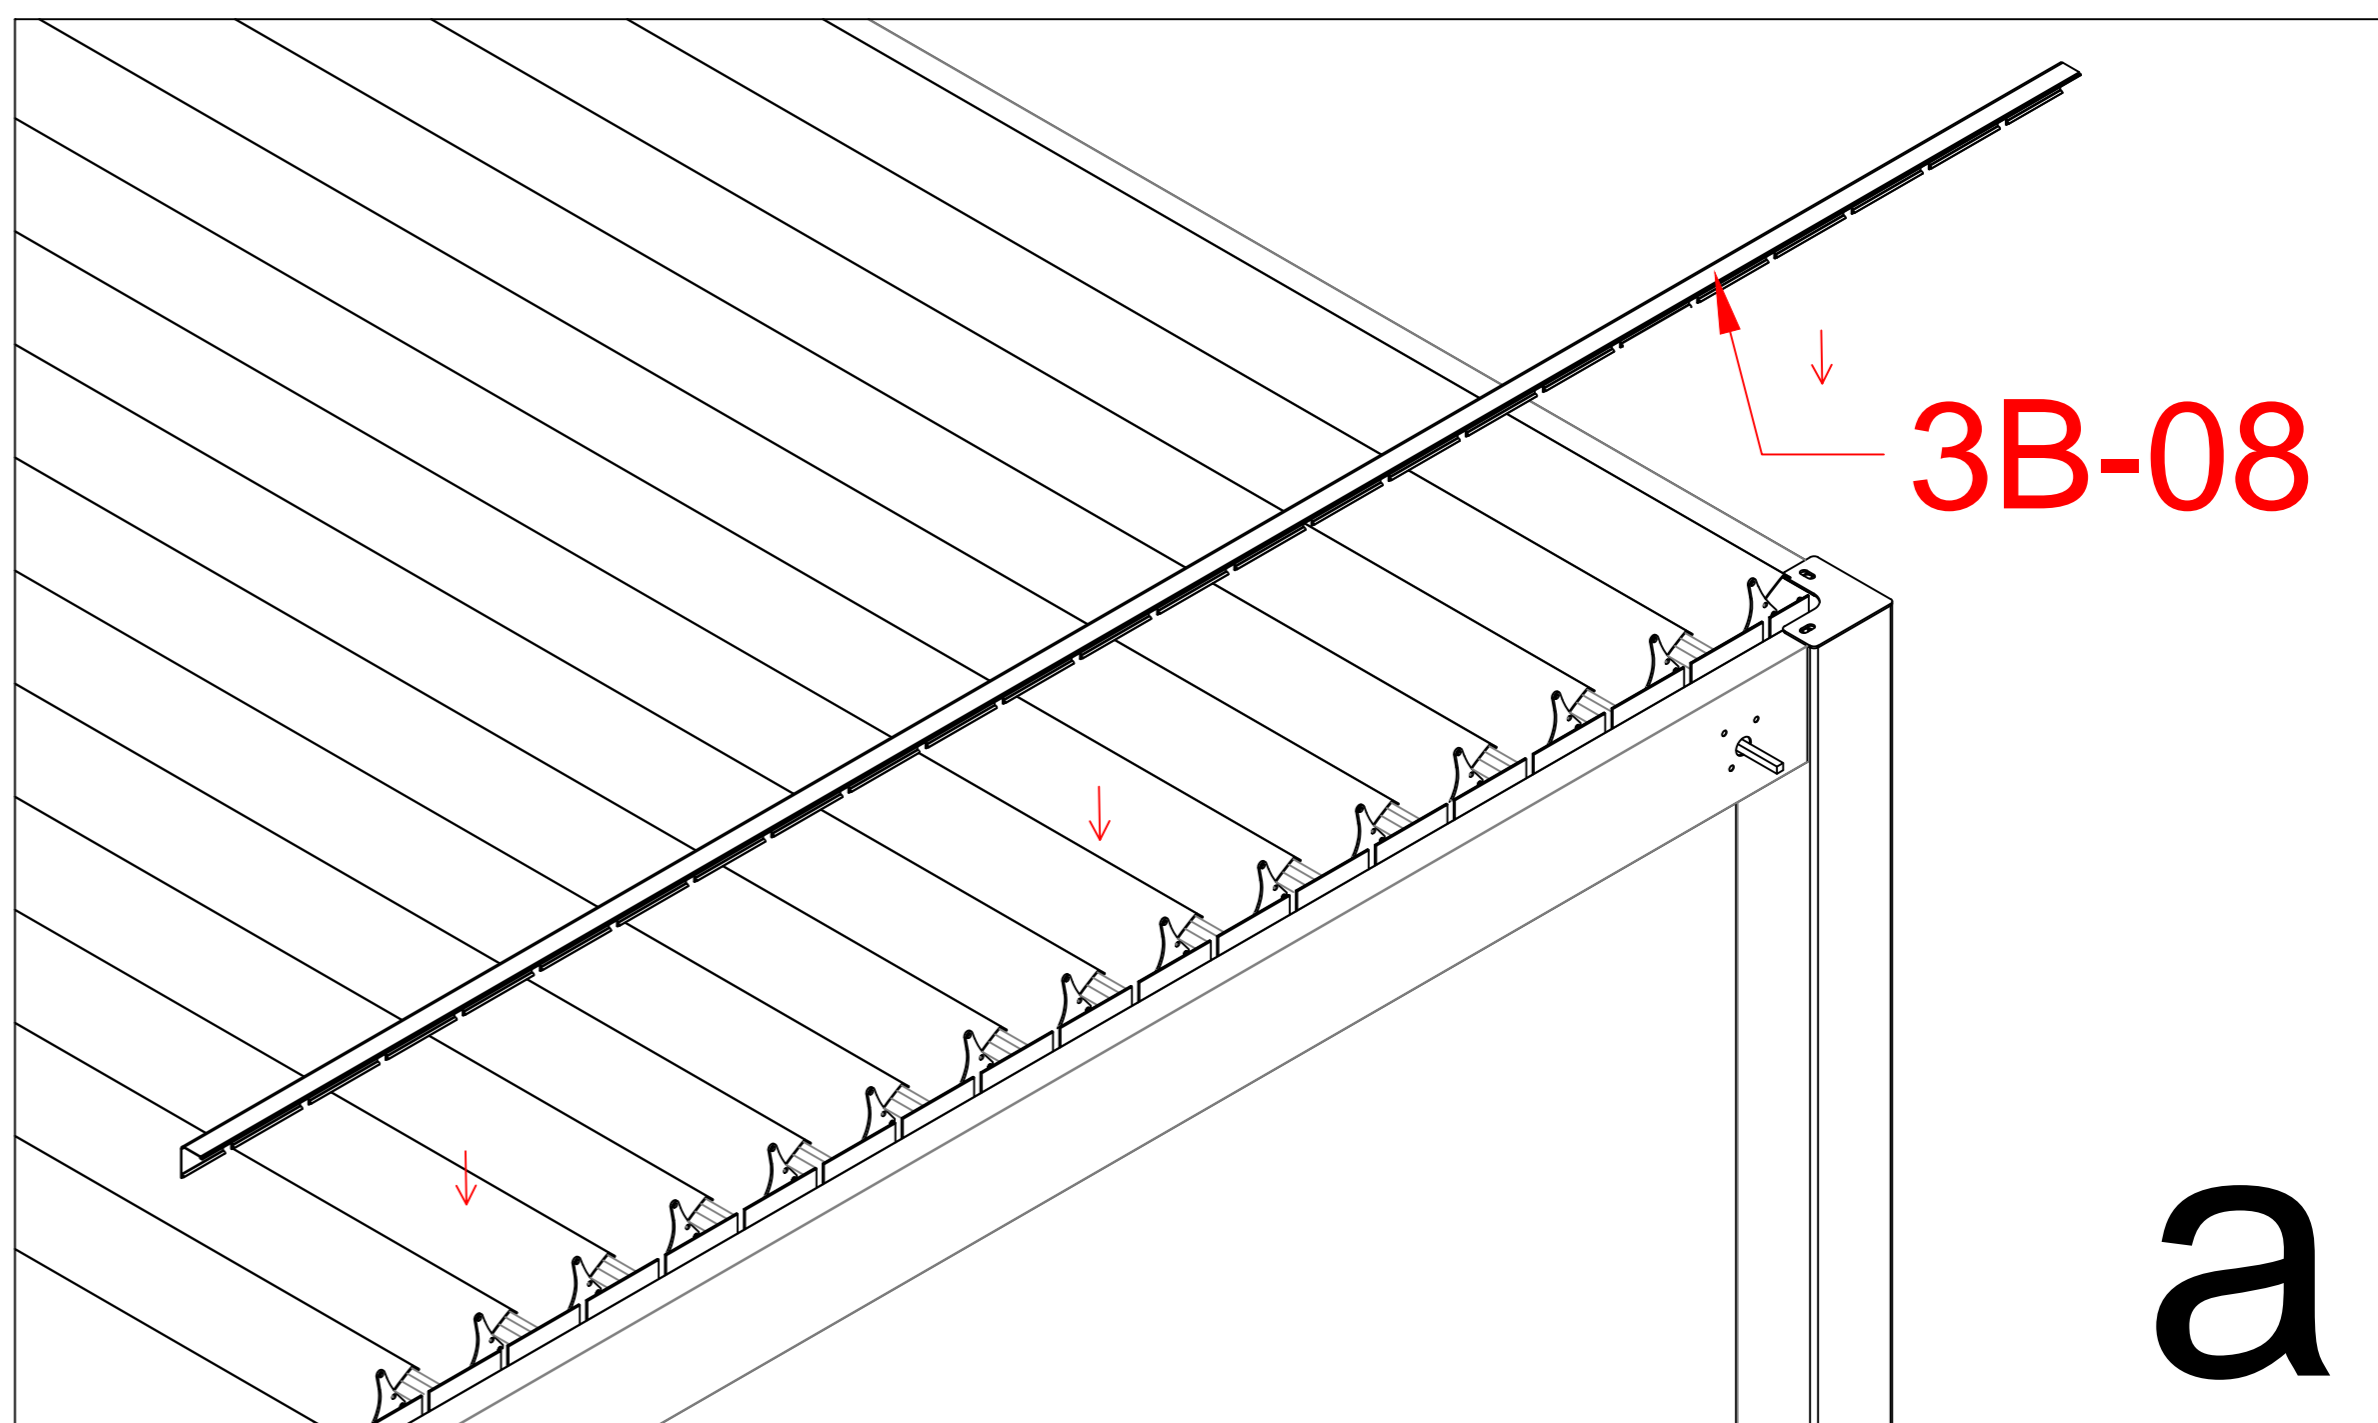





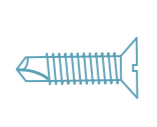
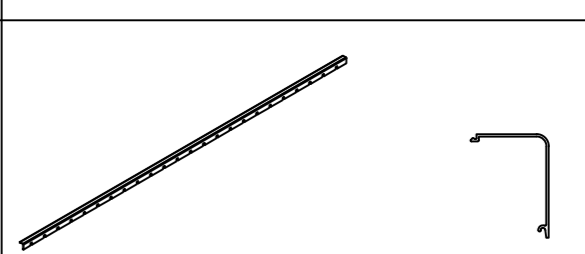
3B-23		10
3B-08		2



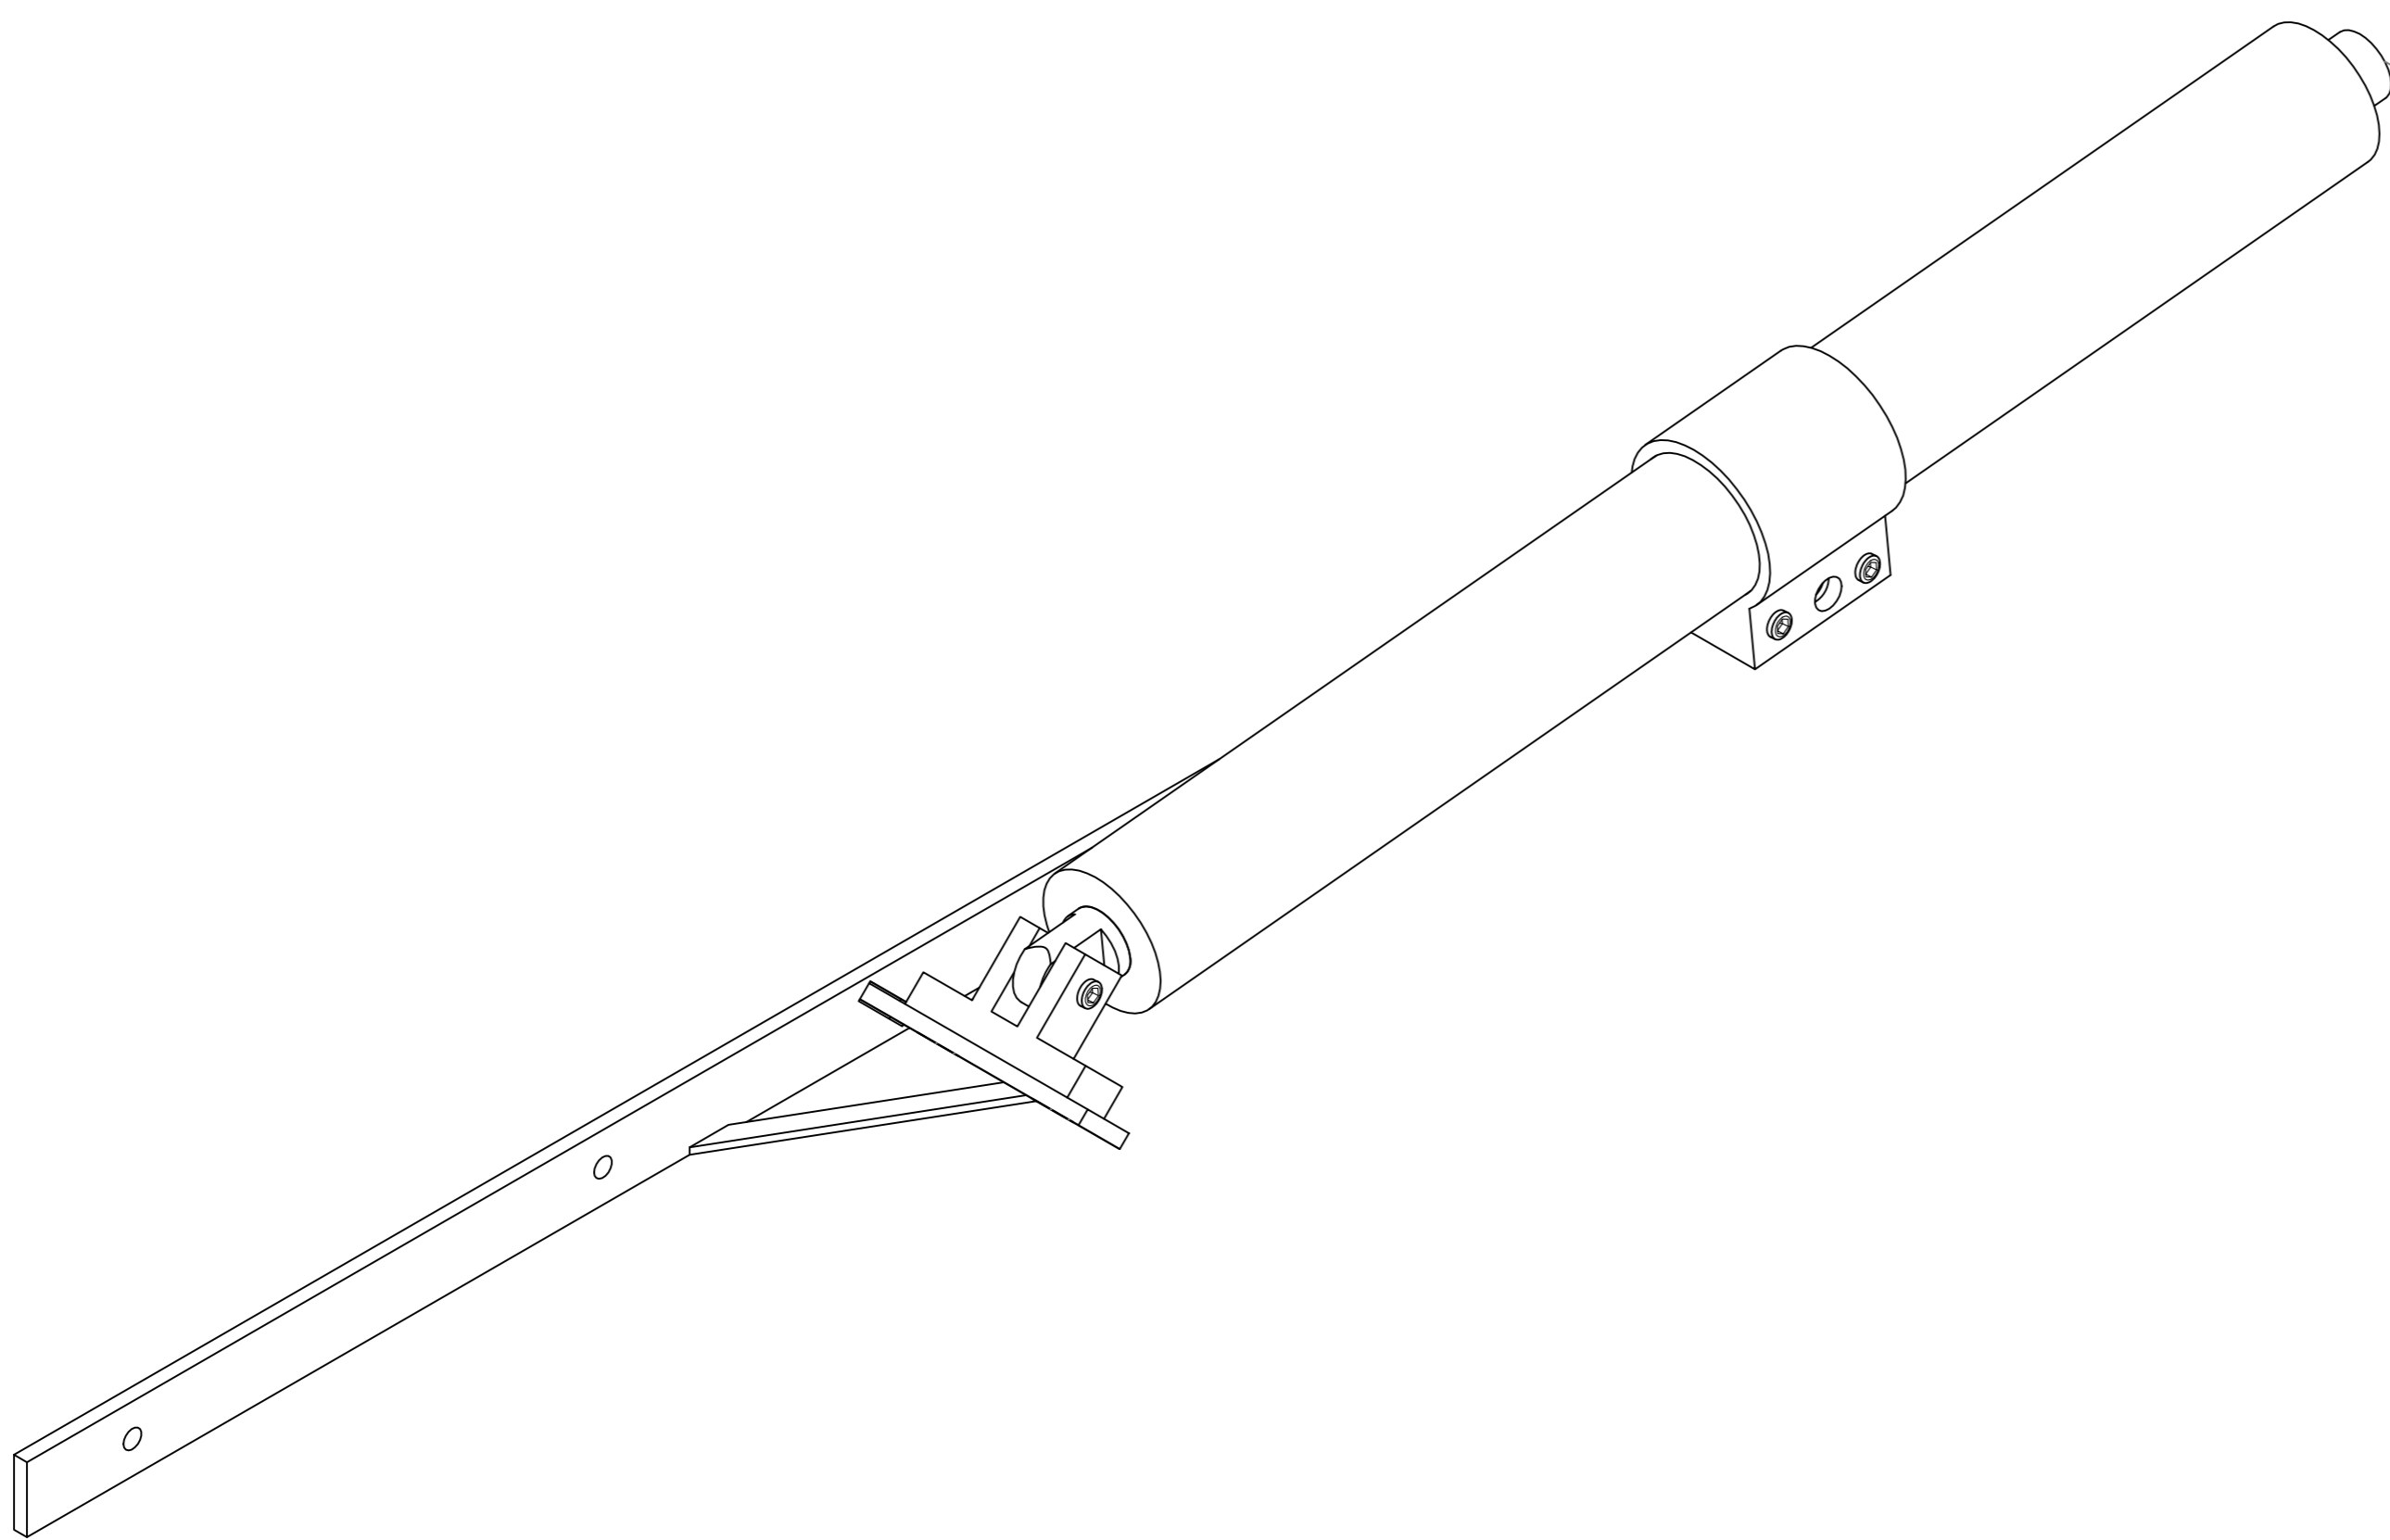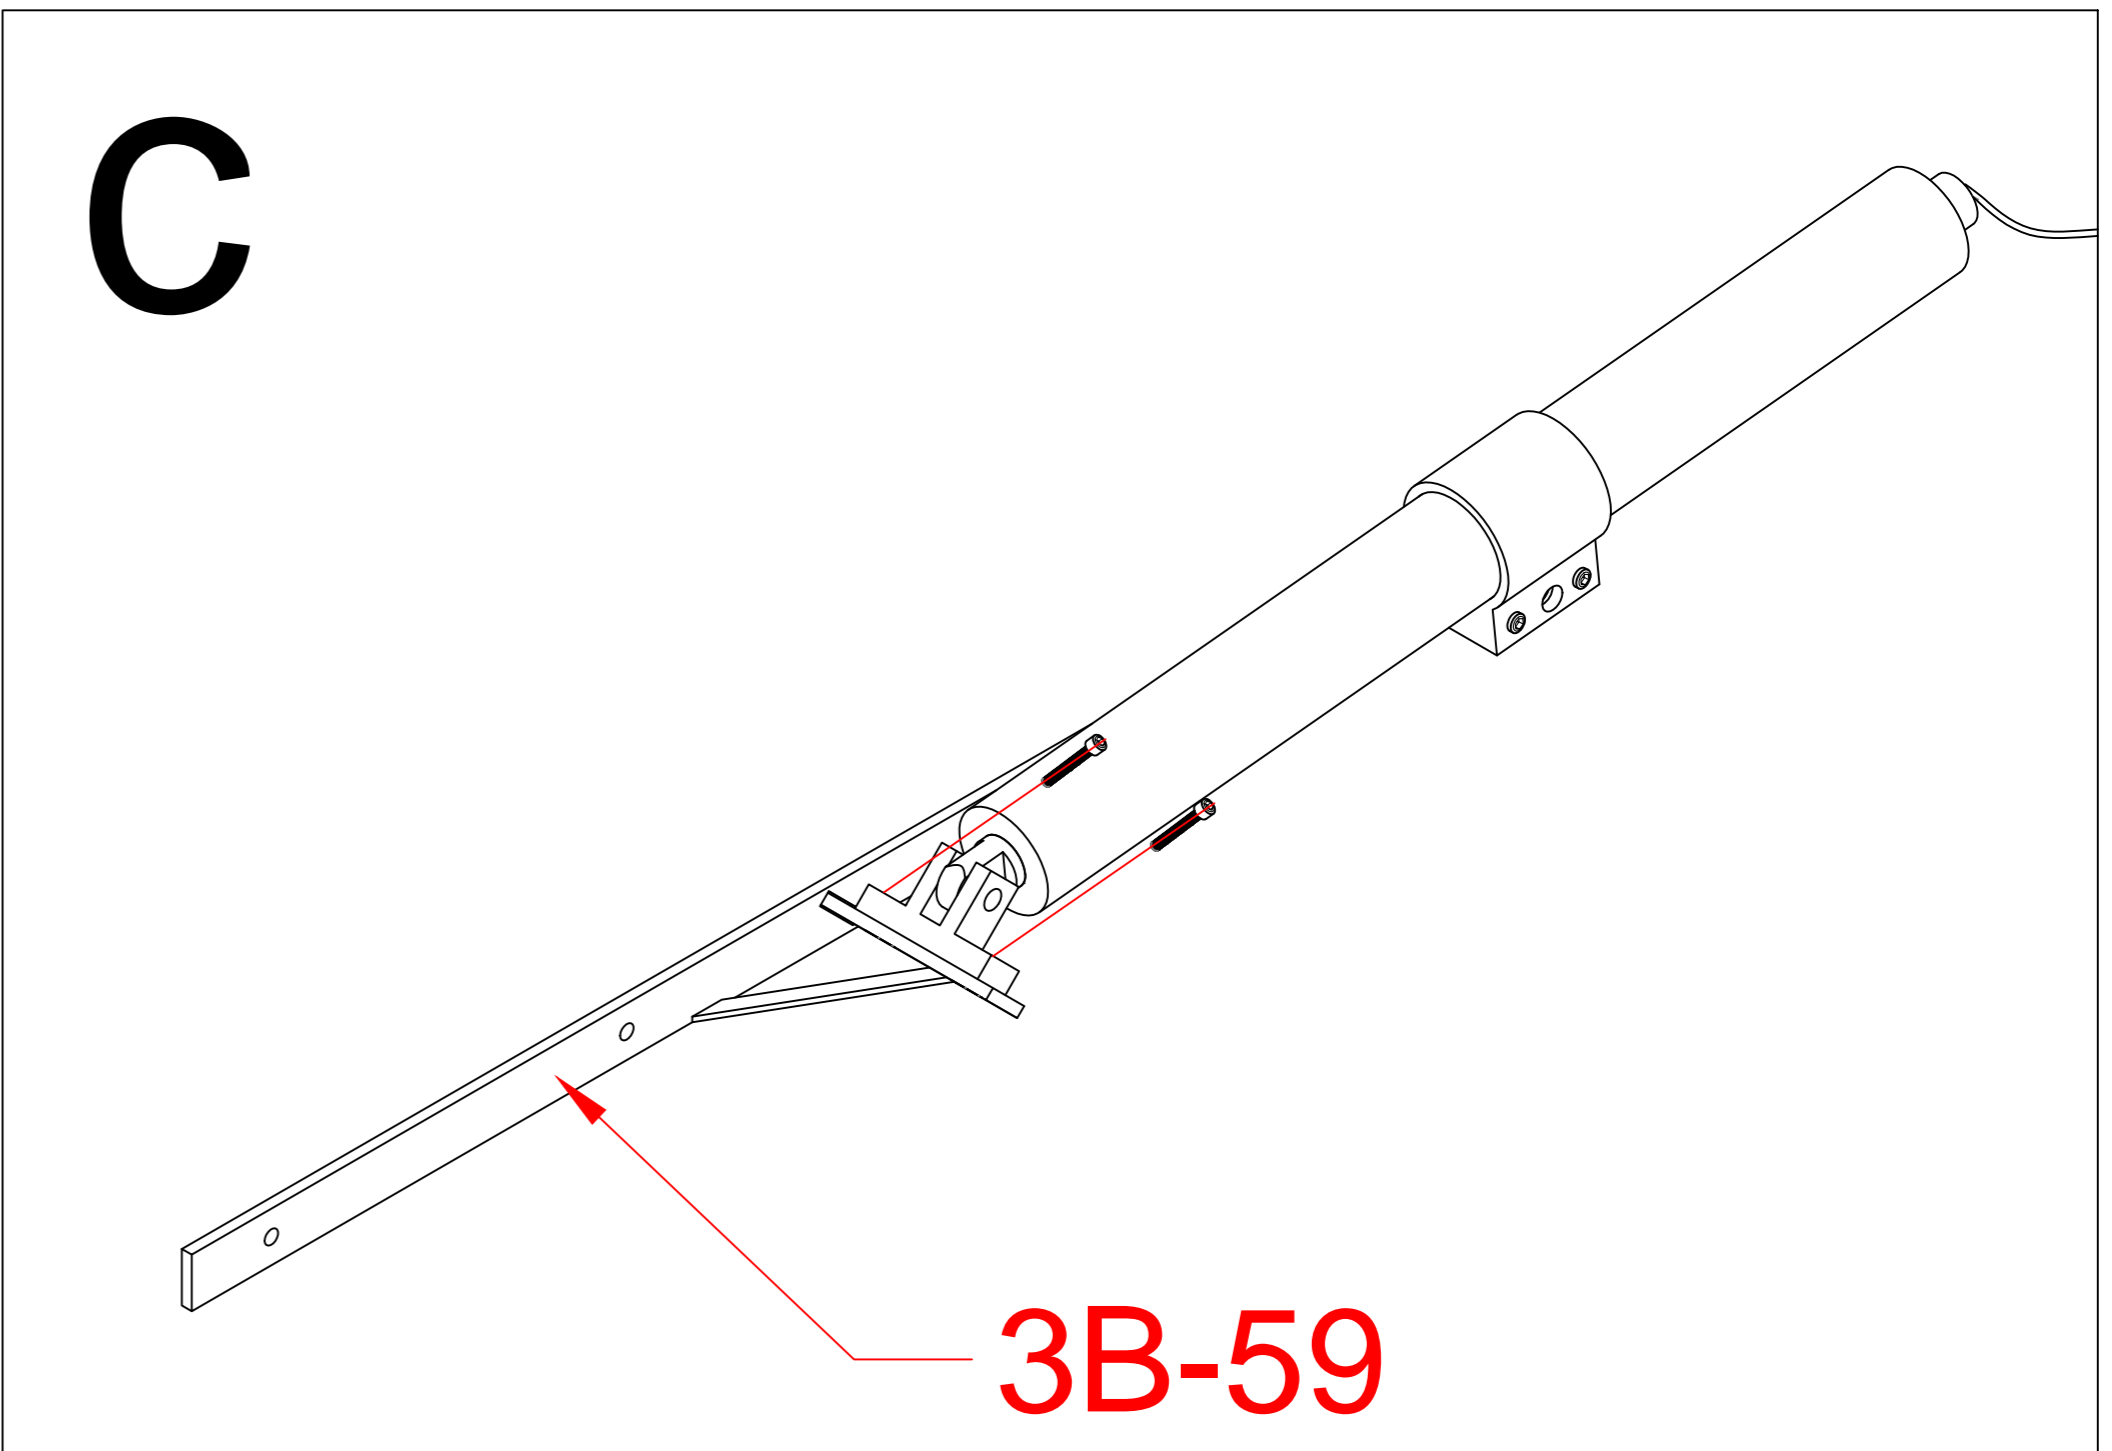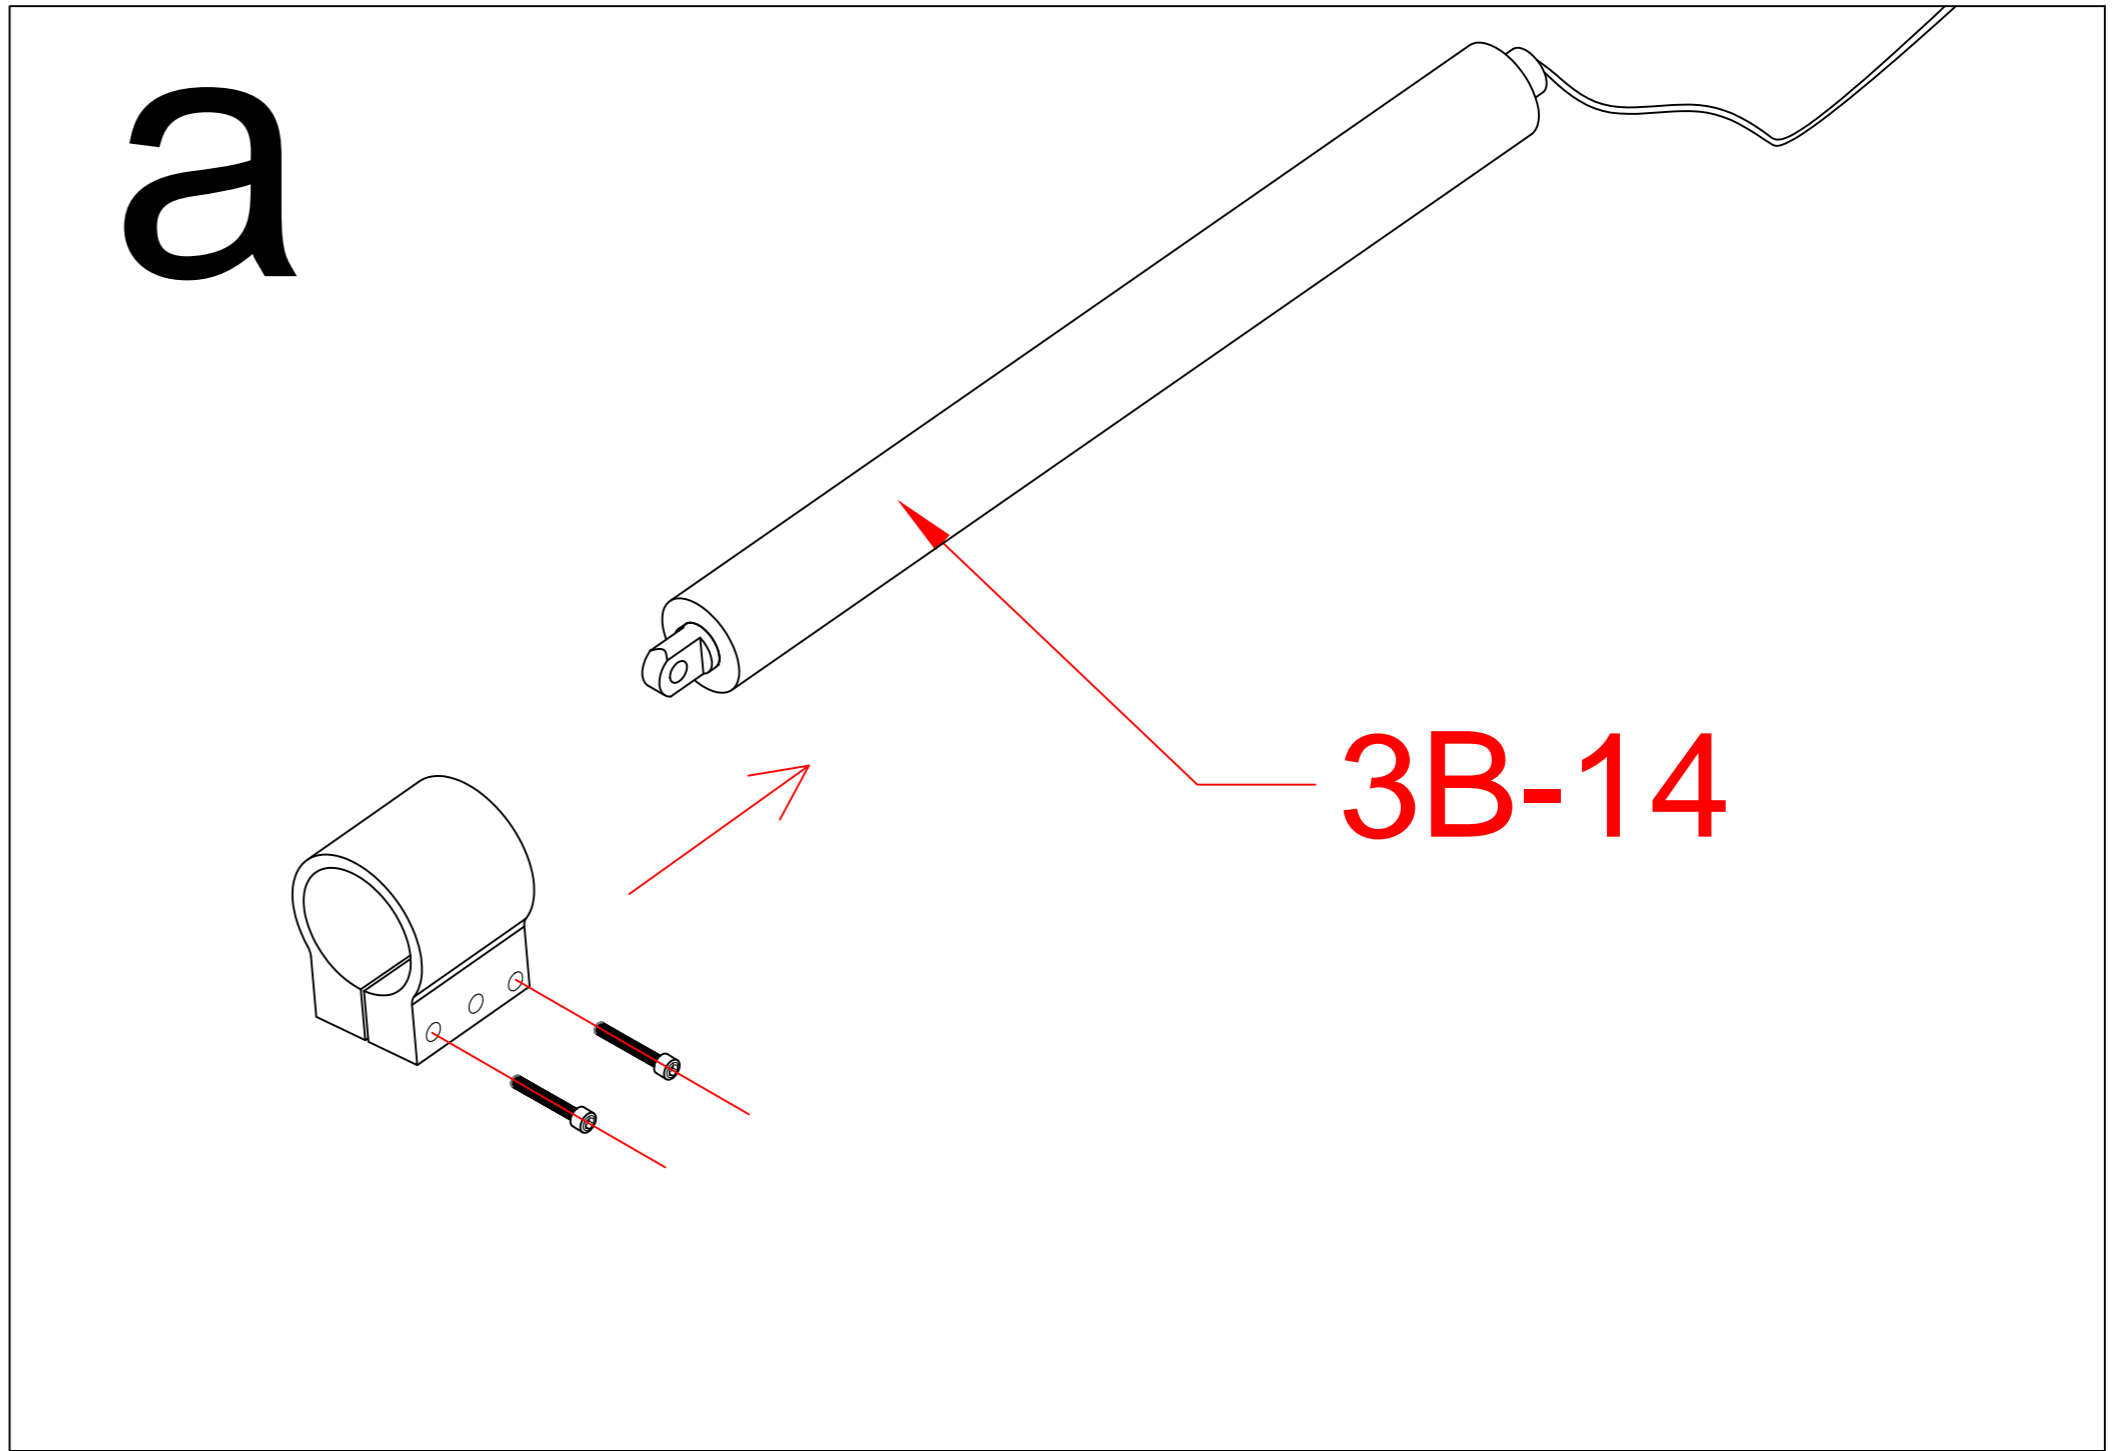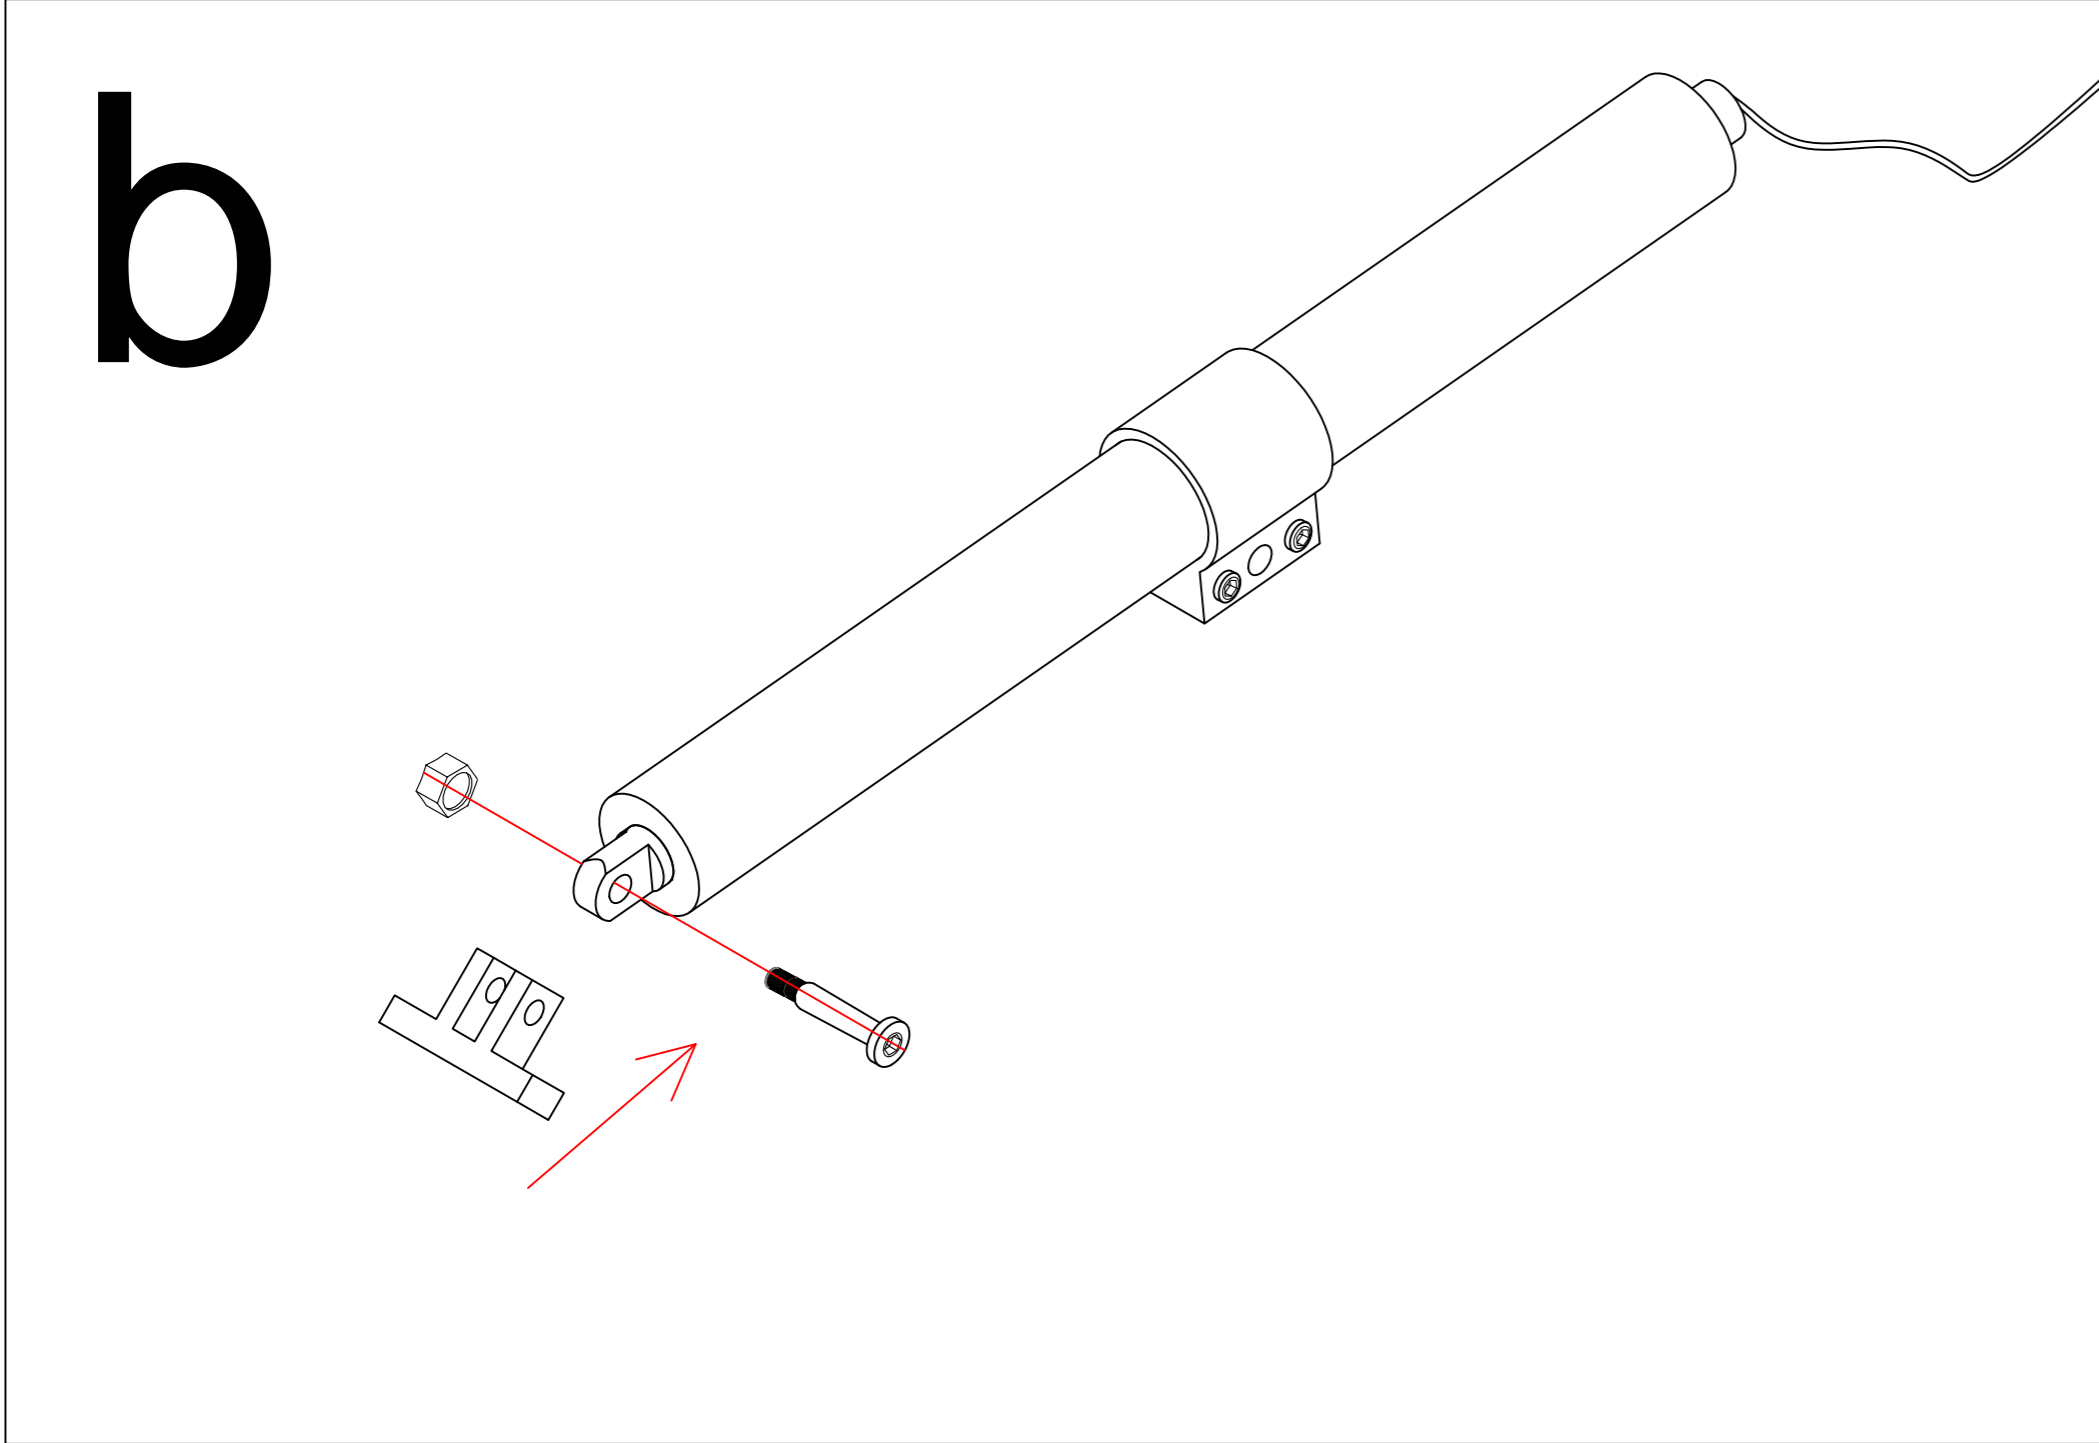





3B-14		1
3B-59		1


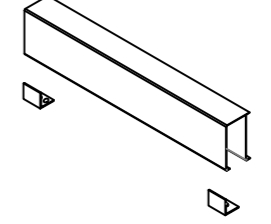


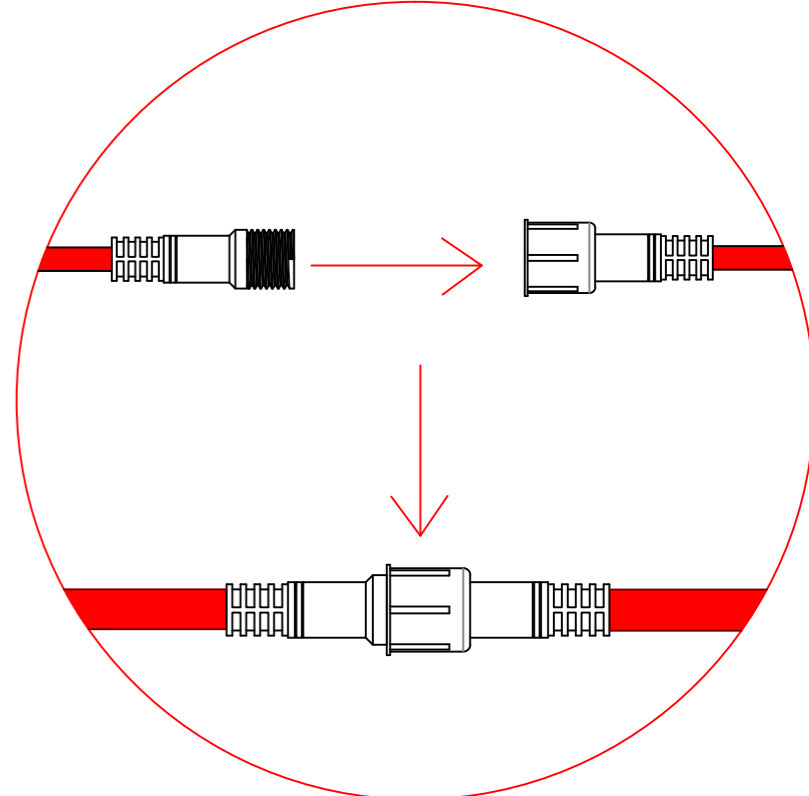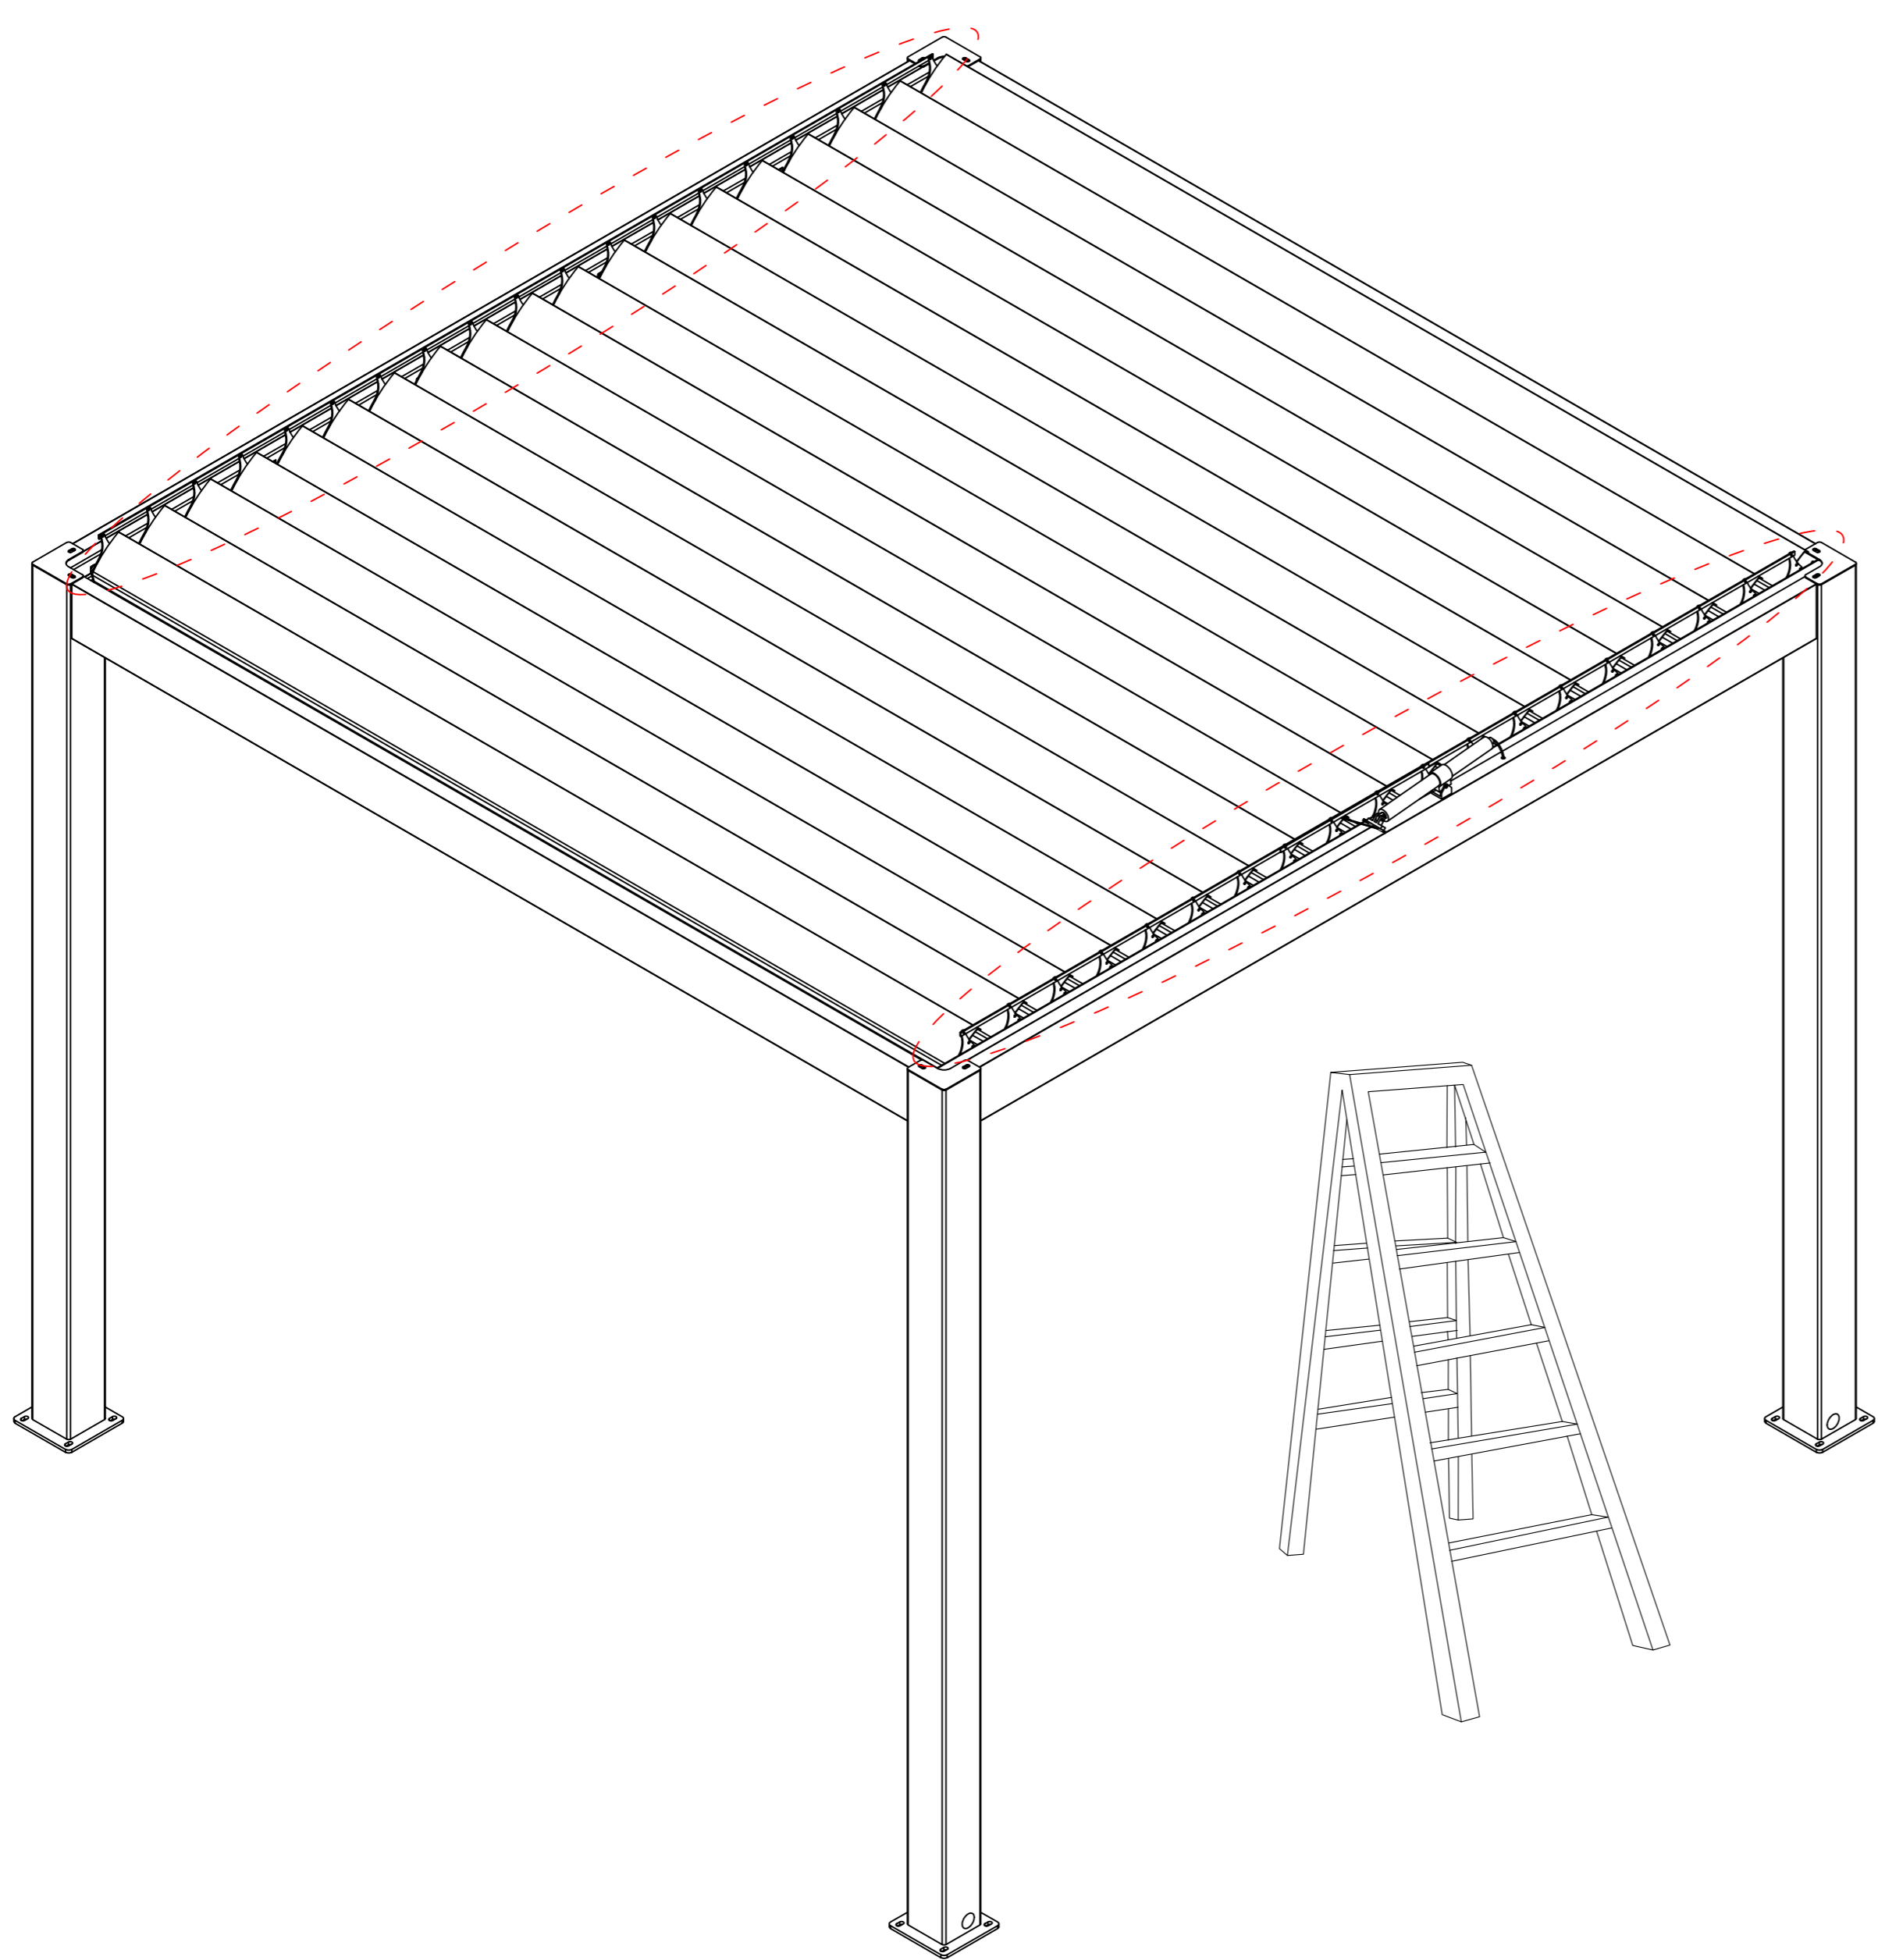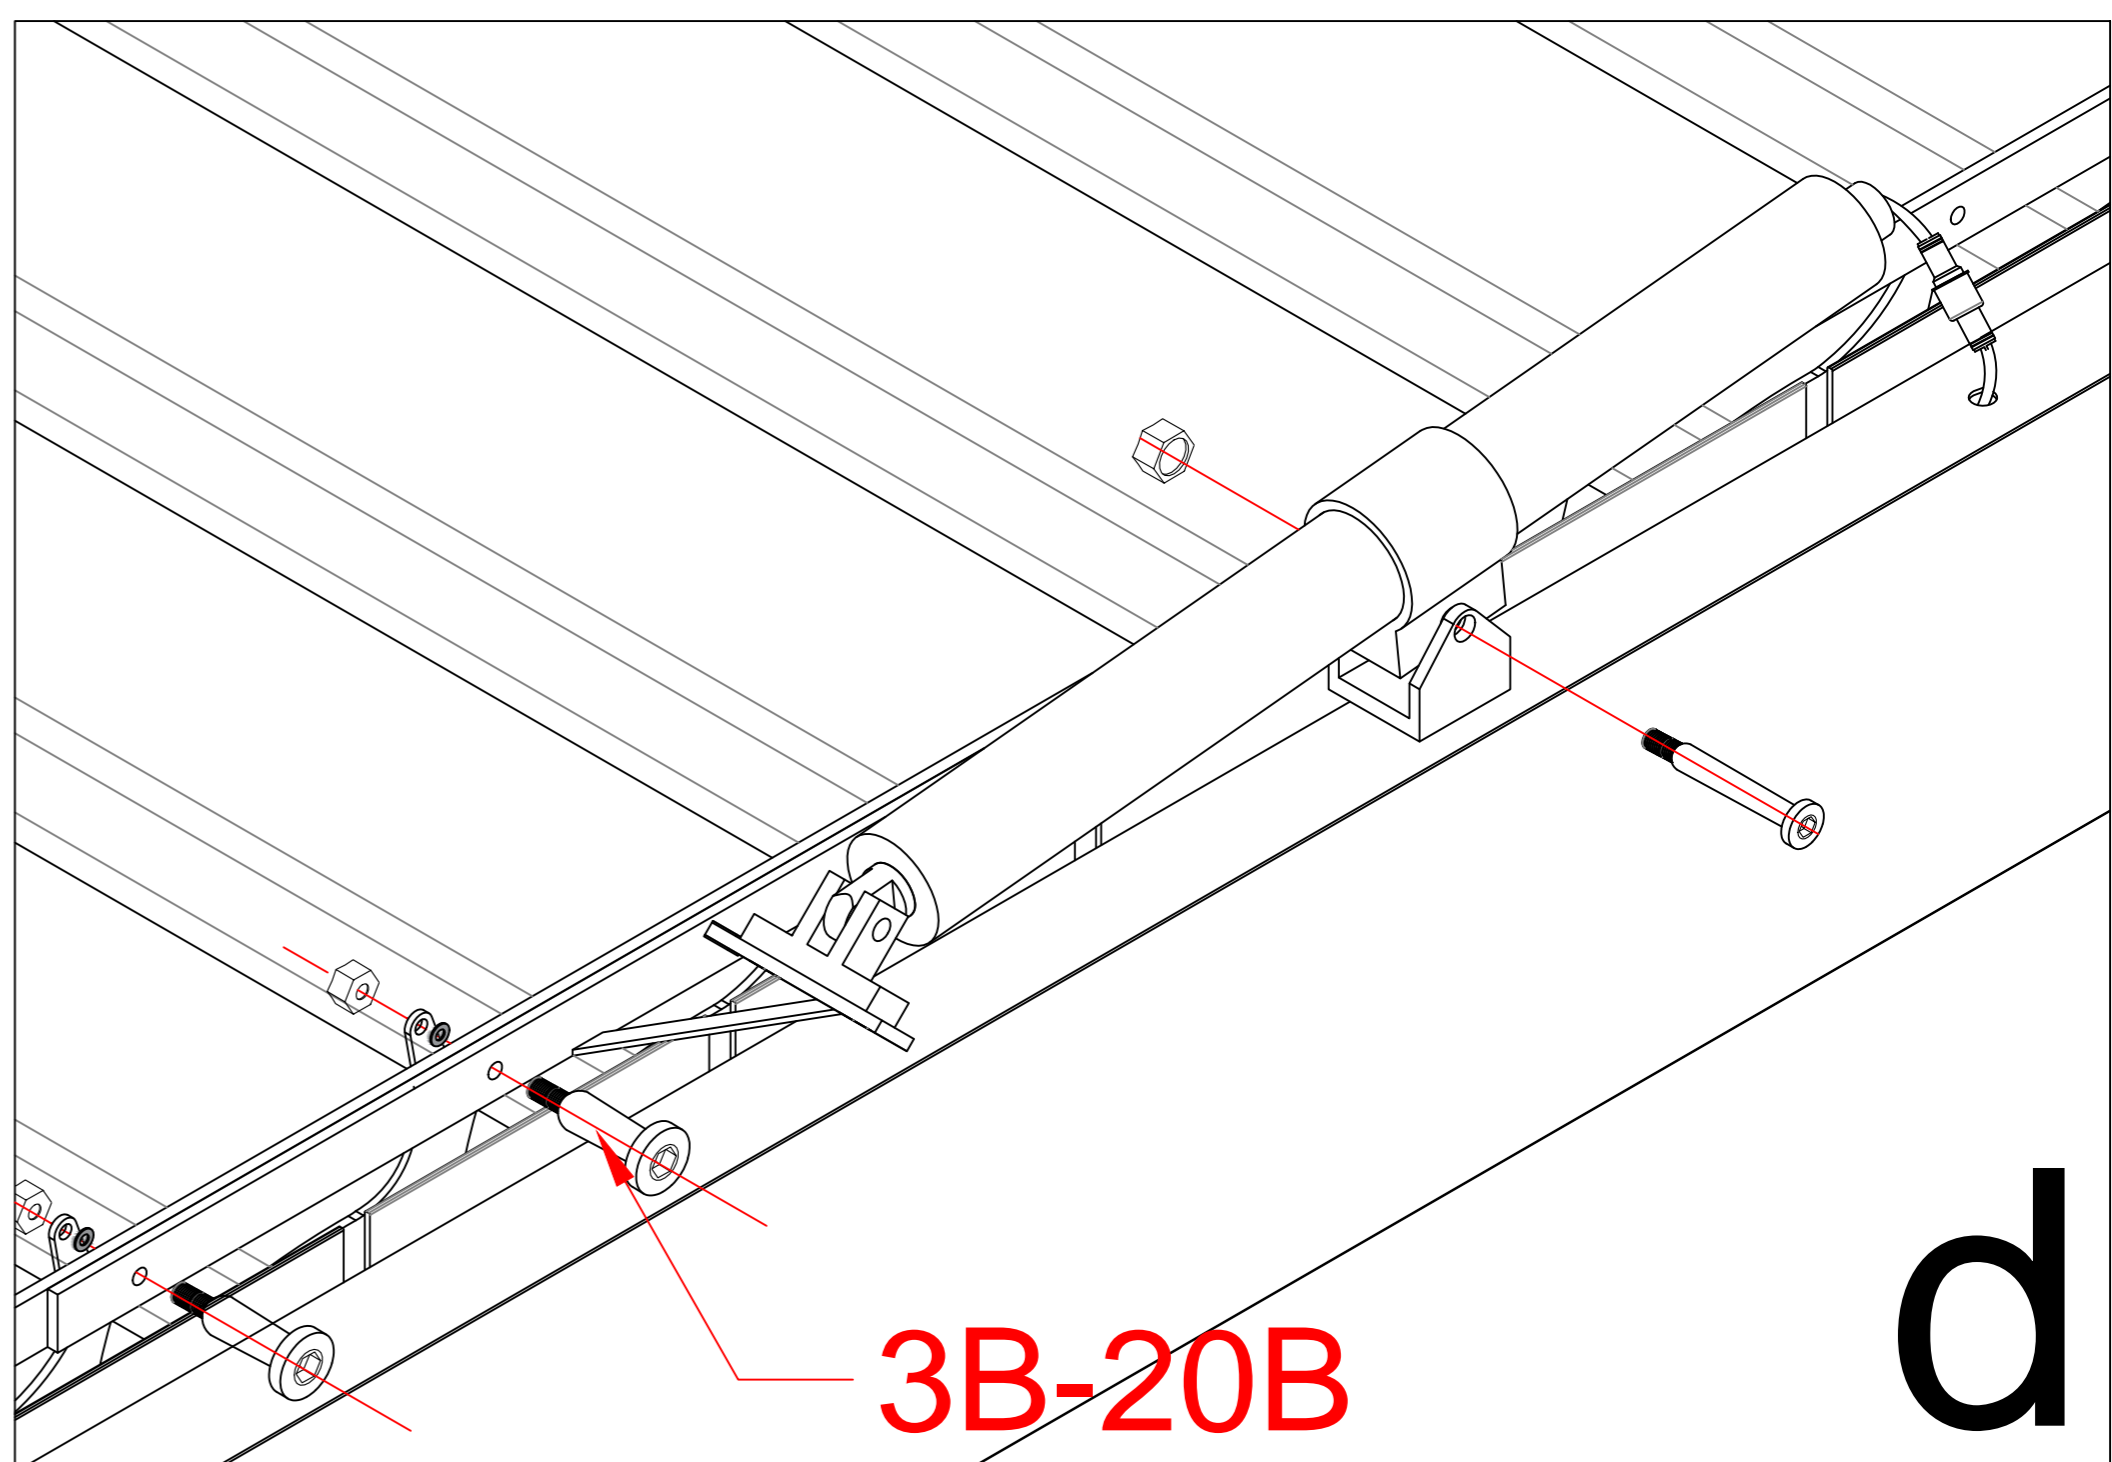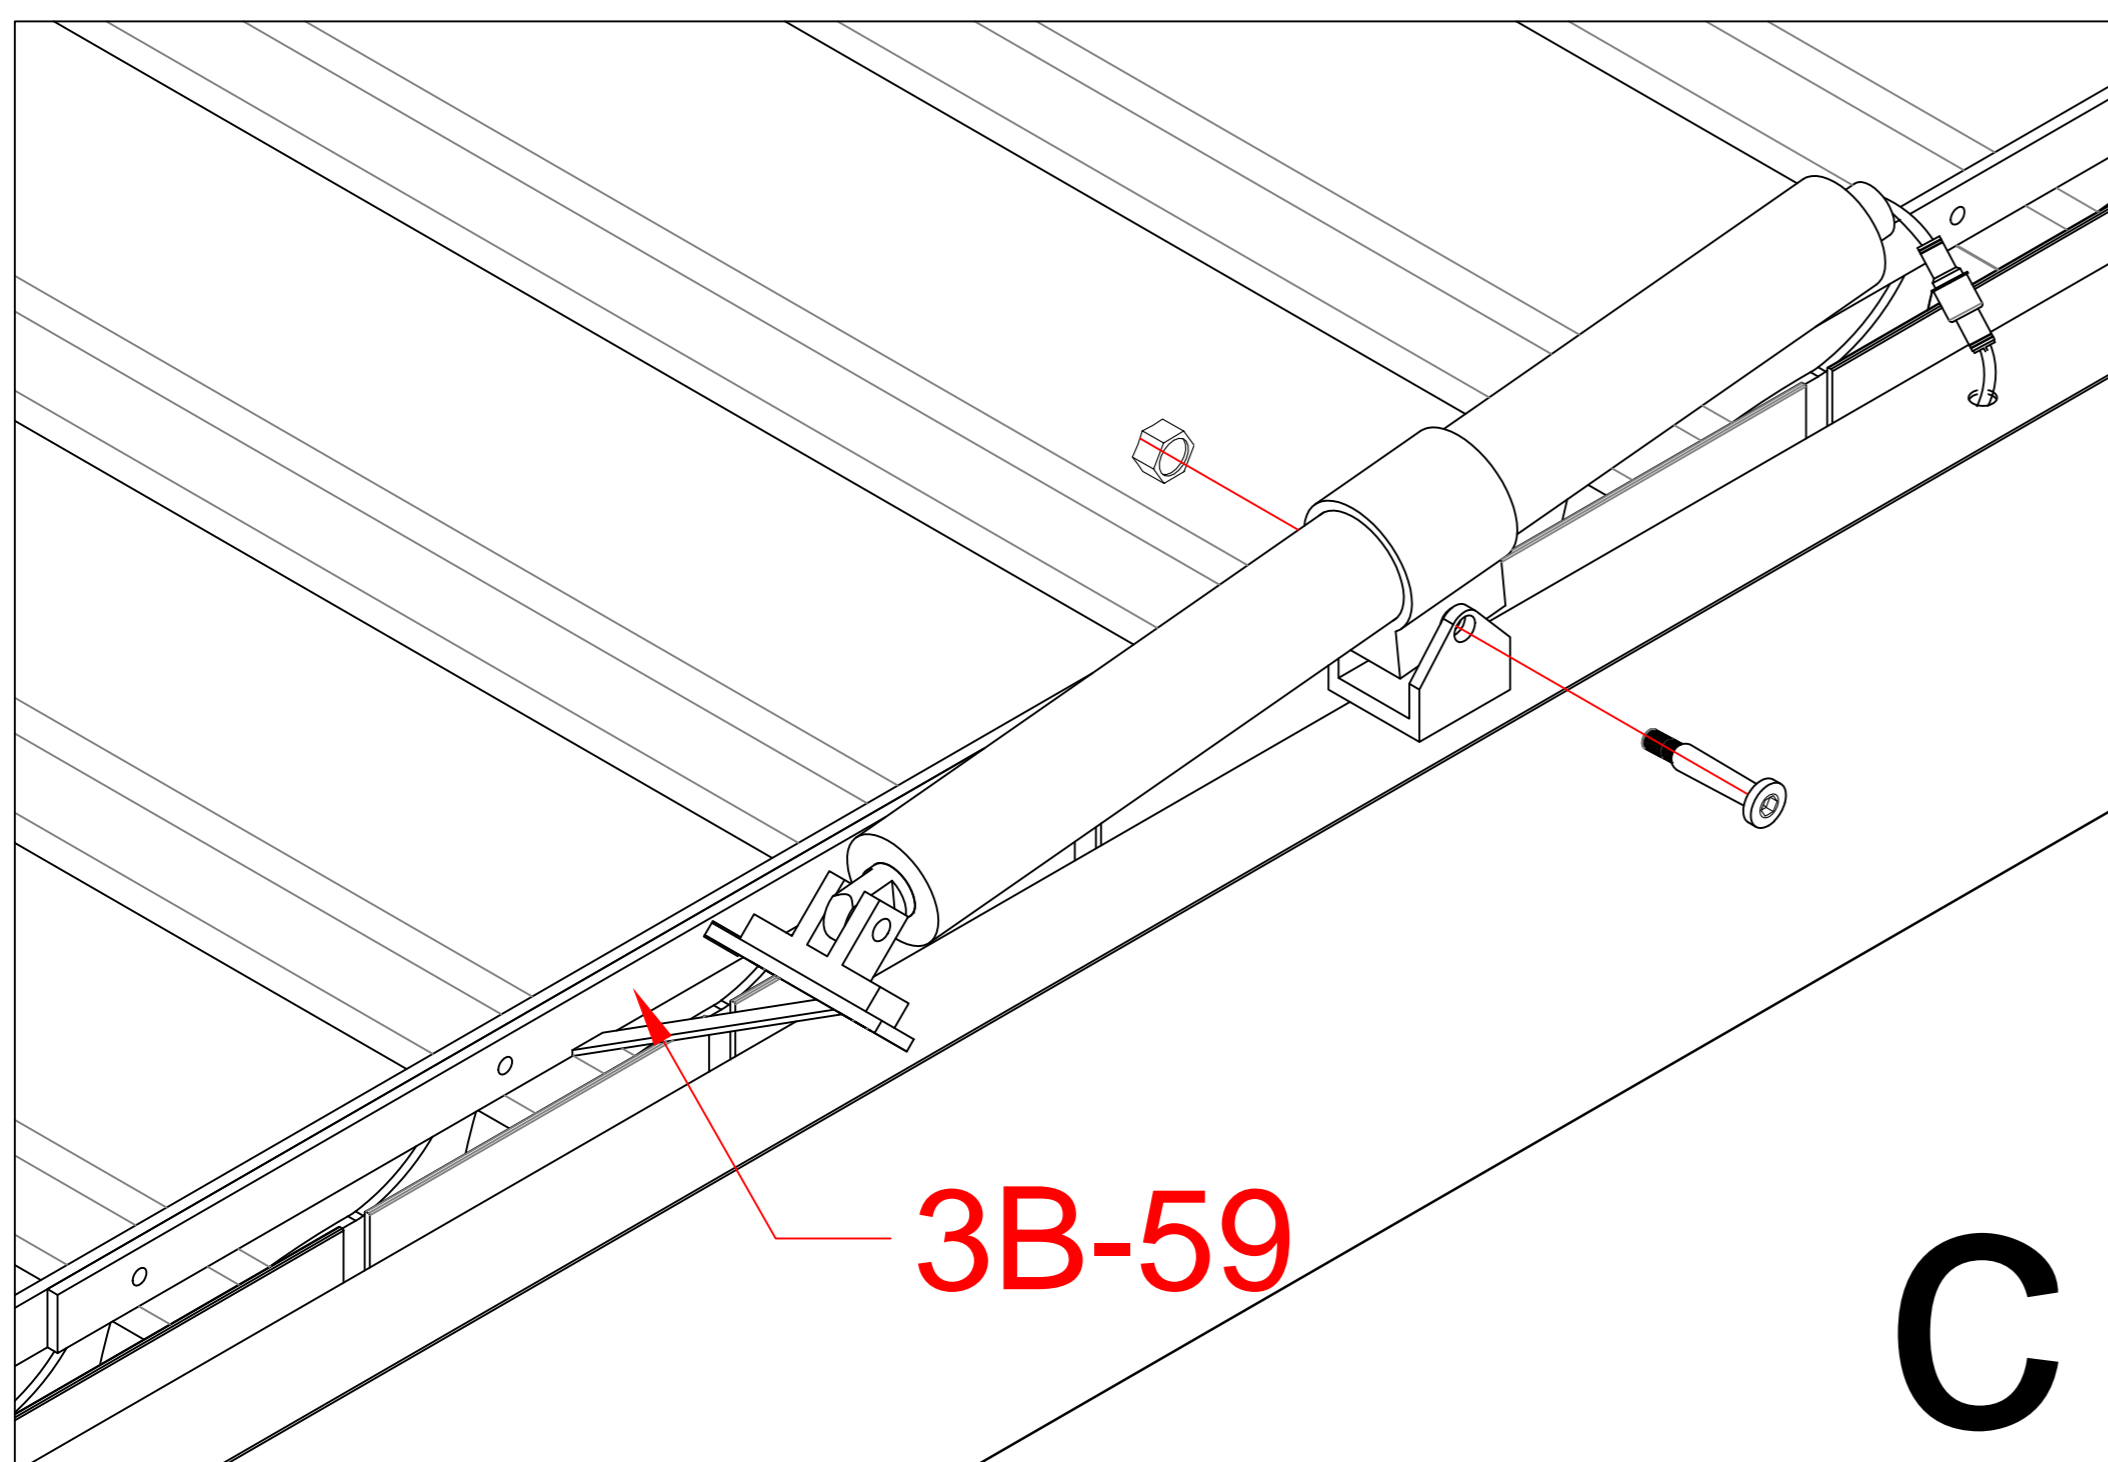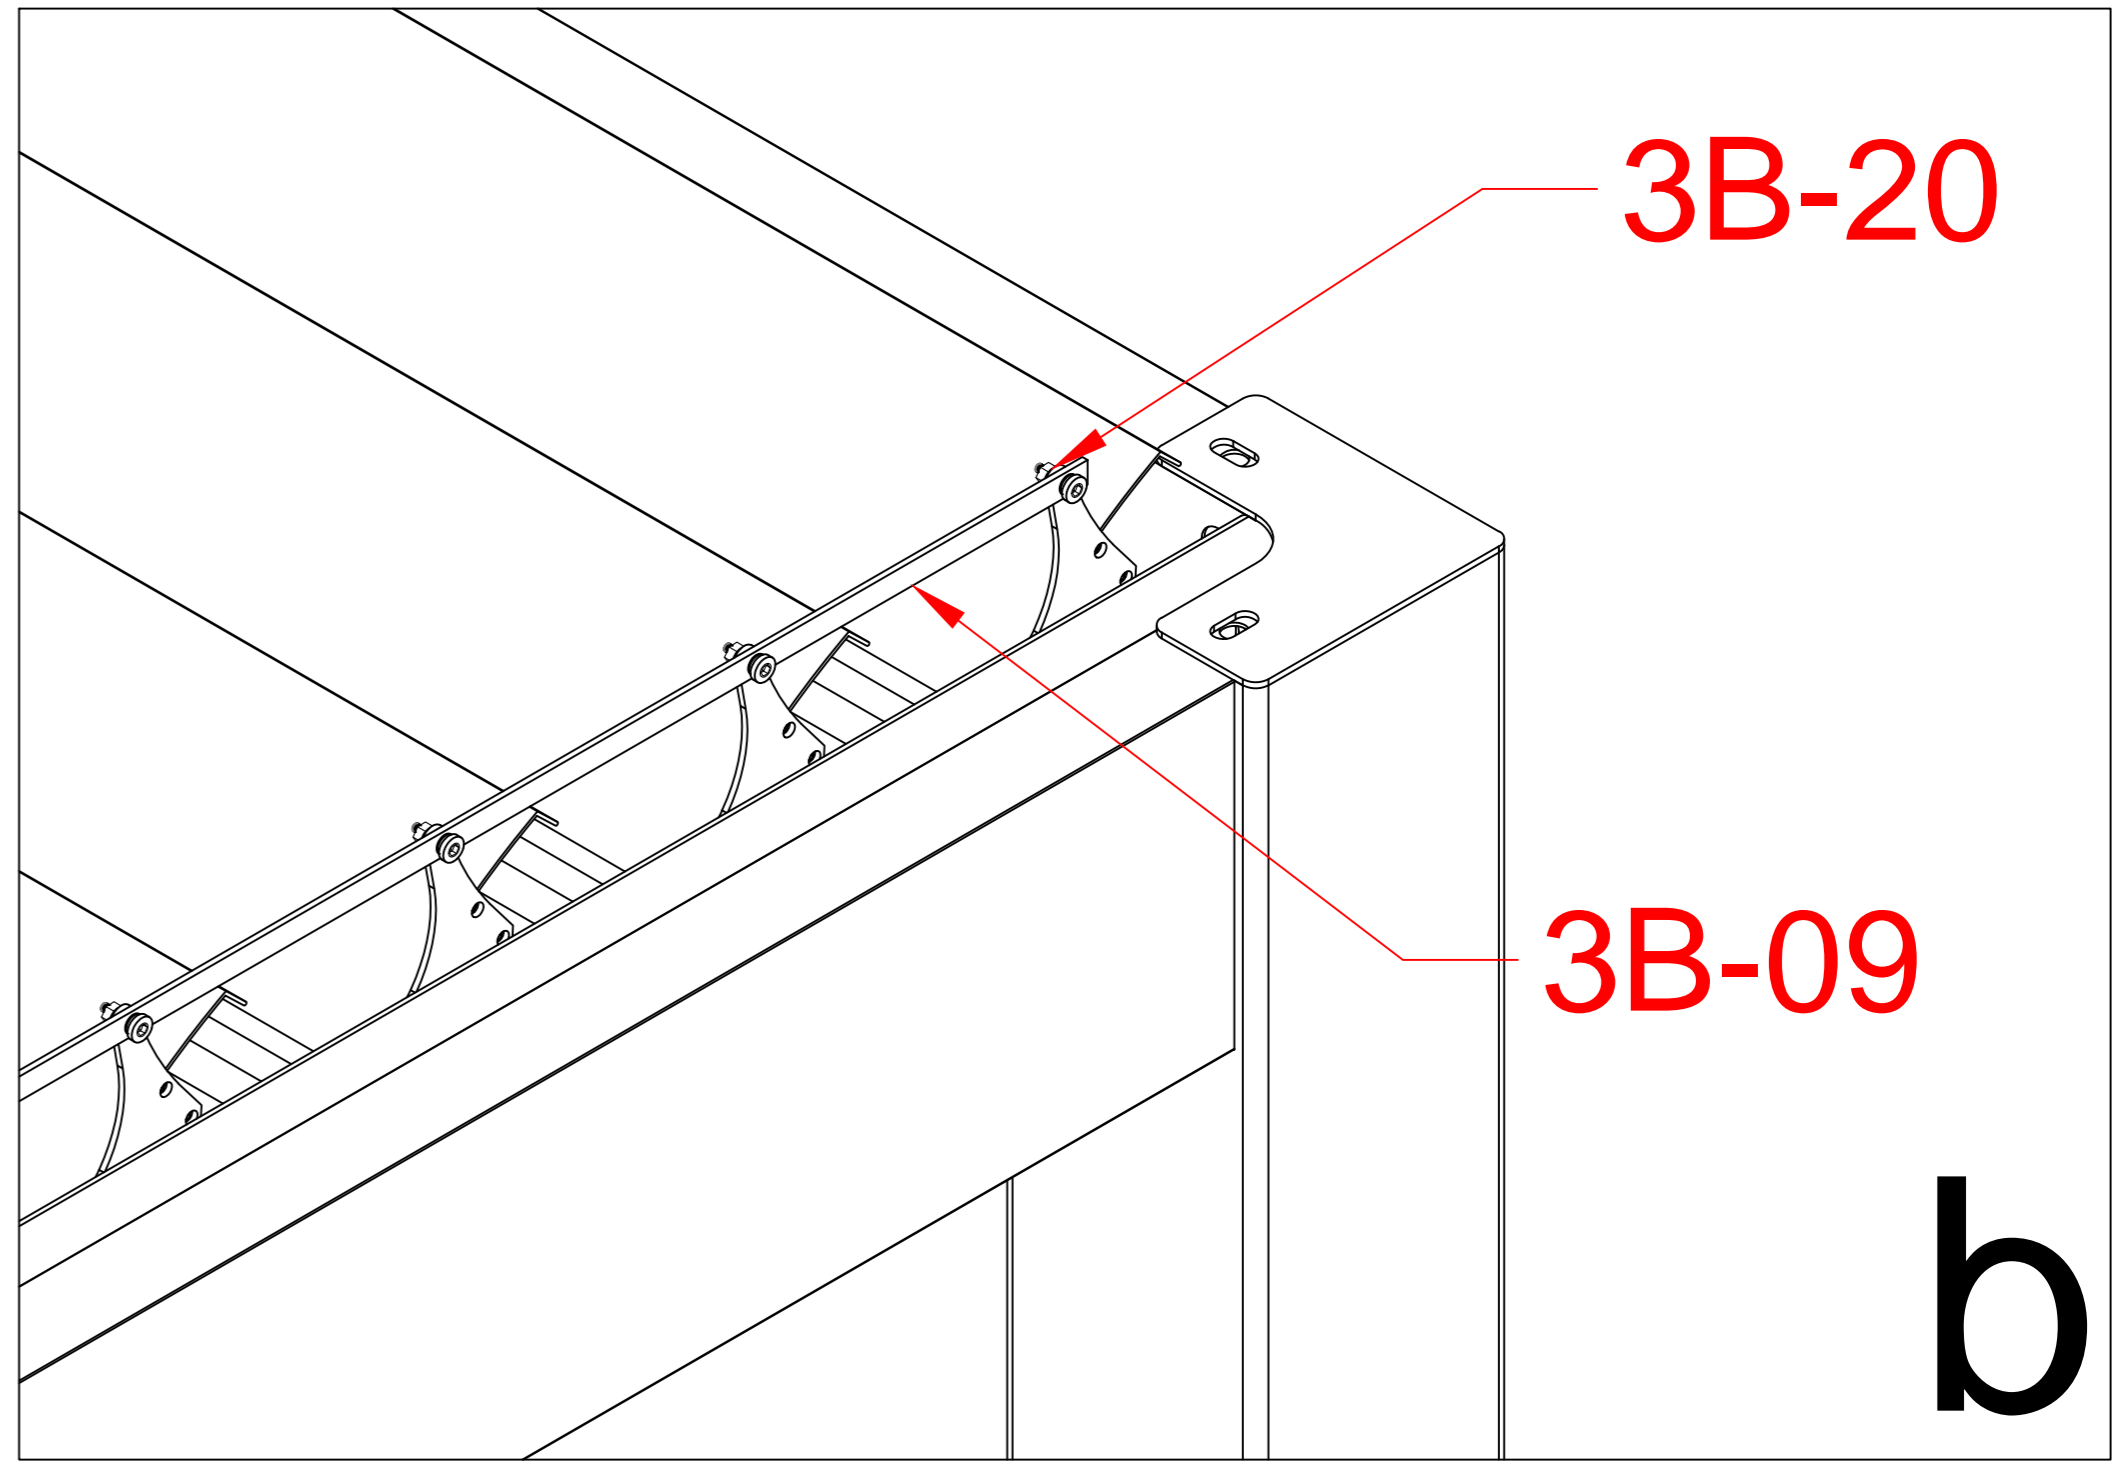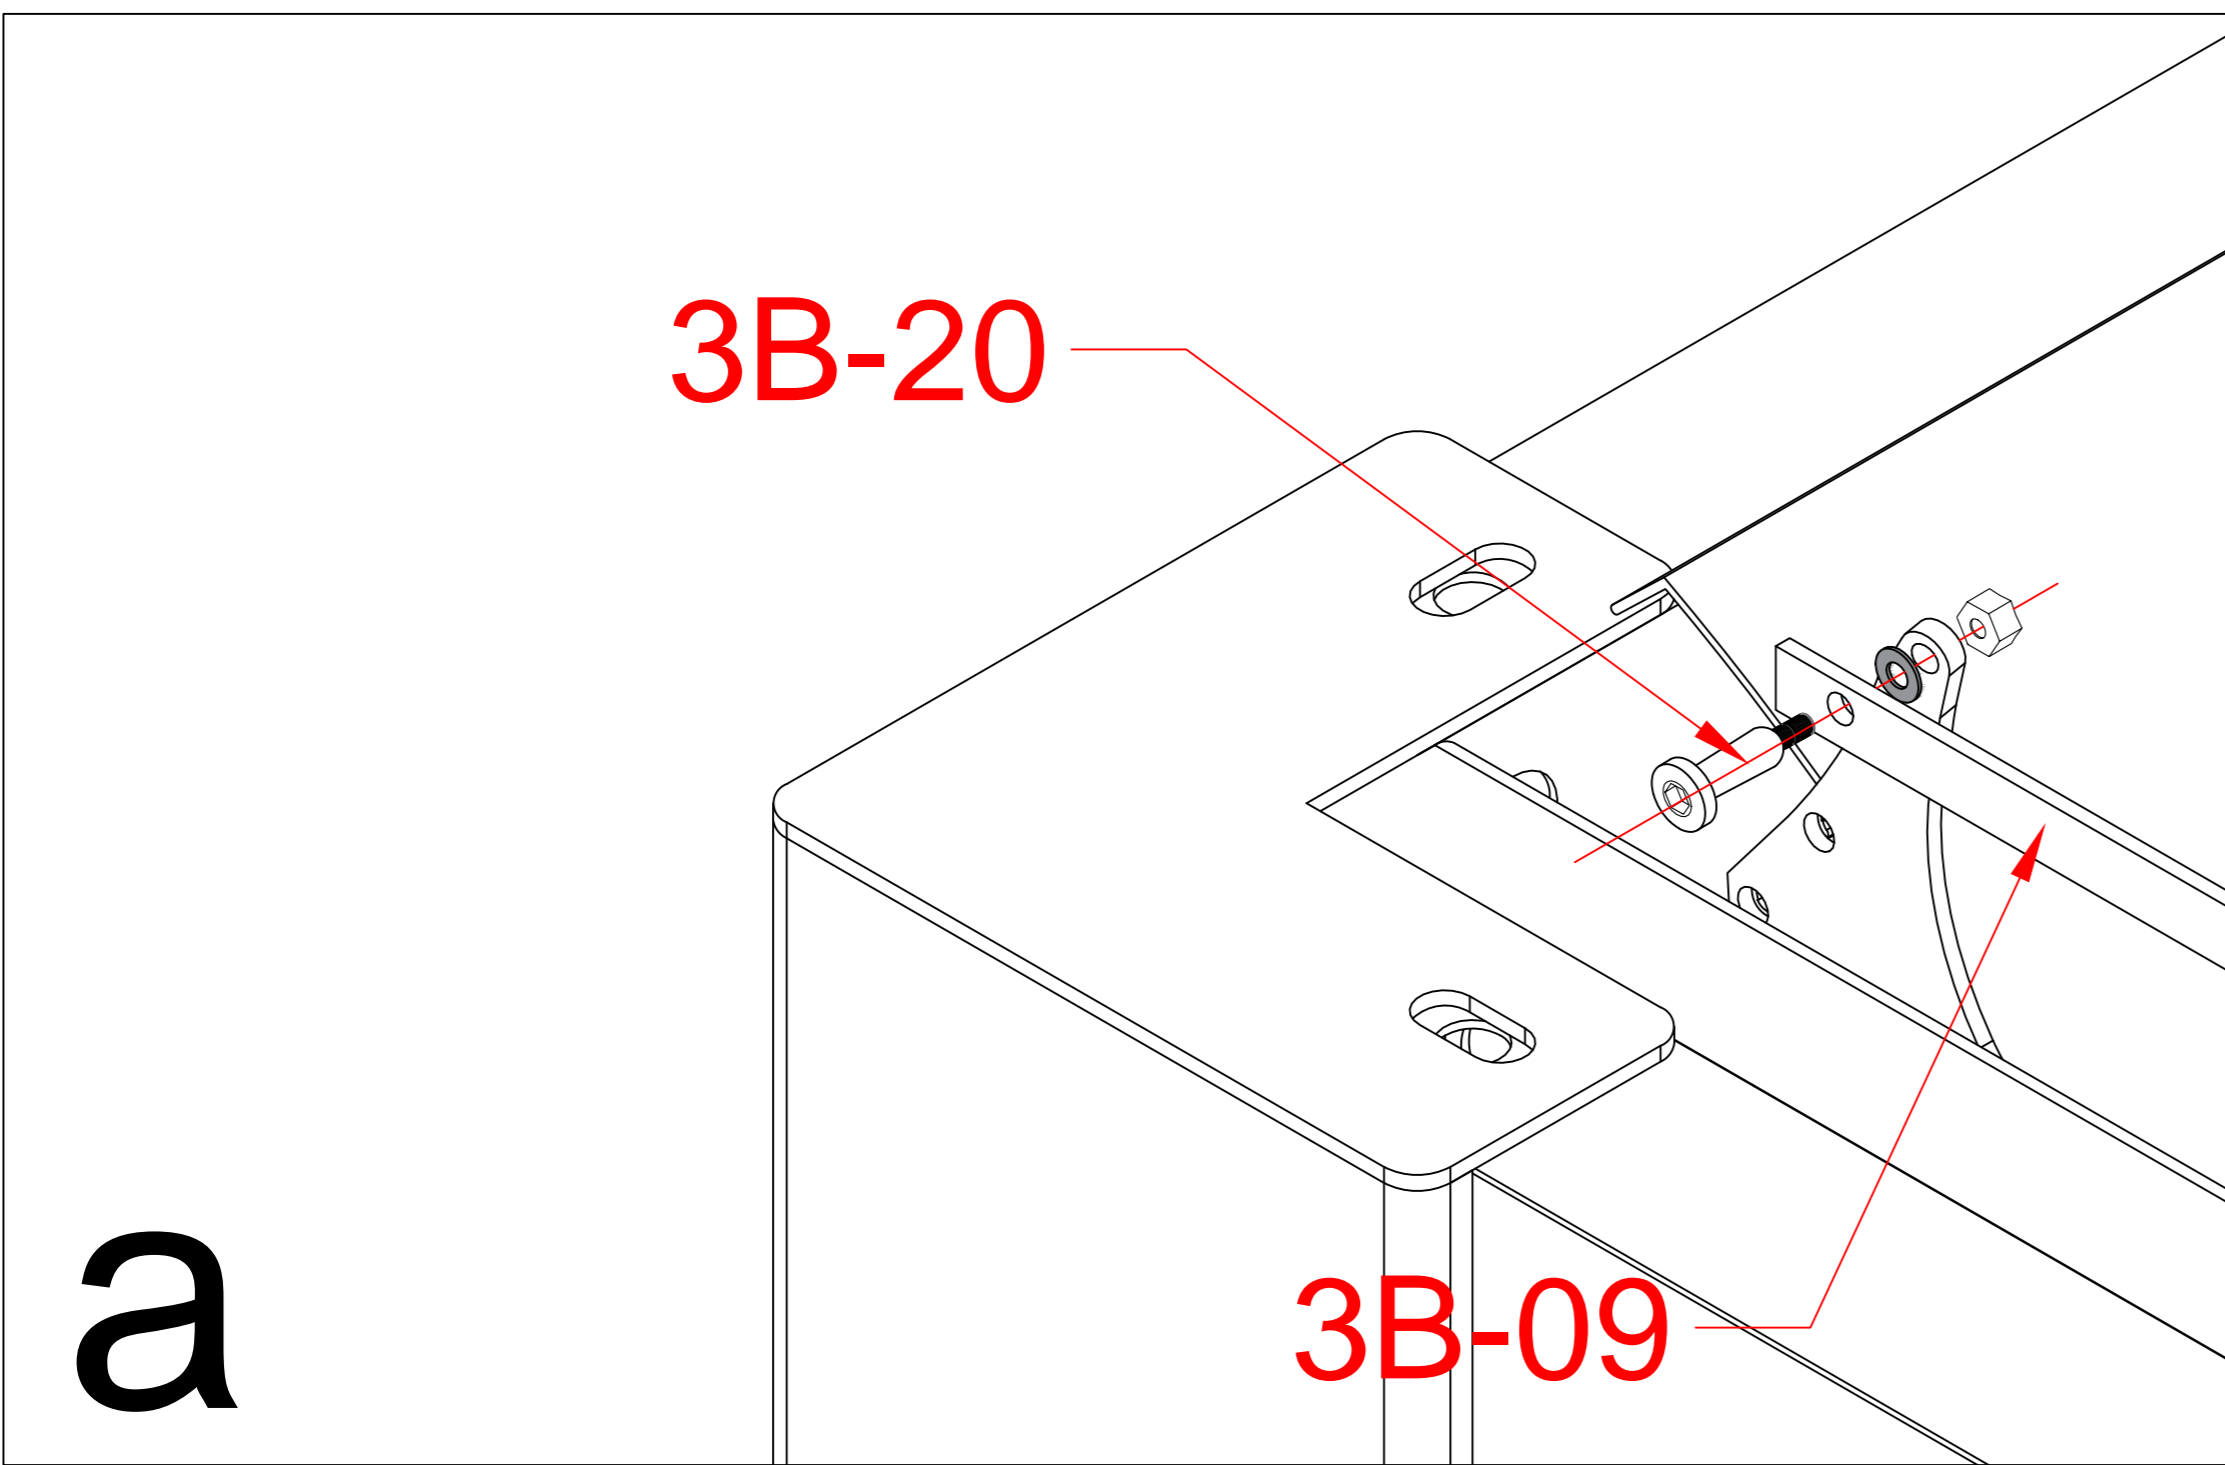




3B-09		2
3B-20	5-12-M4	x
3B-20B	5-16-M4	4




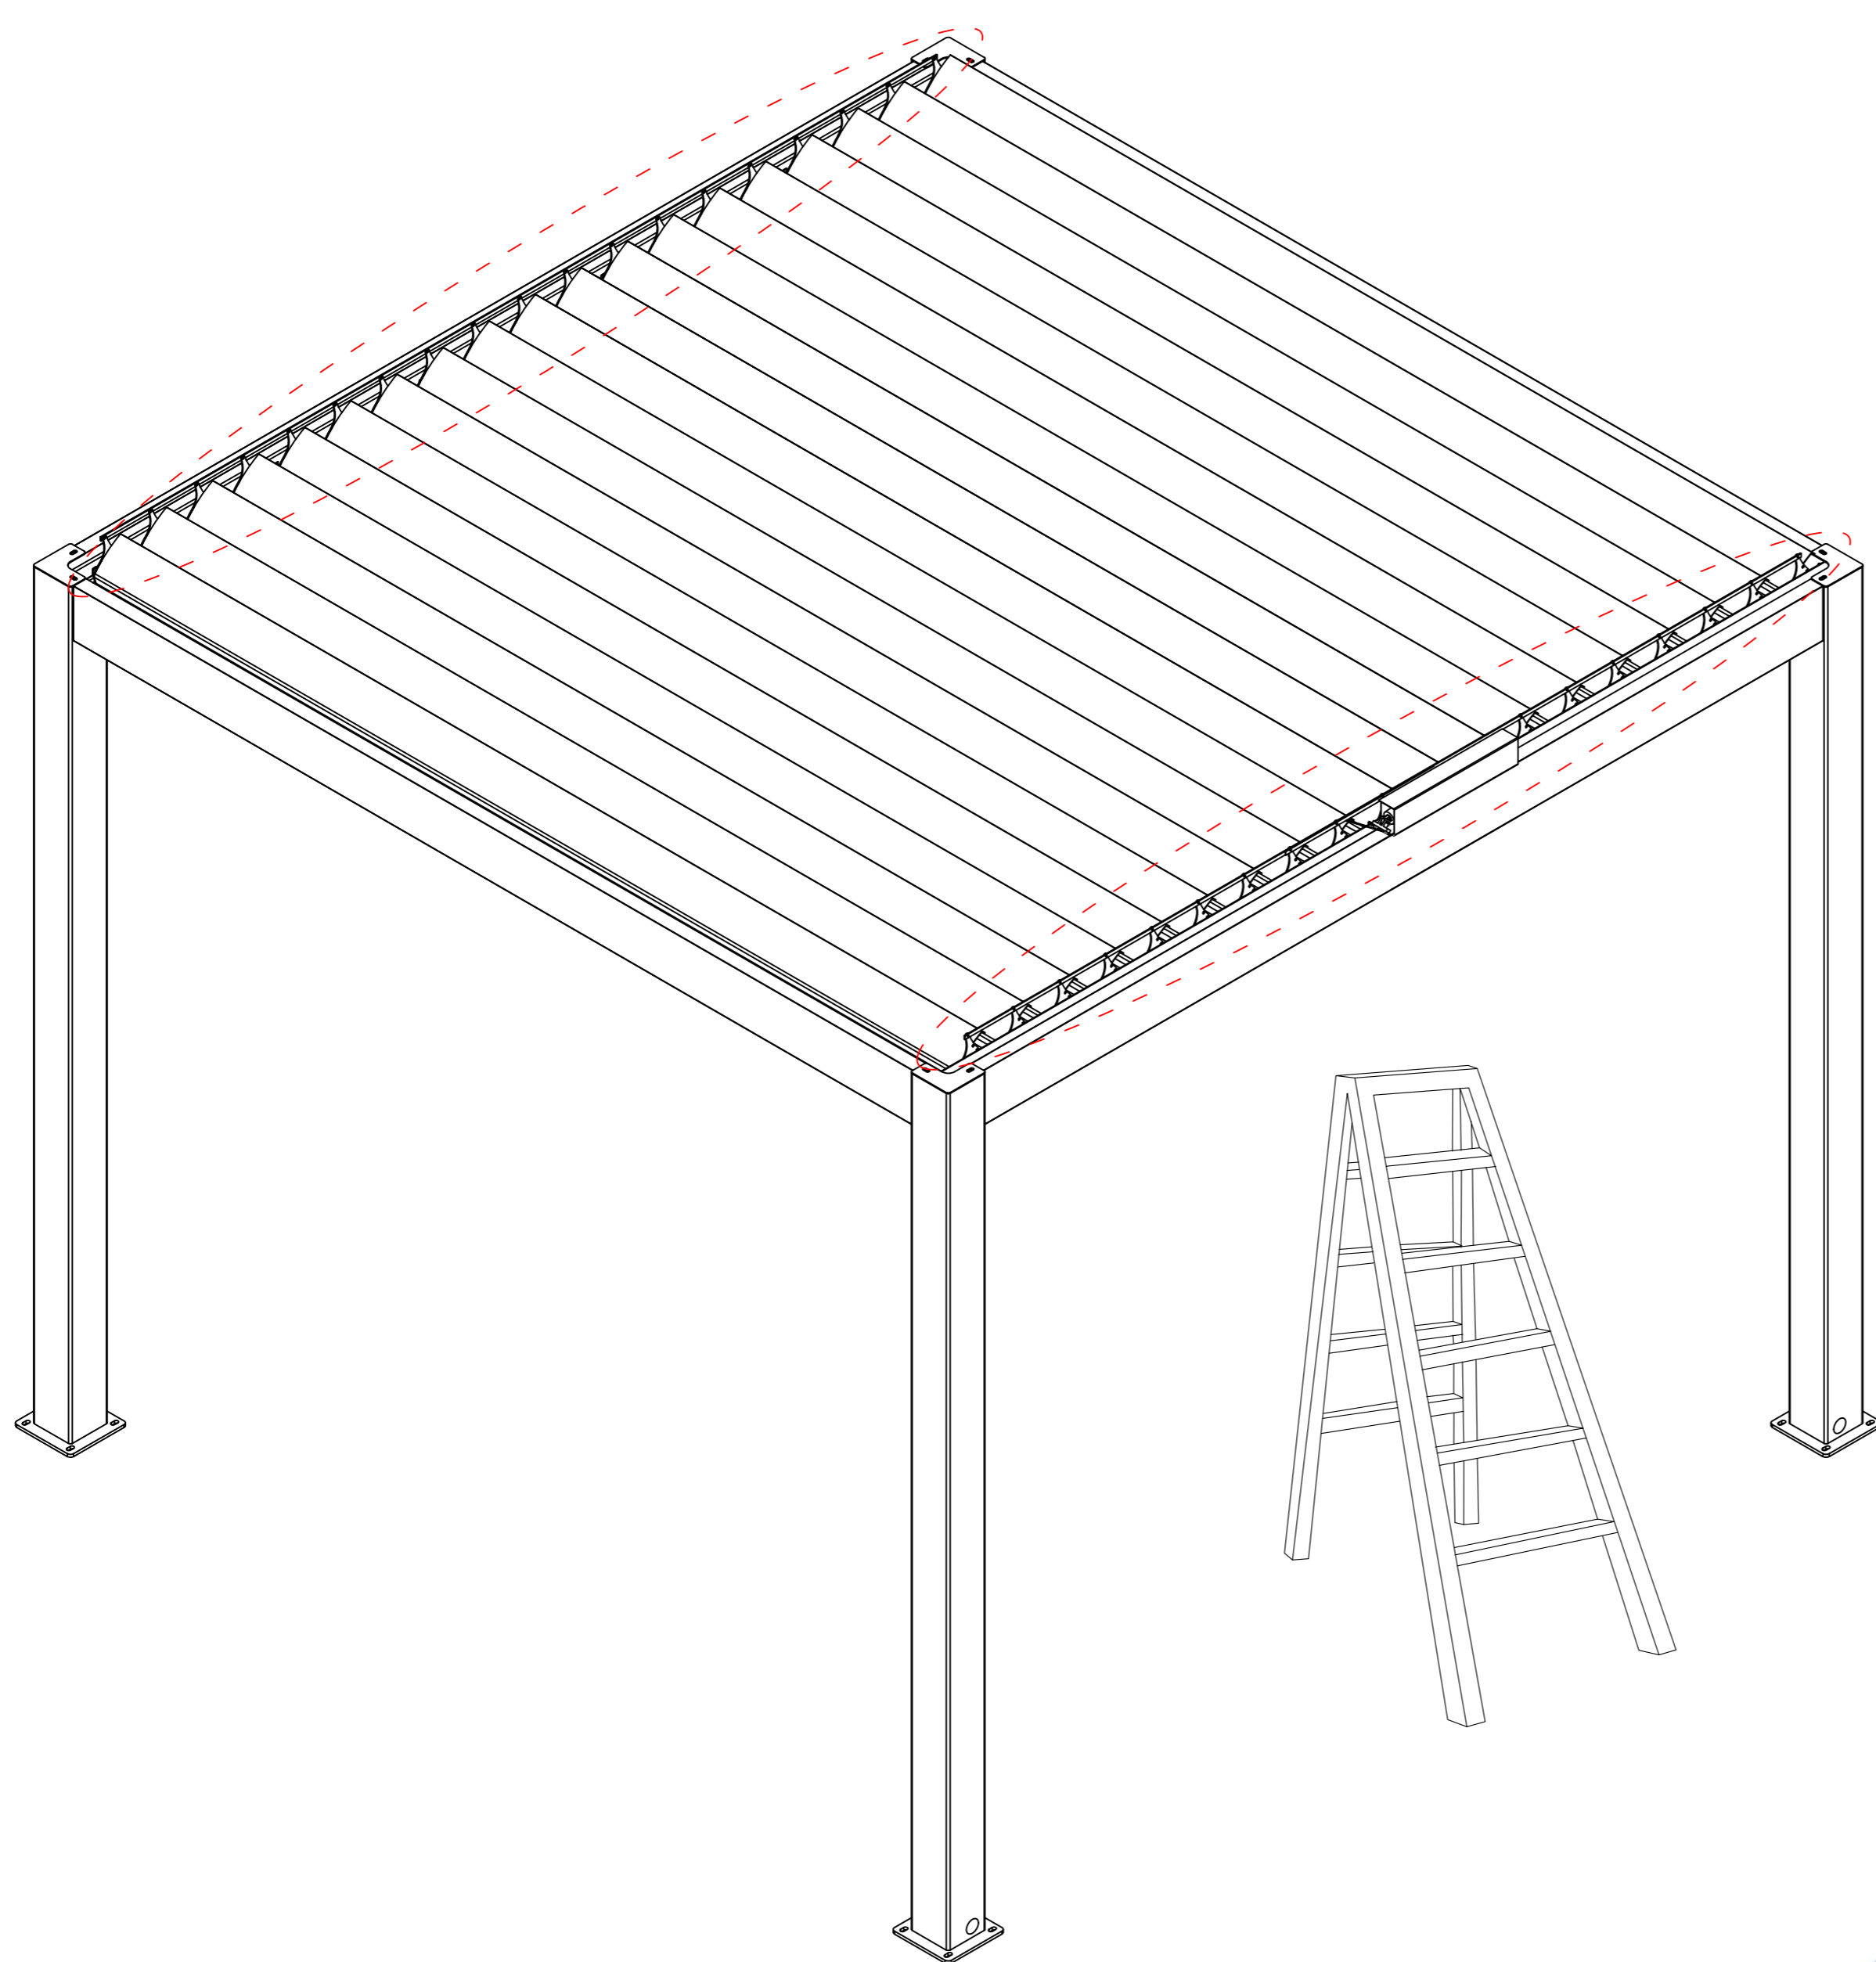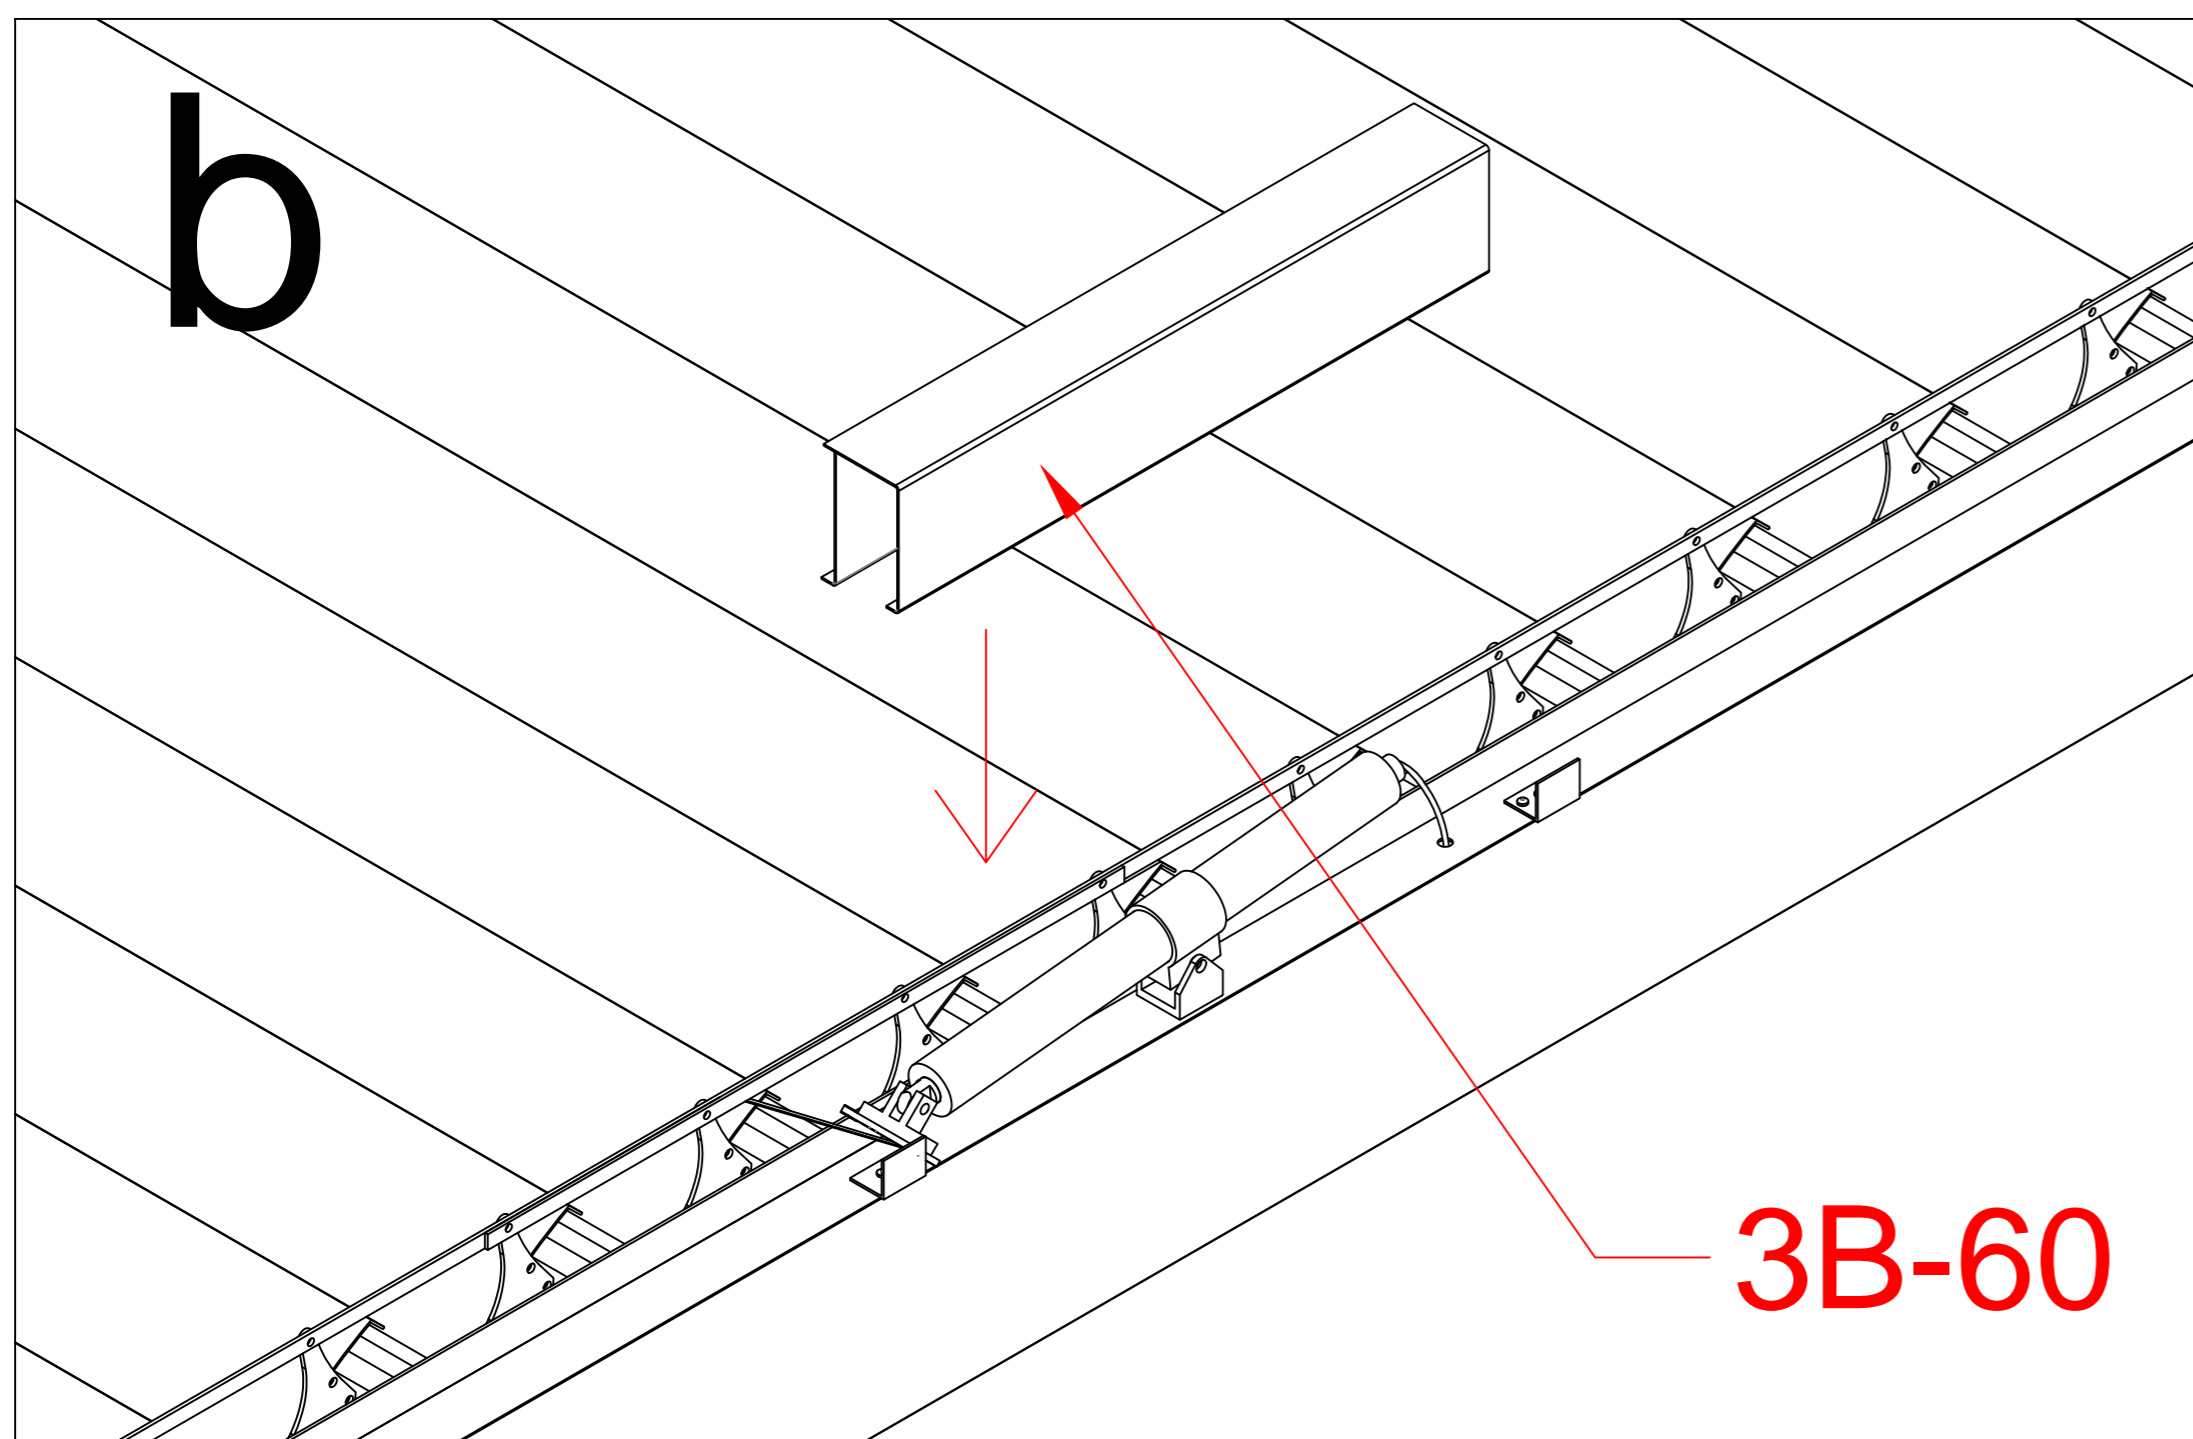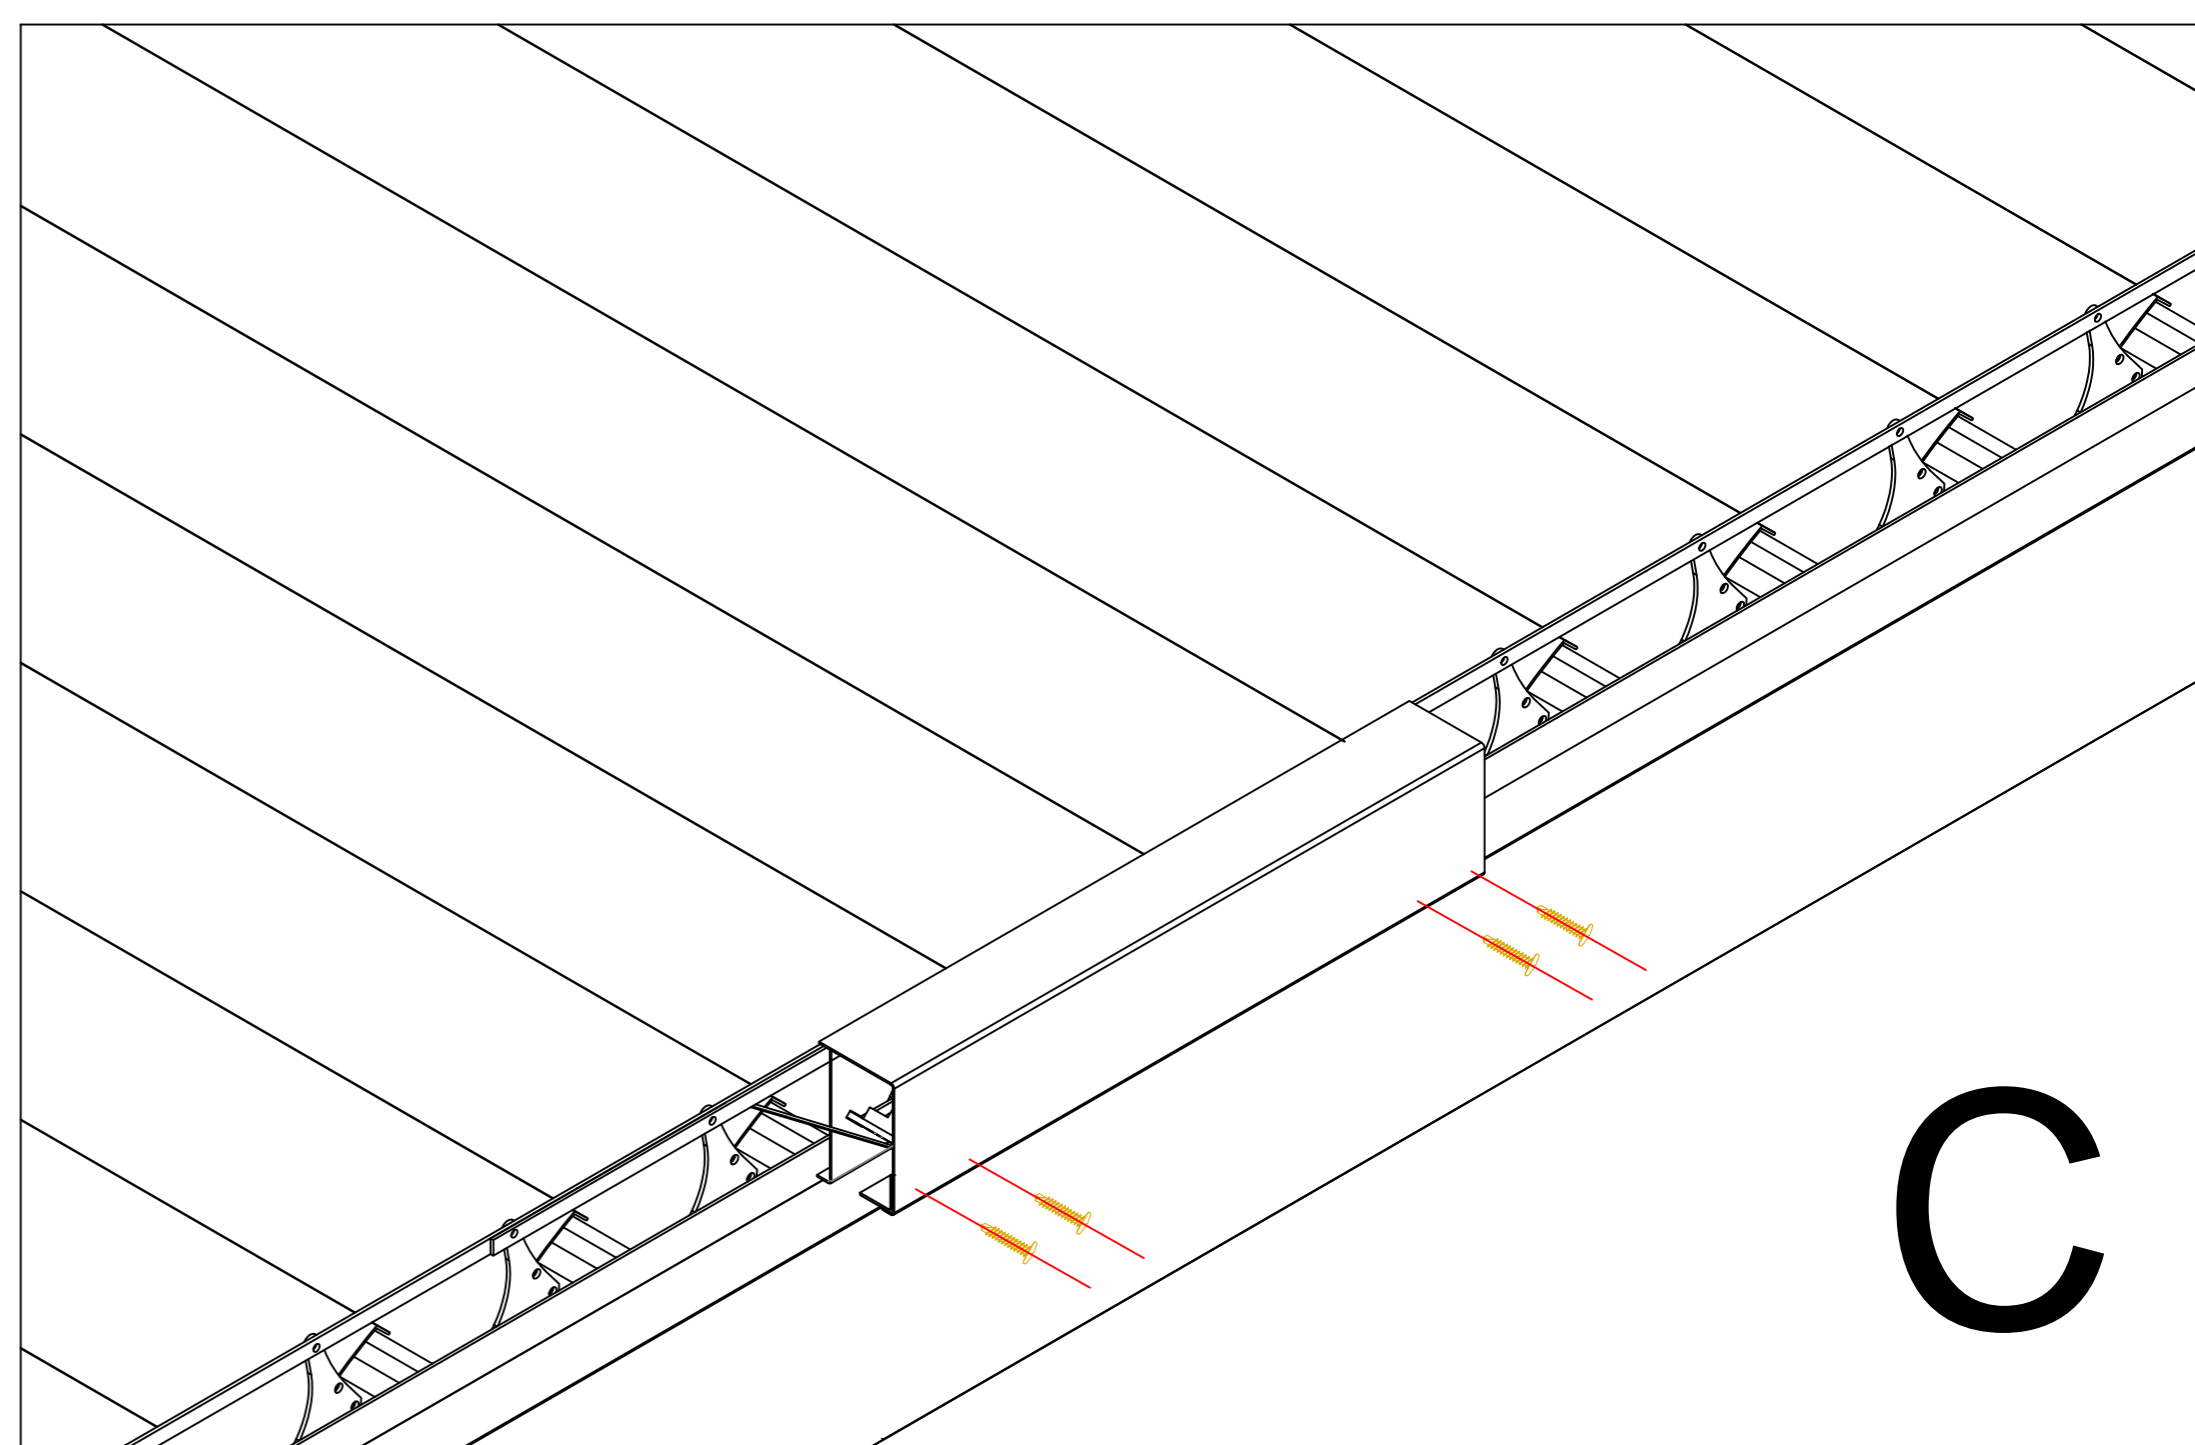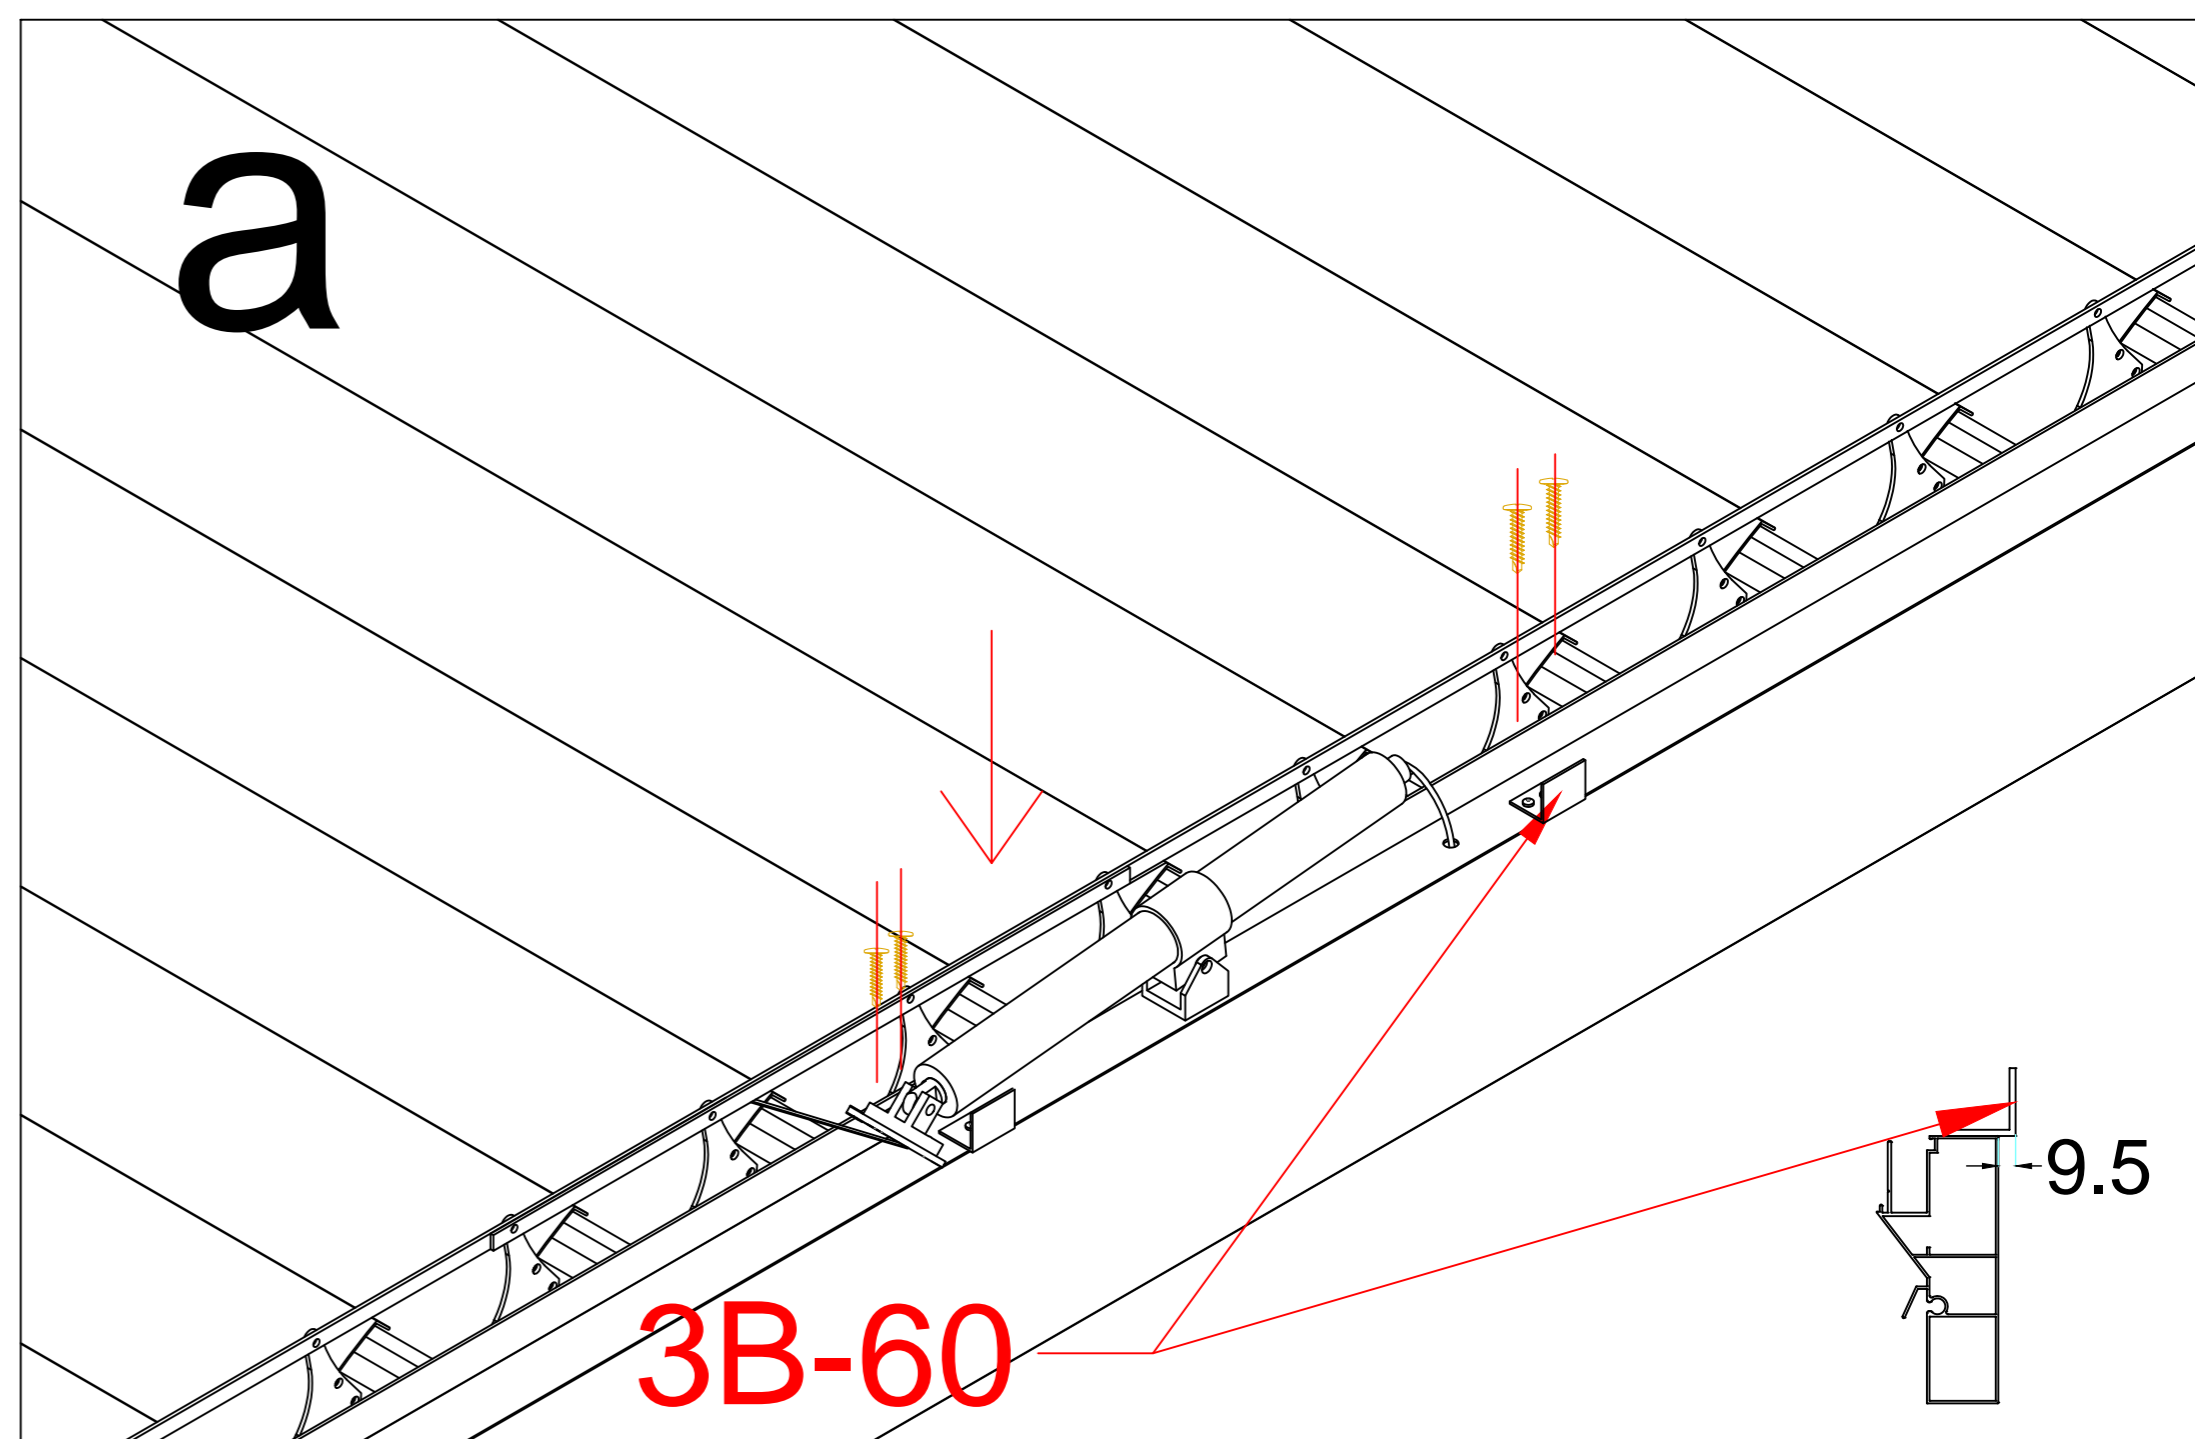



3B-60	 M4.2*19/8pcs	
		1



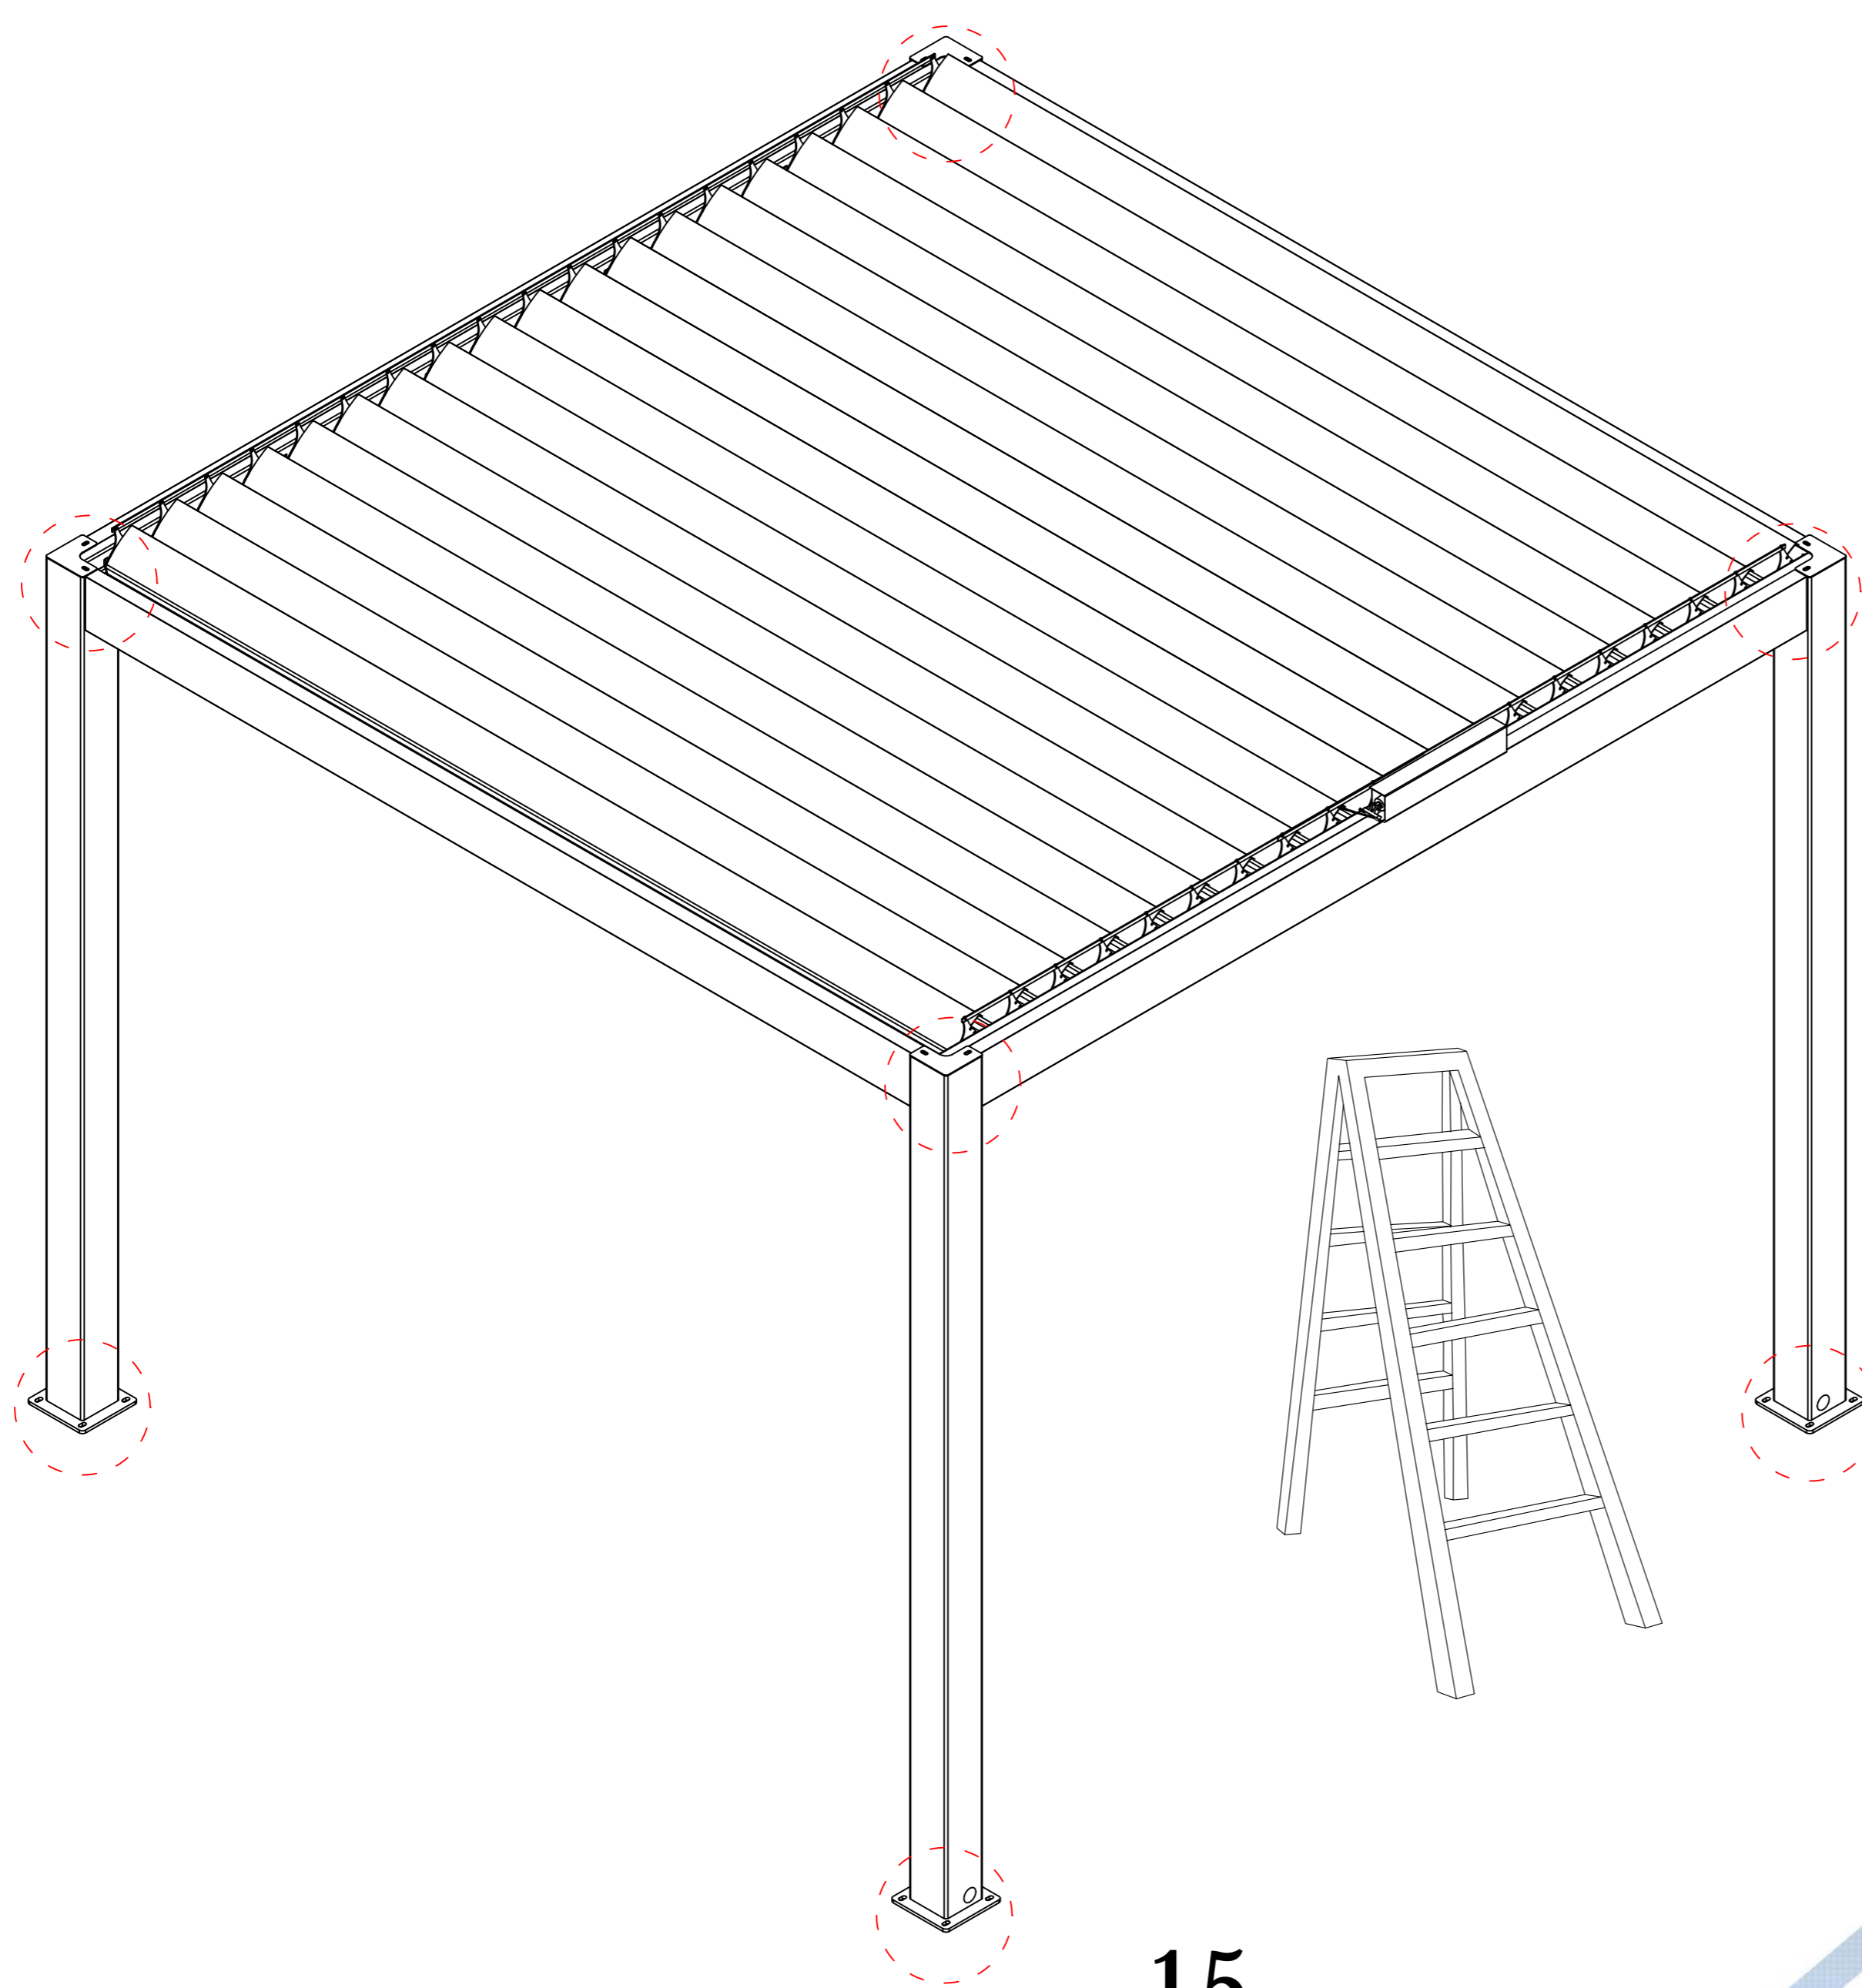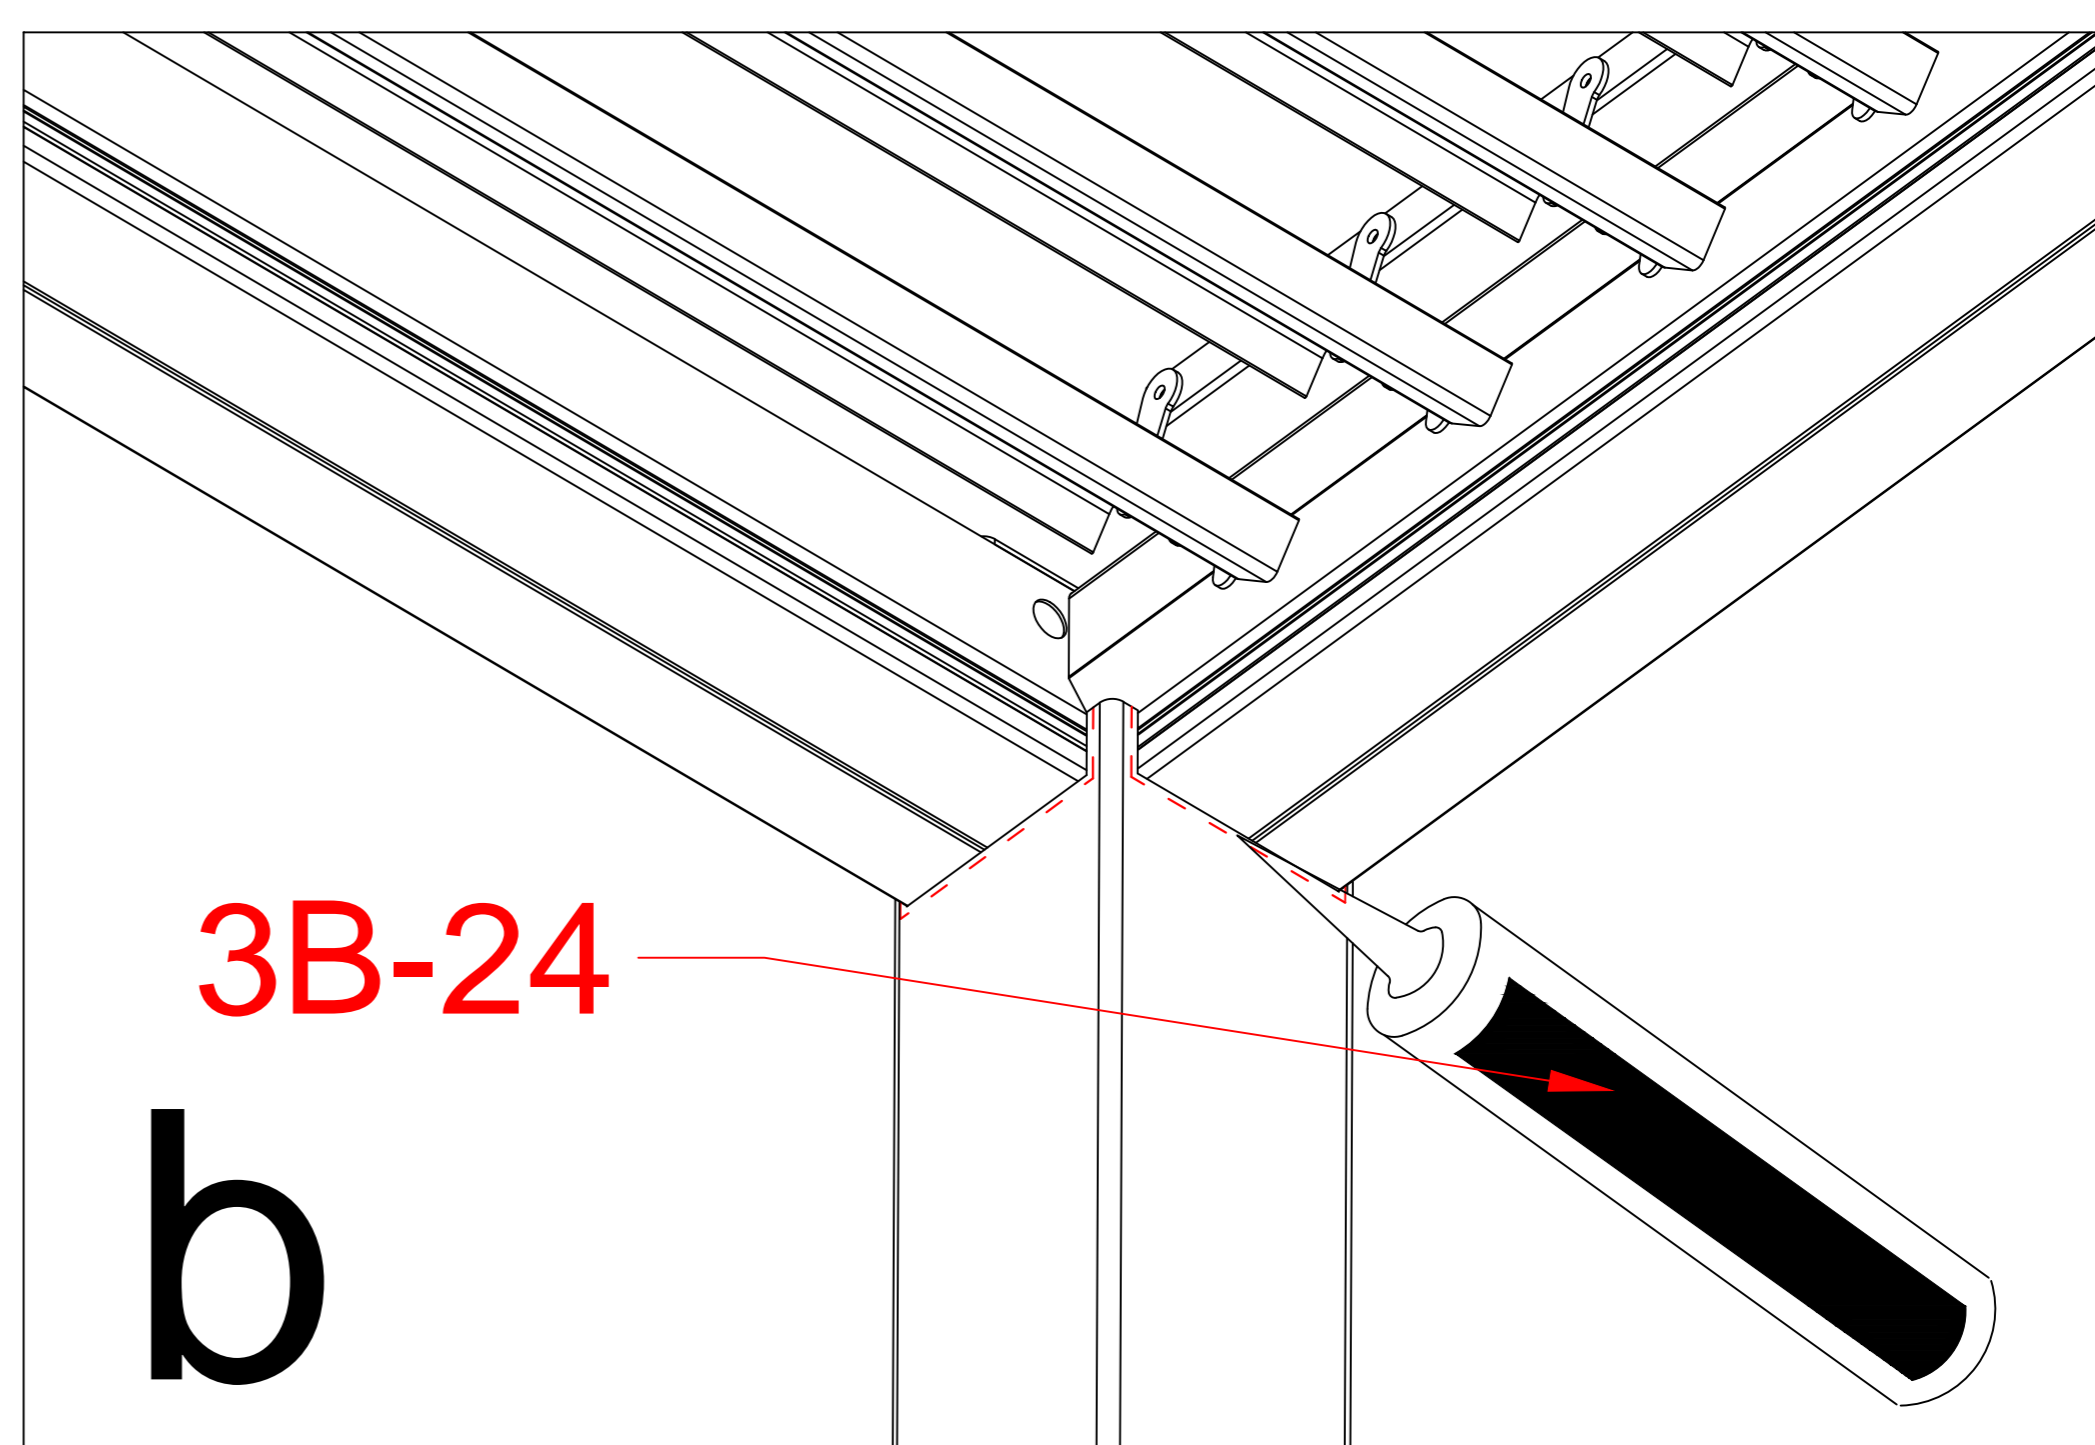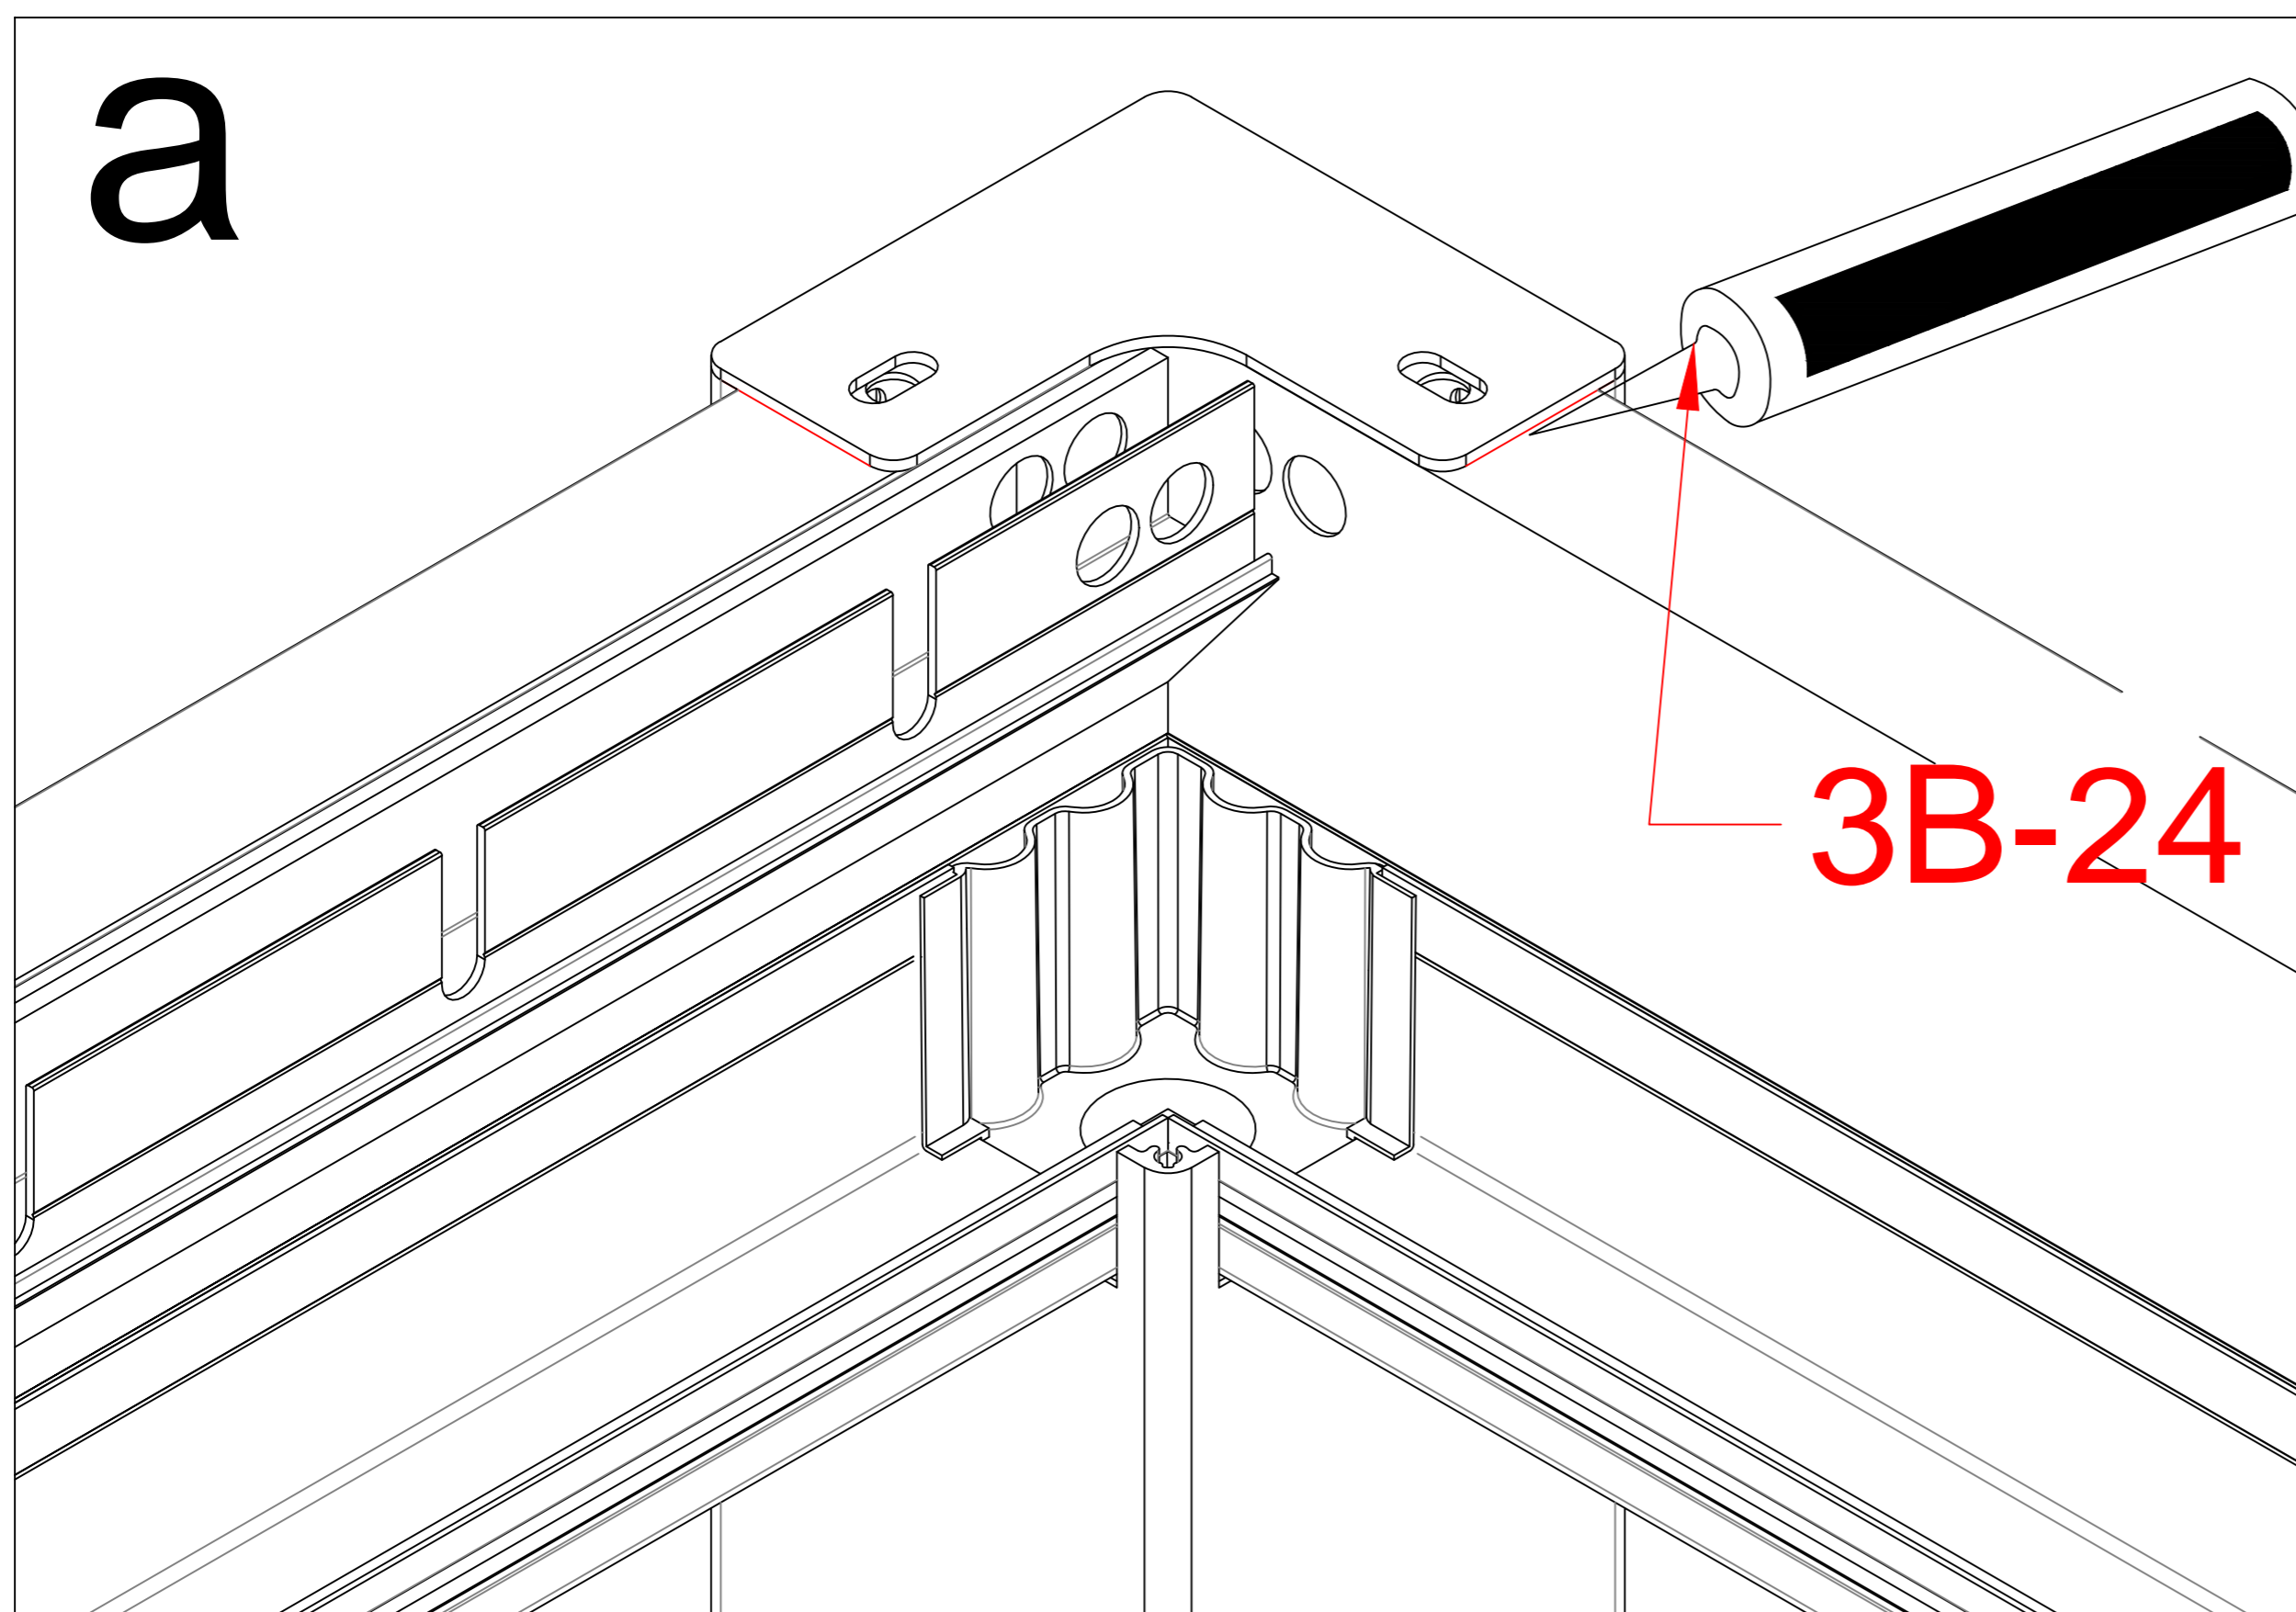

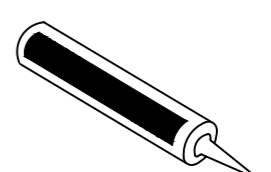3B-24		1
-------	---	---



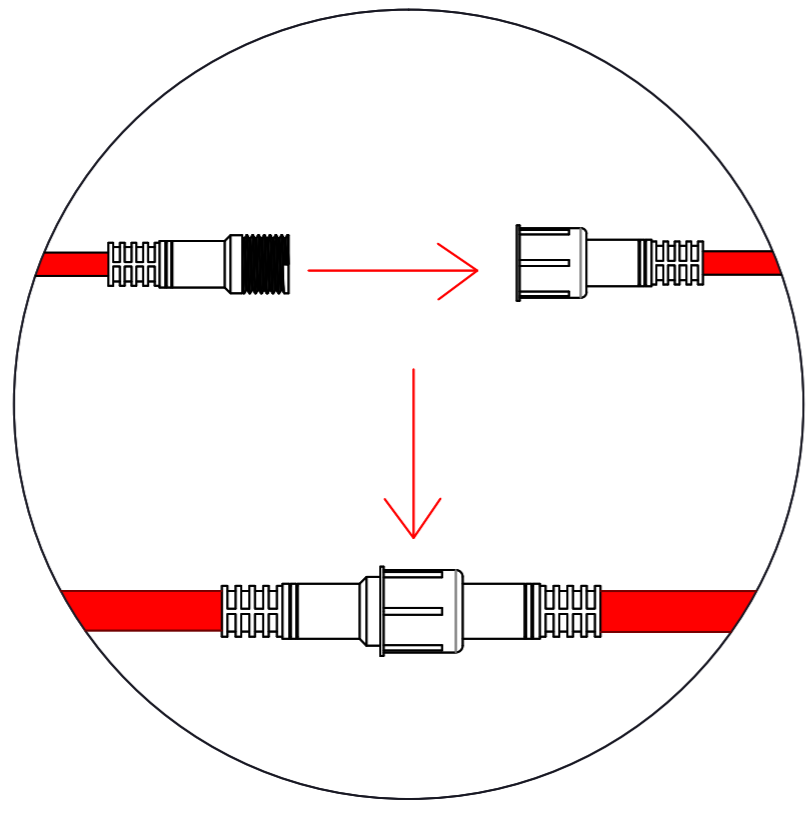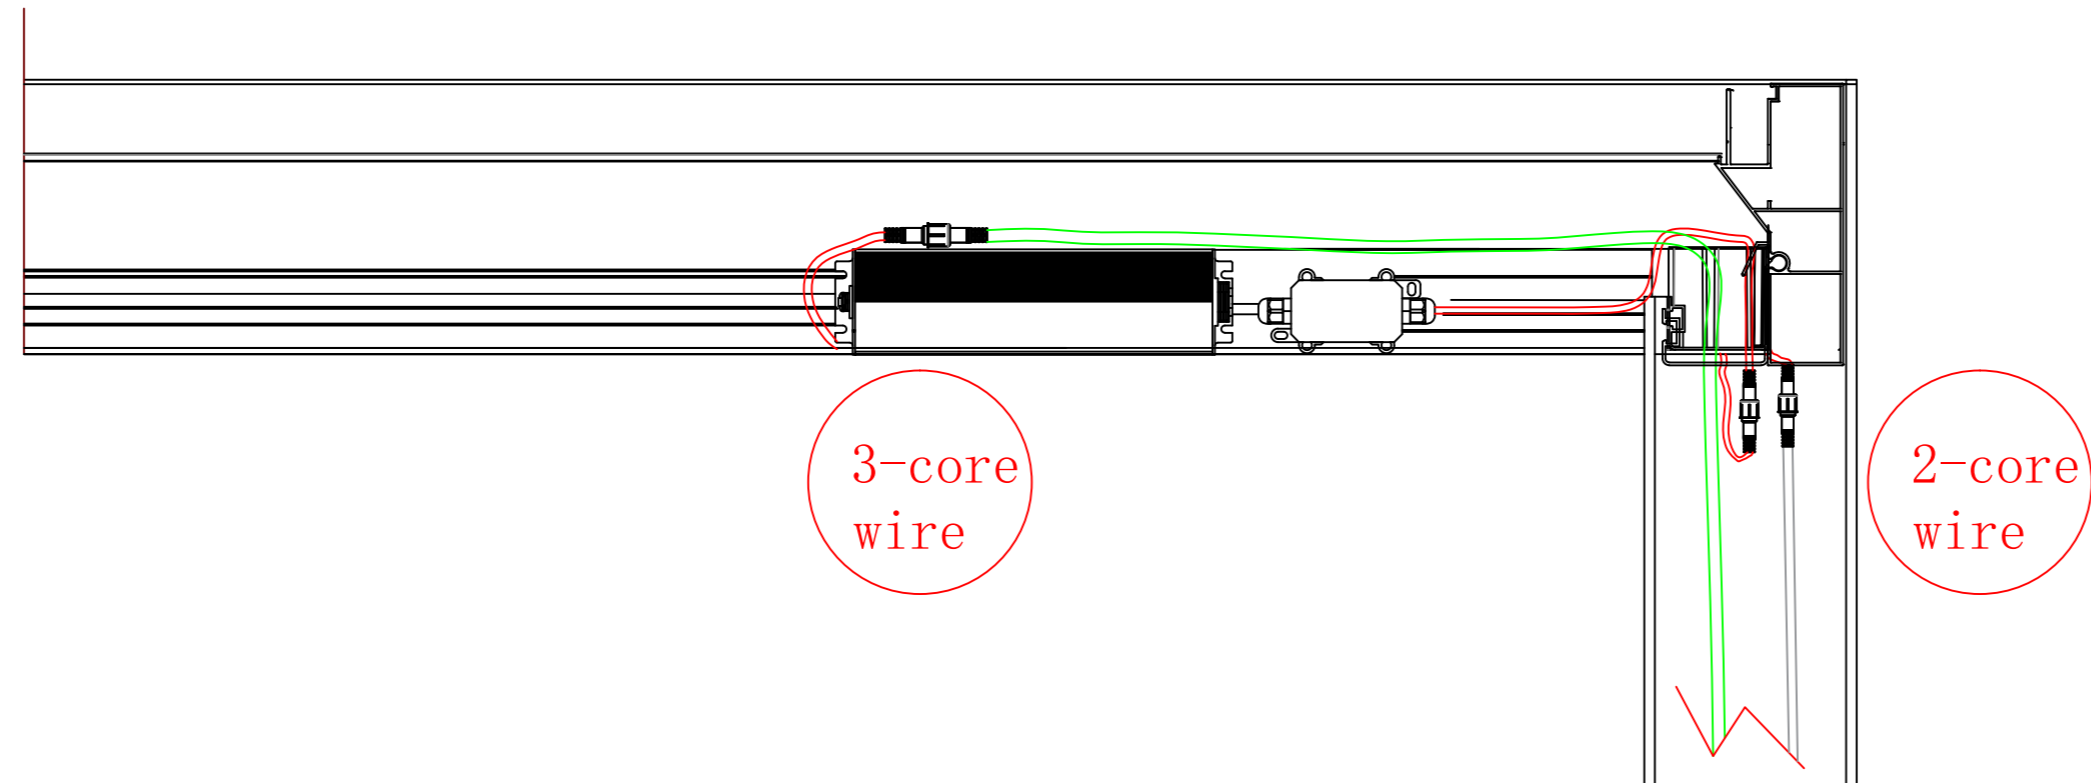

Wires Diagram

Power in: 220V
Power Out To
Motor: DC24V

