




www.porterathletic.com
(888) 277-7778

CUSTOM PRINTED VOLLEYBALL TOP TAPE NET SLEEVE INST0032

1. Lay the net out on the floor.

Centering the sleeve on the net, place the sleeve face down under the net's top tape.

Make sure the floor is clean before laying the sleeve down.

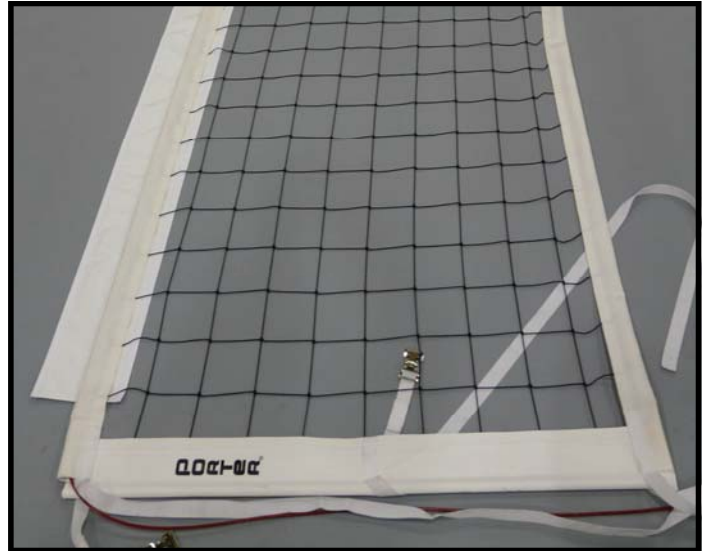

2. Starting from one end, wrap the sleeve around the top tape making sure to pull it tight.



3. Once finished, reattach and tension the net. Slight waves in the sleeve are normal and will not affect play.

