


# DAVID SHAW × Nightworks®

## DUET BEAM WALL LIGHT (IP20)

### *Installation guide*

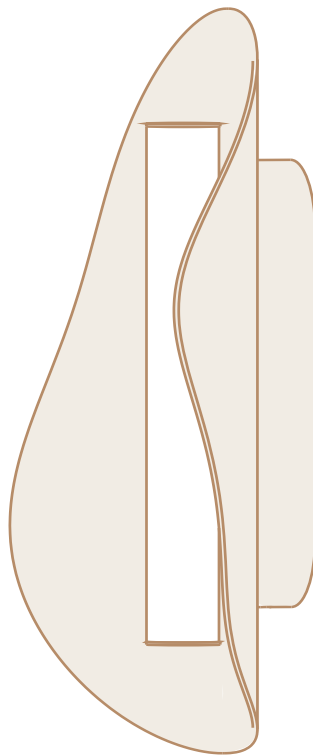

*DANGER electric shock risk. Installation must be conducted by a licensed electrician.*



LOW VOLTAGE - Do not wire light fitting directly to mains power.

## INSTALL FITTING

 **Ensure gloves are worn when handling natural brass products.**

- 1: Remove all items from box.
- 2: Drill hole in the wall, towards the bottom of the fitting, align with the cable slots.
- 3: Using a HEX key, loosen the M6 grub screw at the bottom of the fitting and remove wall bracket.
- 4: *(Optional)* If installing to plaster board pre-drill and install white wall plugs into wall.
- 5: Install wall plate to wall using timber screws.
- 6: Connect mains supply to driver. Ensure to connect earth to the earth terminal inside the fitting.
- 7: Connect LED to driver.
- 8: Ensure cable connected to the light fitting is coiled up inside light correctly when performing the next step.
- 9: Install fitting by hooking the Z shaped bracket that is affixed to the timber sconce to the wall bracket as shown. Firmly press the fitting against the wall, then secure the M6 grub screw at the bottom of the fitting.
- 10: Wipe down fitting with clean dry cloth.
- 11: Test fitting.

