

# Hanging Guide



## **GATHER SUPPLIES**

- Provided screws & drywall anchors
- 3/8" Drill bit
- Drill
- Hanging template



## **POSITION TEMPLATE**

- Place template on wall
- Mark where to put screws



## **ATTACH ANCHORS & SCREWS**

- Drill hole with 3/8" bit
- Press in drywall anchor
- Put screw into anchor





## **HANG FRAME**


- Slide frame onto screws
- Gently tug down to lock frame in place
- Stand back in awe




## **PRINTING HELP**

- Open PDF with Adobe Reader to avoid resizing
- You can download the most recent version of Adobe Reader here:  
<https://get.adobe.com/reader/>
- In printer box, click "Actual Size"

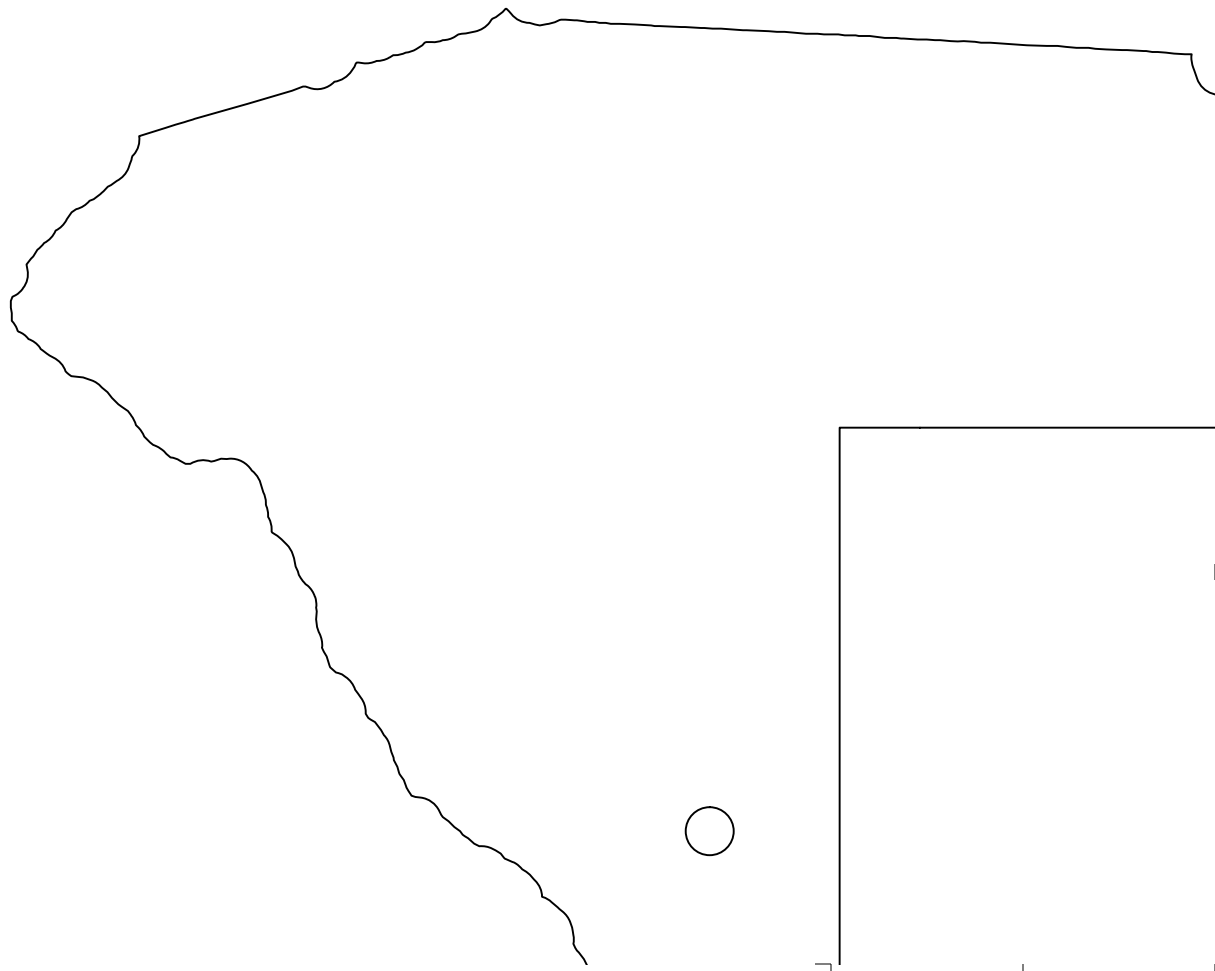

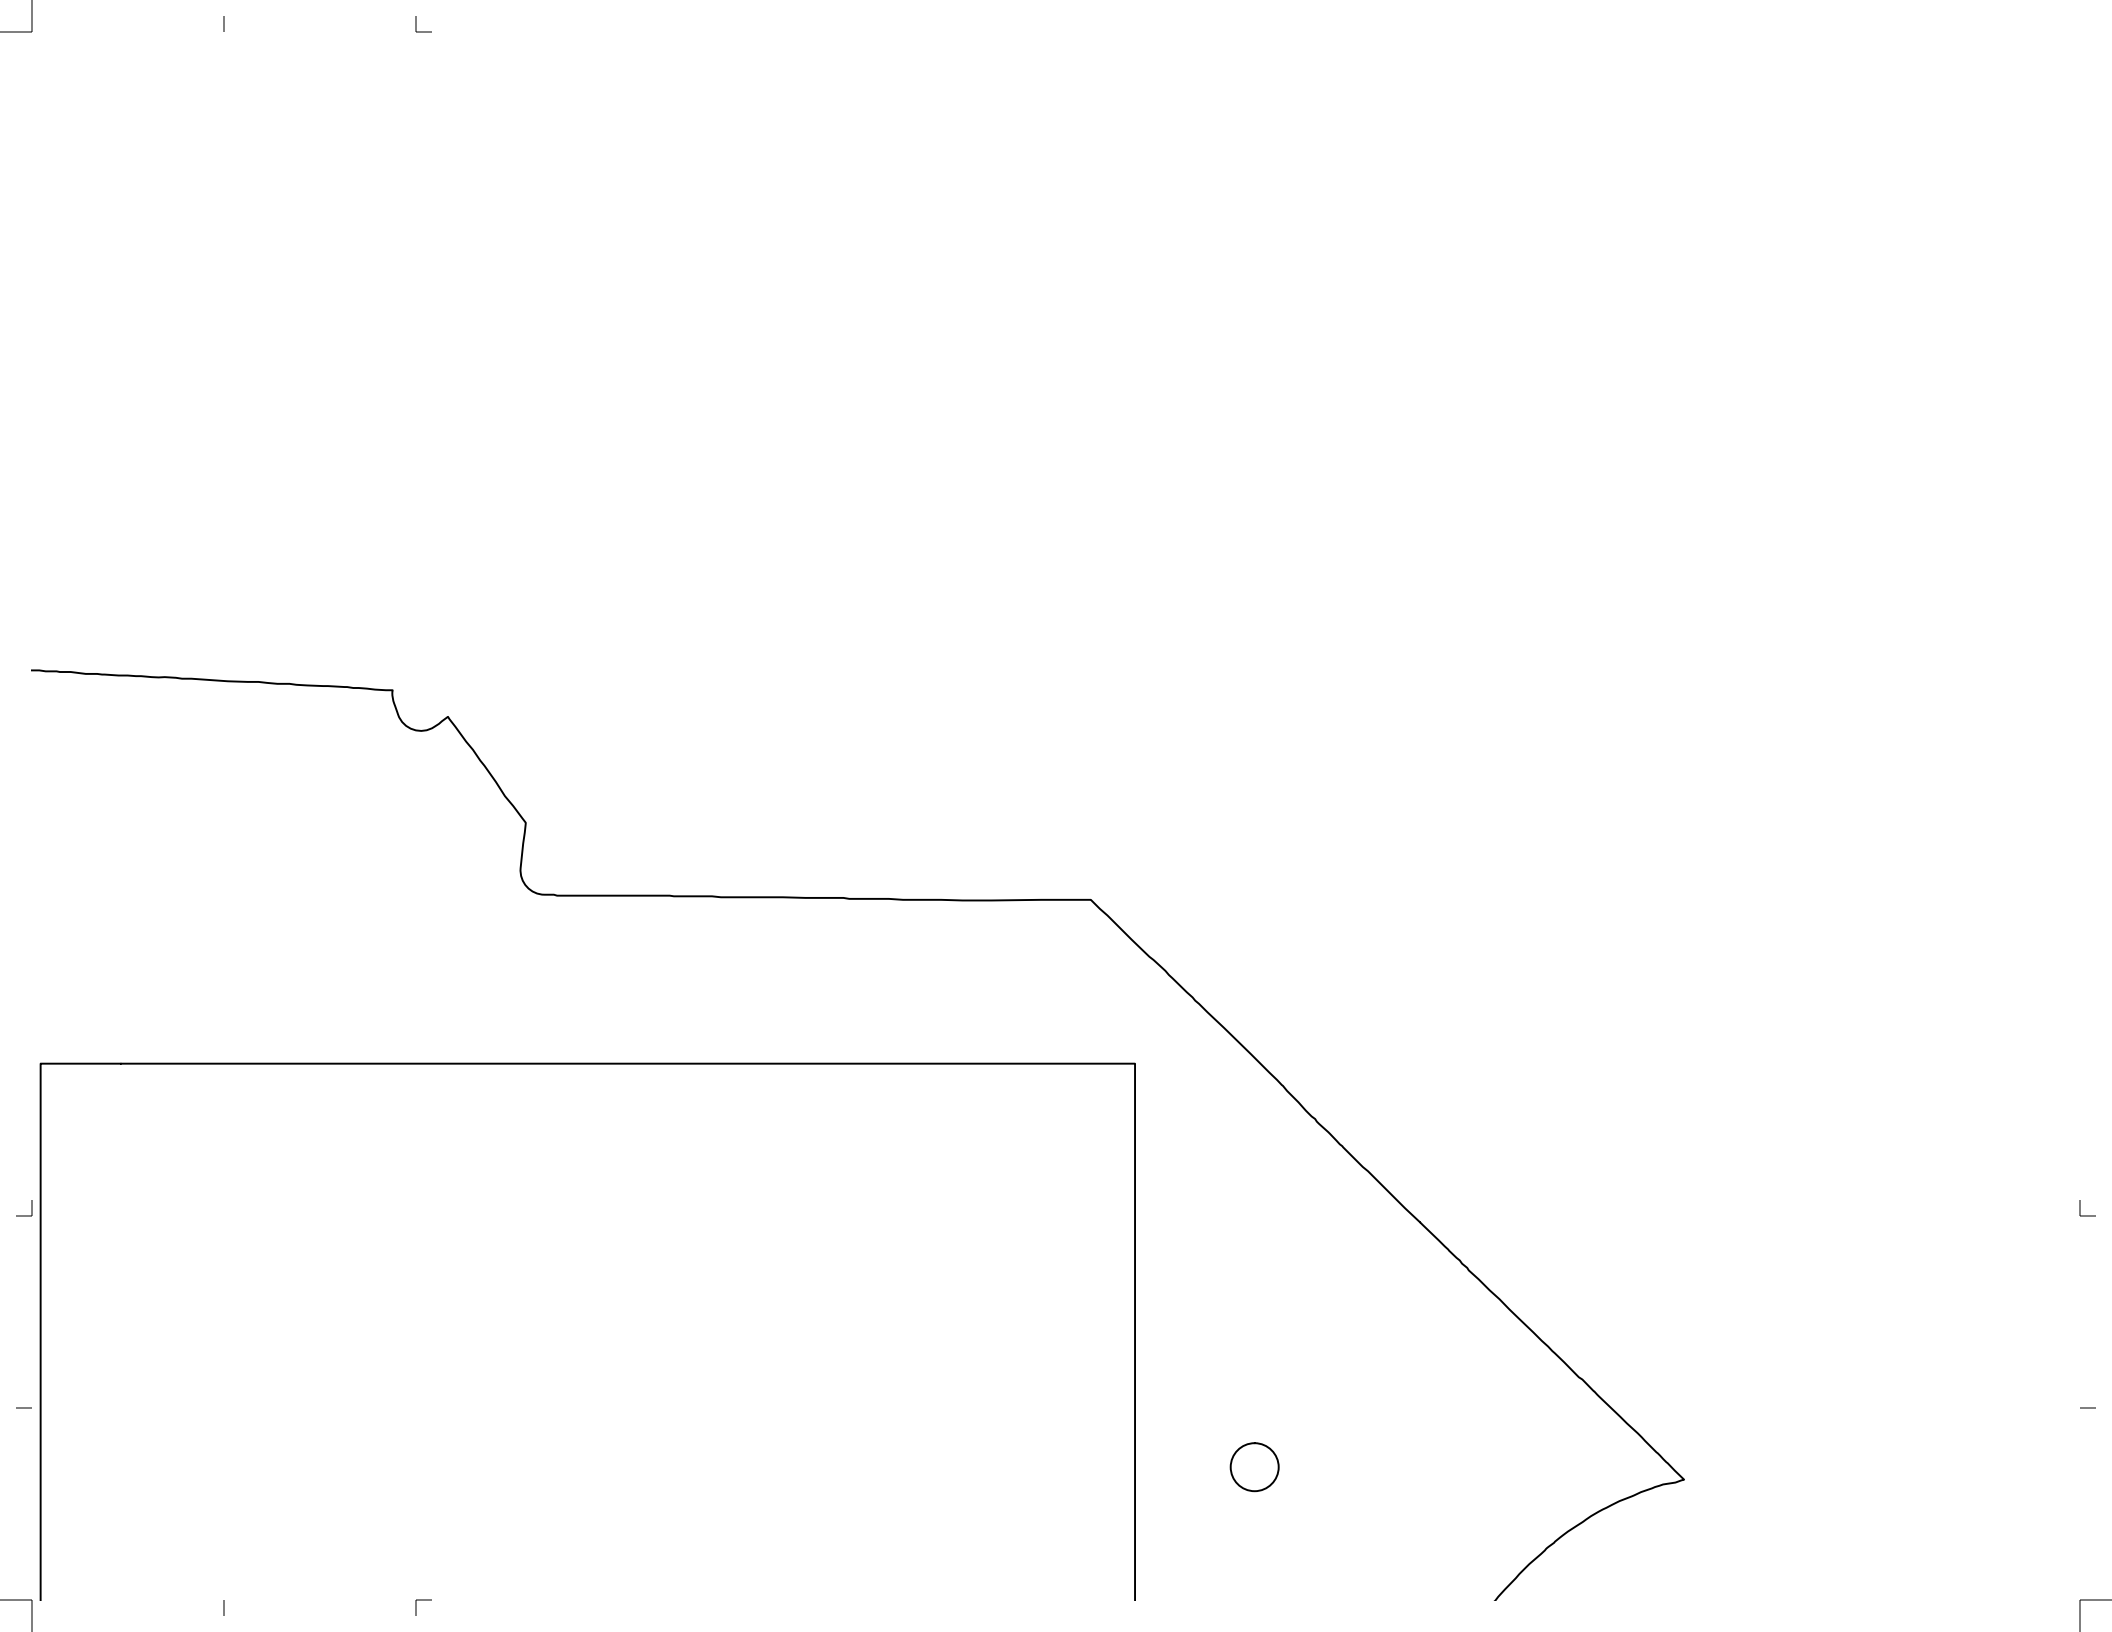

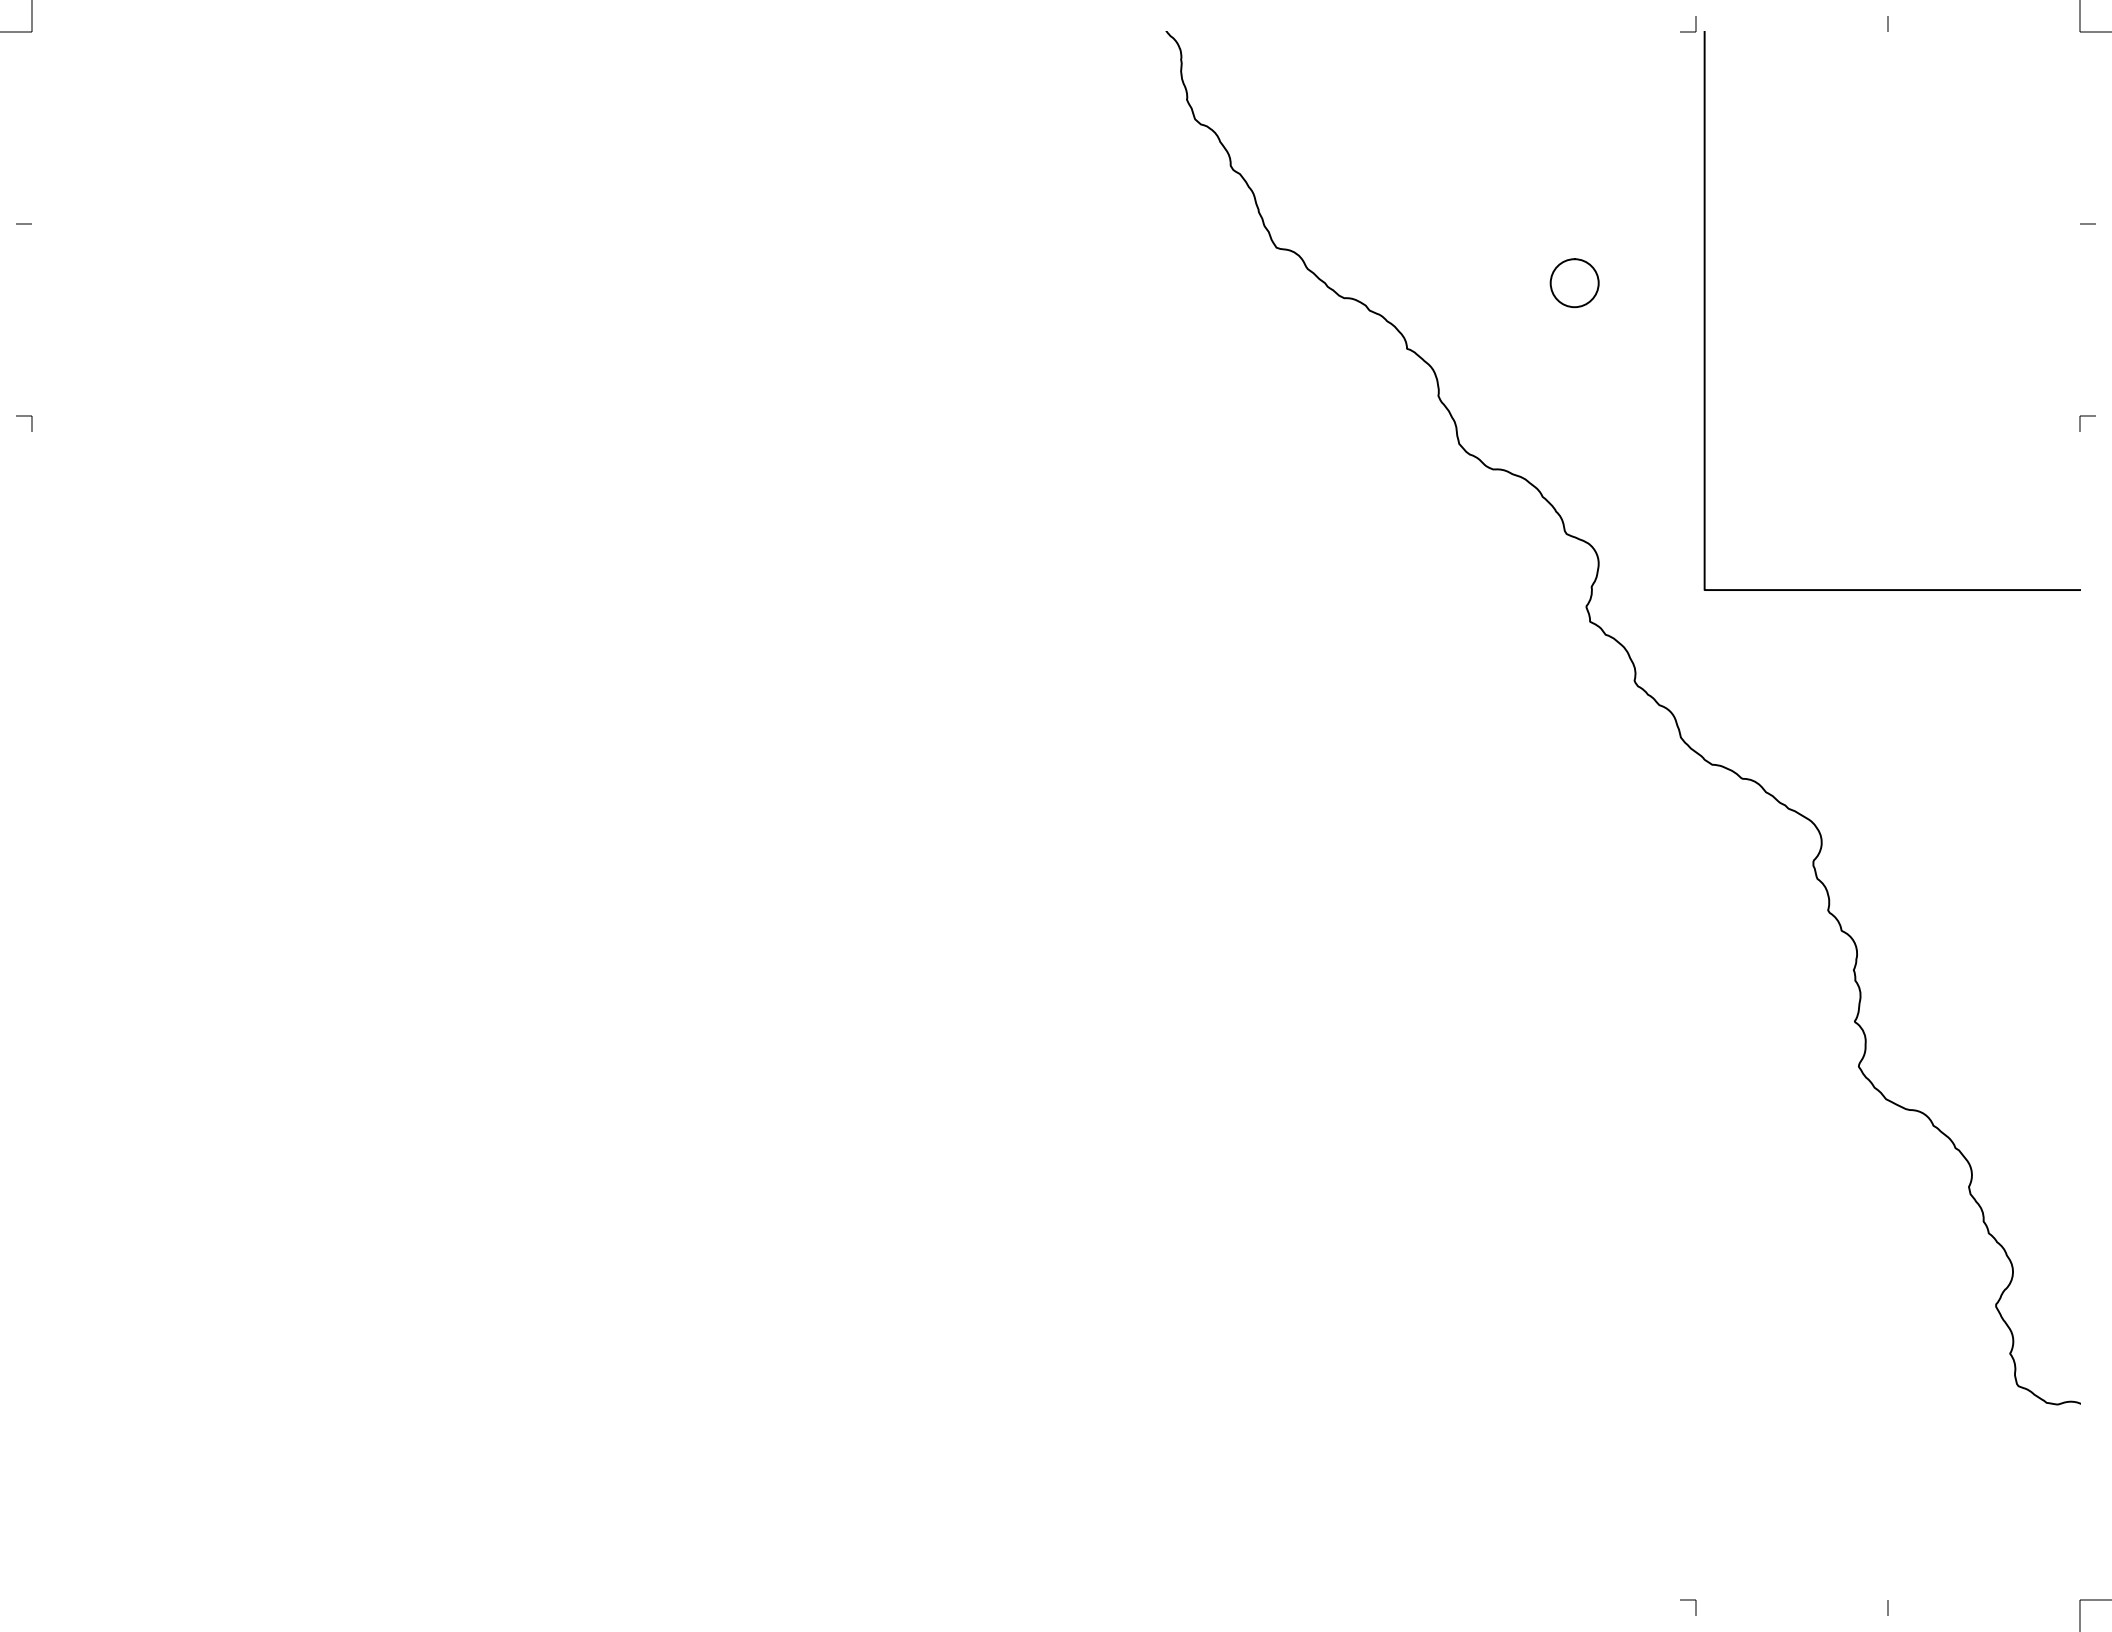

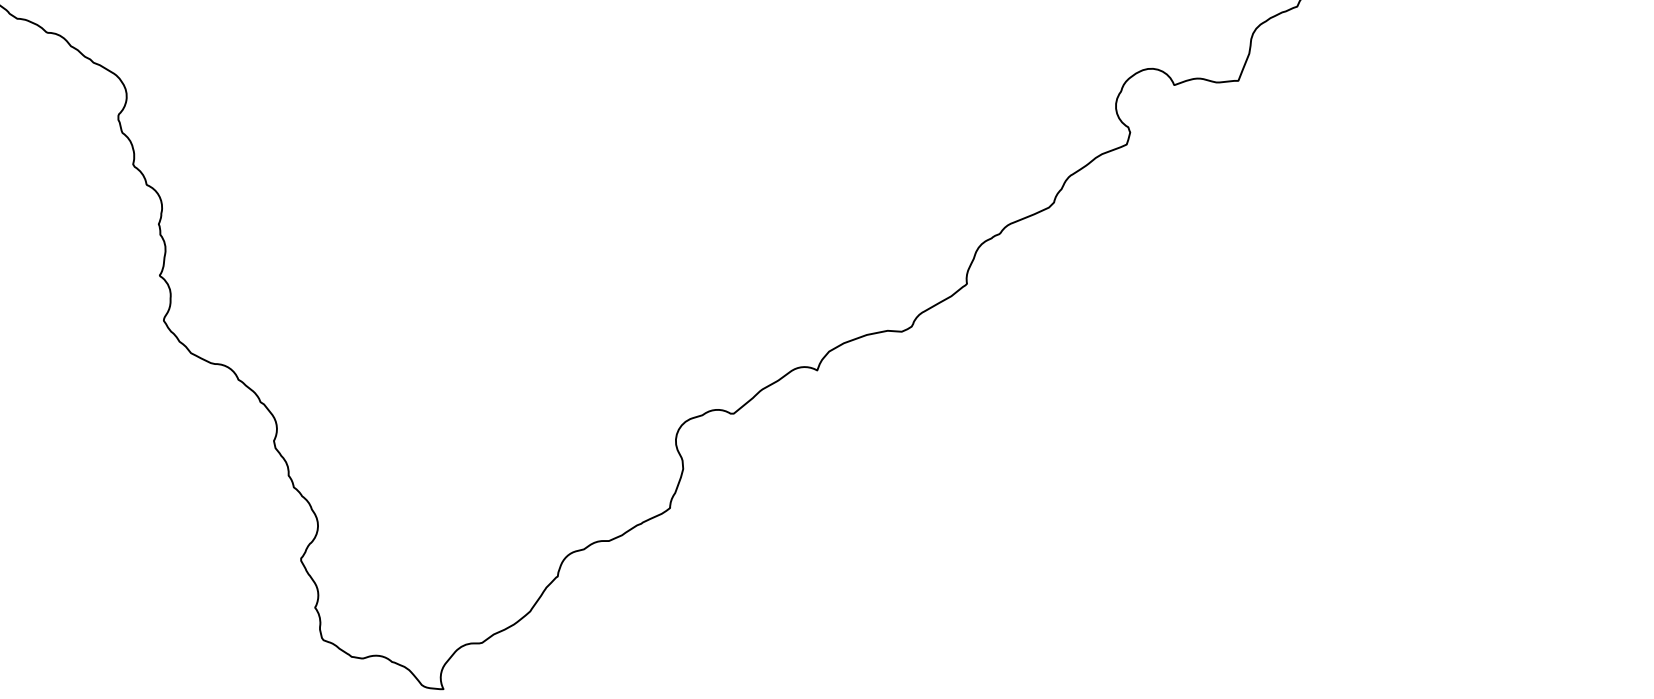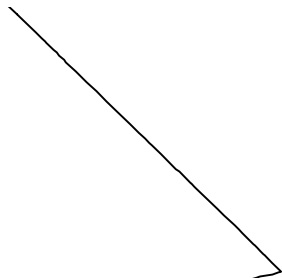

# South Carolina



*the  
Palmetto  
State*