




Cummins 6.7L CCV Delete Kit


General Installation Guide

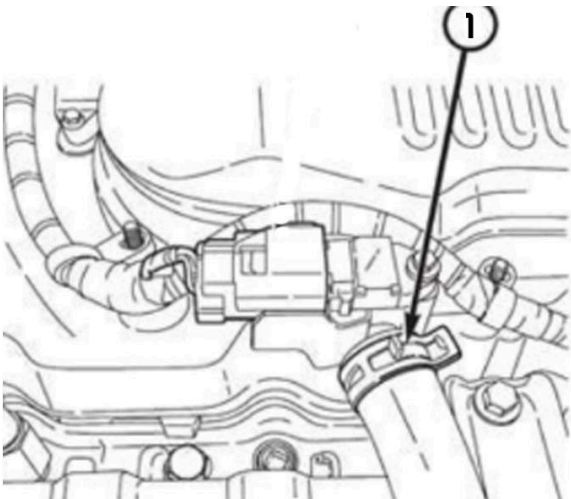

Step 1: Remove hose clamp off the vent hose that is attached to the valve cover.



Step 2: Follow that same hose down and remove hose clamp(s) that are down towards the turbo. Pull the hose out.

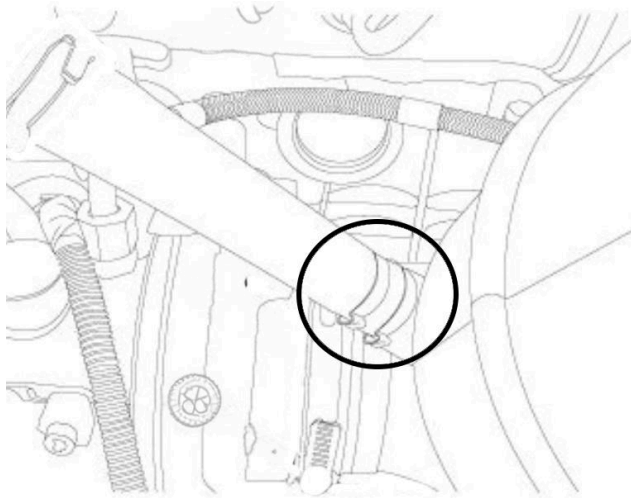

Step 3: Press in the provided plug to the lower hose that was connected to the turbo inlet and reinstall hose with the plug with provided hose clamps. If your truck is a 2019+, cut the factory hose near the compressor housing and install the provided plug.



Step 4: Install the provided filter with 90 degree hose to the valve cover where you previously removed the vent tube using provided hose clamps.