
ASSEMBLY INSTRUCTIONS

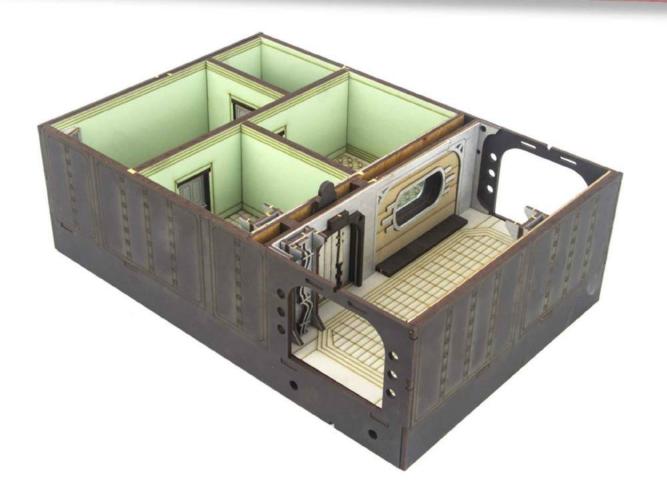

Before starting this kit, make sure you read through all the instructions carefully. Always remember to dry fit parts and sand as needed.

We use two kinds of glue when assembling our kits. Super glue (cyanoacrylate) or PVA glue.

You can repaint or weather our kits easily! The paint we use is a great base primer and will take paint nicely.

If you have any issues during assembly, please contact us and we'll always help!

We would like to take the time to thank you for purchasing a Black Site Studios product!

www.blacksitestudio.com

WE SUGGEST HAVING THESE TOOLS ON HAND

IMPORTANT SYMBOLS YOU'LL FIND ON YOUR JOURNEY













ATTENTION





DRY FIT




NO GLUE







TRIM/SAND


PAGE 1

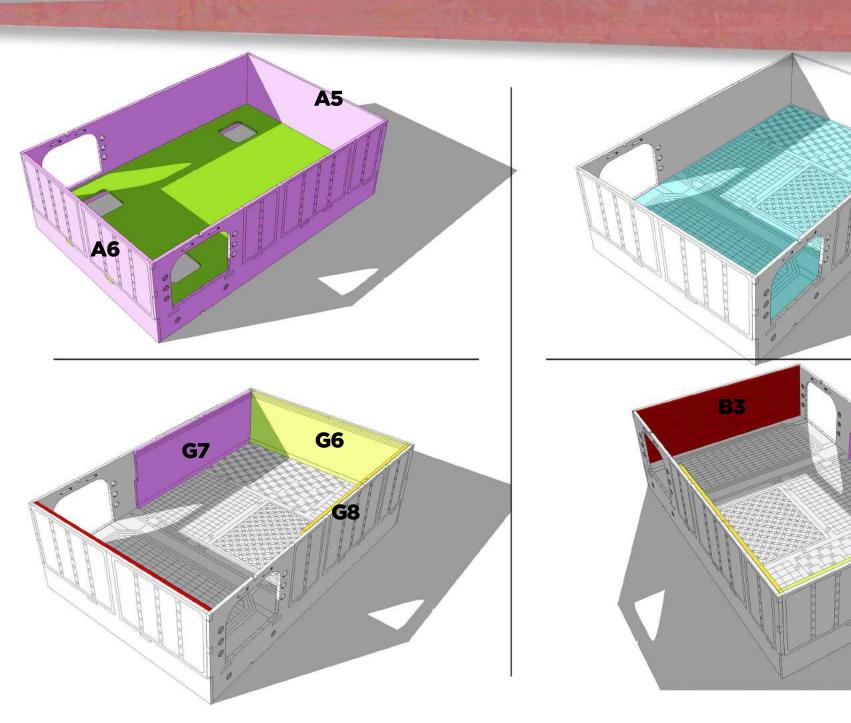

PAGE 2

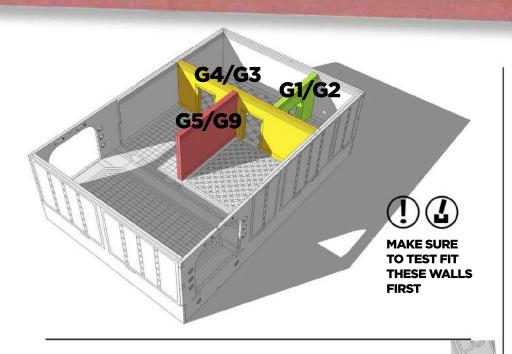


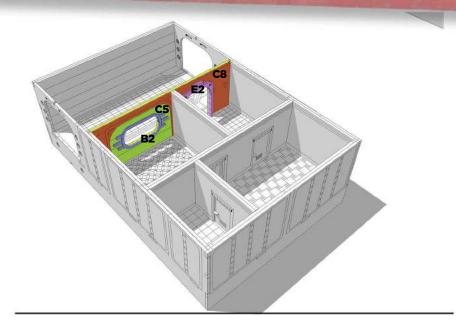

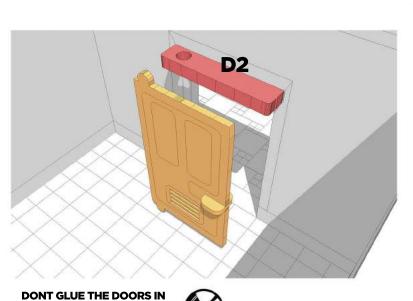



THEYRE DESIGNED TO OPEN


AND CLOSE.

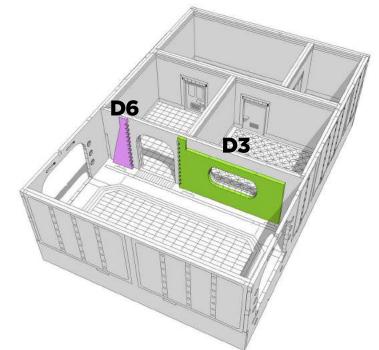


PAGE 3

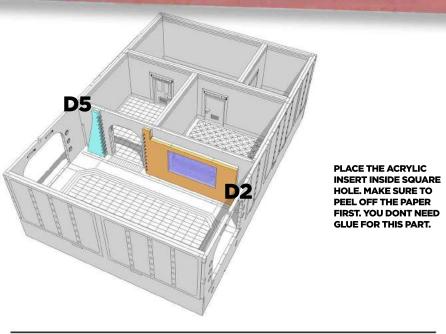


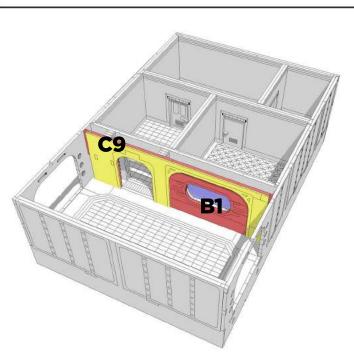


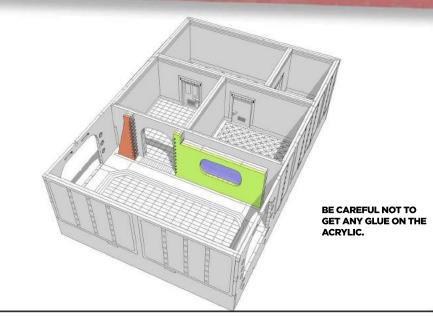


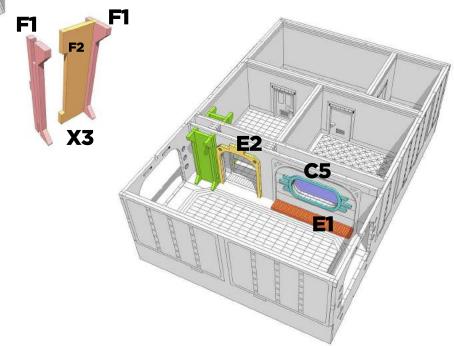

PAGE 4

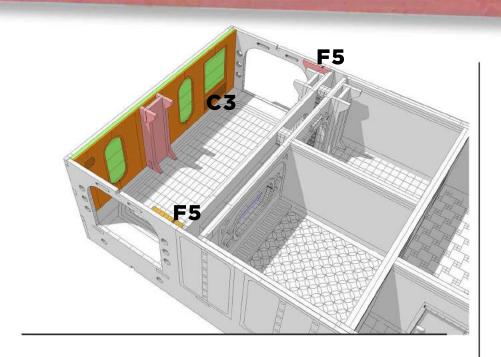

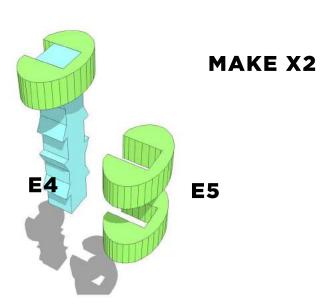


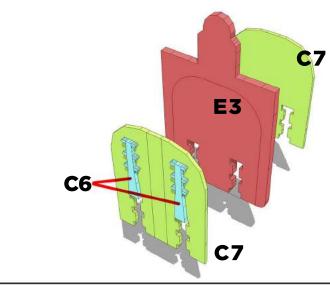

CAREFULLY SLIDE THE CONSTRUCTED PART INTO THE GAP PROVIDED IN THE DOOR.



MAKE SURE TO POSITION IT CLEANLY IN THE MIDDLE. OTHERWISE IT WILL PREVENT THE DOOR BEING REMOVED

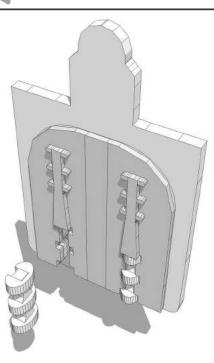

PAGE 5

