

ELEVATED STATION

ASSEMBLY INSTRUCTIONS



Before starting this kit, make sure you read through all the instructions carefully. Always remember to dry fit parts and sand as needed.

We use two kinds of glue when assembling our kits. Super glue (cyanoacrylate) or PVA glue.

You can repaint or weather our kits easily! The paint we use is a great base primer and will take paint nicely.

If you have any issues during assembly, please contact us and we'll always help!

We would like to take the time to thank you for purchasing a Black Site Studios product!

www.blacksitestudio.com

WE SUGGEST HAVING THESE TOOLS ON HAND



IMPORTANT SYMBOLS YOU'LL FIND ON YOUR JOURNEY



ATTENTION



DRY FIT



NO GLUE





GLUE




TRIM/SAND

ELEVATED STATION


PAGE 1

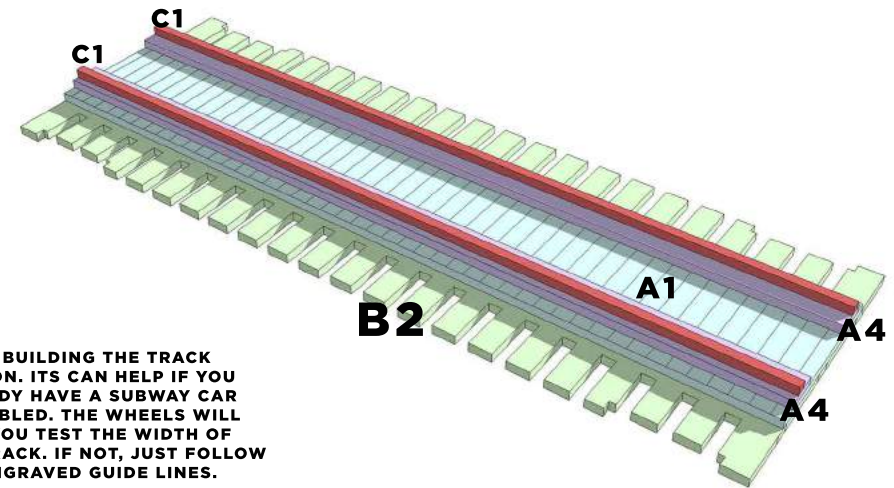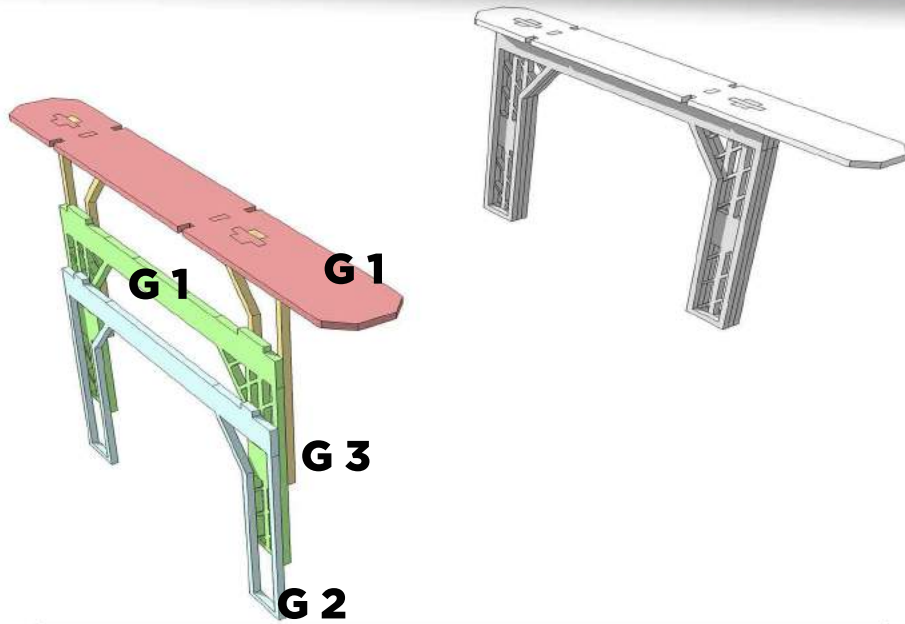

WHILE BUILDING THE TRACK SECTION, ITS CAN HELP IF YOU ALREADY HAVE A SUBWAY CAR ASSEMBLED. THE WHEELS WILL HELP YOU TEST THE WIDTH OF THE TRACK. IF NOT, JUST FOLLOW THE ENGRAVED GUIDE LINES.

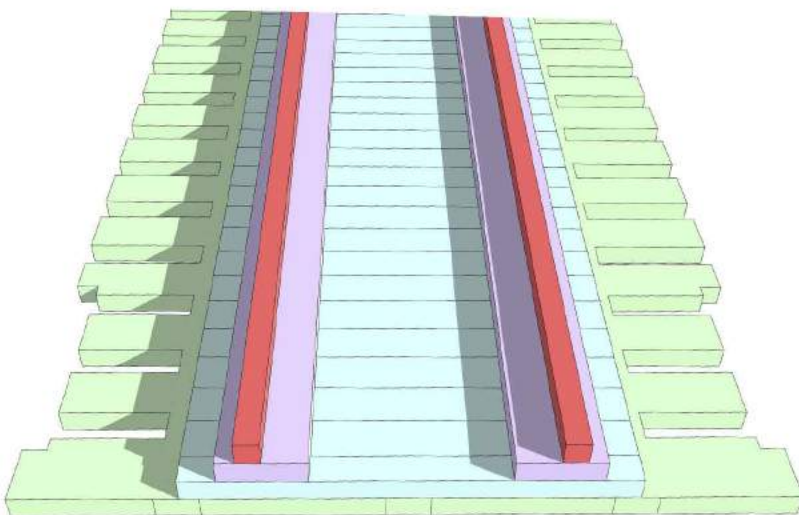



EXAMPLE OF HOW THE TRACKS LINE UP.

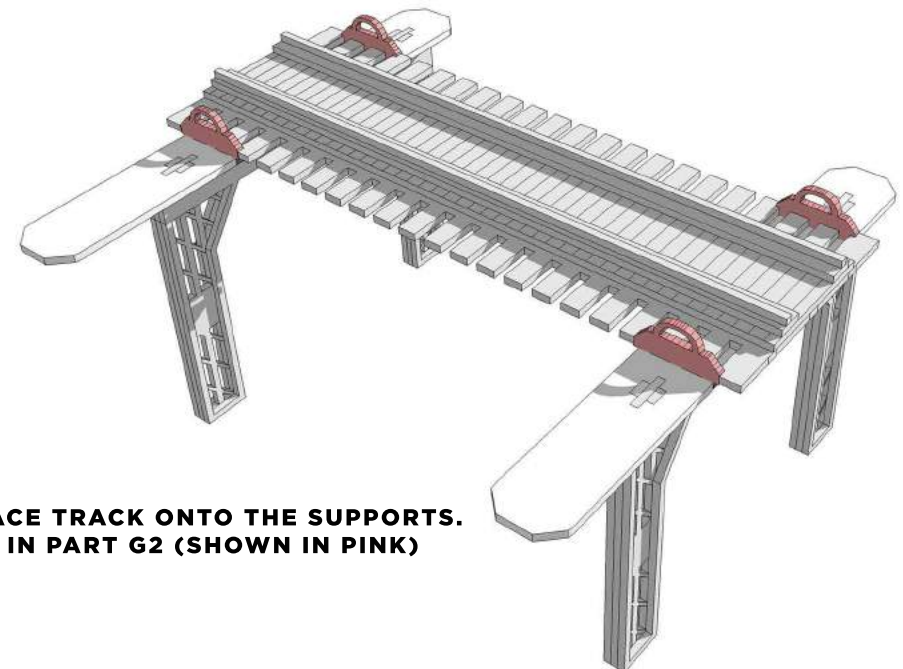



PLACE TRACK ONTO THE SUPPORTS. FIX IN PART G2 (SHOWN IN PINK)

ELEVATED STATION

PAGE 2


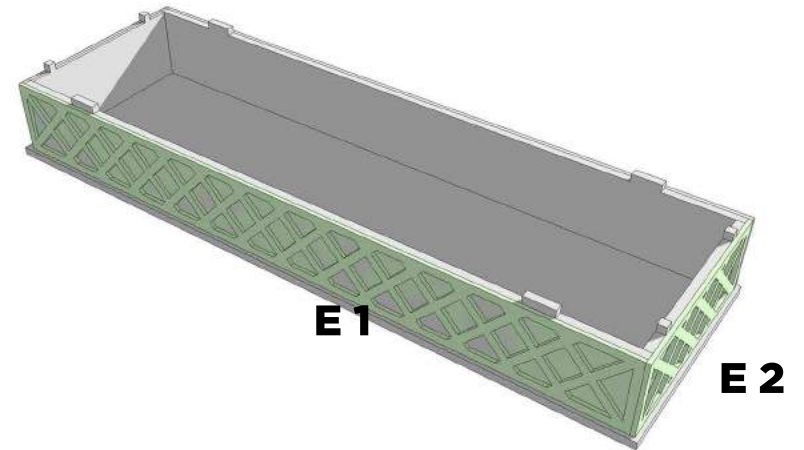
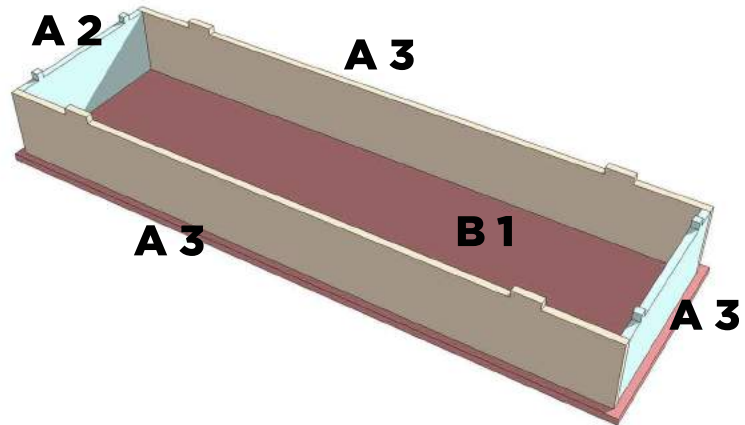


PLACE PART F1 ON
FIRST, THEN ATTACH
RAILING.

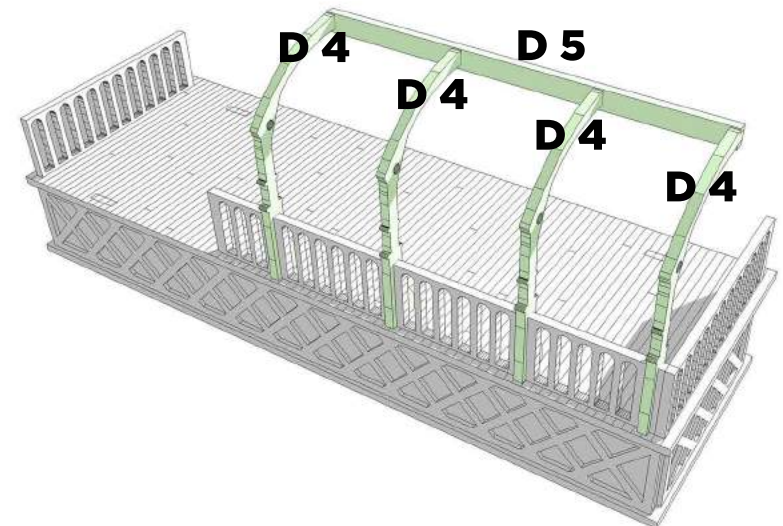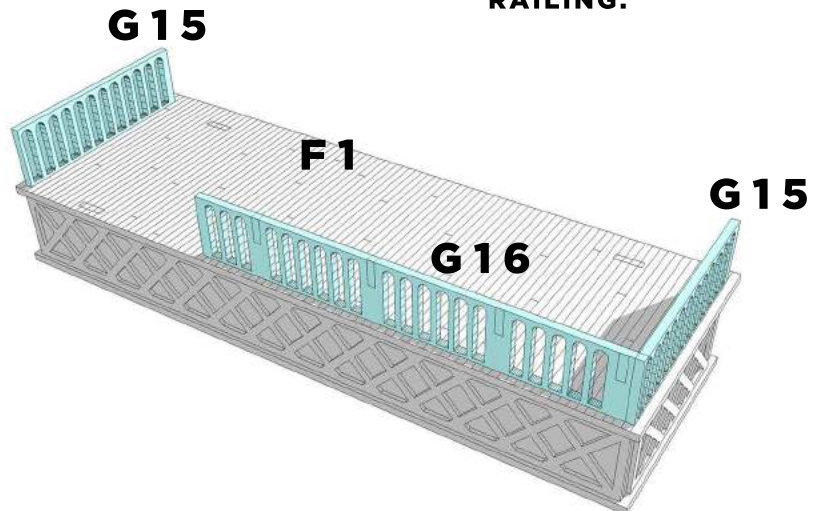


ELEVATED STATION

PAGE 3

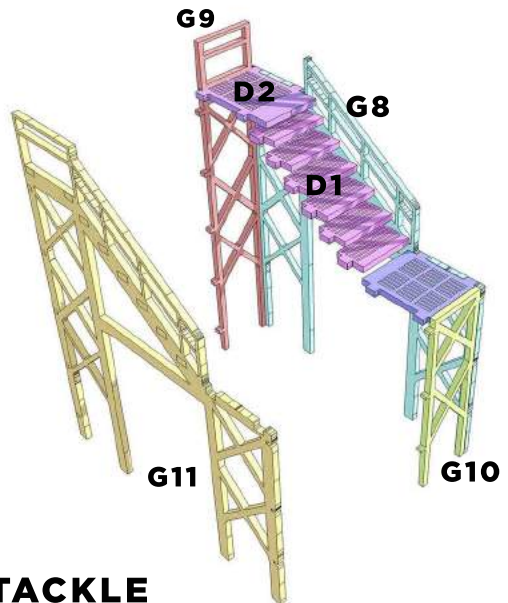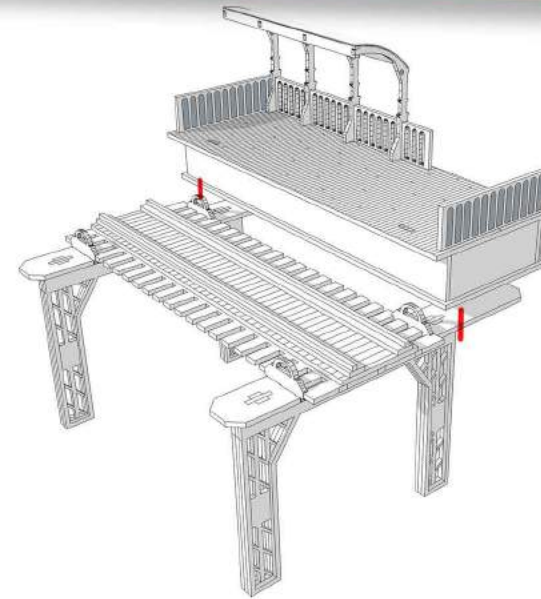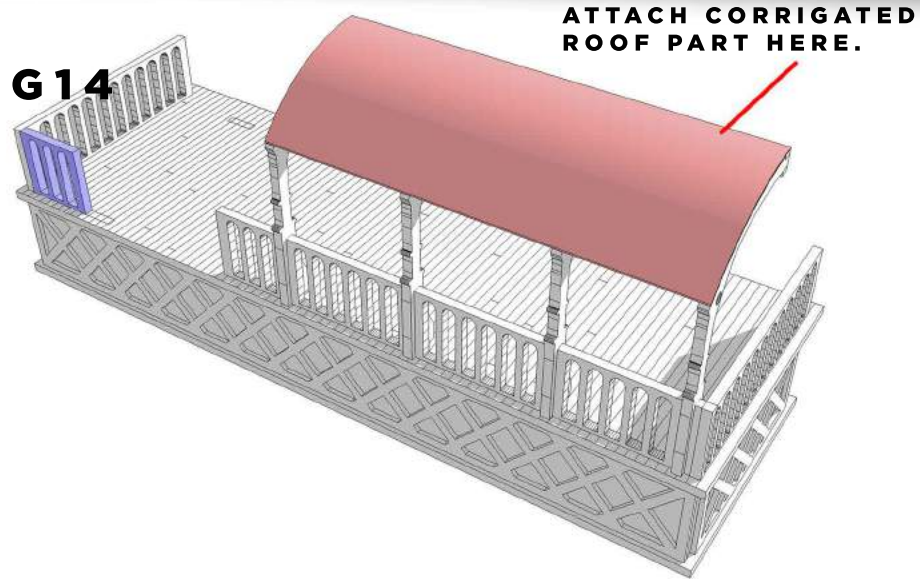


TIME TO TACKLE THE STAIRS, LETS TO THE LARGE SET FIRST.

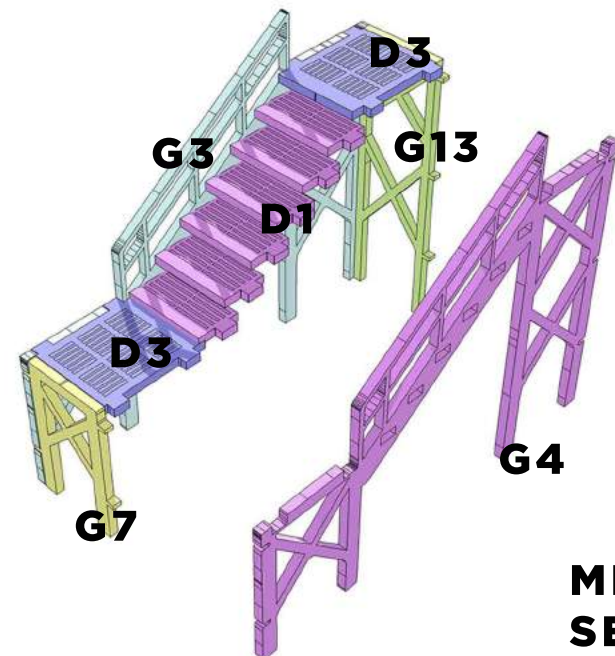

MEDIUM SET.

ELEVATED STATION

PAGE 4

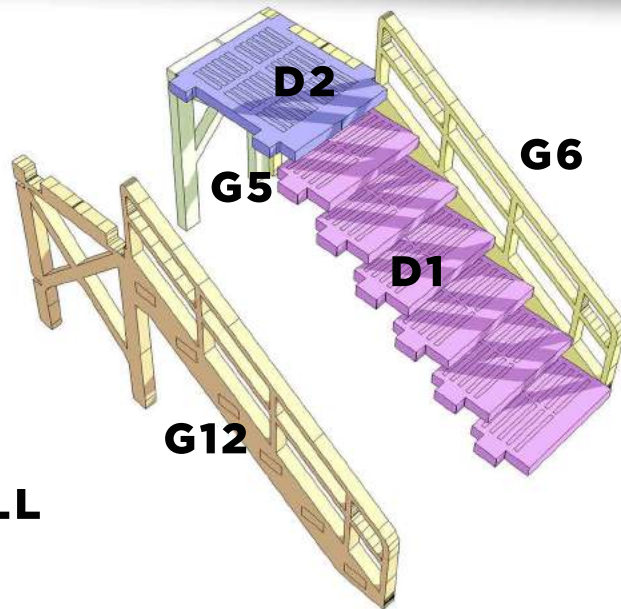

**SMALL
SET**

**THE STAIRS ARE DESIGNED
TO BE LEFT UNGLUED FROM
EACH OTHER. THIS WAY YOU
CAN CHANGE THEM UP AS
NEEDED.**

