



## PREFAB Shower Floor Kit 32"

#### Kit includes:


- Shower Pan
- Drain support
- Linear Drain
- Band
- Inside and Outside Corners
- Coupling

### QM PREFAB SHOWER FLOOR | Shower pan:

- 100% Post-Consumer Recycled PET with a recyclable Superdry membrane.
- Pre-Sealed Superdry Waterproofing
- Pre Sloped
- 140 psi compressive strength,.
- Wide Drain Support
- Easily trim or expand with dry-pack mortar.
- UV resistant and built to withstand indoor and outdoor use.



## 

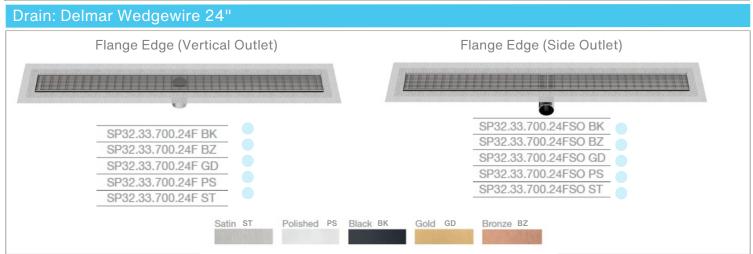





# PREFAB Shower Floor Kit 40"

#### Kit includes:


- Shower Pan
- Drain support
- Linear Drain
- Band
- Inside and Outside Corners


#### QM PREFAB SHOWER FLOOR | Shower pan:

- 100% Post-Consumer Recycled PET with a recyclable Superdry membrane.
- Pre-Sealed Superdry Waterproofing
- Pre Sloped
- 140 psi compressive strength,.
- Wide Drain Support
- Easily trim or expand with dry-pack mortar.
- UV resistant and built to withstand indoor and outdoor



## **Shower Pan Specifications**

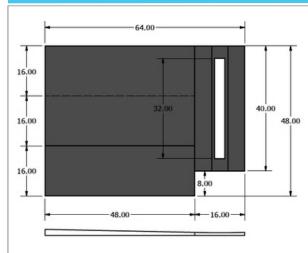



### Drain: Delmar Wedgewire 32"



Note: Installer must verify all rough-in dimensions prior to installation and consult local and national codes. Conformity and compliance to local and national codes are the responsibility of the installer. Dimensions are subject to manufacturers tolerance and change without notice. We can assume no responsibility for use of superseded or voided data. Contact us If you have any question at: info@qm-us.com





ANSI A108, A118, A136 File Number: 14168

## PREFAB Shower Floor Kit 48"


#### Kit includes:


- Shower Pan
- Drain support
- Linear Drain
- Band
- Inside and Outside Corners

### QM PREFAB SHOWER FLOOR | Shower pan:

- 100% Post-Consumer Recycled PET with a recyclable Superdry membrane.
- Pre-Sealed Superdry Waterproofing
- Pre Sloped
- 140 psi compressive strength,.
- Wide Drain Support
- Easily trim or expand with dry-pack mortar.
- UV resistant and built to withstand indoor and outdoor



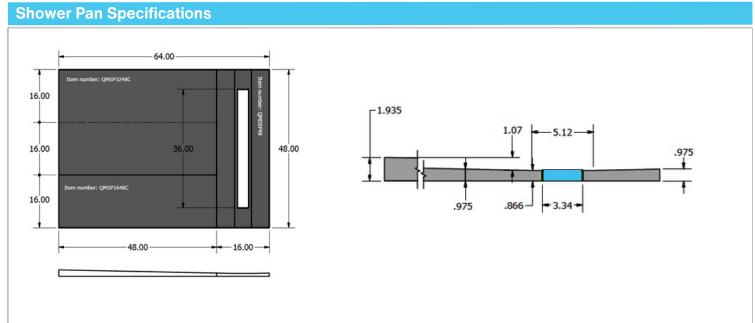

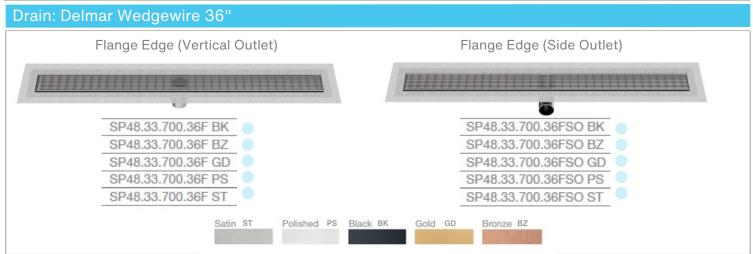






## PREFAB Shower Floor Kit 58"

#### Kit includes:


- Shower Pan
- Drain support
- Linear Drain

## QM PREFAB SHOWER FLOOR | Shower pan:

- 100% Post-Consumer Recycled PET with a recyclable Superdry membrane.
- Pre-Sealed Superdry Waterproofing
- Pre Sloped
- 140 psi compressive strength,.
- Wide Drain Support
- Easily trim or expand with dry-pack mortar.
- UV resistant and built to withstand indoor and outdoor

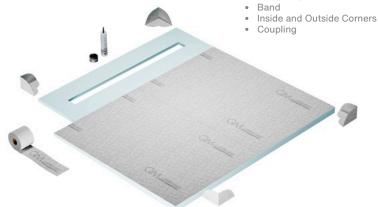

### **Shower Pan Specifications**

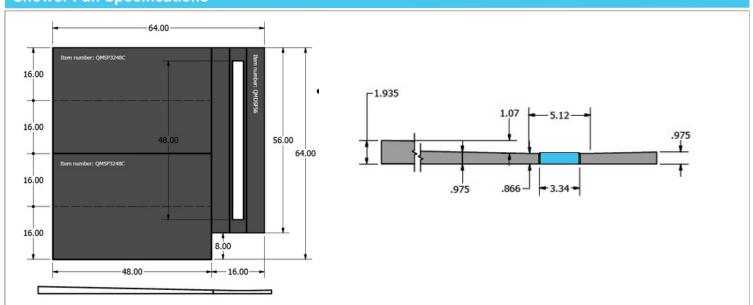

### Drain: Delmar Wedgewire 48"



Note: Installer must verify all rough-in dimensions prior to installation and consult local and national codes. Conformity and compliance to local and national codes are the responsibility of the installer. Dimensions are subject to manufacturers tolerance and change without notice. We can assume no responsibility for use of superseded or voided data. Contact us If you have any question at: info@qm-us.com



## PREFAB Shower Floor Kit 64"

#### Kit includes:


- Shower Pan
- Drain support
- Linear Drain


## QM PREFAB SHOWER FLOOR | Shower pan:

- 100% Post-Consumer Recycled PET with a recyclable Superdry membrane.
- Pre-Sealed Superdry Waterproofing
- Pre Sloped
- 140 psi compressive strength,.
- Wide Drain Support
- Easily trim or expand with dry-pack mortar.
- UV resistant and built to withstand indoor and outdoor use.



## **Shower Pan Specifications**

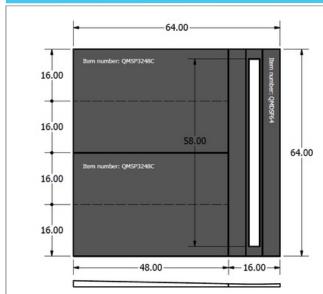

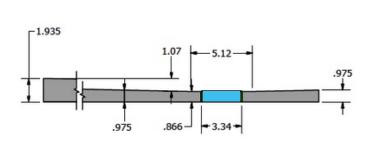

## Drain: Delmar Wedgewire 58"





# PREFAB Shower Floor Kit 80"

#### Kit includes:


- Shower Pan
- Drain support
- Linear Drain


## QM PREFAB SHOWER FLOOR | Shower pan:

- 100% Post-Consumer Recycled PET with a recyclable Superdry membrane.
- Pre-Sealed Superdry Waterproofing
- Pre Sloped
- 140 psi compressive strength,.
- Wide Drain Support
- Easily trim or expand with dry-pack mortar.
- UV resistant and built to withstand indoor and outdoor



## **Shower Pan Specifications**

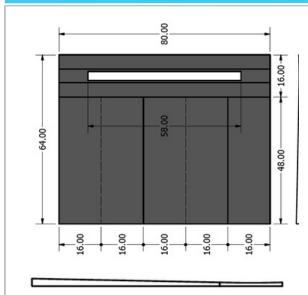

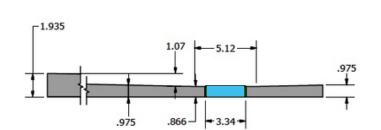

### Drain: Delmar Wedgewire 58"

Flange Edge (Vertical Outlet) Flange Edge (Side Outlet) SP80.33.700.58F BK SP80.33.700.58FSO BK SP80.33.700.58F BZ SP80.33.700.58FSO BZ SP80.33.700.58F GD SP80.33.700.58FSO GD SP80.33.700.58F PS SP80.33.700.58FSO PS SP80.33.700.58F ST SP80.33.700.58FSO ST Polished PS Bronze BZ

Note: Installer must verify all rough-in dimensions prior to installation and consult local and national codes. Conformity and compliance to local and national codes are the responsibility of the installer. Dimensions are subject to manufacturers tolerance and change without notice. We can assume no responsibility for use of superseded or voided data. Contact us If you have any question at: info@qm-us.com