

BOLD BABY COT ASSEMBLY INSTRUCTIONS

COMPARED TO RAISING A CHILD, ASSEMBLING THIS COT SHOULD BE EASY. GOOD LUCK WITH BOTH.

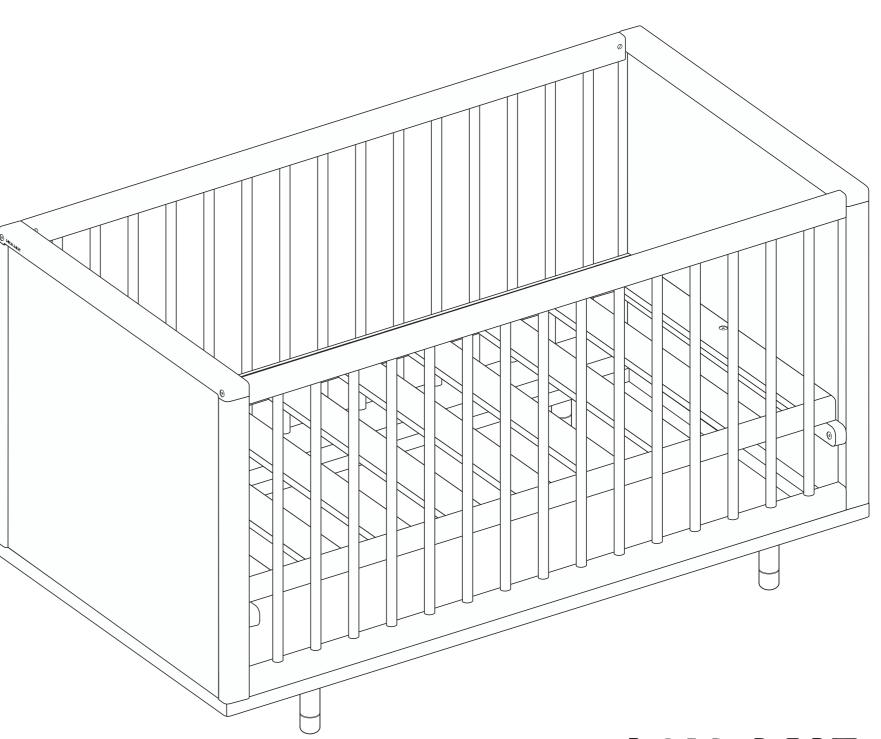

BOLD.BABY

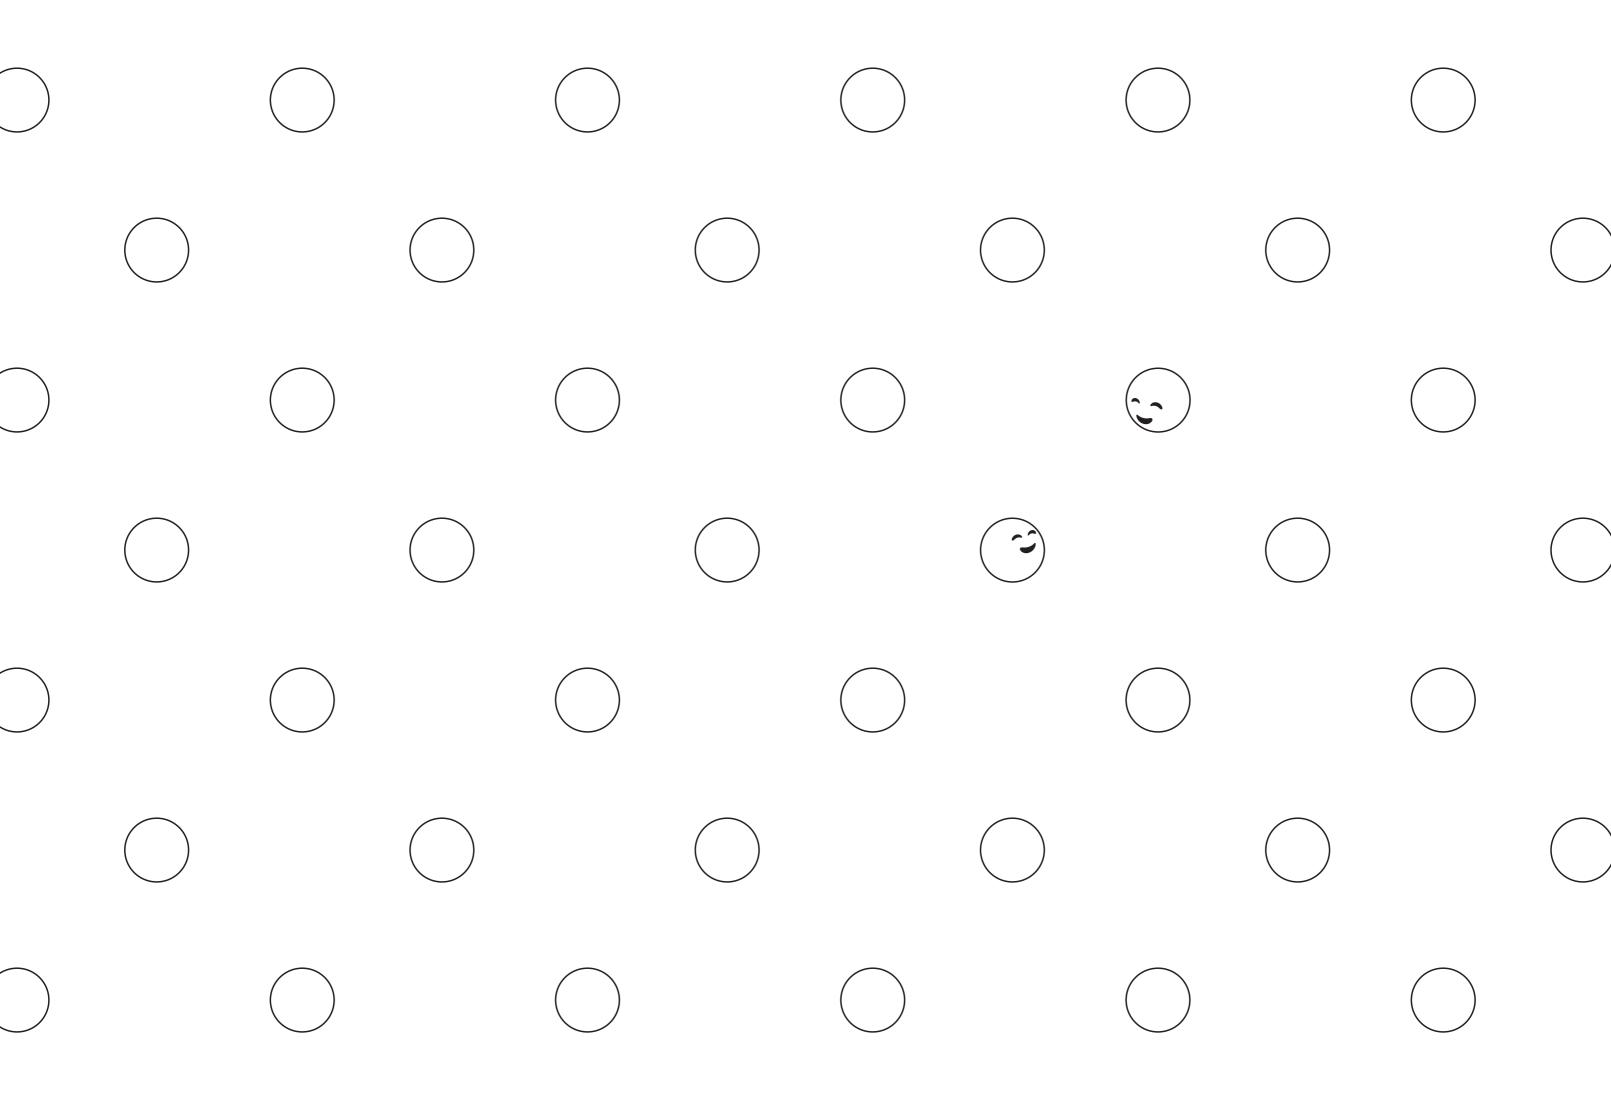

Thank you for choosing Bold Baby and welcome to our family. We believe that every nursery should reflect the UNIQUENESS of your little one. That's why we designed a ONE-OF-A-KIND cot that effortlessly transforms in style. However, our cots offer more than just aesthetics; they're built to last, using HIGH QUALITY materials. While looks are important, safety and comfort are our top priorities. Our cots provide a SECURE AND COSY sleep space for your baby from infancy to toddlerhood and beyond. We hope you enjoy REFRÉSHING THE LOOK of

this cot many times, and that it becomes a cherished space for your baby.




THE WOOD BITS

Here are all the wooden parts that make up one cot. Please check you have all these parts.

PLEASE CONTACT US IF ANY PIECE IS MISSING OR DAMAGED.

ONLY USE OFFICIAL BOLD BABY PARTS.

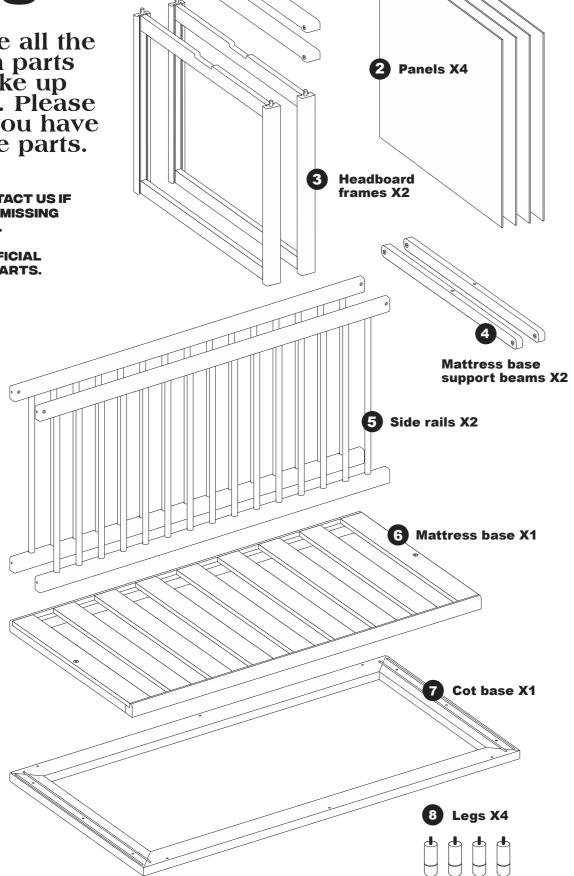

Headboard caps X2


THE OTHER BITS


Here are all the hardware parts of the cot that are included. Please check you have all these parts.


| A | X4 |
|---|------------|
| В | X2 |
| C | X16 |
| D | X4 |
| E | X4 |
| F | X1 |
| G | X1 |
| н | X4 |

ATTACH LEGS TO COT BASE


The legs have 3 different height options, each with it's own unique look. Choose the height and look that suits you.

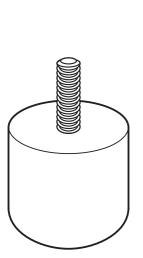


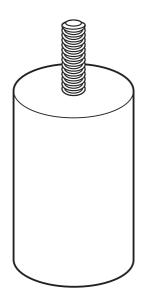

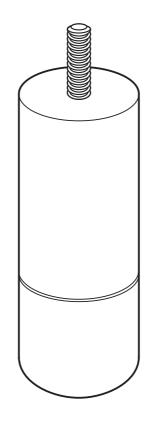

If placing the cot on hard floors such as concrete, tiles or timber, attach the protective pads (included) to the base of each leg.

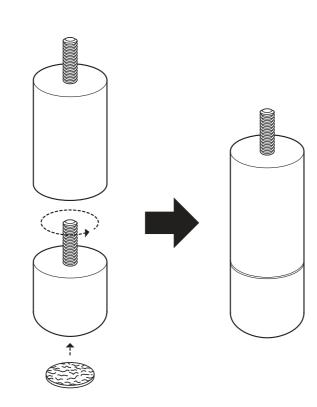


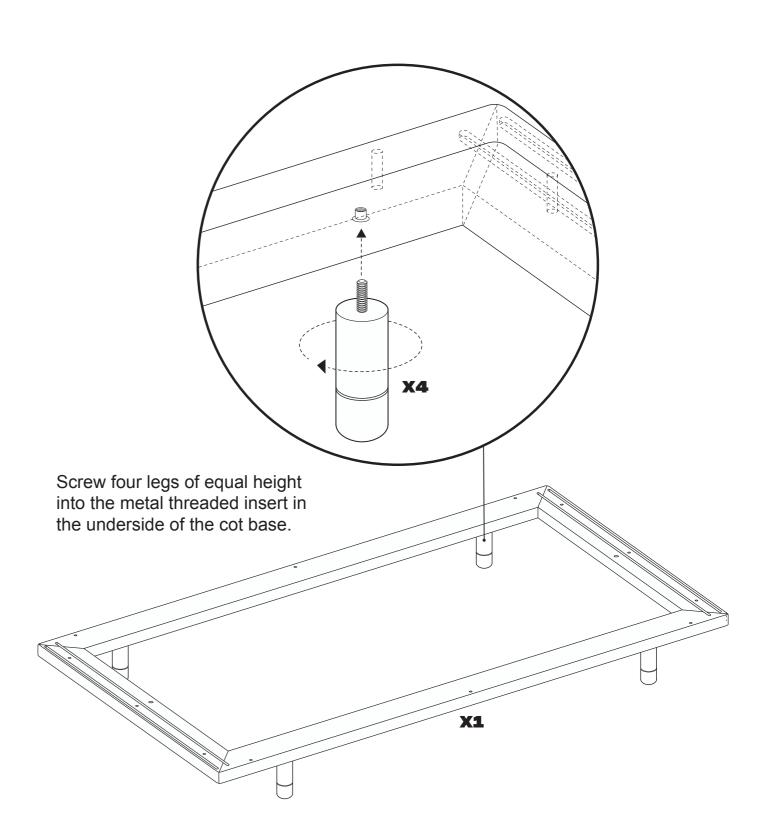

ATTACH HEADBOARD FRAMES TO COT BASE


HARDWARE: C X 6, G X 1

- Remove any panels that are already inside the headboard frames and set aside.
- 2. Attach the headboard frames to both ends of the cot base using **©** bolts.
- 3. Make sure the more rounded edge of the headboard frame is facing outward and the flatter side is facing inwards towards the sleeping space.
- 4. Tighten bolts enough to stay in place but do not fully tighten yet.

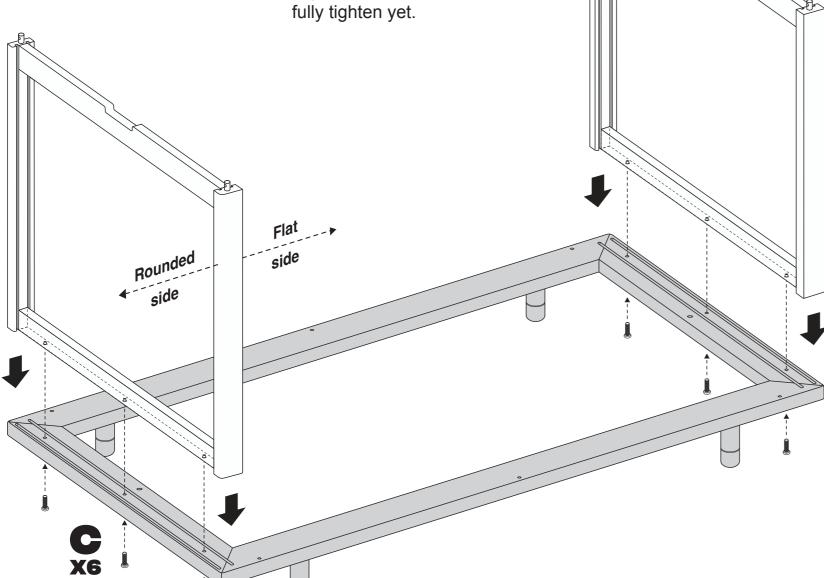


ALIGNMENT NOTE

Check that the channels inside the headboard frames align with the channels on the cot base. This will allow for the panels to slide into place without obstruction in the next step.

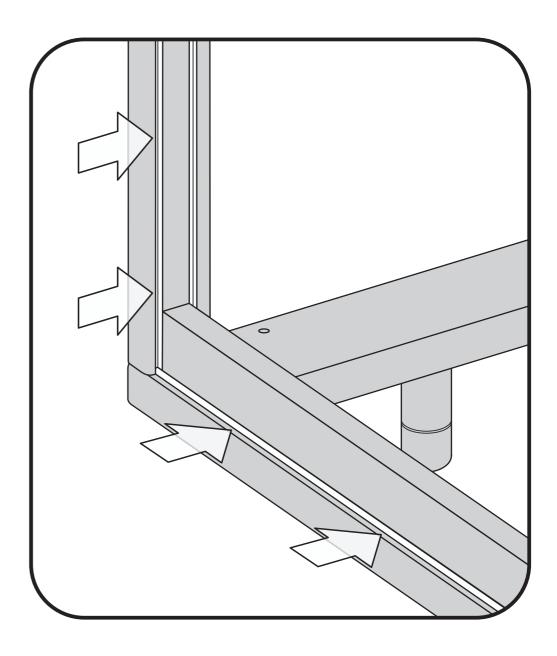


INSERT PANELS INTO HEADBOARD FRAMES

- 1. At both ends of the cot, place the panels into the small channels at the top of the headboard frames. You can choose which panel goes where!
- 2. Holding the panel on both side edges, slide the panel evenly downward towards the cot base. Make sure the panel sits snugly into the channel within the cot base.
- 3. Once the panels are in place, tighten the bolts on the underside of the cot base to fully secure their position. Do not over tighten.

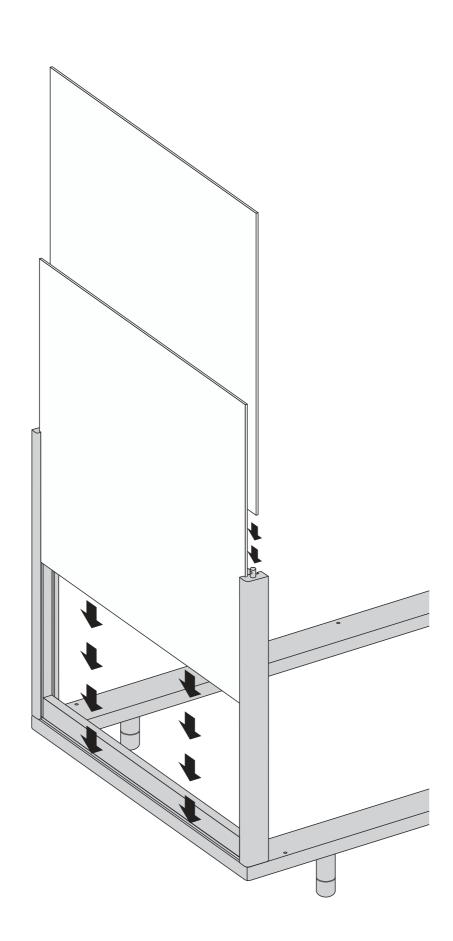

PLACE HEADBOARD CAPS ON TOP OF HEADBOARD FRAMES

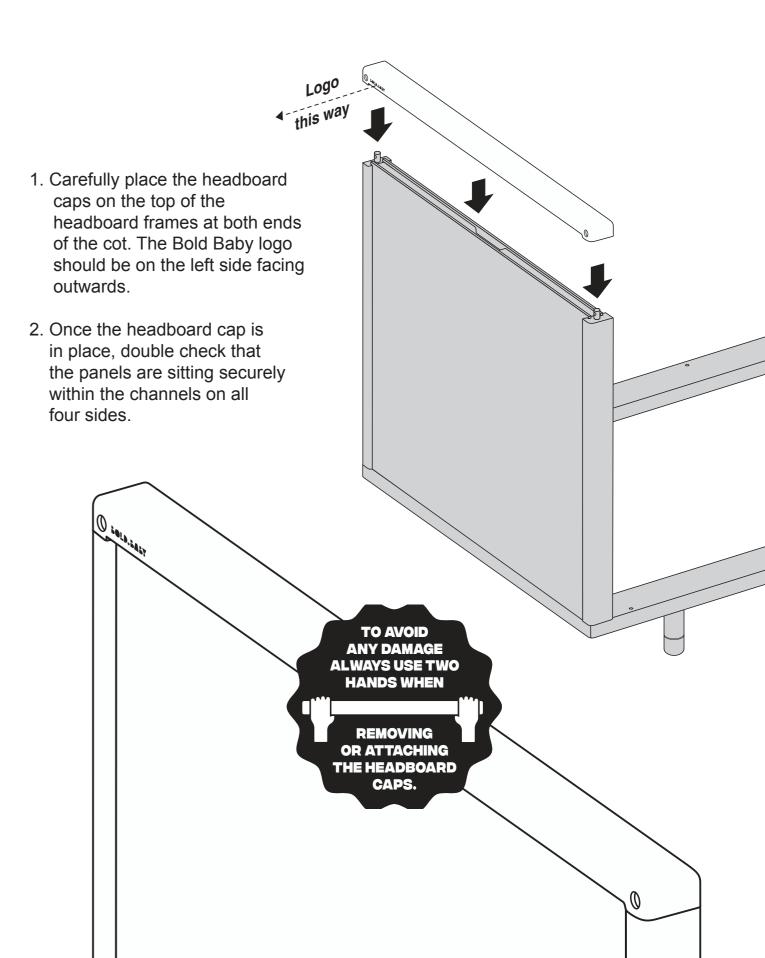


ATTACH MATTRESS BASE SUPPORT BEAMS (X2) TO HEADBOARD FRAMES


HARDWARE: C X 4, B X 2, F X 1

⚠ WARNING

To prevent falls, the mattress base of this cot should be adjusted to the lowest position before the child can sit up.

- 1. Attach the mattress base support beams to the headboard frames using **c** bolts, making sure the threaded insert nut in the centre of the beams is facing upwards as shown.
- 2. Place the mattress base on the support beams (Safety stickers facing upward). Then secure with **B** bolts using the rounded end of the long Allen key **F**. Do not over tighten bolts.

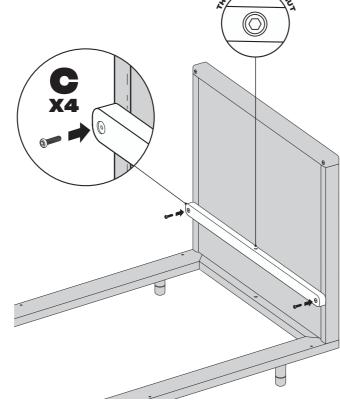

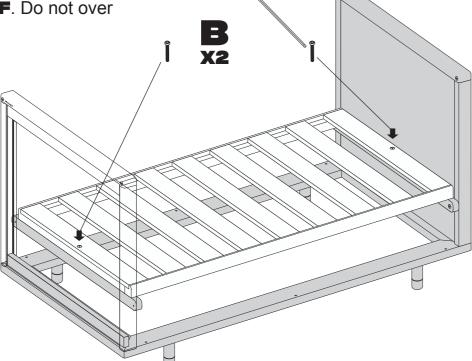


FOR LOWER MATTRESS POSITION

PLACE MATTRESS BASE (X1) **ON COT BASE**

HARDWARE: BX2, DX4, FX1

1. Using the rounded end of the long Allen key **F**, attach the mattress base to the cot base with **B** bolts. (Safety stickers facing upward). Do not over tighten bolts.

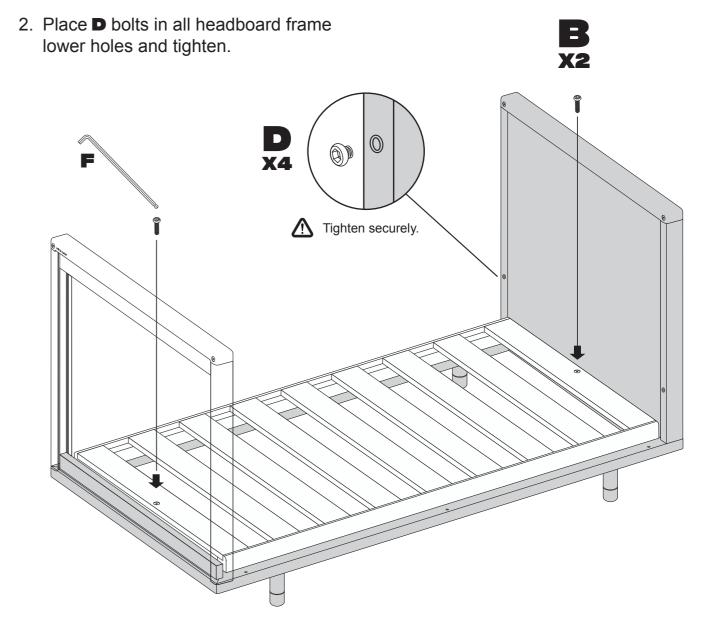



ATTACH SIDE RAILS

HARDWARE: A X 4, E X 4, C X 6, F X 1, G X 1

1. Place side rails into position with holes facing inwards.

2. Slide cross dowel **■** into holes and align to face headboard cap as shown.

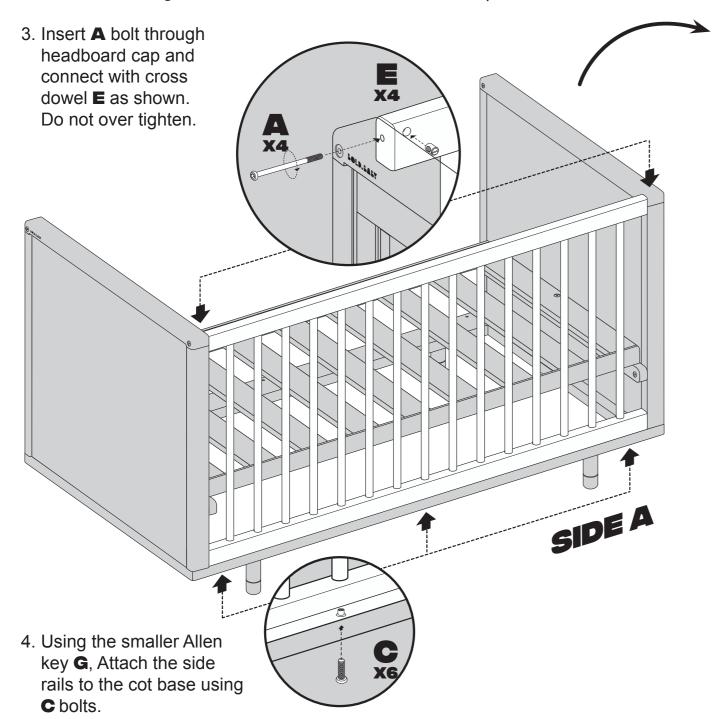


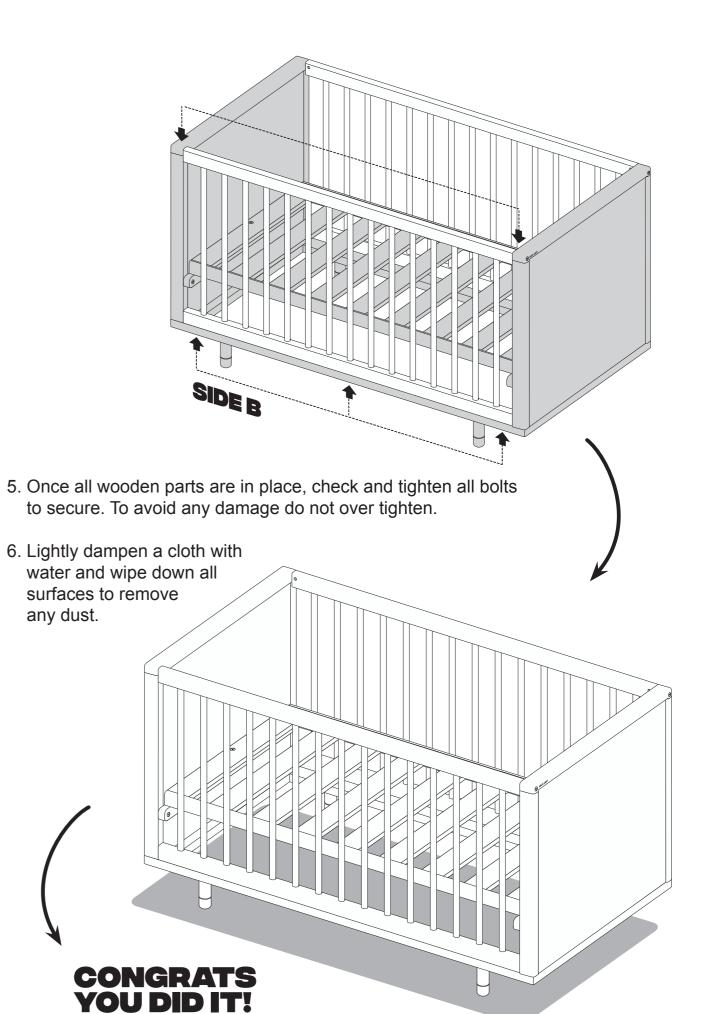

any dust.

RECOMMENDED MATTRESS SIZE

△ WARNING

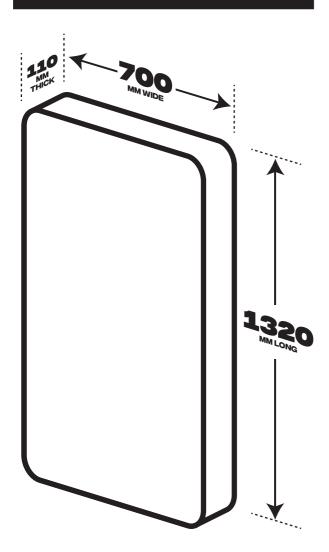

RECOMMENDED MATTRESS SIZE

This cot has been manufactured for use with a mattress which measures **700 mm** wide by **1320 mm** long and **110 mm** in thickness. The width and length are specified because it is important that the gaps between the mattress and the sides and ends of the cot will not exceed 40 mm when the mattress is pushed to one side or end, and 20 mm when the mattress is centered in the cot. The thickness of the mattress has been specified to ensure that the depth of the cot is greater than 500 mm with the mattress base in the lower position to minimize the risk of a child climbing or falling out of the cot.

CLEANING AND MAINTENANCE

Woodwork: Can be wiped with a damp cloth. Surplus water must be wiped off. The colour may change when exposed to long-term sunlight.

Daily use: Every morning, remove any duvets or blankets to allow both the cot and duvet to aerate, cool off, and dry.

Product information:

This cot and all materials including lacquer and paint finishes comply with the Australian / New Zealand standard AS/NZS 2172:2013.

DESIGN No: 202312580 (IP Australia)

REALLY IMPORTANT STUFF. DON'T SKIP IT.

Λ

WARNING

To prevent falls, the mattress base of this cot should be adjusted to the lowest position before the child can sit up.

- Always follow the assembly instructions in detail to ensure the safety features of the cot are not compromised.
- The mattress base is adjustable to two heights: upper position for newborns and lower position for toddlers. It's crucial to ensure that the distance from the top of the mattress base to the top of the headboard frame is never less than 400 mm in the top position and 600 mm in the bottom position.
- It is always safest to place the mattress base in the lower position.
- See assembly instruction 'Adjusting the mattress base to the lower position', for further instructions.
- To prevent injuries from falling, it is necessary
 to remove one of the side rails when the baby is
 capable of crawling out of the cot. It is important to
 never use the cot with both side rails removed.
 To convert the cot into a secure toddler bed, a
 toddler bed kit is available for purchase separately
 from the Bold Baby website.
- Keep medicines, strings, small toys, coins, and other small objects out of your baby's reach from any position in the cot.
- Do not place the cot near an open fire and/or any other source of heat, including but not limited to electric heaters, gas heaters, and/or power points due to associated risks such as that of fire or electrocution.
- Do not leave anything in the cot or place the cot close to anything the child can stand on or even touch, such as ribbons, strings on blinds/curtains, etc, which may pose a risk of suffocation or strangulation.

- Prioritise your baby's safety by ensuring the cot is free of pillows, duvets, throws, cushions, soft toys, or bulky bedding before placing your baby inside. Research indicates that leaving these items in the cot increases the risk of sudden infant death syndrome (SIDS). Additionally, Bold Baby advises against using cot bumpers, baby sleeping pods or nests, rolled up towels, or any soft items on the mattress. The safest sleeping environment for your baby is a clear, flat, separate sleep space of their own.
- Do not use the cot as a change table.
- Do not paint or resurface any part of the cot.
 Use only Bold Baby cot parts and panels.
- Do not use the cot if any parts are damaged or missing. Use only replacement parts supplied by Bold Baby.
- Only use one mattress in the cot and make sure to use the recommended mattress size, as it is designed to fit the cot's shape. Using a mattress that does not follow the suggested measurements may cause gaps between the mattress and the cot frame, in which the child may become trapped.
- After assembly, check and tighten all fittings and screws. A poorly assembled cot or loose parts could lead to the child trapping a body part or their clothing. Items such as strings within clothes, necklaces, strings on dummies, etc, could become stuck and pose a risk of strangulation.
- Make sure the cot is placed on a level and stable surface.
- Remember to keep the Allen keys after assembly.
 After 2 to 3 weeks of use, check and tighten all screws.

AUSTRALIAN DISTRIBUTOR:

BOLD BABY LTD, GROUND FLOOR, 470 ST KILDA ROAD, MELBOURNE VIC 3004, AUSTRALIA

Contact:

support@bold.baby


ADJUSTING THE MATTRESS BASE TO THE LOWER POSITION

HARDWARE: DX4, FX1, GX1

MARNING

To prevent falls, the mattress base of this cot should be adjusted to the lowest position before the child can sit up.

- 1. Undo **B** bolts and remove mattress base from cot.
- 2. Undo **c** bolts and remove mattress base support beams X2 from cot.

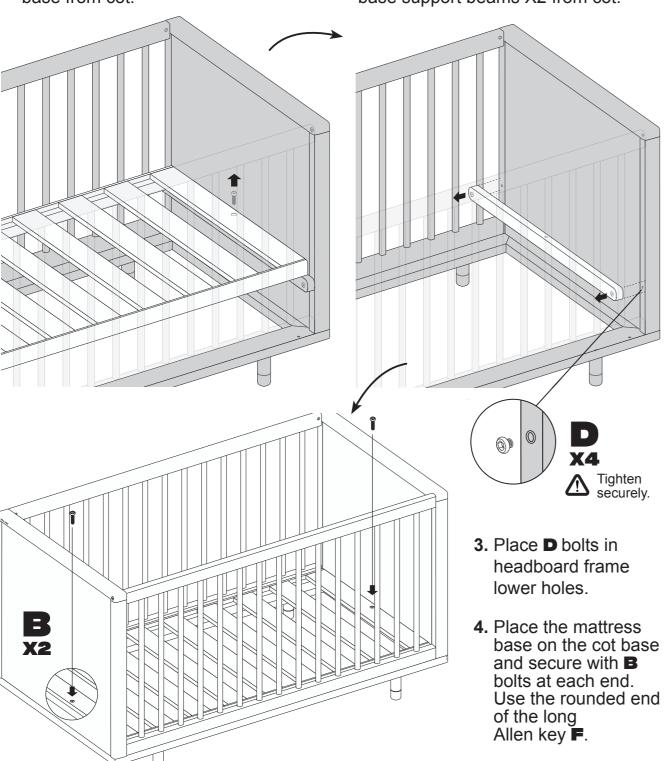


(OPTIONAL) CONVERTING COT TO TODDLER BED. KIT SOLD SEPARATELY.

This cot can be converted to a toddler bed by purchasing the separate toddler bed assembly kit. Visit bold.baby


Do not use this cot as a toddler bed without the separate toddler bed assembly kit. Doing so could result in serious injury or death.

The toddler bed assembly kit contains additional parts and instructions that are essential for the safe use of the cot as a toddler bed.

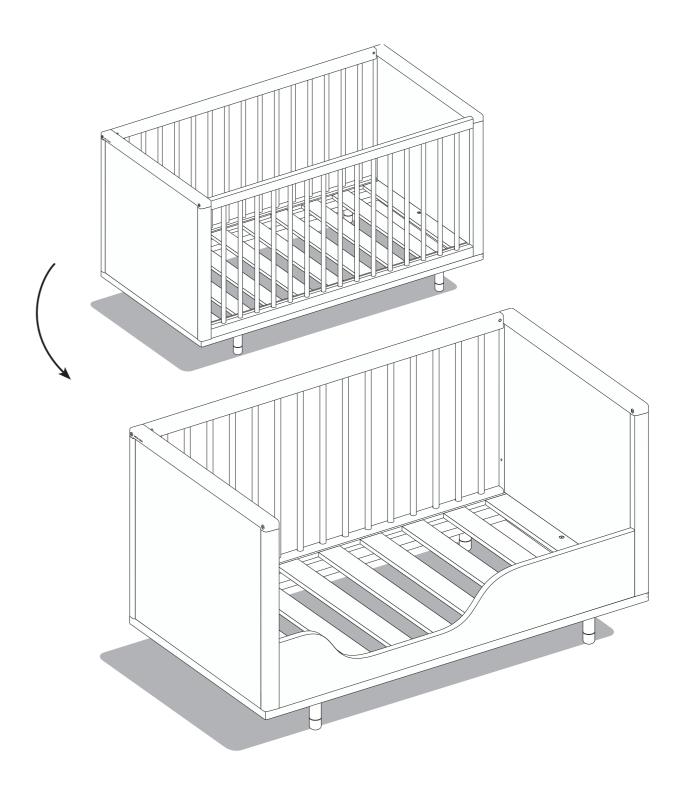

I FEEL TIRED NOW.

TIME FOR A NAP.

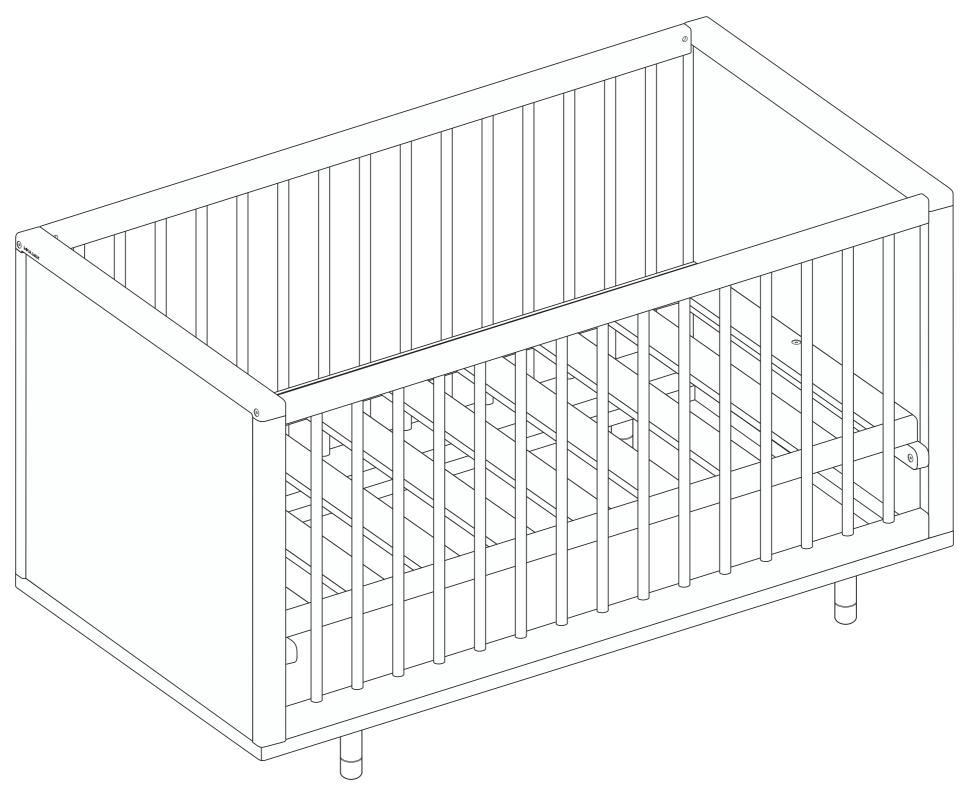

BOLD.BABY