



## 2005+ Tacoma Attic Storage Net Installation

[Installation video available on our YouTube channel](#)

### Tools Needed:

- Pick/Flathead Screwdriver
- Needle Nose Pliers
- Panel Removal Tool (with a curve or bend)

### Instructions:

**THE INSTRUCTIONS TO REMOVE THE HANDLES ARE OPTIONAL FOR DOUBLE CABS IF YOU WANT PERMANENT INSTALLATION. THE VELCRO CARABINER INCLUDED ALLOWS FOR QUICK INSTALL/REMOVAL. WRAP VELCRO AROUND HANDLE AND CLIP FRONT NET LOOP TO CARABINERS.**



1. Remove plastic cap covering rear hinge of rear passenger handles using a pick or screwdriver to gain access to the metal clips attaching them to the ceiling. Pull out and towards you on the side where the notch is located. Be careful as you use your tool to not damage the plastic.

\* 2nd Gen Tacomas will look different but the step is still the same)

\* Access Cab models have a single ceiling clip behind the plastic piece. The plastic will take some effort to remove. Just take your time and be gentle not to damage the plastic. See image below.

2. With your needle nose pliers, pinch the metal clip from the top and bottom to remove it from the ceiling and handle.

a. Access Cab models will need to remove the metal ring from behind the plastic ceiling clip. Press the two plastic retention pieces in on either side to remove the metal ring. See image below.



3. With your netting, find the open, long end of the netting and wrap the black elastic cord around the hinge of the handle. The metal drawstring can be opened to allow for the net to easily slip over the plastic.




4. Line the handle back up with the hole in the ceiling and reinsert the metal clip. You may need to bend the handle attachment clip back out and widen it to ensure a snug fit. If you have trouble lining up the clip to hook in, try moving the handle side to side/up and down to find the engagement point.
  - a. Access Cab models will need to hold front corner loops of net behind the plastic ceiling hold as you line up and press into the headliner. It might take some force, but you will hear the satisfying 'click' when it engages properly. See image below.
5. Repeat Steps 1-4 to attach the other side of the attic.



6. Take your panel removal tool and slide it into the sides of the back of the headliner, creating space for you to slide the black clips onto the headliner. Clips should be located on the far ends of each side of the headliner, and an inch from either side of the rear window. For the middle two clips you may need to insert the panel tool farther out on the sides and slide it over to the window. Slide the larger end of the clip onto the headliner.

7. Pull the netting corner loop over and onto the outer clips. Pull the metal cord lock tight. Take the edge of the netting and pull it over and onto the middle clips.

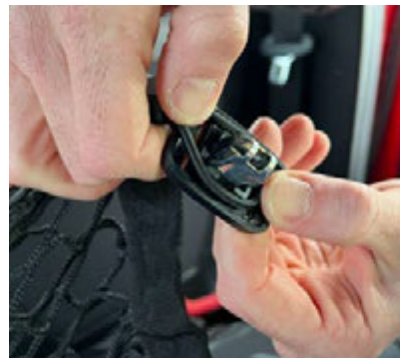

We're a small business that takes every customer's concerns or constructive criticism to heart. Please share any experience, good or bad, with our company or products so that we can grow and be better!