




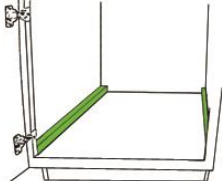

CabinetRTA PULL-OUT DRAWER ASSEMBLY AND INSTALLATION ver.2

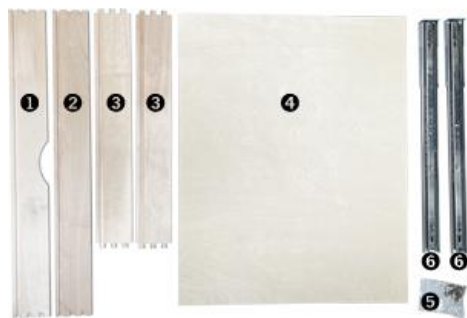

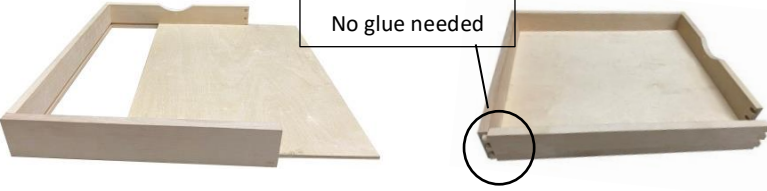
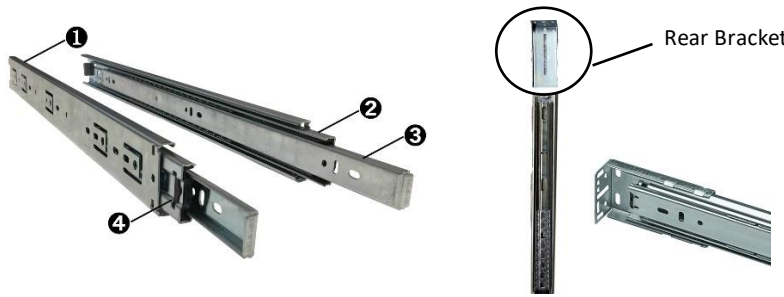
* Inspect all parts, measure your cabinet's full opening width, read all instructions prior to assembling & installation



Video Instruction: <https://youtu.be/NtKCpsVbo08>

Access the URL or scan the QR code to watch the assembly video instruction →

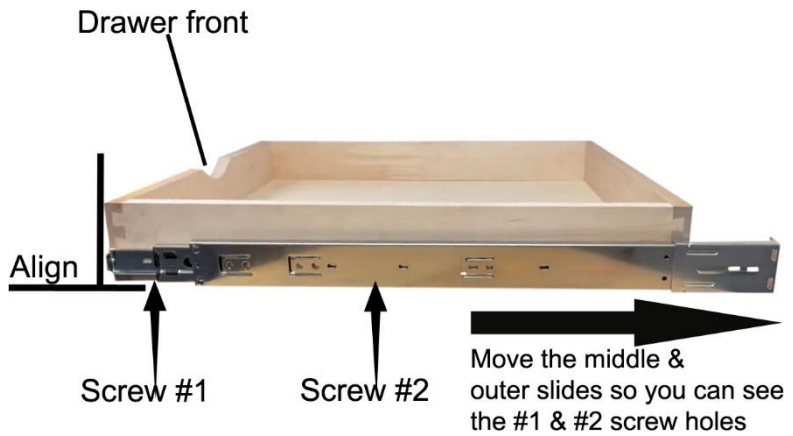
What you will need			Parts List
 (+)	 (optional)	 (optional)	<ul style="list-style-type: none"> • Drawer front (1) • Drawer bottom (1) • Drawer side (2) • Drawer back (1) • Slide & bracket (2) • Screws (20)
	(optional) You will need wooden SPACERS if your cabinet's inner width is wider than drawer width (*Spacers are not included)	 (optional)	

<ol style="list-style-type: none"> 1 Drawer front 2 Drawer back 3 Drawer sides 4 Drawer bottom 5 Screws 6 Slides & brackets 	
<p>1</p> <p>a. Make sure the grooves stay at the bottom</p> <p>b. Attach one of the drawer sides, a drawer back, and a drawer front together</p> <p><i>Note: Optionally you may need a hammer to press firmly, but please use it gently</i></p>	
<p>2</p> <p>a. Insert the drawer bottom to the grooves</p> <p>b. Attach another drawer side</p> <p><i>Note: No glue needed</i></p>	
<p>3</p> <p>Insert the rear bracket on the slide as shown in the picture</p> <ol style="list-style-type: none"> 1 Cabinet member (Outer Slide) 2 Slide member (Middle Slide) 3 Drawer member (Inner Smallest Slide) 4 Release lever 	

4

Align the slide's bottom to the bottom of the drawer and the inner slide (Drawer Member) to the drawer front. Secure with the screws provided.

- a. Drill a pilot hole for screw #1 near the drawer front. Secure the screw #1
- b. Drill a pilot hole for screw #2 in the middle. Secure the screw #2
- c. **Disengage the lever (see below)**



Note: Make sure the both sides of the slides are secured horizontally parallel on the drawer

How to disengage the lever

Press the lever down to disengage/separate the middle & outer slides (Slide & Cabinet Members) from the inner slide (Drawer member)



5

After pulling off the middle & outer slides (and the bracket),

- a. Drill a pilot hole for the screw #3 near the drawer back. Secure the screw #3.
- b. Repeat the **step 4 & 5** for another side



Note: Make sure the both sides of the slides are secured horizontally parallel on the drawer

6

Install Cabinet Members (the outer slides)

- a. Mark the desired location in your pantry/cabinet/wall etc. by making sure two sides are horizontally parallel and stay at the same height
- b. Secure the rear brackets at the desired positions using the 2 screws on each side
- c. Secure the Cabinet slides using one screw on each side
- d. Insert the drawer to complete the installation



Note: Use wooden spacers (not included) on the side wall in your cabinet if your cabinet's inner width is wider than drawer width