


# QUICK START GUIDE

Make sure you follow these instructions for a quick start with the TC500A72V for SurRon LightBee & Segway X260.

**Connect wires as shown below! Use only screws and tools included in the box. The Product must be used in combination with the stock fuse at all times! In case of incorrect installation, you will lose the Warranty and cause serious damage to the Product!**

For proper installation watch the [Installation Video](#).

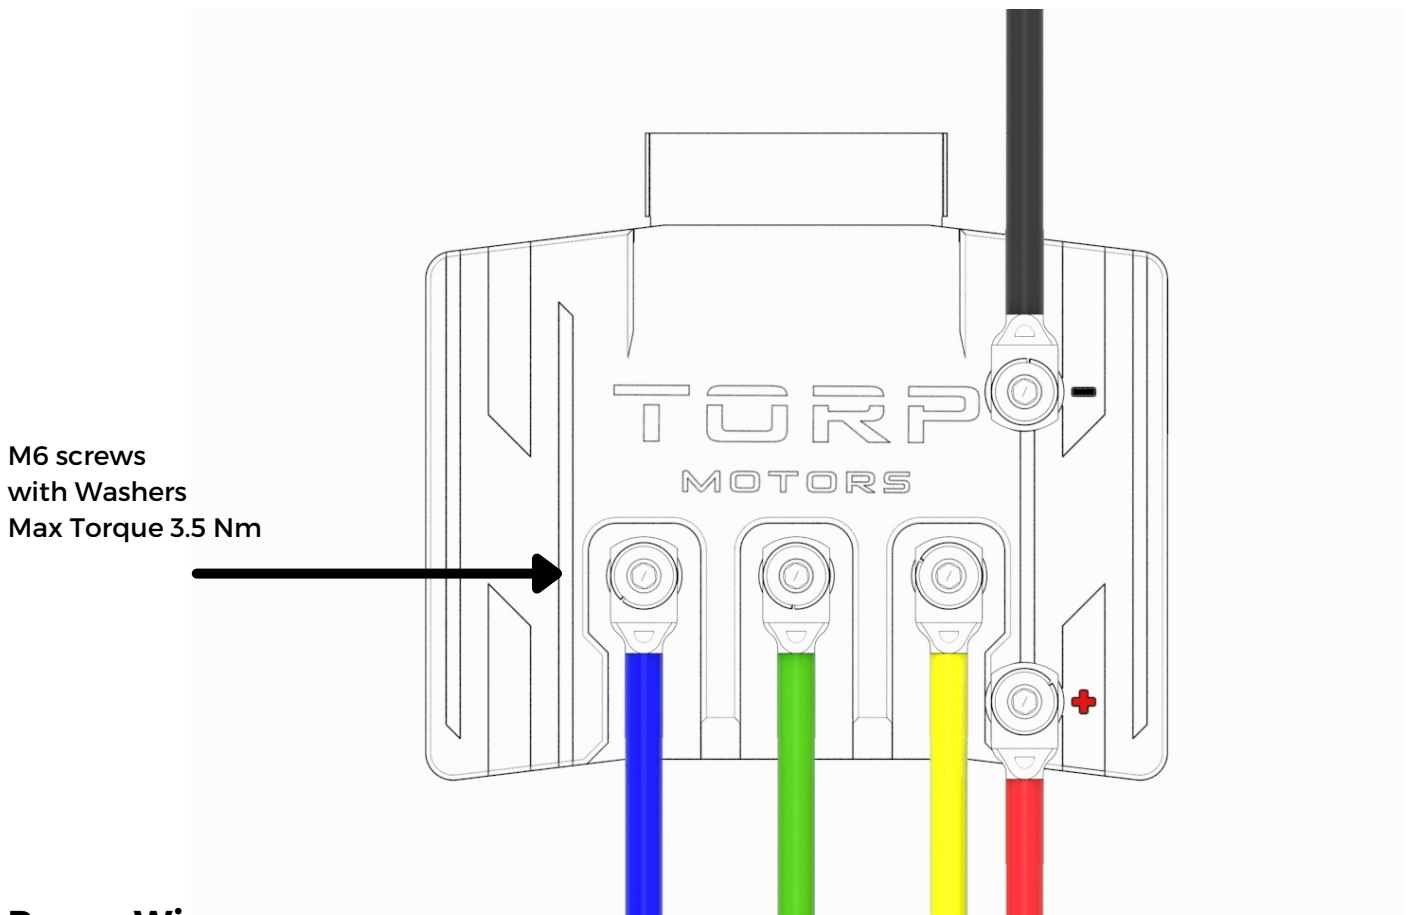

## Power Wires

Make sure to connect:

The red battery wire to the positive (+) electrode ●

The black battery wire to the negative (-) electrode ●

## Phase Wires

Make sure to connect:

The Blue motor wire to the the letter B ●

The Green motor wire to the the letter G ●

The Yellow motor wire to the letter Y ●