


# NON WILDERNESS OUTBACK TEMPLATE

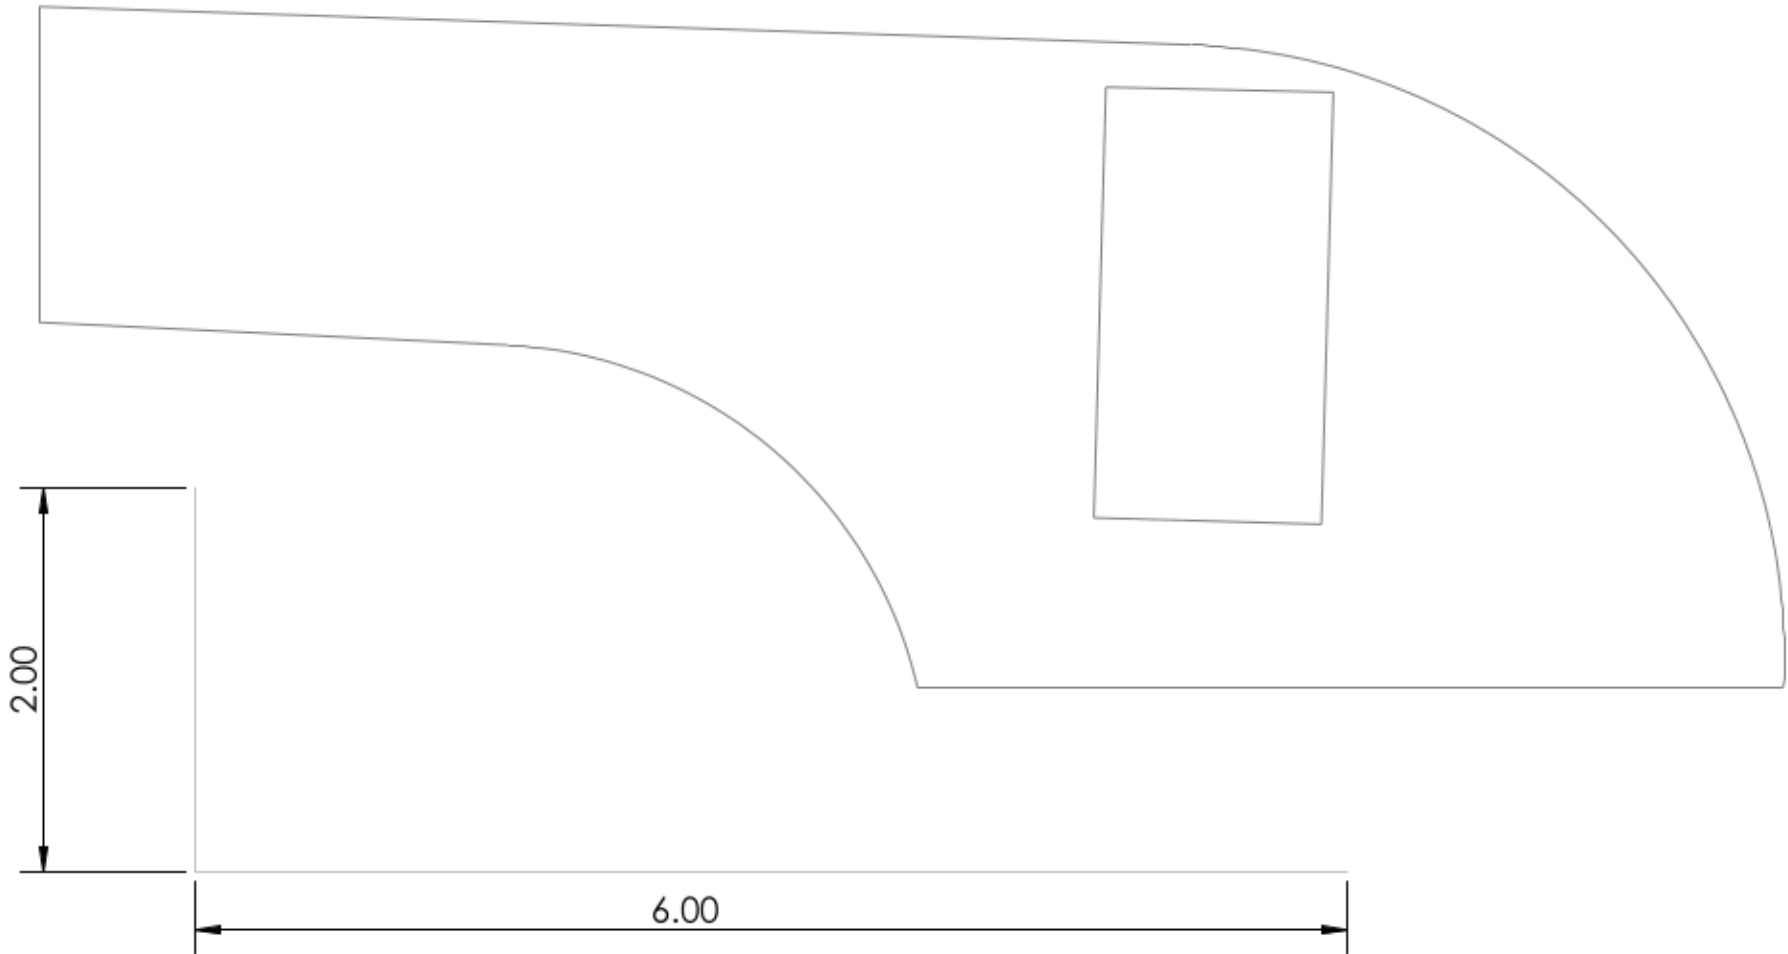

**VERIFY SCALE AFTER PRINTING**  
**THIS TEMPLATE SHOULD BE USED AS A REFERENCE**  
**ALL INSTALLS ARE SLIGHTLY DIFFERENT**  
**START SMALL AND WORK OUT TO DESIRED FITMENT**