

# Berlin Wide Installation


Only to be connected to an electrical supply by a registered electrician



1. Remove the cord grip from the fitting and thread the cord through the hole in the shade from underneath



2. Slide the cord grip down the cord.

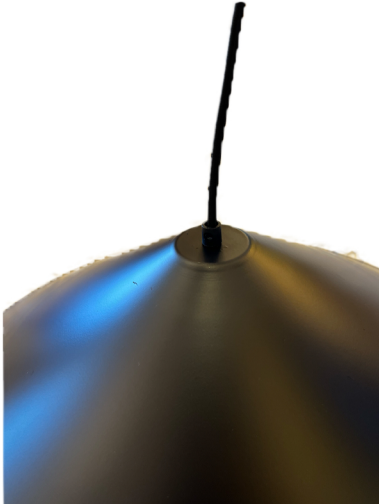

3. Tighten the cord grip and also tighten the cord grip grub screw.



4. Slide the conical top down the cord so it covers the cord grip.



5. Thread the cord through supplied ceiling rose and connect to electrical supply. This is only to be carried out by a registered electrician.