


DOTT Light - Installation Instructions

Only to be carried out by a registered electrician.



1. Unpack baseplate. Strip outer sheath of cable close to base.

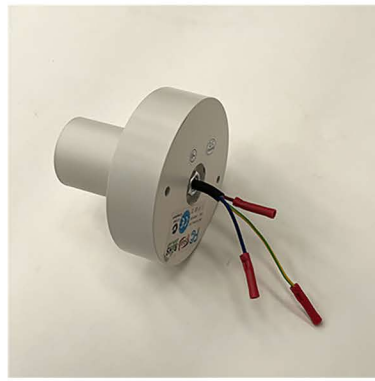

2. install crimp connectors (not supplied) to the cables. If there is room, stagger the connectors.



3. Put a length of heatshrink on the fixed installation cable. Connect the crimp connectors to the fixed installation cable.



4. Slide the heatshrink into position and activate.



5. Carefully push the cable back into the hole. This is easier if the hole is larger than 16mm or there is a wall cavity.



6. Fix the baseplate into a solid substrate with supplied screws.



7. Insert the lampbulb and screw on the glass globe.