



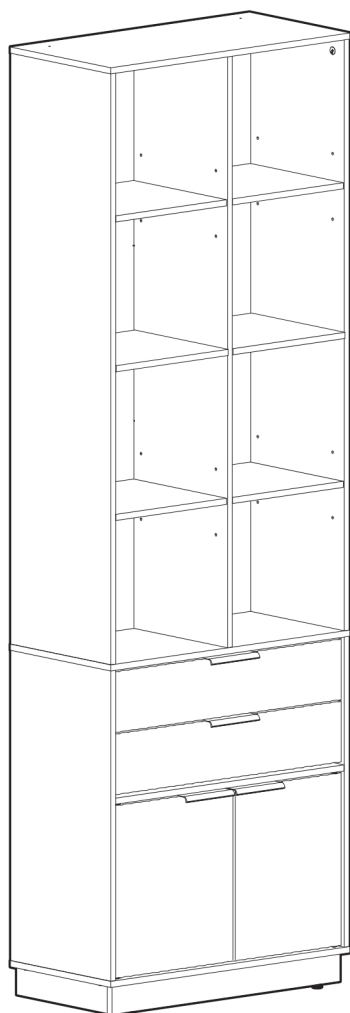







AMBFC01

✉ help_service_center@outlook.com



Installation
Guide Video

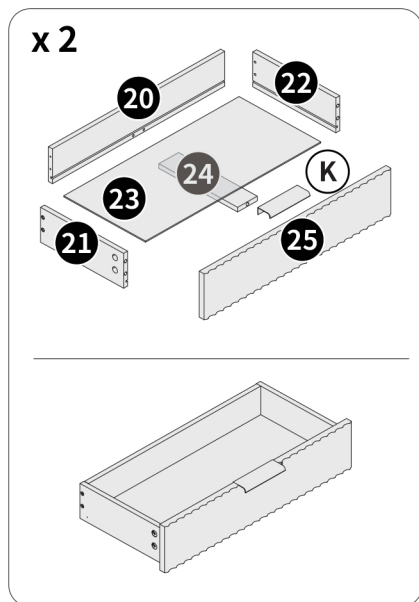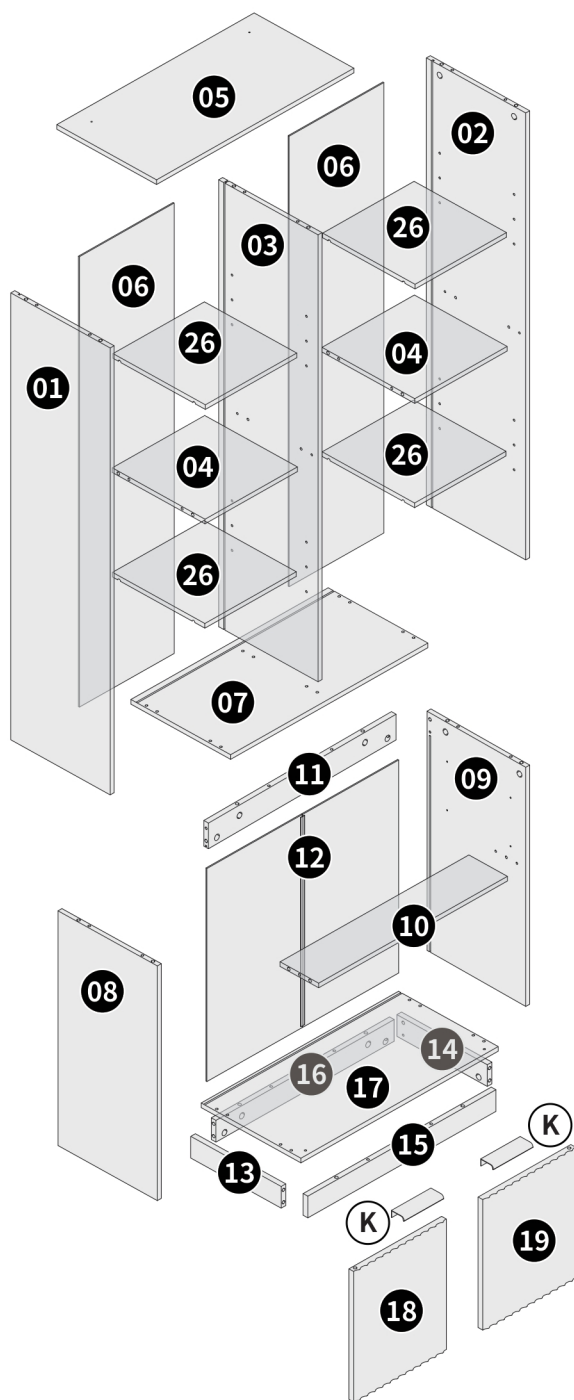


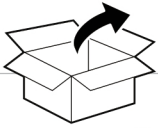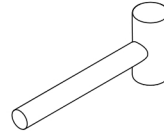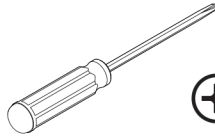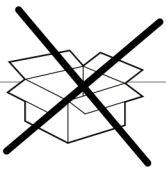


Ø6 x 32mm
(A) x 46



Ø15 x 9mm
(B) x 46



Ø6 x 30mm
(C) x 42



Ø5 x 40mm
(D) x 10



Ø3.5 x 12mm
(E) x 28



Ø3 x 15mm
(F) x 4



Ø3 x 17mm
(G) x 26




Ø4 x 38mm
(H) x 12



Ø13 x 9mm
(I) x 2



(J) x 26

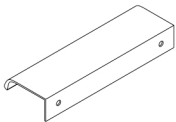

(K) x 4




(L) x 2




(M) x 4




(N) x 16

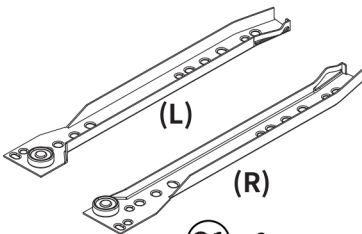

(O1) x 2

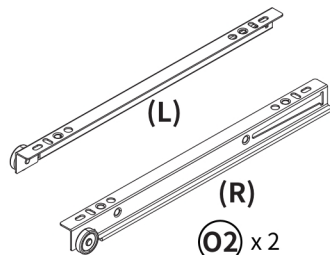


(O2) x 2

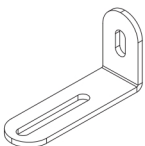


x 2



ST4 x 12mm
x 2



ST4 x 25mm
x 2




Ø8 x 30mm
x 2



⚠ CAUTION!






This wall anchor is for concrete ONLY. DO NOT use them in drywall or wood studs.






Installation Guide




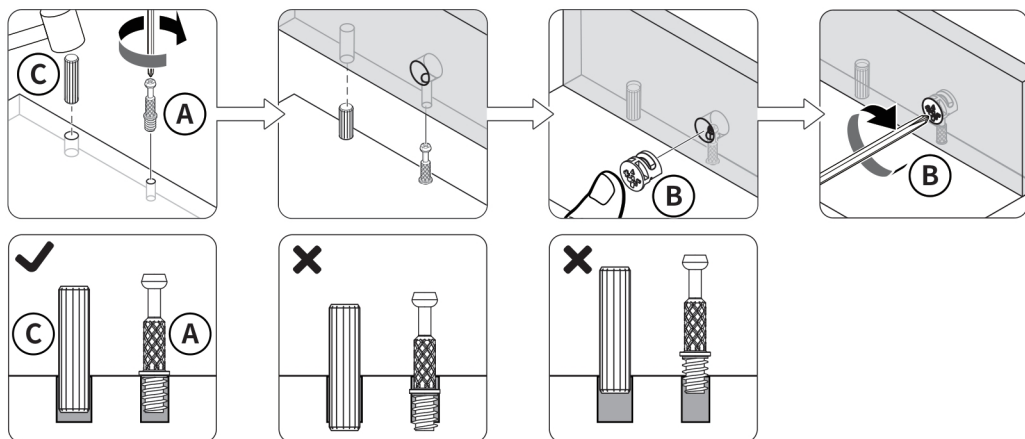






1

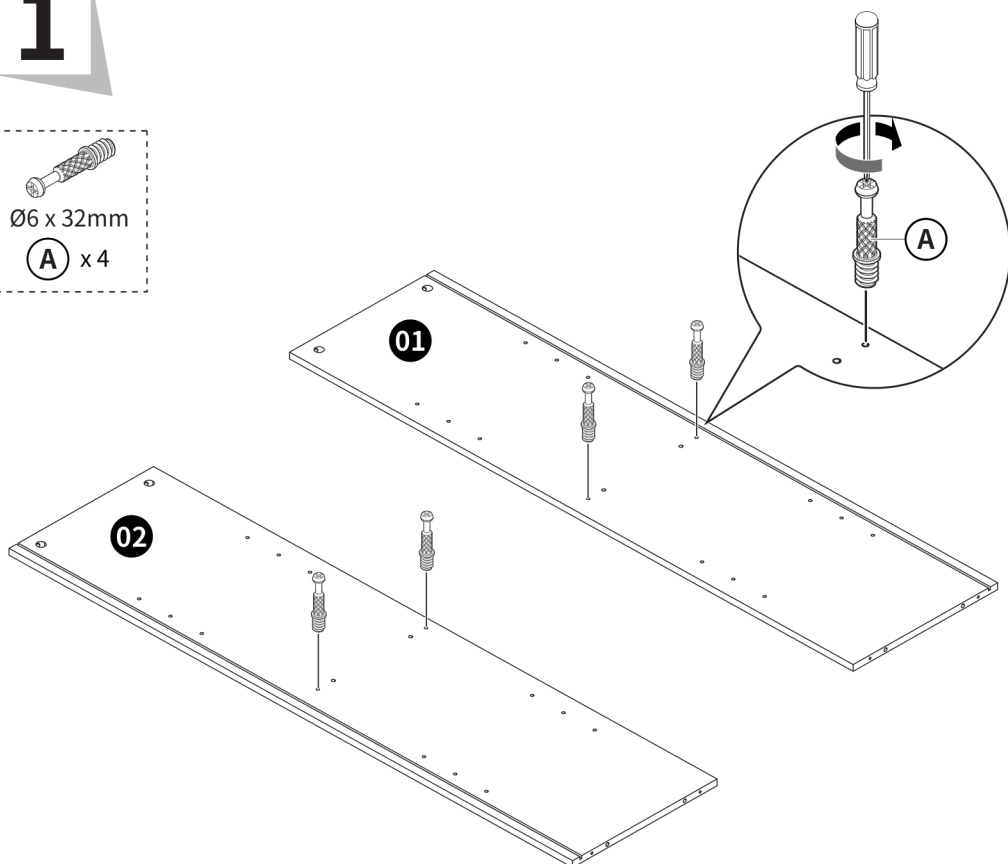
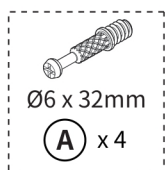


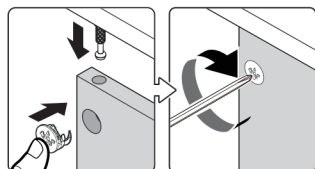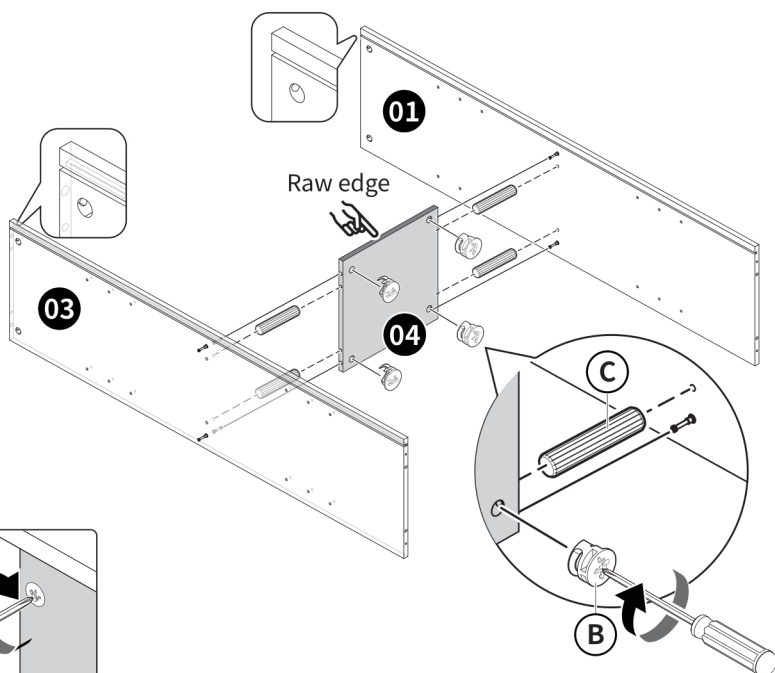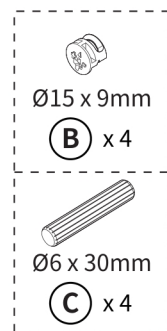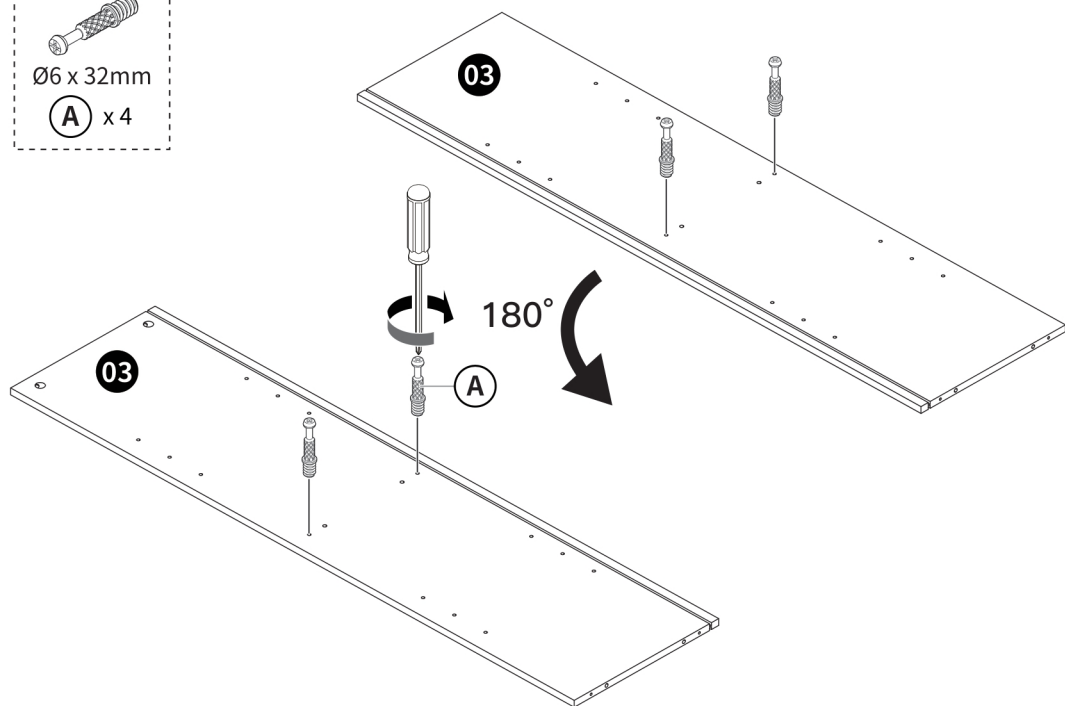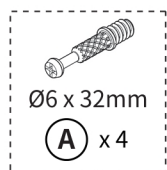


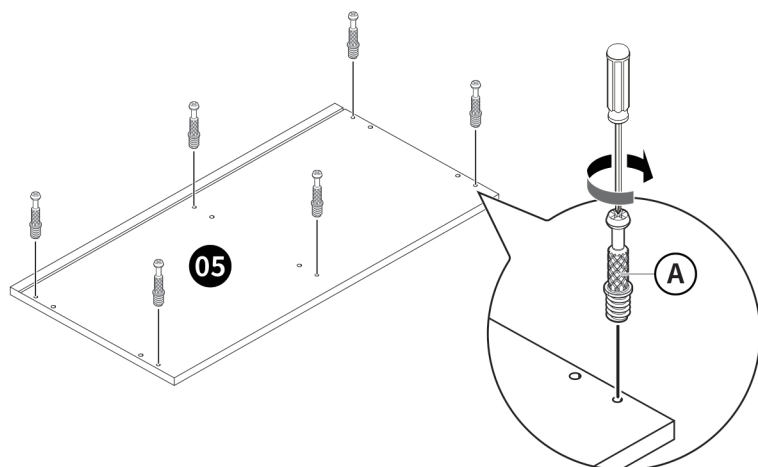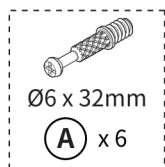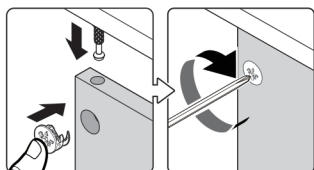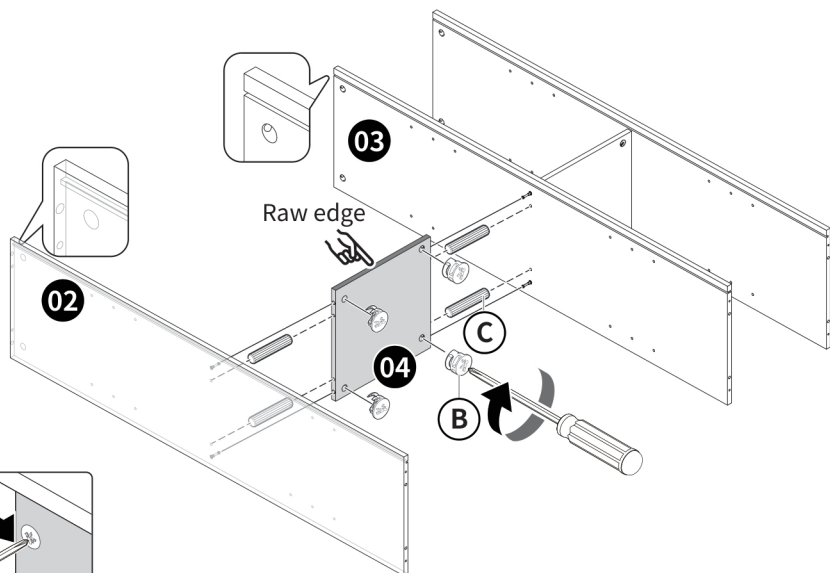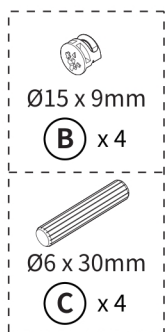

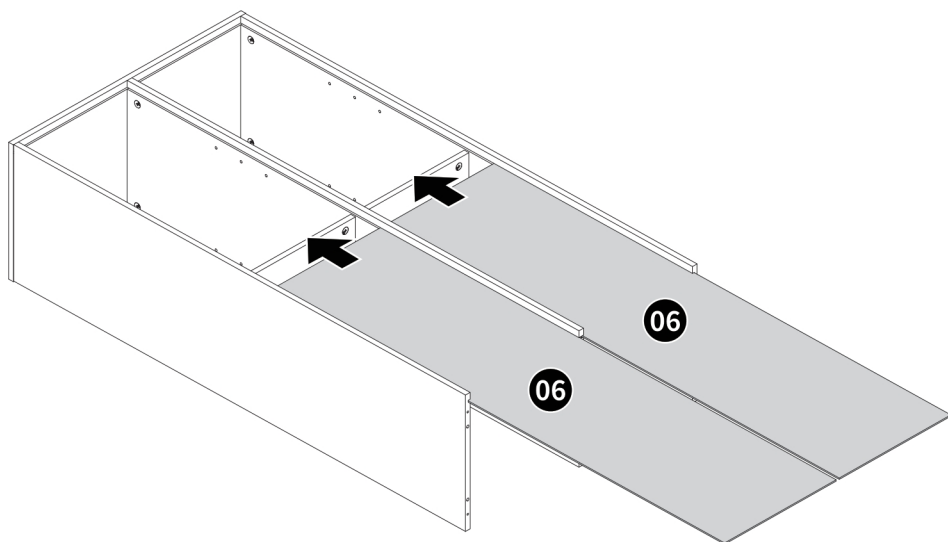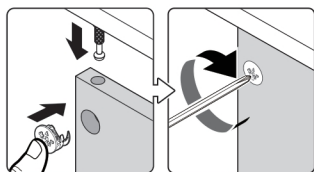
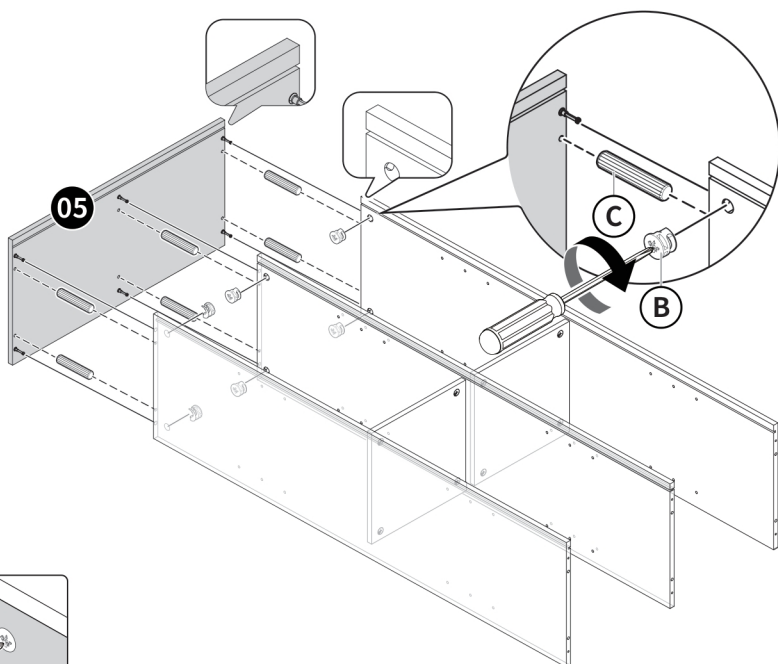
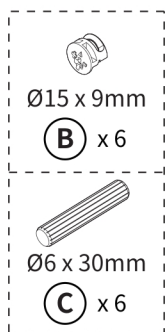


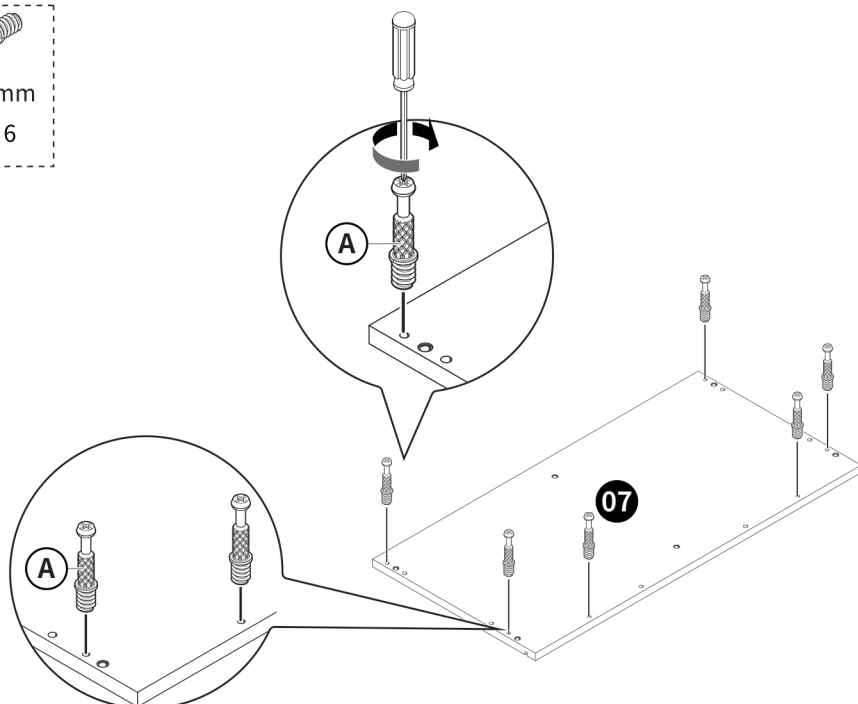
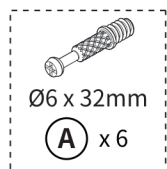
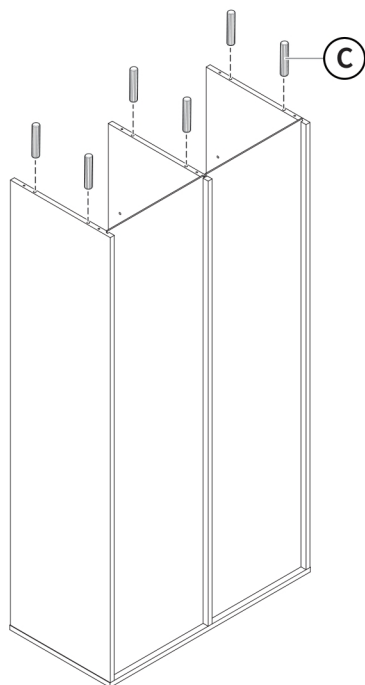
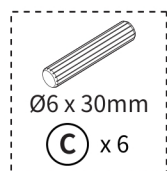






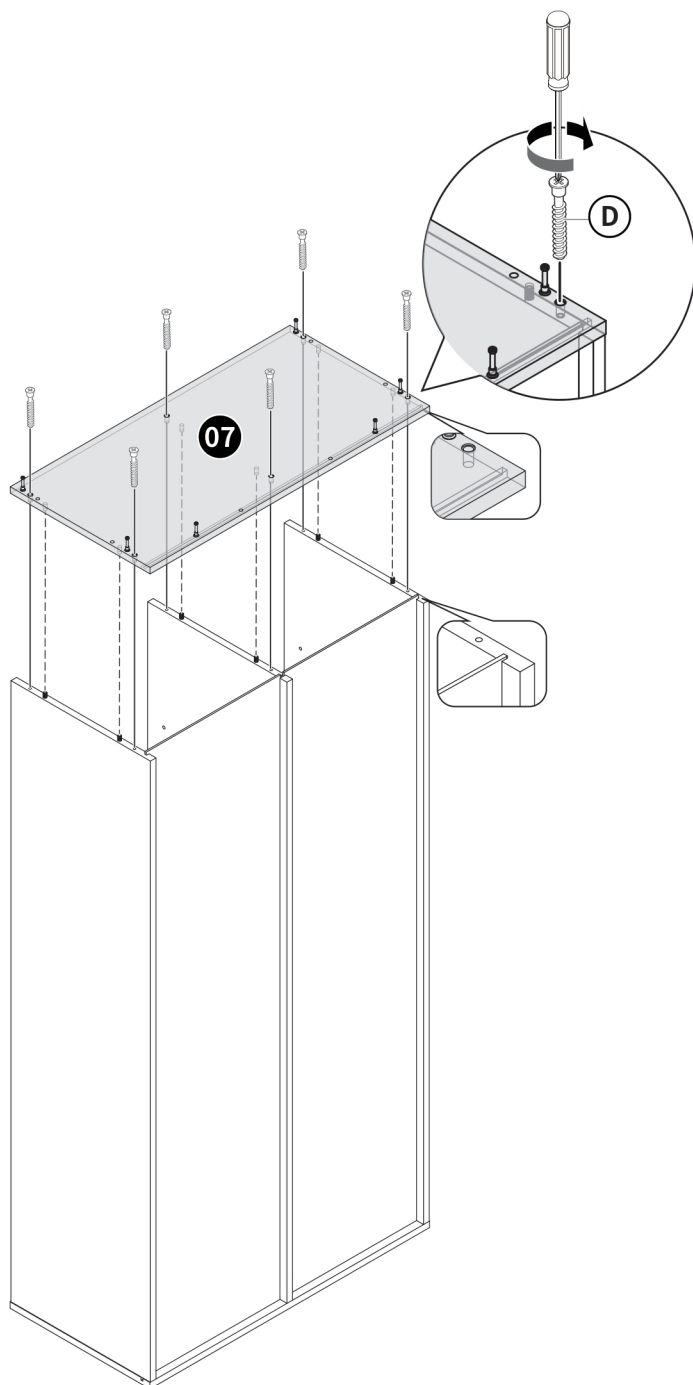
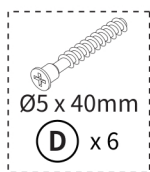




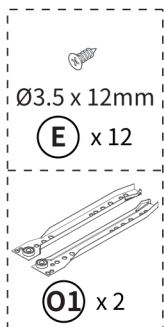







Note: Fully tighten screws to avoid loose drawer and ensure smooth movement.


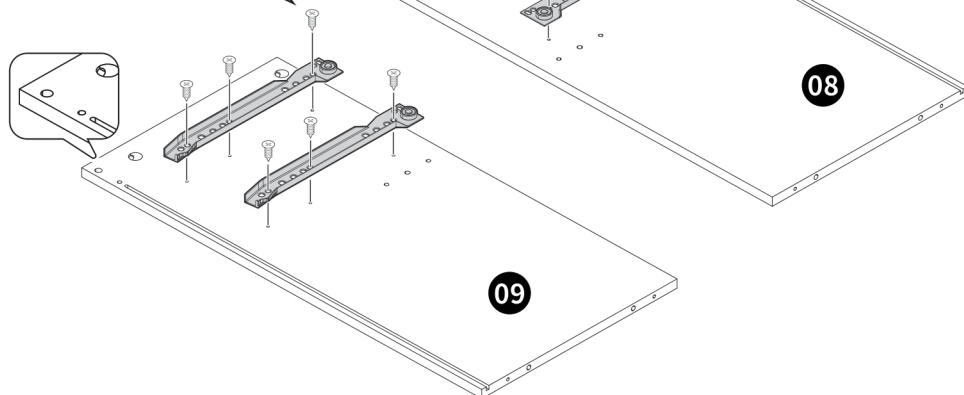
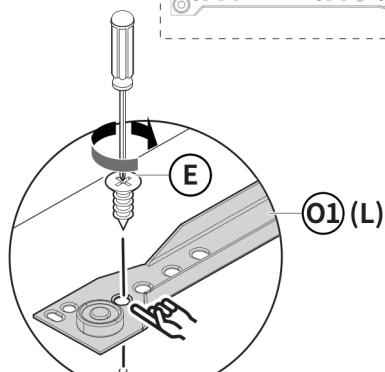
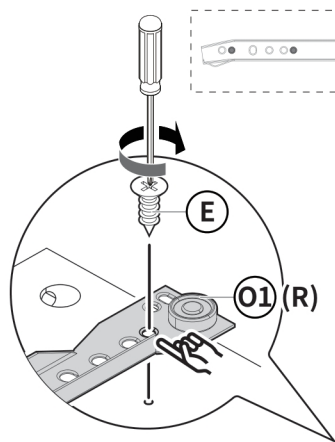


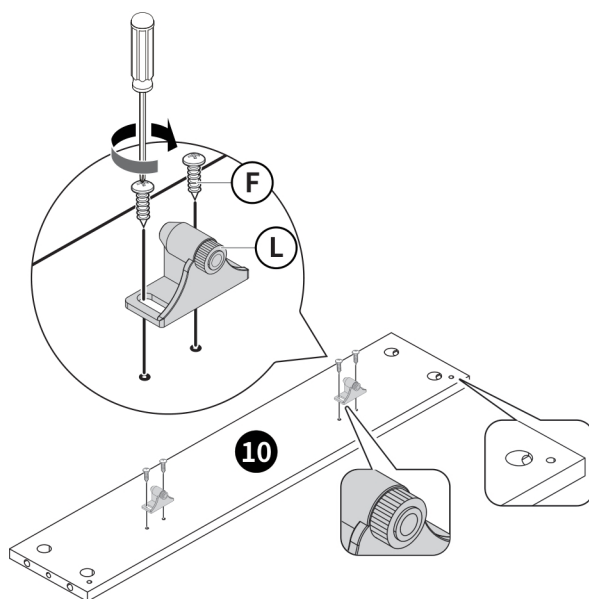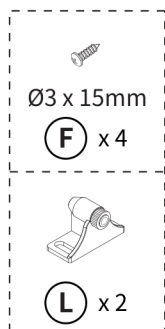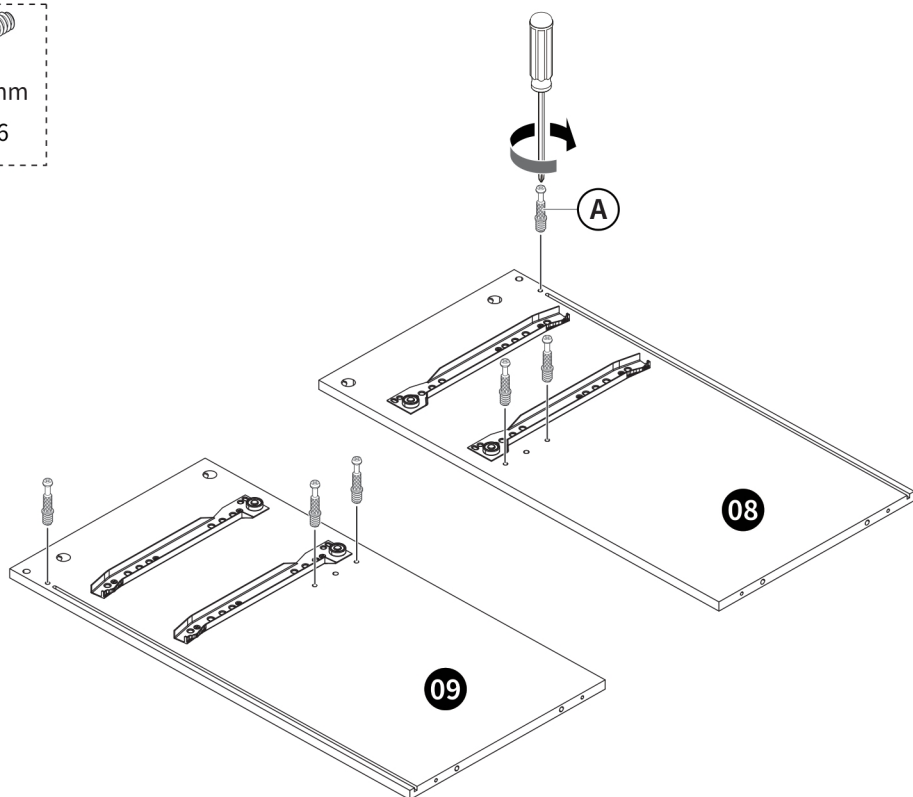
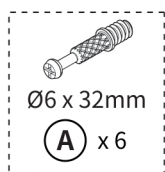


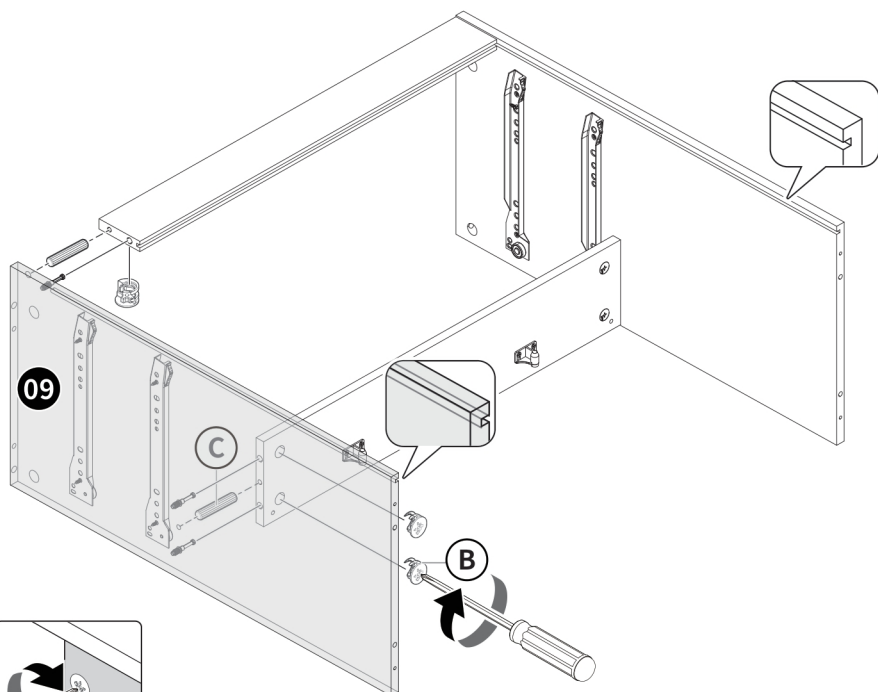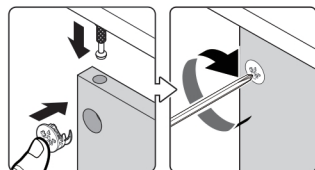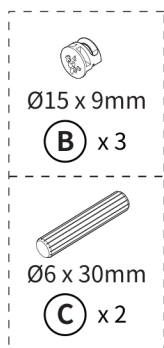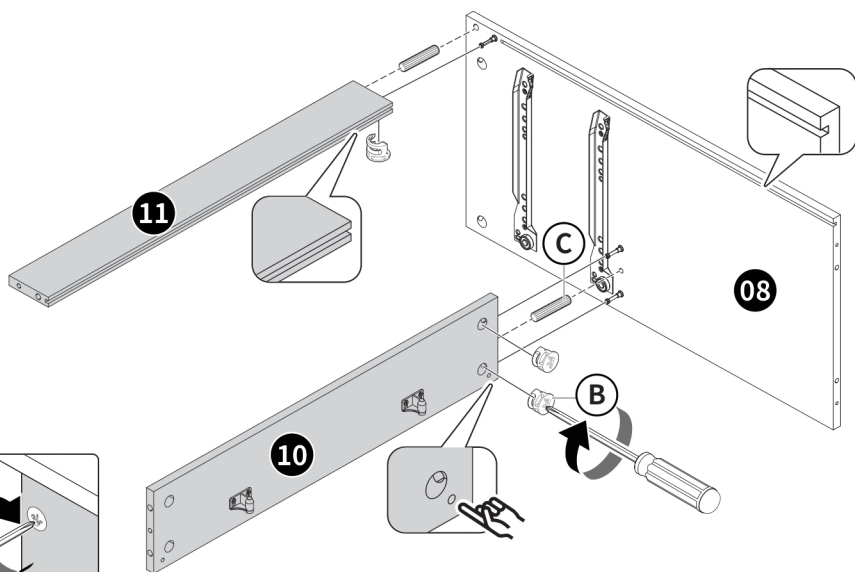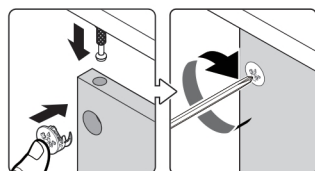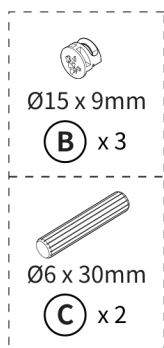

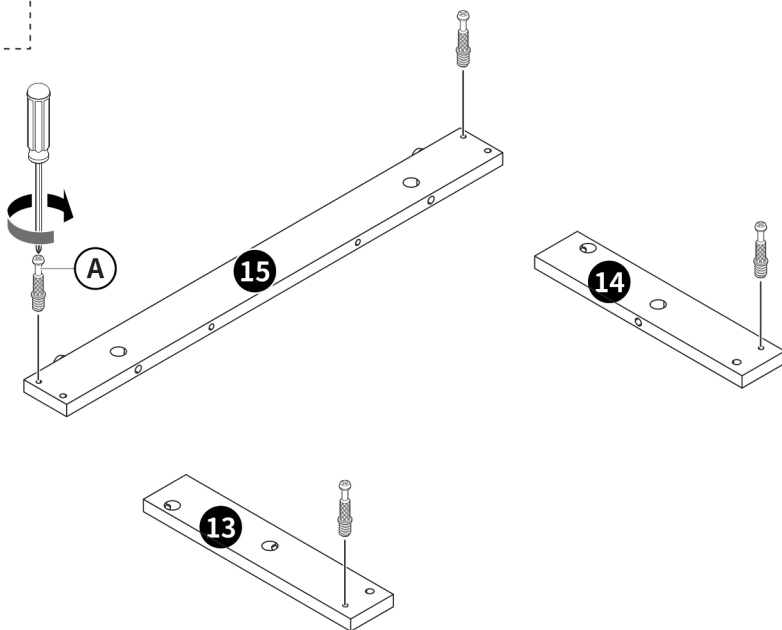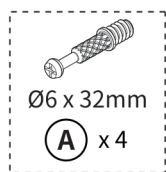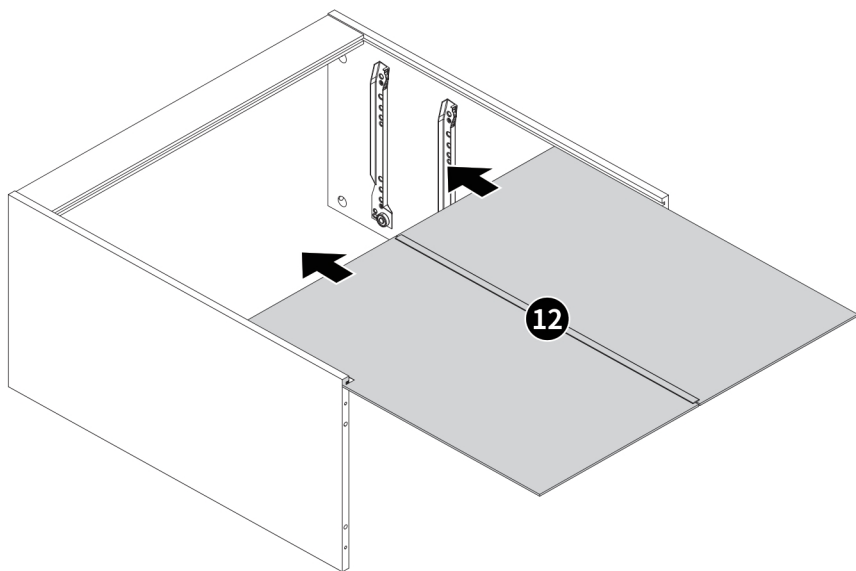

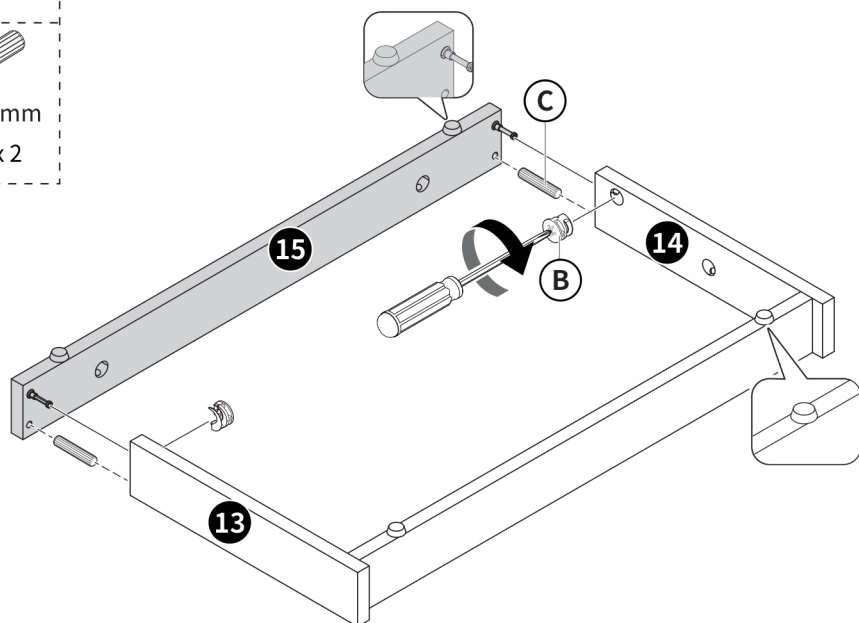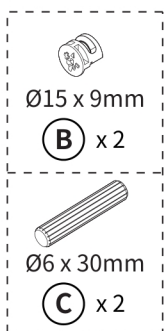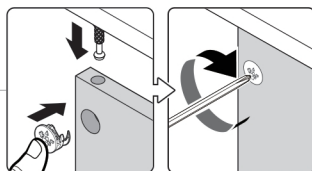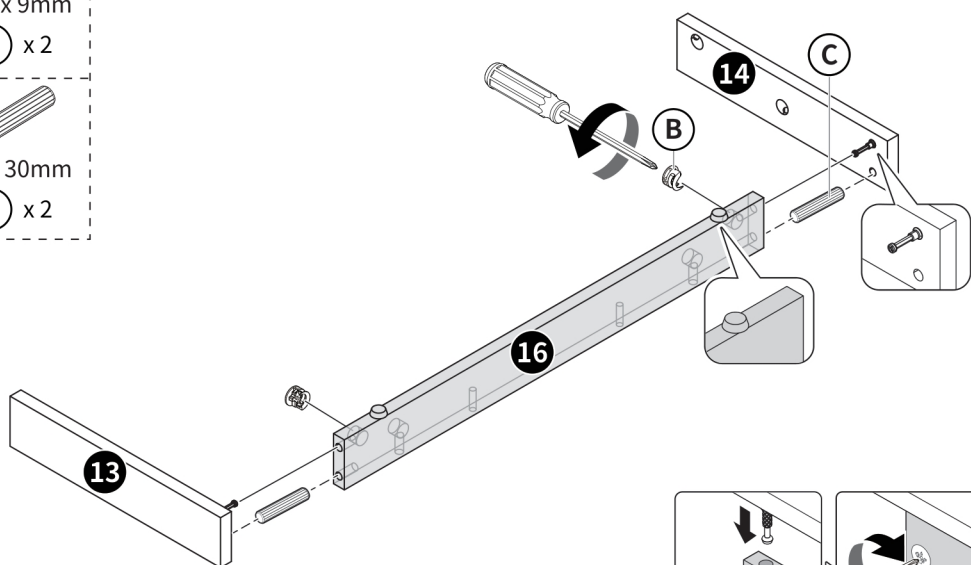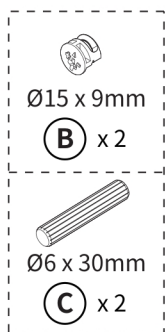

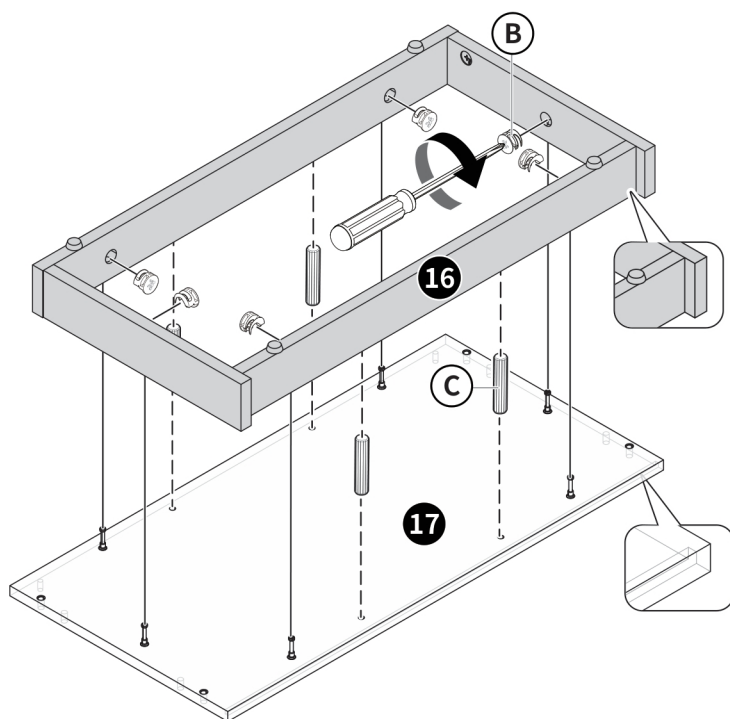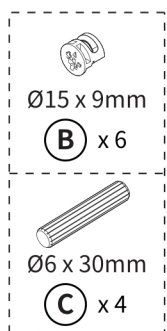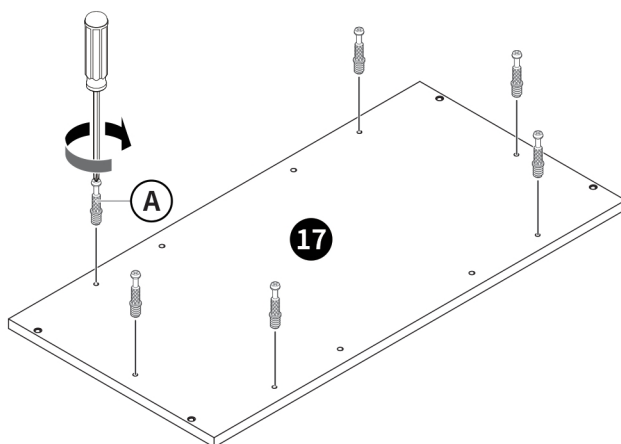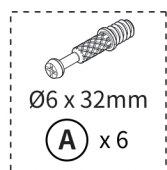

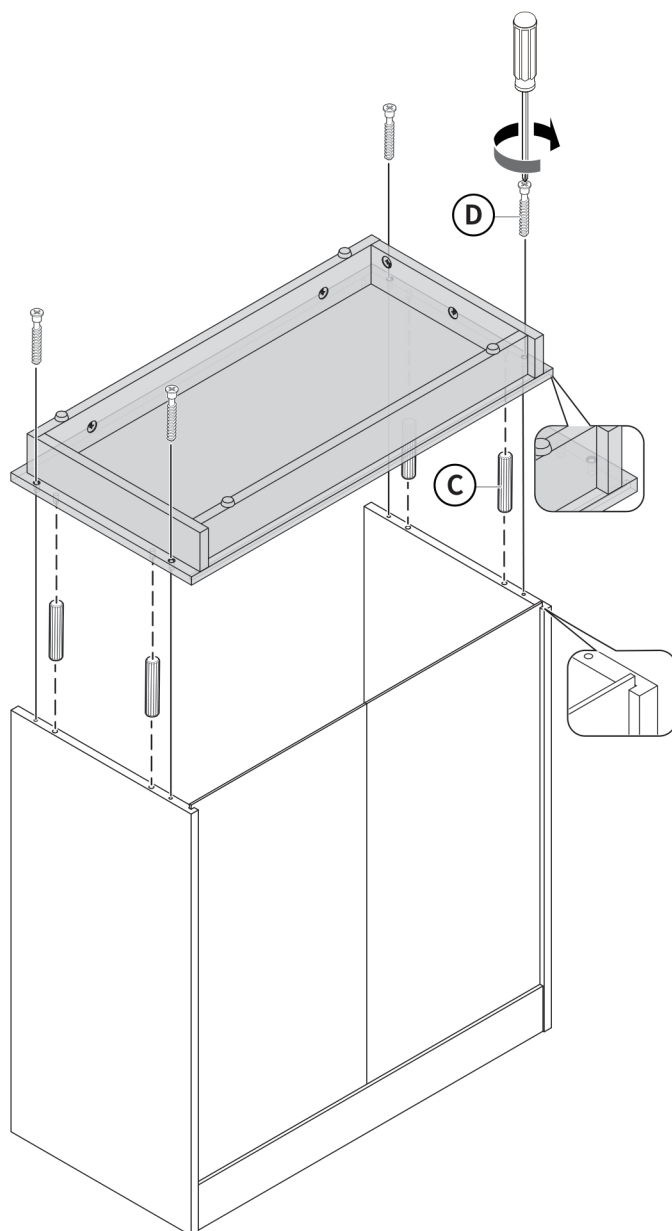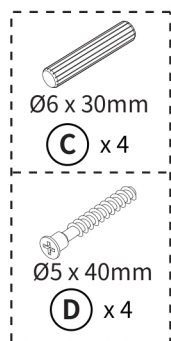

3







Ø3 x 17mm

G x 26



J x 26

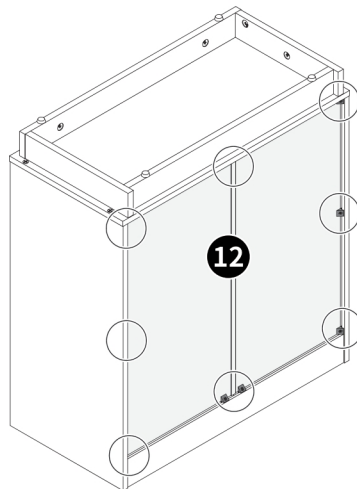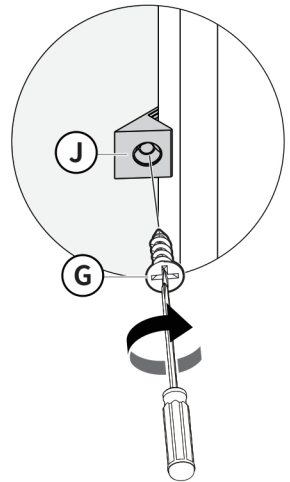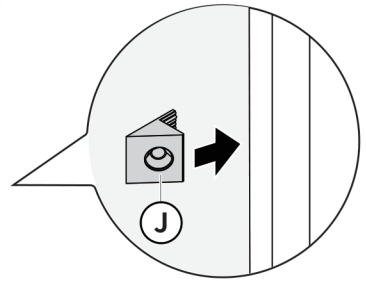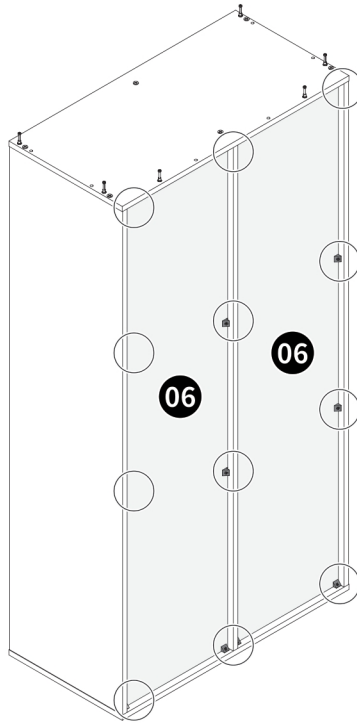

4



Ø15 x 9mm

(B) x 6




Ø6 x 30mm


(C) x 6





90°








90°











90°






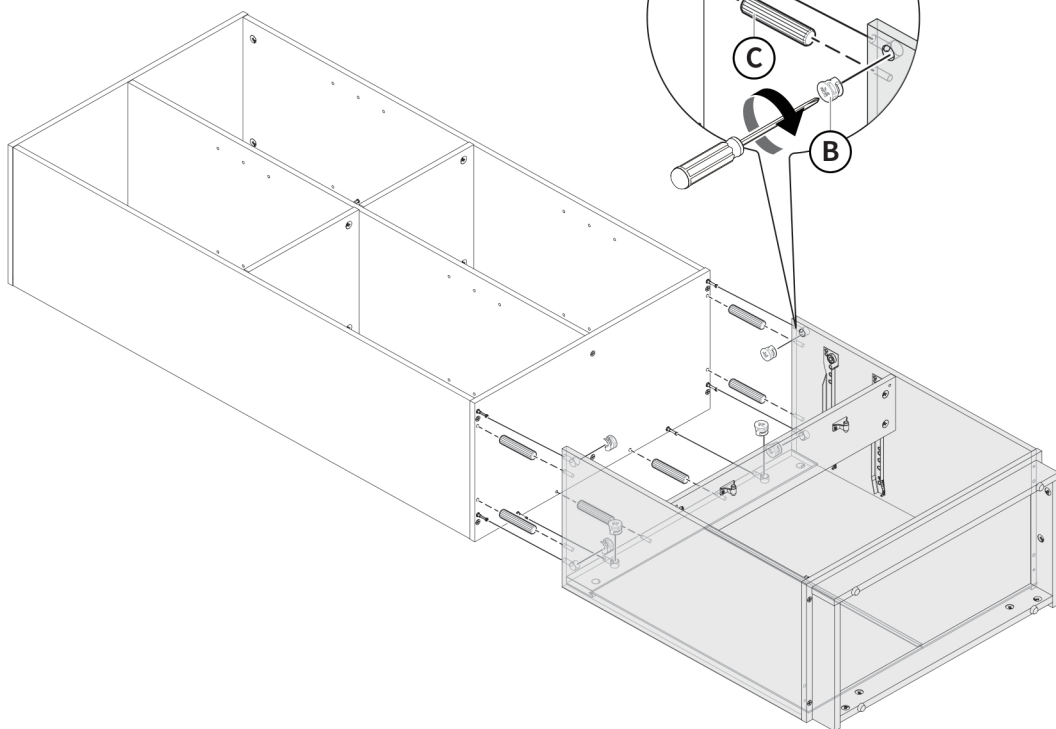
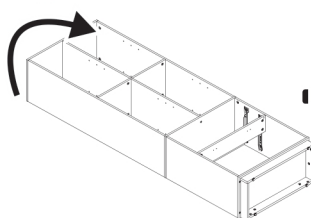



5

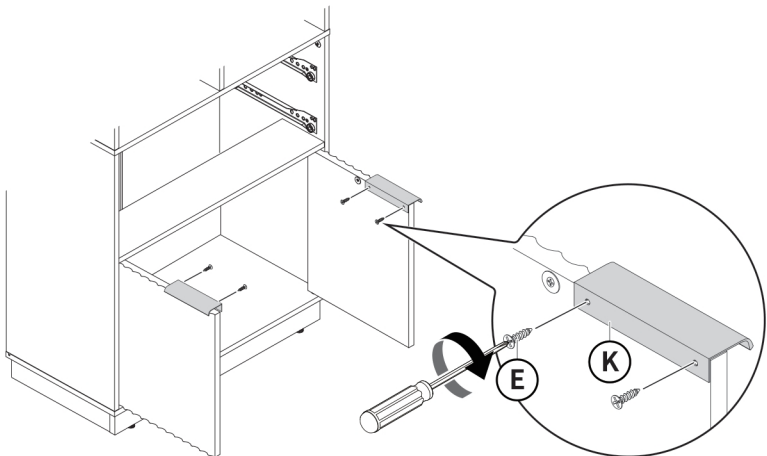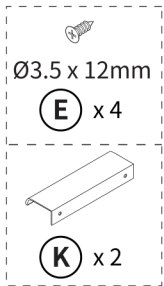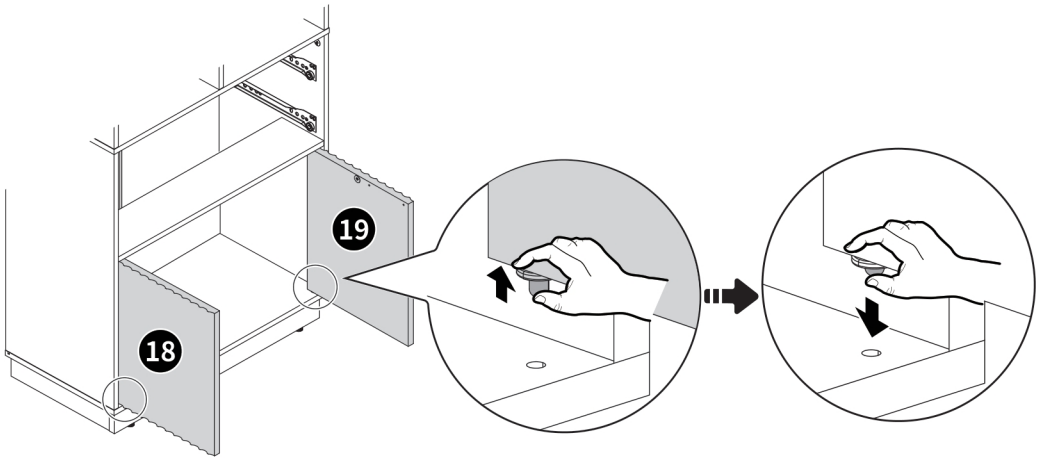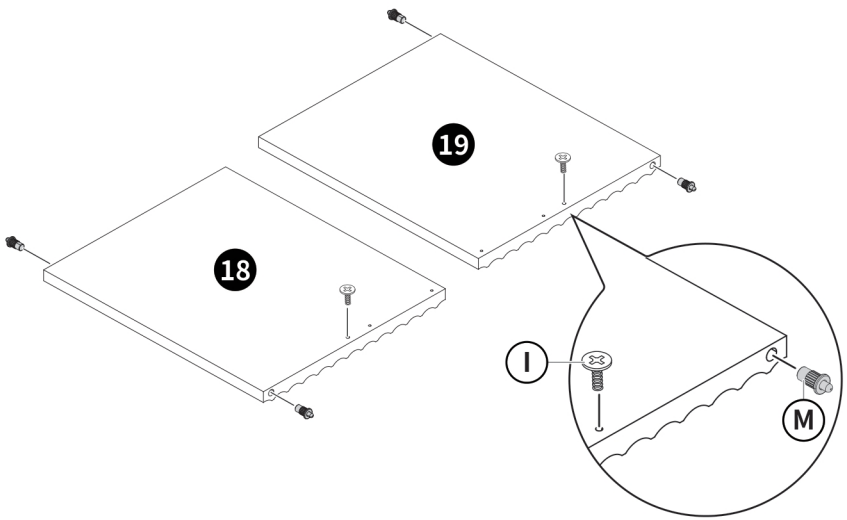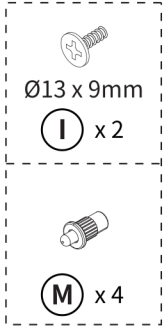


6

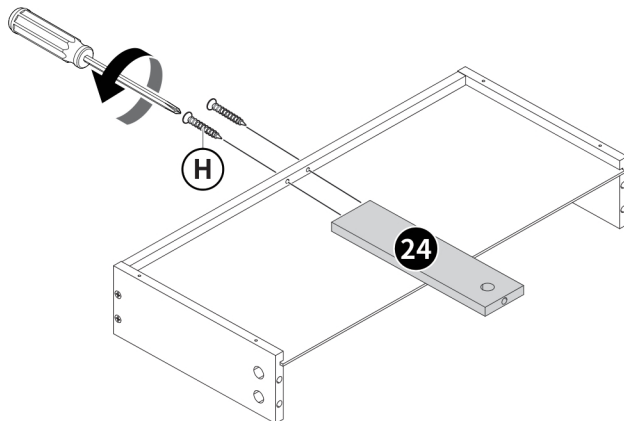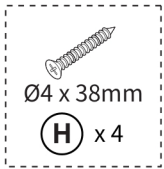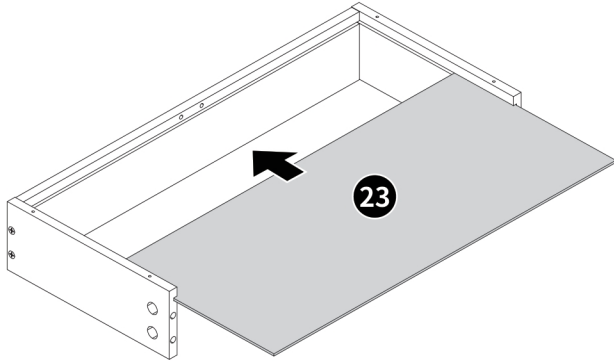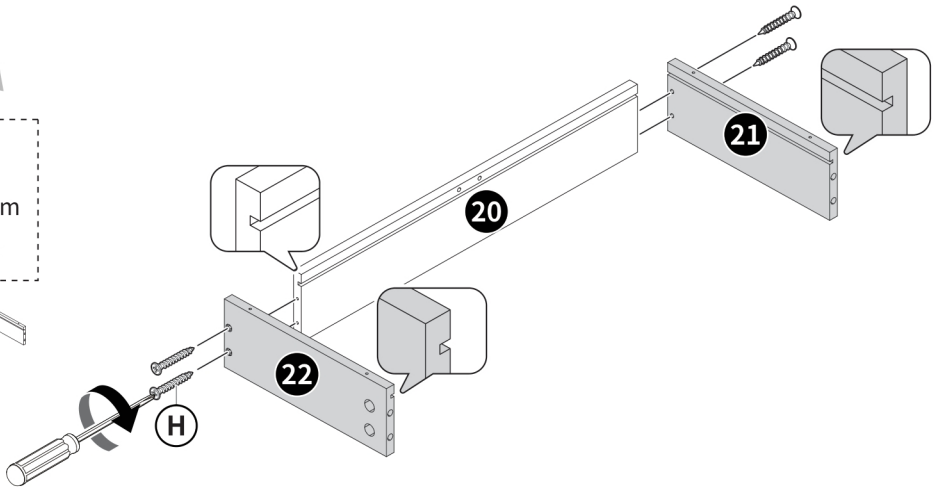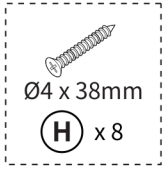

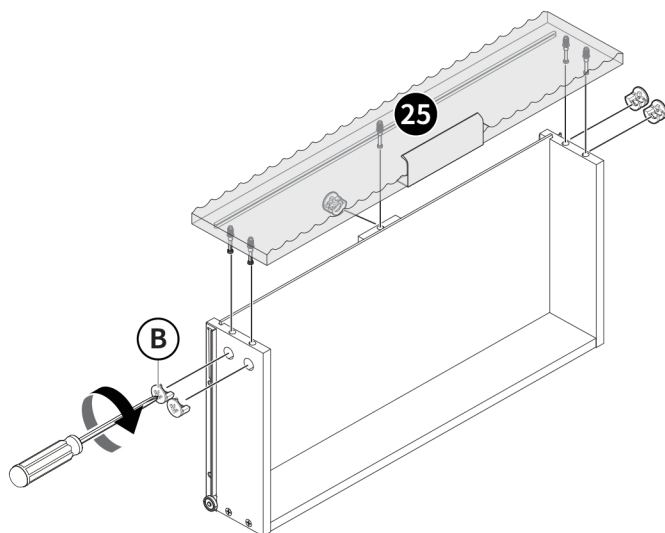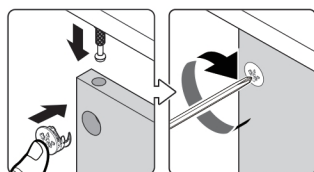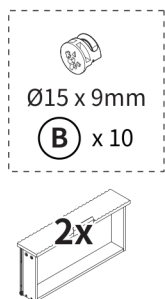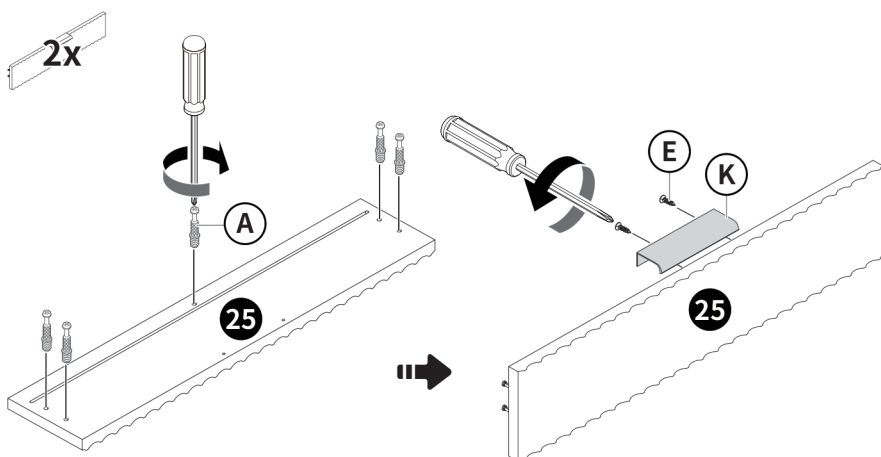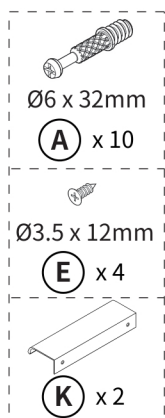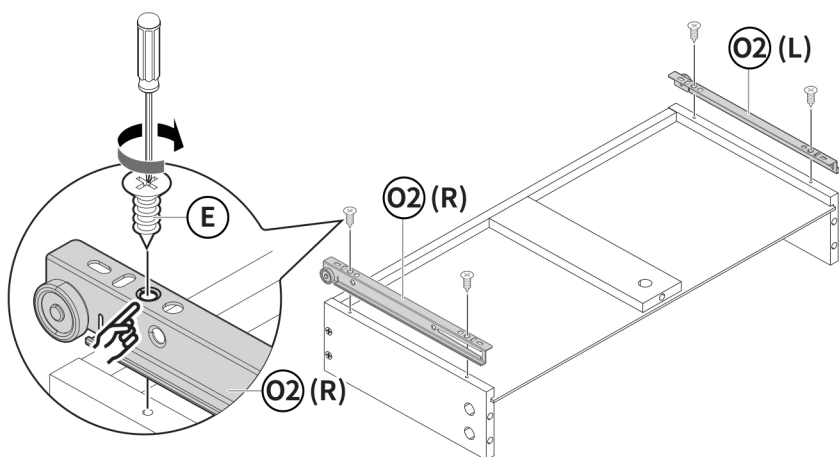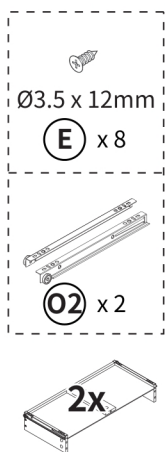


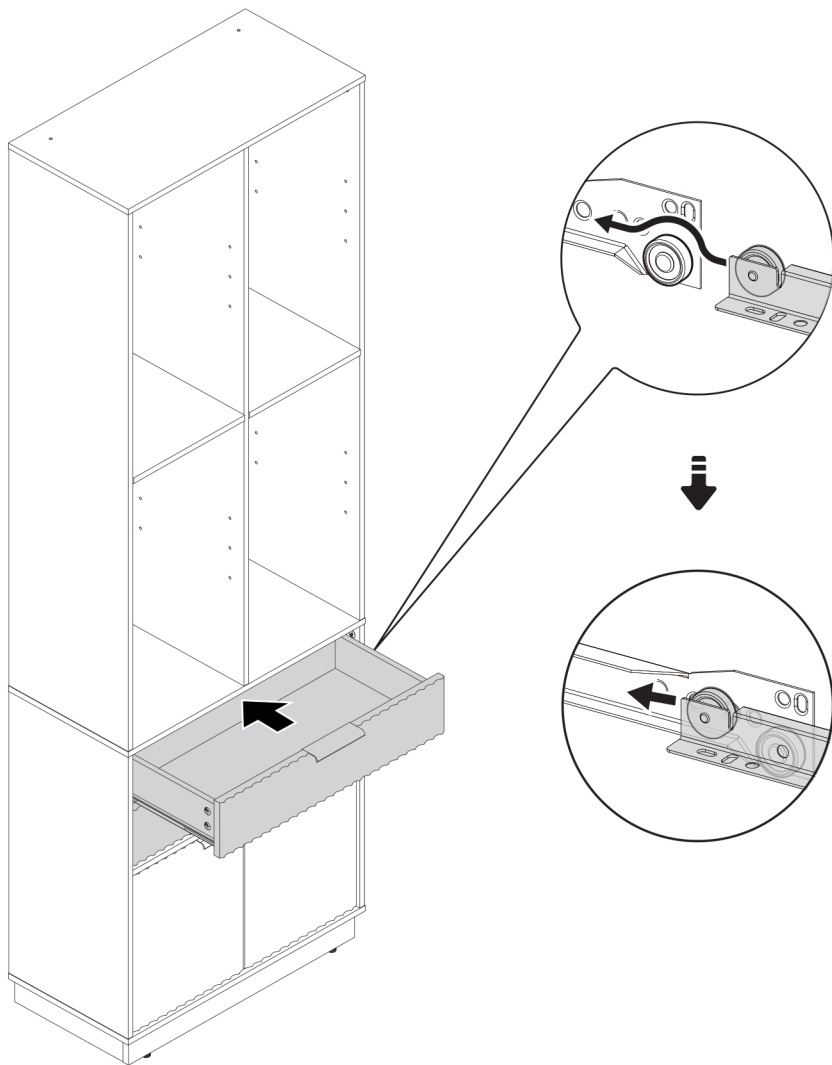

Drawer Silde Under Cabinet Slide

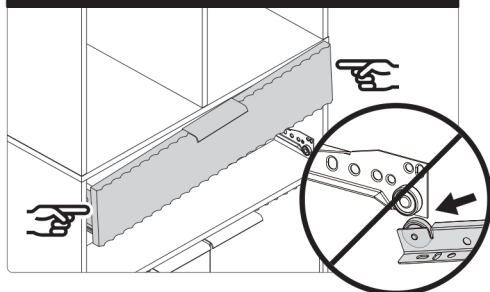




Drawer Slide Not Aligned

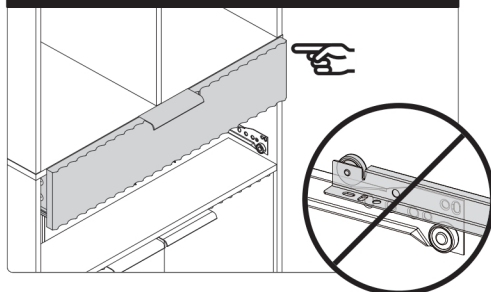

7



(N) x 16

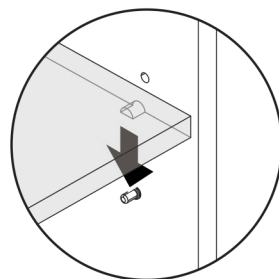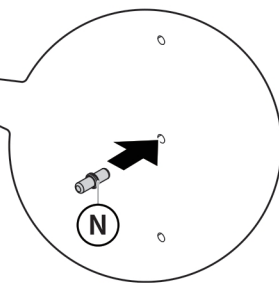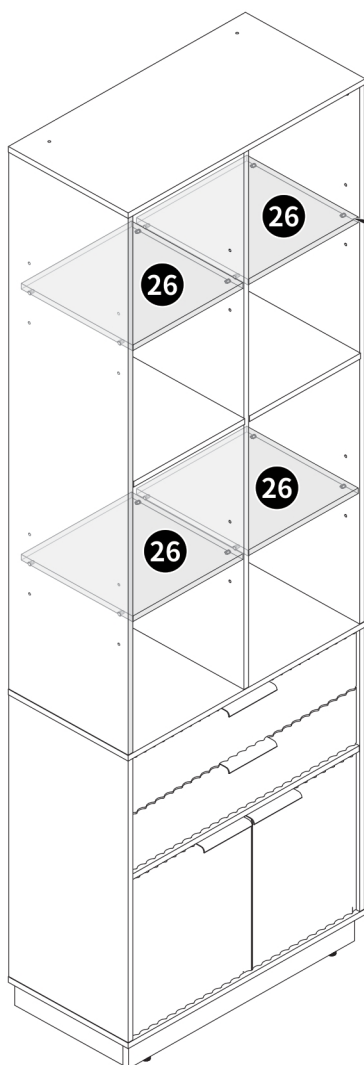

8

Installation Instructions:

1. Secure the anti-tip frames to the top of the unit using short screws.
2. Determine where the unit is to be placed. If you have a wood stud wall, locate a stud using a stud finder and mark the centerline.
3. Drill pilot holes in the wall at the appropriate height.
4. Secure the anti-tip frames to the wall using long screws. Use wall anchors for solid concrete. Do not use them on wood studs.



x2



ST4 x 12mm

x2




ST4 x 25mm

x2




Ø8 x 30mm

x2

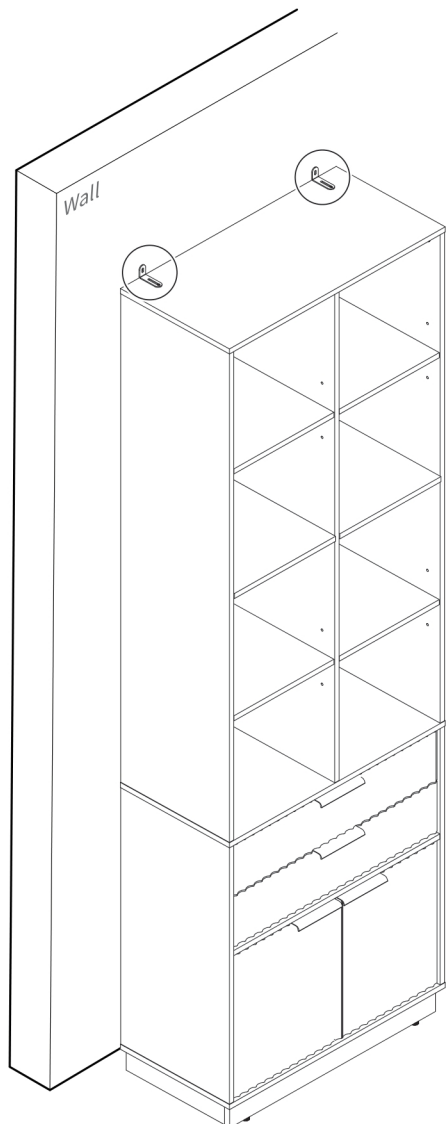


1

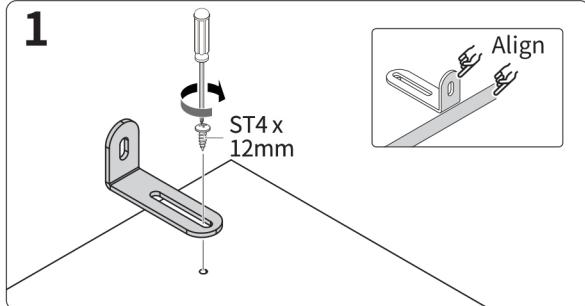

2

A. Wood Studs

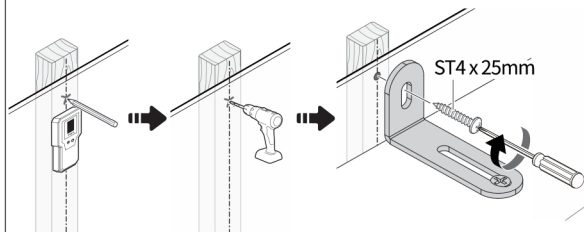

B. Solid Concrete

