

Factory UTV Polaris RZR 170 (2012-2018+) Door install.


170 Door Installation Guide

- 1.) Remove stock door nets and clips.
- 2.) Hold door in place on the Vehicle, loosely fasten front and rear mounting bolts.
- 3.) While bolts are loose, make adjustments so the door fits nicely before fastening bolts.
Fasten all bolts Securely when complete.

-.) Repeat steps 1 – 3 for Remaining side.

**Ensure
ALL Bolts are Fastened
Securely when
complete.**

Bolt Locations.

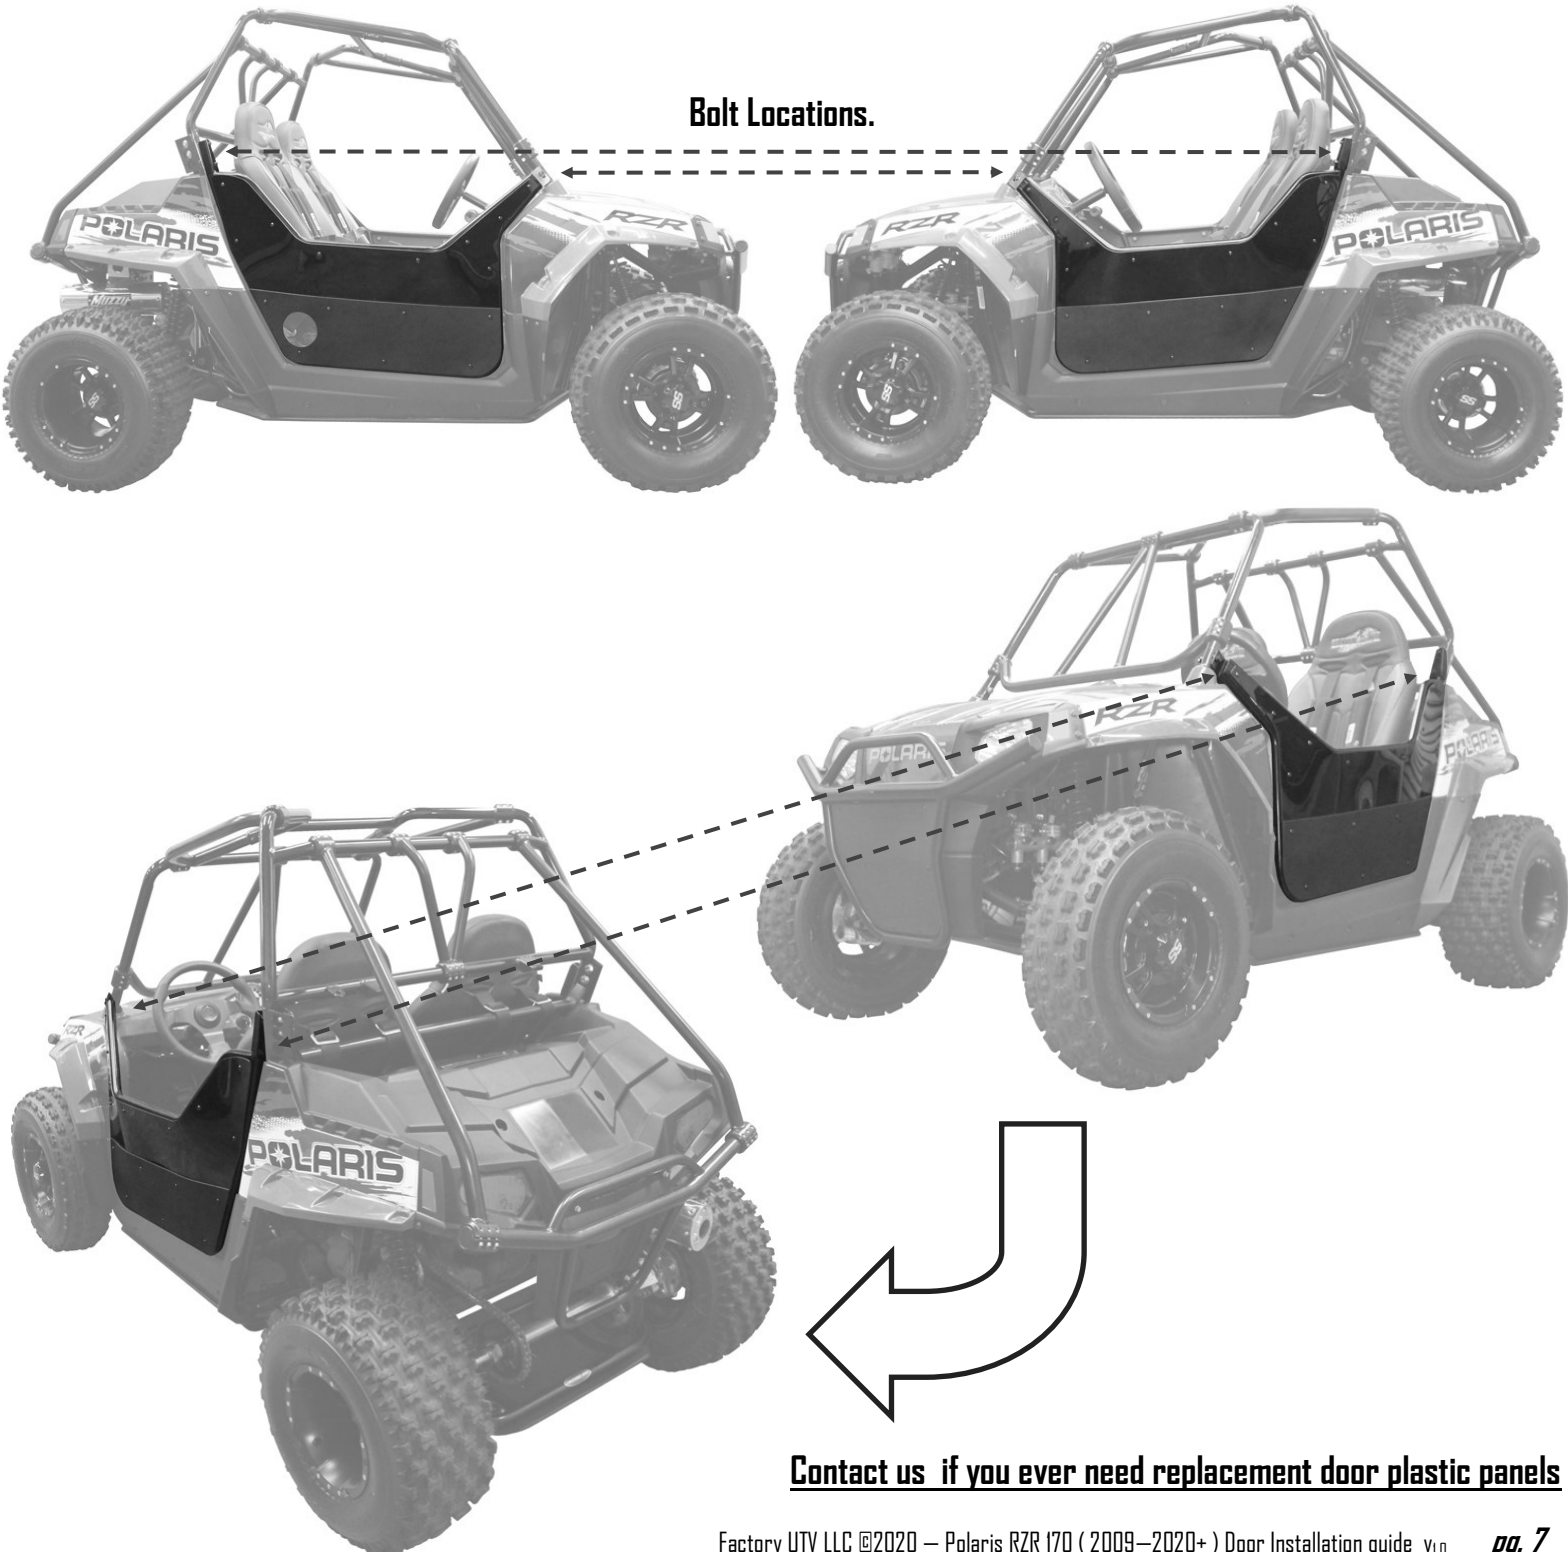

Contact us if you ever need replacement door plastic panels

Polaris RZR 170 (2012-2018+) Other Accessories

Check out our other RZR 170 Accessories online at

www.Factoryutv.net

5pt Restraint systems, harness bars, full cage and intrusion bar kits,
steel bumper w/ UHMW bash plate, full fixed high density doors,
swing arm replacement kits, wheel adapters, 11 tooth sprockets

and more...

