
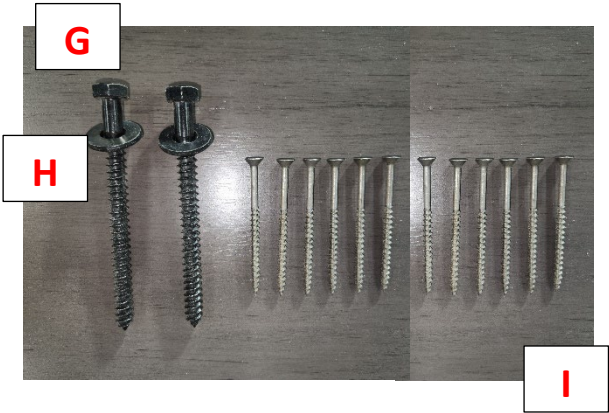
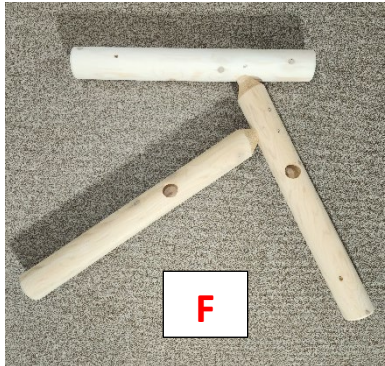


UW128
Unfinished Outdoor T-Set
(Parts Included)

- A. Chair Back
- B. Chair Back
- C. Center Table
- D. Bench Seat
- E. Left Leg
- F. Right Leg
- G. 2 - 4 ¼" Lag Screw
- H. 2 - washers
- I. 12 - 2 ½" square/Phillips screws

(What you will need)

- Phillips or square screwdriver
- 1/2" socket

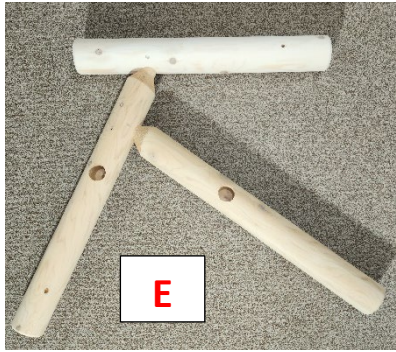

Step 1. Insert back tenons on Center Table (C) into side holes on Chair Backs (A) and (B)

Step 2. Insert the Chair Back post tenons from Chair Backs (A) and (B) into back rail holes of Bench Seat (D)

Step 3. Insert the Center Table (C) front leg tenons into front rail holes of Bench Seat (D)




Step 4. Screw (I) screw about $\frac{1}{2}$ " below the back of the Chair Back post at a 45° angle so that it hits the Chair Back post tenon for all four Chair Back posts



Step 5. Screw (I) screw about ½” behind the side hole of the Chair Back post at a 45° angle so that it hits the Center Table (C) back tenon for both back side tenons

Step 6. Screw (I) screw about ½” behind the Center Table (C) front leg tenons at a 45° angle so that it hits the Center Table (C) front leg tenons

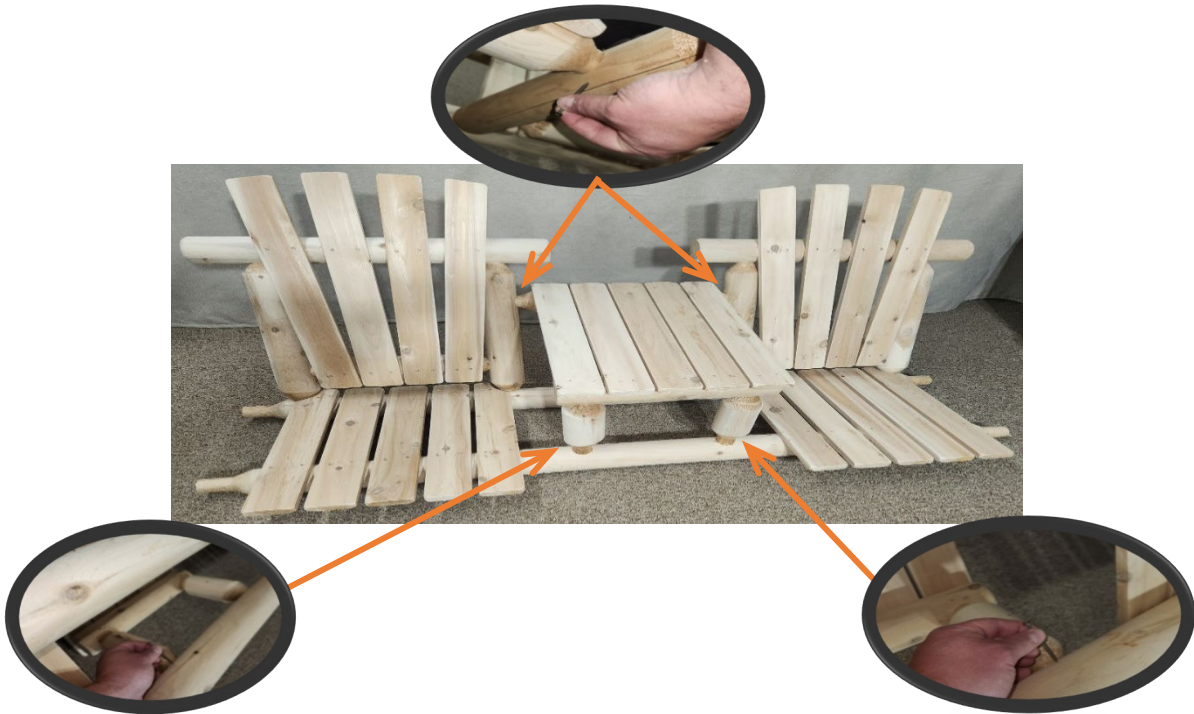

Step 4. Insert the 2 tenons from the Bench Seat (D) into the 2 holes in each leg (E) and (F)



Step 6. Align the predrilled hole in the Left Arm(E) with the Seat Back Post and put the washer (H) on the 4 ¼" Lag screw (G) and screw it with a ½" socket

Step 7. Repeat Step 6 with the Right arm

