

## UW125




### Unfinished Outdoor Chair

*(Parts Included)*

- A. Chair Back
- B. Chair Seat
- C. Left Arm
- D. Right Arm
- E. 6 - 2 ½" square/Phillips screw
- F. 2 - 4 ¼" Lag Screw
- G. 2 - washers

*(What you will need)*

- Phillips or square screwdriver
- 1/2" socket

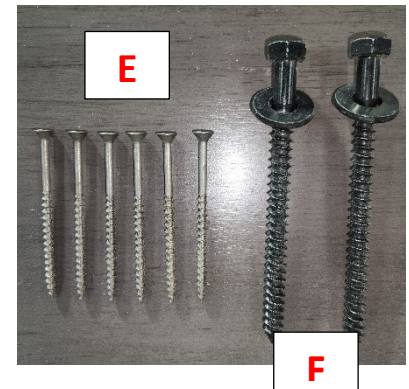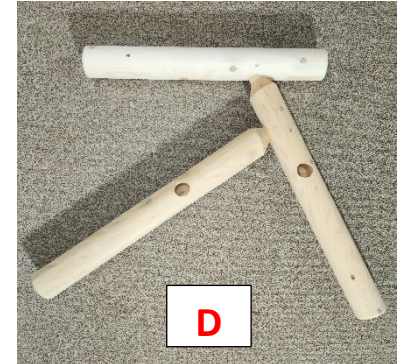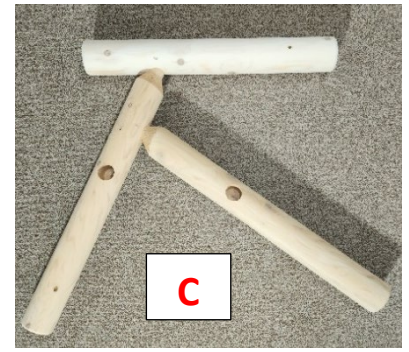

Step 1. Insert the tenons of the Chair Back (A) into the holes of the Chair Seat (B)

Step 2. Screw 1 (E) screw about ½" below the Chair Back Post at a 45° angle so that it hits the Chair Back Post Tenon


Step 3. Repeat Step 2 for the other Chair Back Post



Step 4. Insert the 2 tenons from the Chair Seat into the 2 holes in each leg

Step 5. Screw the (E) screws  $\frac{1}{2}$ " below the Leg holes at a 45° angle so that it hits the Chair Seat tenons

*(Tip: attach BOTH Left and Right legs BEFORE securing with screws)*

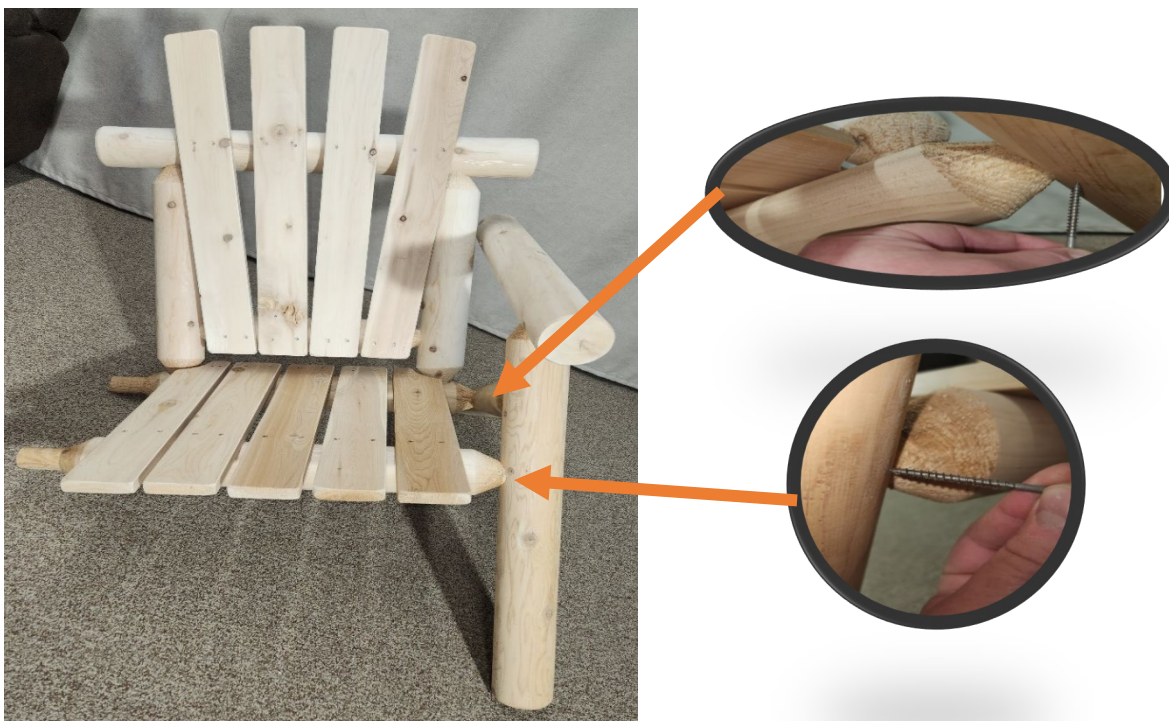

Step 6. Align the predrilled hole in the Arm with the Seat Back Post and put the washer (G) on the 4  $\frac{1}{4}$ " Lag screw (F) and screw it with a  $\frac{1}{2}$ " socket

