

Serenity Barrel Sauna Assembly Instructions

Harvia M3 Wood Stove Installation (Chimney out the back wall) (Optional)



Reassemble the top chimney support bracket.



Install the cap on the top of the assembled chimney.



Install the bottom half of the exterior chimney shield.

Ensure that it is level.

Overlap the top half of the exterior chimney shield and secure with provided screws.



Below the bench support on the back wall, mark the vent hole position.

Manufactured by:

Serenity Barrel Sauna Assembly Instructions

Harvia M3 Wood Stove Installation (Chimney out the back wall) (Optional)




Assemble together the remaining chimney pieces.



Attach the support strap around the 2 chimney pipes and tighten up.



Attached assemble chimney pieces to the "T" coming out the back of the sauna.

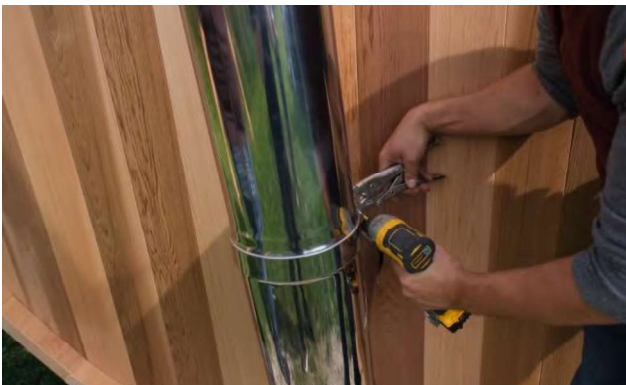

Attach a support strap around the connection and tighten up.

Manufactured by:

Serenity Barrel Sauna Assembly Instructions

Harvia M3 Wood Stove Installation (Chimney out the back wall) (Optional)



Bring in the rear wall heat shield and place it behind the stove.



Insert the "T" chimney piece through hole in back of sauna and through the rear wall heat shield on the inside of sauna and into the back of stove.



Ensure the rear wall heat shield is level and secure with 6 - 1 ½" (38mm) screws through the drilled holes.



Remove the nuts and bolts from the chimney support.

Manufactured by:

Serenity Barrel Sauna Assembly Instructions

Harvia M3 Wood Stove Installation (Chimney out the back wall) (Optional)



On the center of the back wall, measure 22" (56mm) from the floor up.

This will be the center of your hole for the chimney to go out.



From the mark, make an 8" (203mm) circle.

Cut out the circle with a jigsaw.



Install floor heat shield against back wall centered between the benches.



Bring in stove and place it on the floor heat shield.

Manufactured by:

Serenity Barrel Sauna Assembly Instructions

Harvia M3 Wood Stove Installation (Chimney out the back wall) (Optional)



Remove all protective film from stainless steel parts and the plastic wrap from stove pipe pieces before installation.



Fasten the stove handle onto the stove door With the screws provided.



Remove the screw on the back of stove and remove the back flap.



Measure the height to the middle of the opening on the back of stove. (22") (56mm)

Manufactured by: