


Installation shall be made entirely at your own risk. DevSport is **not** responsible for any and all damages caused by the improper installation of any product. Professional installation is **recommended**.

Note: This is a general outline for installation. Actual application may vary slightly.

WHATS INCLUDED

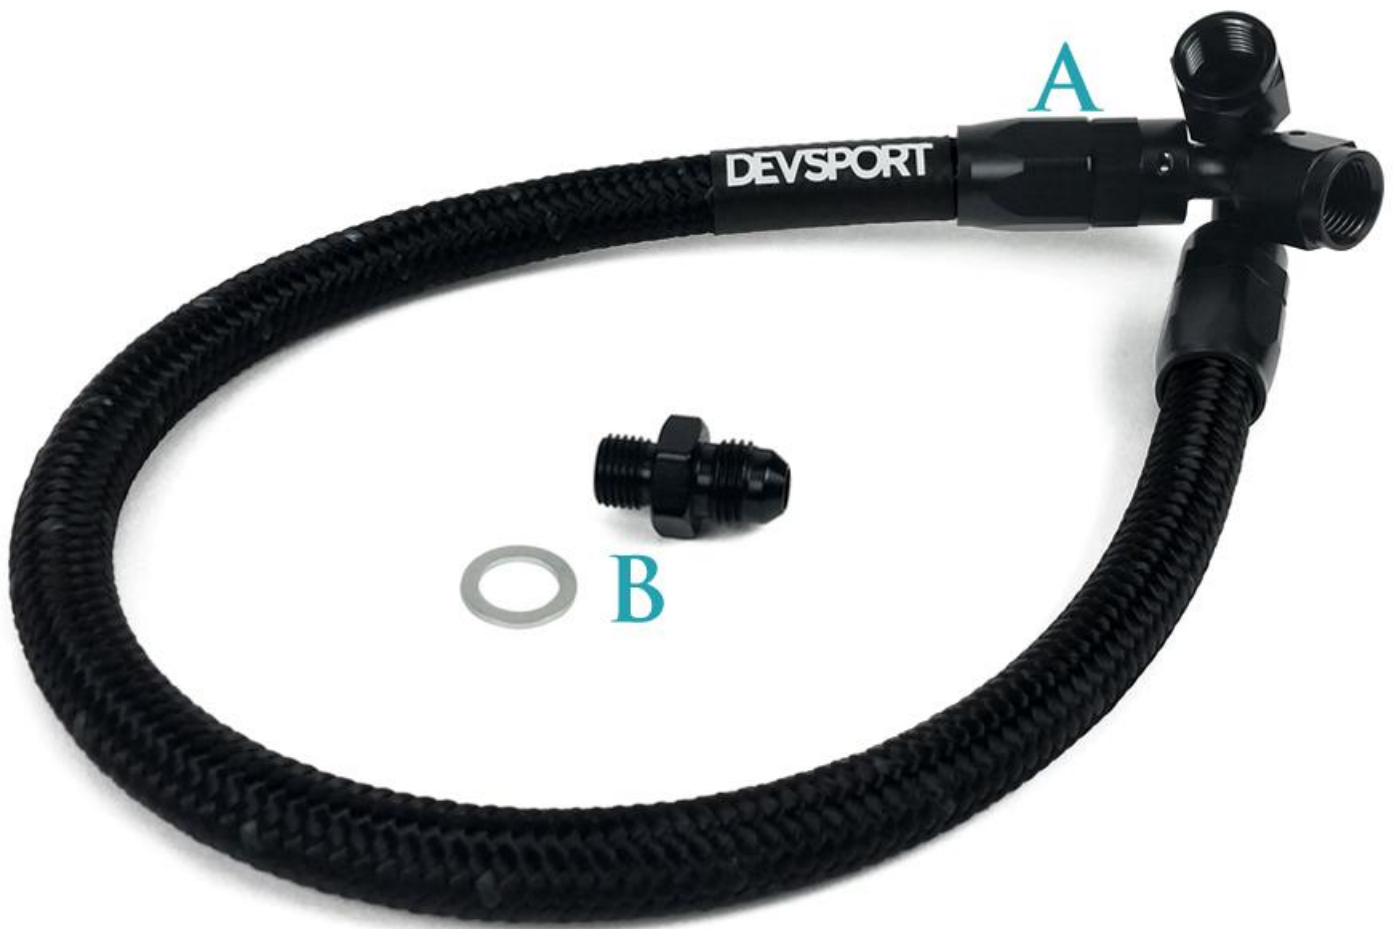

Part A: Feed Line

Part B: OEM Filter Fitting



STEP 1

Remove the OEM rubber fuel line from the fuel filter to the fuel rail.



STEP 2

Thread “**Part B**” Filter Fitting to the OEM Fuel Filter.



STEP 3

Attach **“Part A”** Nylon Braided Line to **“Part B”** Filter Fitting.




STEP 4

Route **“Part A”** Nylon Braided Line under the intake tubing and up to the fuel rail.

Connect **“Part A”** Nylon Braided Fuel Line to your Aftermarket Fuel Rail using a -6an Inlet fitting.

INSTALLATION IS COMPLETE.


Using OEM Fuel Rail (Optional Fitting Required)

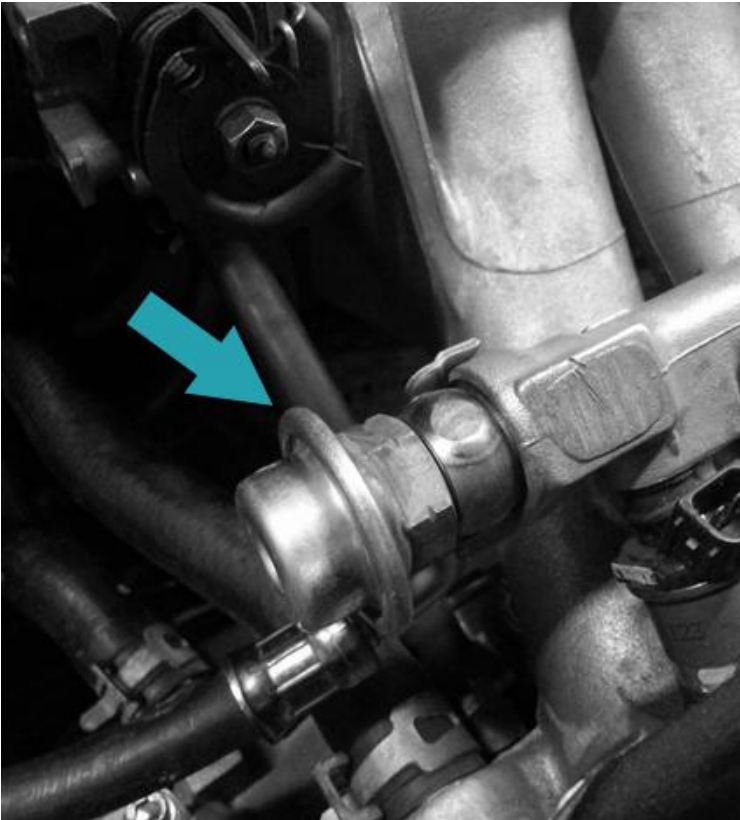

STEP 1

Remove the end Cap.

Remove the OEM Fuel Line.

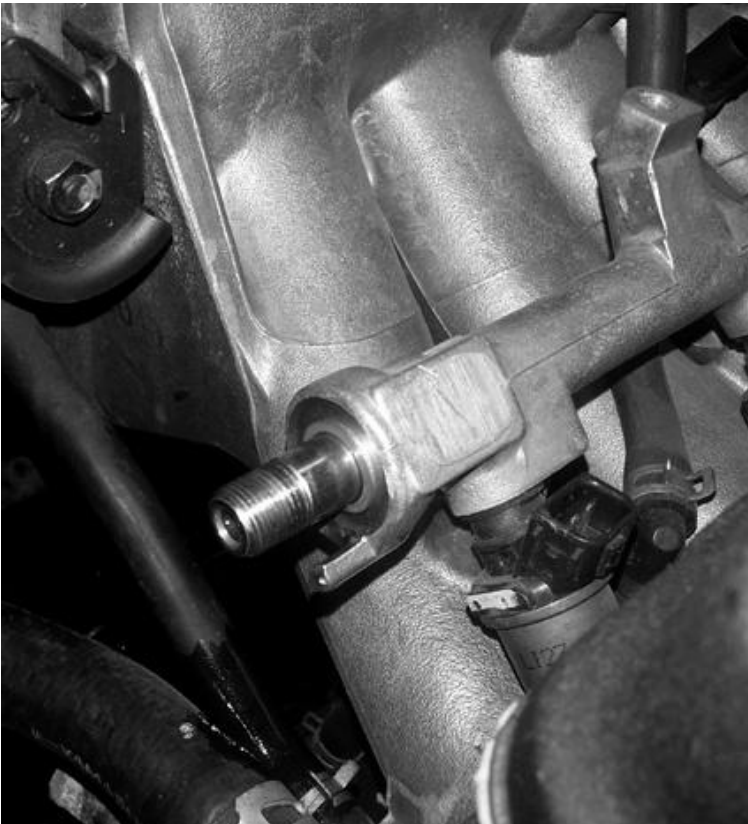

STEP 2

Remove the OEM fitting by using vise grips or double nut the end to unthread.

Thread "Optional" AN Fitting into the Fuel Rail and Connect "**Part A**" Nylon Braided Line.

