EZ TUBE 20FT STRAIGHT TOOL FREE















Tool free corner connection (push button instead of rivets)



Tool free foot connection (push button instead of screws)

PRODUCT DESCRIPTION

Sleek and "EZ", our tension fabric systems are a great alternative to standard backwall displays. Quickly assembled in just 5 minutes with no tools required, slide the tubes together to make the frame and lock in place with a push button snap. Then, simply pull the pillowcase-like graphic over the frame and zip it shut. The zipper, hidden from view, tightens the stretch fabric beautifully displaying your images. Disassembled, the lightweight frame and graphic fits inside a compact silver bag.

DISPLAY DIMENSIONS	112"W x 91.5"H x 19.75"D
GRAPHIC SIZE	114"W x 91"H

GRAPHIC MATERIAL

Stretch Fabric

GRAPHIC FINISHING

Sewn on left, right and top with zipper closure at the bottom

DISPLAY CONSTRUCTION

43mm diameter aluminum tubing

SHIPPING WEIGHTS & DIMENSIONS

	67 lbs (stand only) 78 lbs (frame and graphic)
Shipping Dimensions	24"L x 19"W x 41"H

GRAPHIC TURN AROUND TIME

2 business days after proof approval

AVAILABILITY CA and PA



Includes Medium Hardcase 22"W x 39"H x 17"D

EZ TUBE 20FT STRAIGHT TOOL FREE

EZ TUBE DISPLAYS

RODUCT CODE: F7T20STR-TE











PARTS LIST



(qty 2) Vertical tube set



(qty 4) Horizontal tube set



(qty 2) Outer Support Poles



(qty 1) Center Support Poles



(qty 2) Bottom Corner Connector



(qty 1) Center Foot Connector



(qty 1) Top Center Support Connector



(qty 2) Top Corner Connector



(qty 3) Feet



(qty 1) Medium Hard Case











AVAILABLE ACCESSORIES


















SET UP INSTRUCTIONS

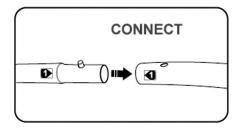


Insert (male to female) tubes.

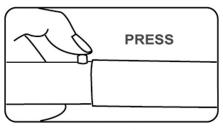

Press button in and slide poles together to connect

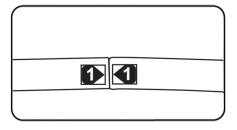

Be sure labels match (Ex:1:1)

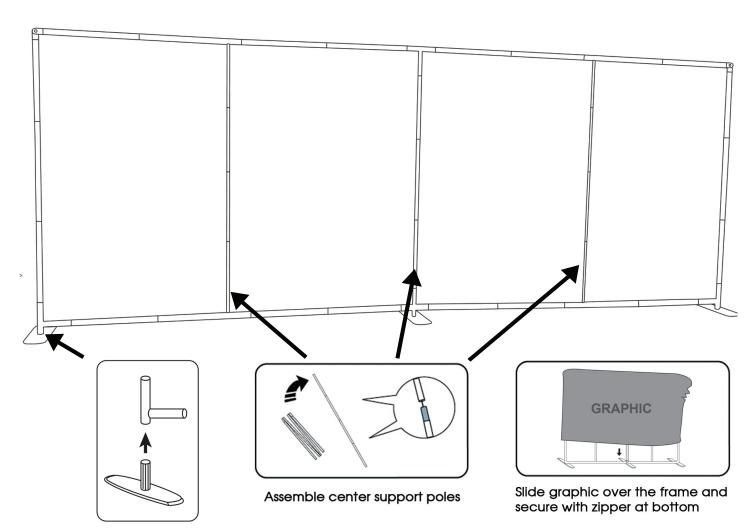

To assemble, connect the bottom corner connectors and feet together. Assemble the bungee-linked top and bottom horizontal tubes. Snap and connect the bottom horizontal tubes with the bottom corner connectors with matching labels. Then assemble the bungee-linked vertical tubes. Snap on the the remaining vertical tubes with the bottom corner connectors. Using the top corner connectors, connect the top horizontal tube to both vertical tubes to complete frame. Tilt or lay down frame to swiftly drape with the pillowcase graphic. Using the industrial-size-zipper, zip underneath the bottom tube, maximizing fabric tension and zip closed.