

## AFTERSALE SERVICE

Dear customer,

Thank you so much for purchasing the product from us, we really appreciate your support.

We are aimed to provide the best shopping experience to our customers. We also want to build a mutually beneficial relationship with our customers, and step further to make our brand both reliable, responsible and recommendable.

We hope that our products could meet your needs and expectations, please consider us again if you need more products for your home and kitchen.


The package would be out of our control during shipping, please contact us through your purchasing channel directly if there is anything wrong with the box or contents. We are always here offering you our service.

We will reply your messages within 24 hours, please kindly wait for the response from our professional service team.

Your comfort and contentment are of utmost importance.

Best Regards,  
Customer Care Specialist




## 9 CUBE STORAGE ORGANIZER

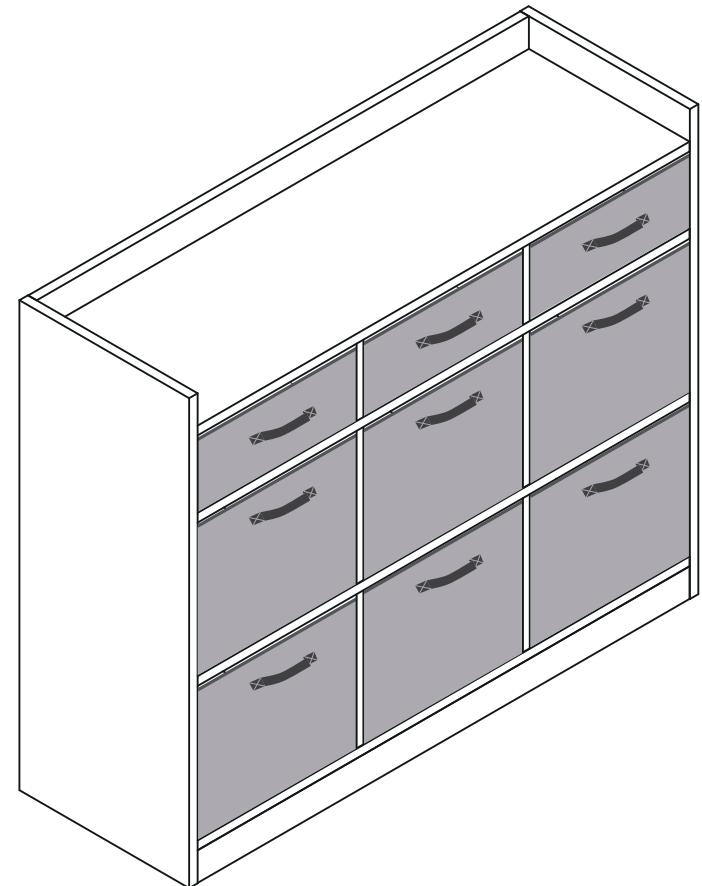

Please check all parts and accessories according to the parts list before assembling, make sure all contents are sufficient and in good condition.

If there is any parts missing or defective, please contact us immediately with purchase platform message to get replacement parts.


## PARTS:

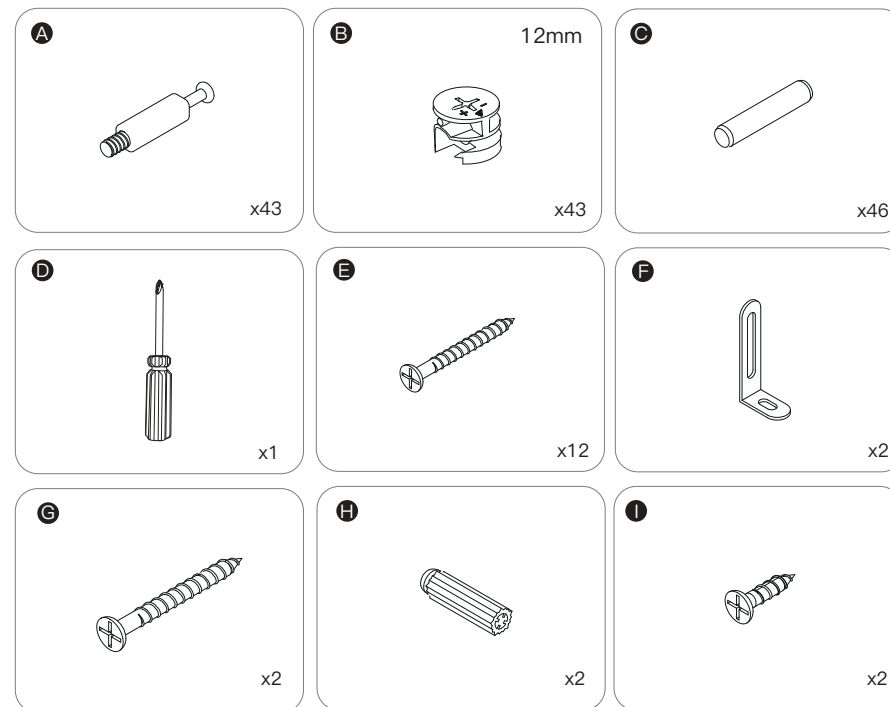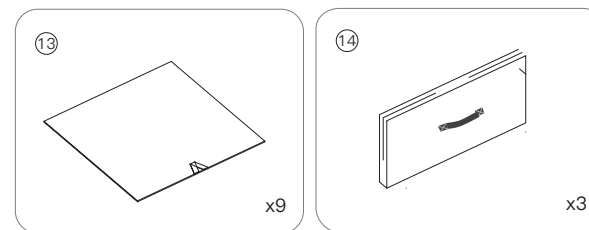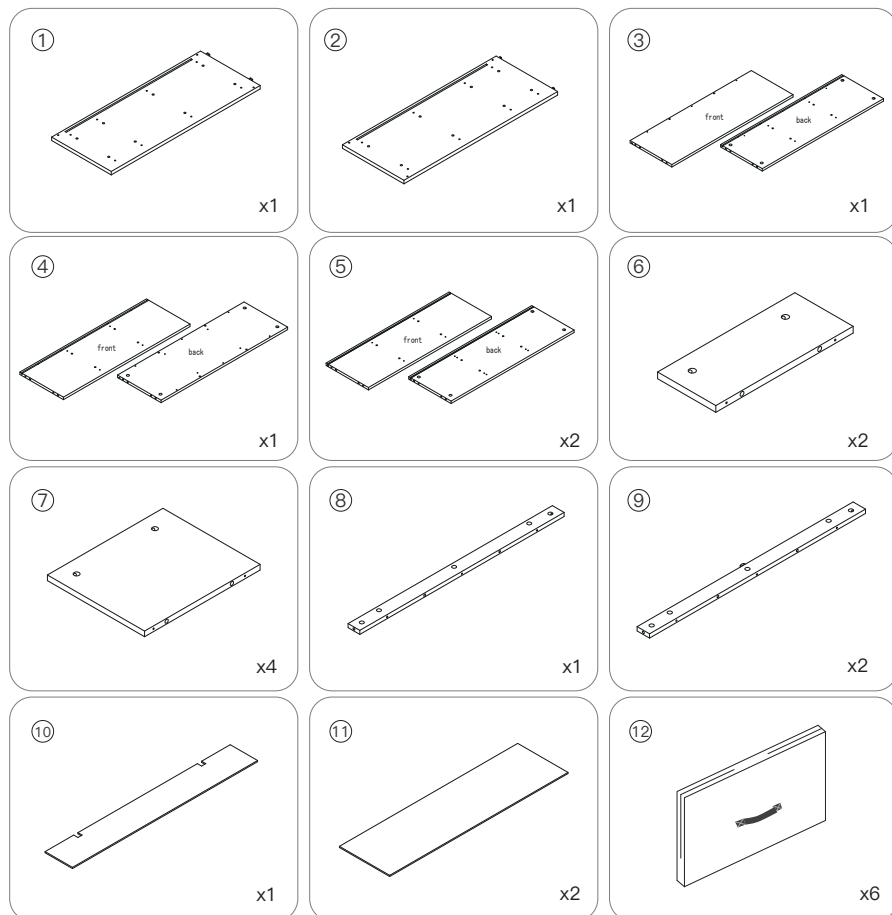


# HOW TO INSTALL

## Notice:


How eccentric screws and lock nuts works.

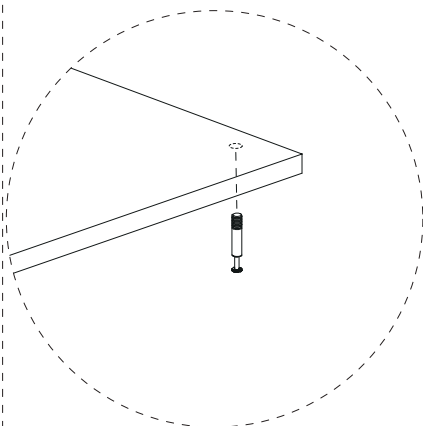


1. Insert the eccentric screw

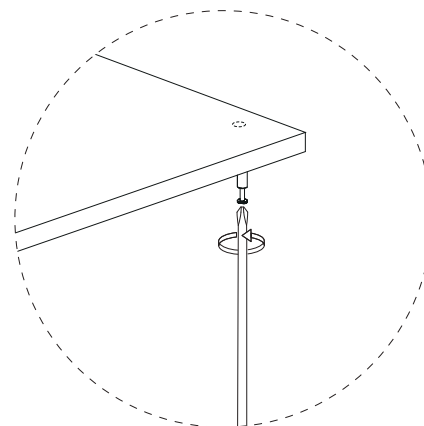

2. Tighten screw with screwdriver

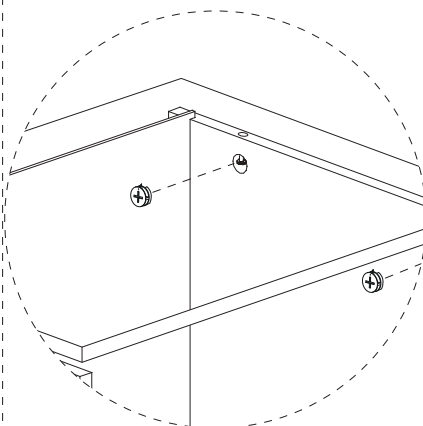

3. Put the board into holes, the point on nut face upwards.


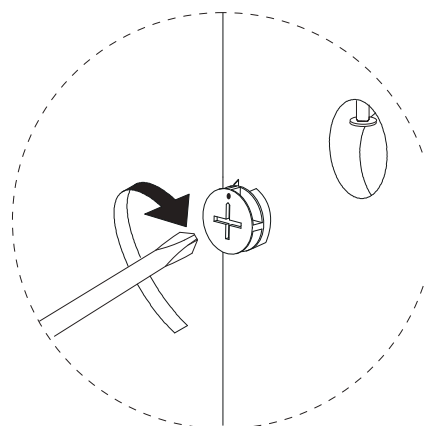


4. After inserted the nut, use screwdriver to tighten

**NOTICE:** Do not tighten the screws until all of them are in right position.

## Step 1

Screw part (A) in holes of part (1&2&3), and put part (C) in the profiles of part (3).

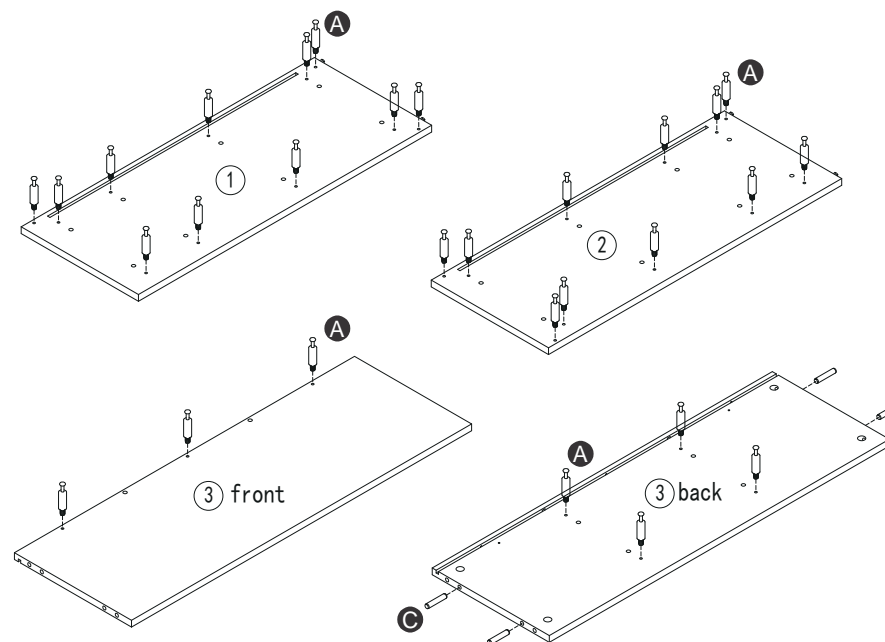
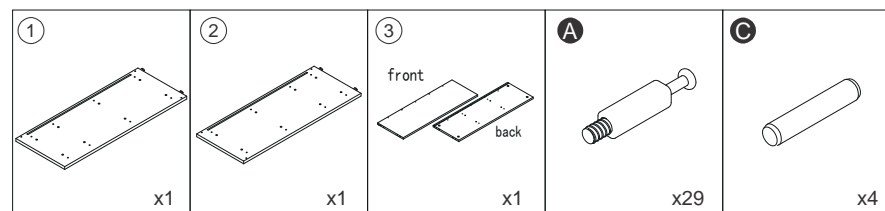


## Notice

Install the part (A & C) on right position, as shown in the pictures.



## Step 2

Screw part (A) on part (4) and the reverse side of part (5), and put part (C) in the profiles of part (4&5).

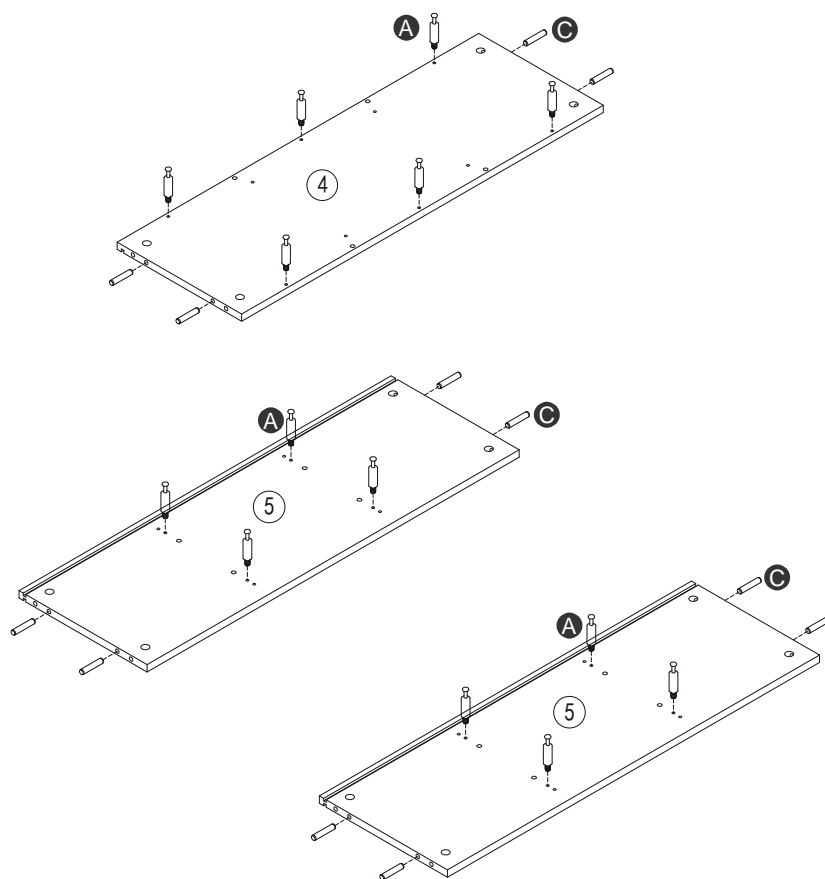
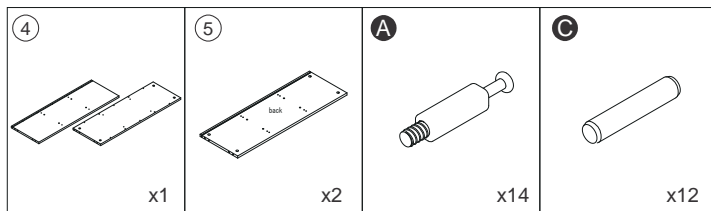


## Step 3



Put part (C) in the profiles of part (6&7&8&9).

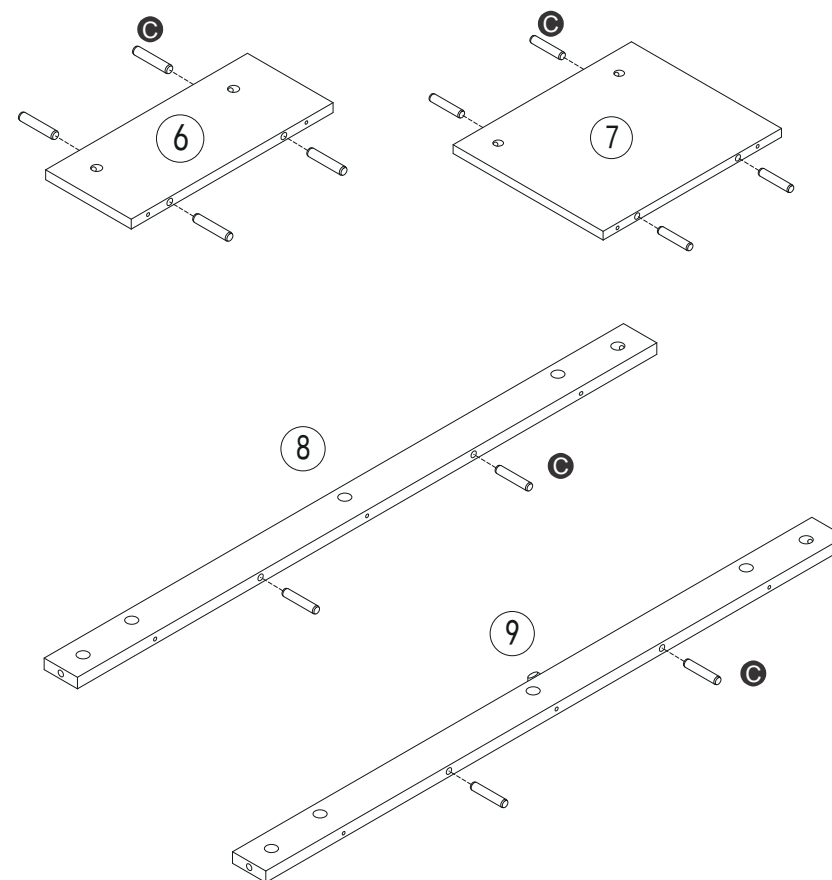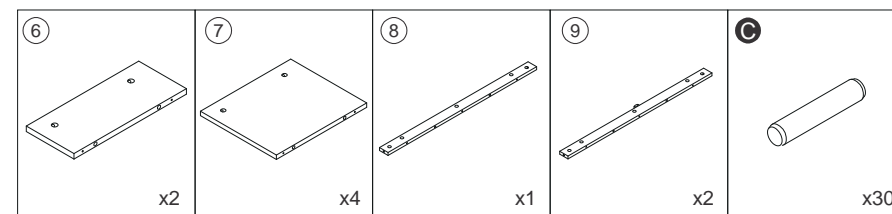

**Step 4** Install part ( 8 ) on part ( 3 ) by part ( B ).

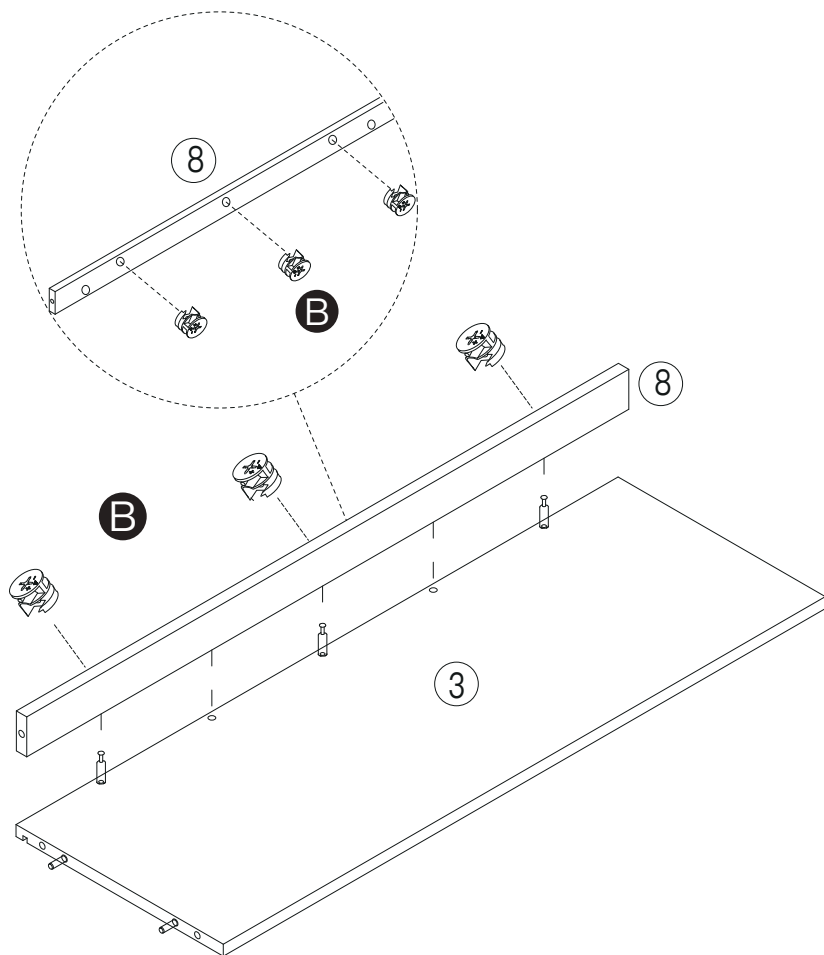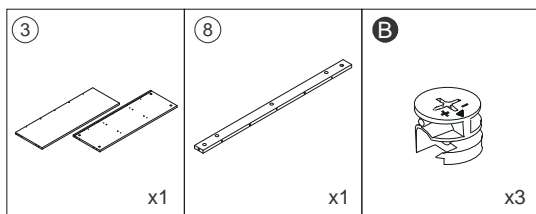


**Step 5** Install part ( 6 ) on the reverse side of part ( 3 ) by part ( B ).

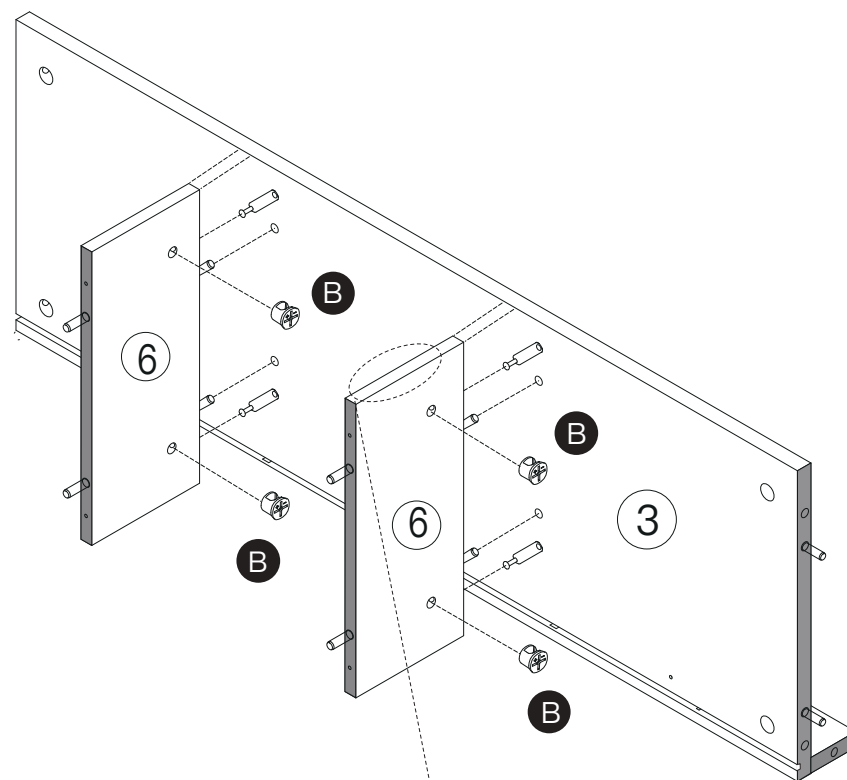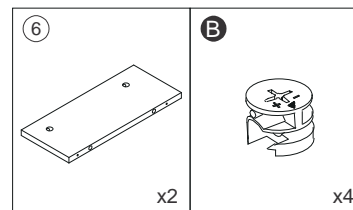


**Notice**  
The white profile of part ( 6 ) need to be facing up.

**Step 6** Install part (5) on part (6) by part (E).

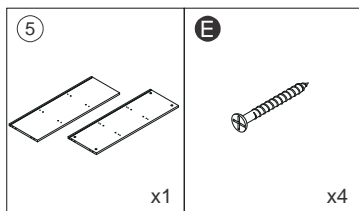

**Notice**



The groove of part (5) need to be parallel with that of part (3).

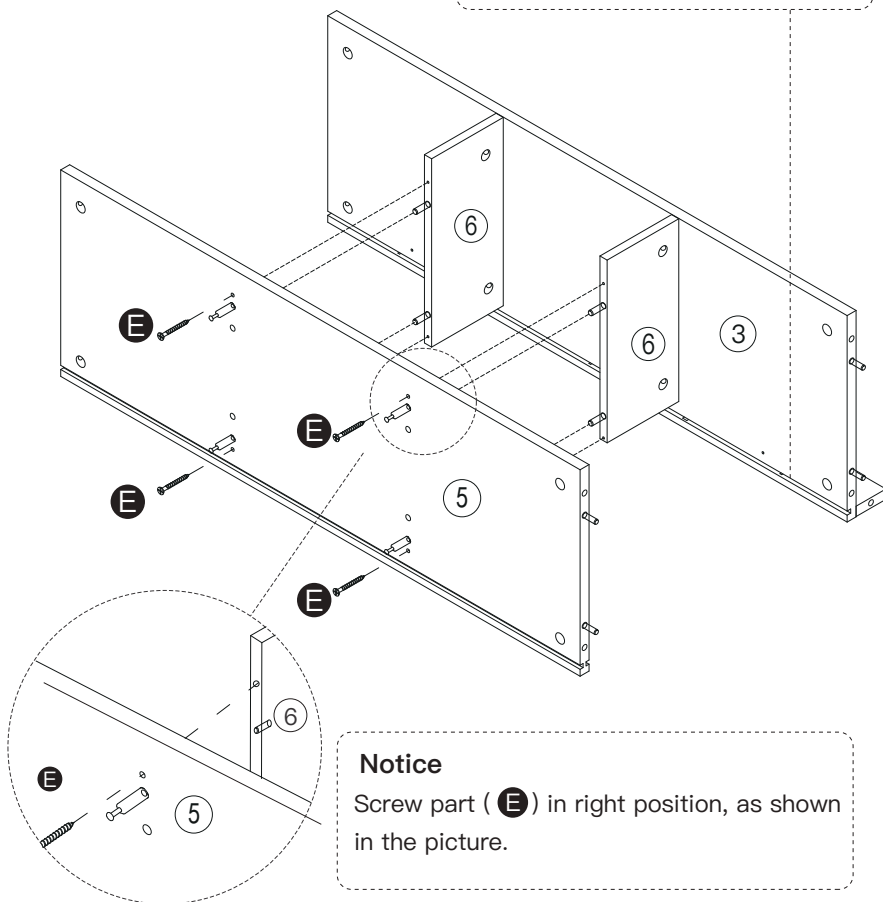

**Notice**

Screw part (E) in right position, as shown in the picture.



**Step 7** Install part (7) on part (5) by part (B).

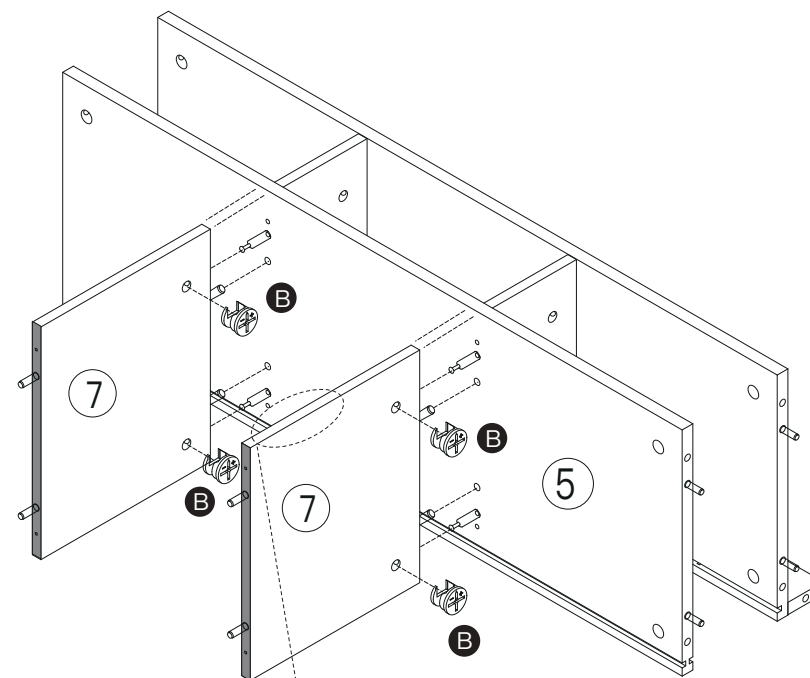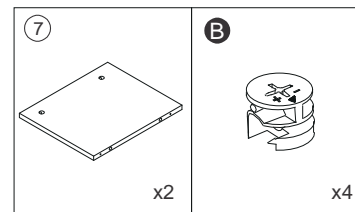

**Notice**

The white profile of part (7) need to face up.



**Step 8** Install remaining part ( ⑤ ) on part ( ⑦ ) by part ( E ).

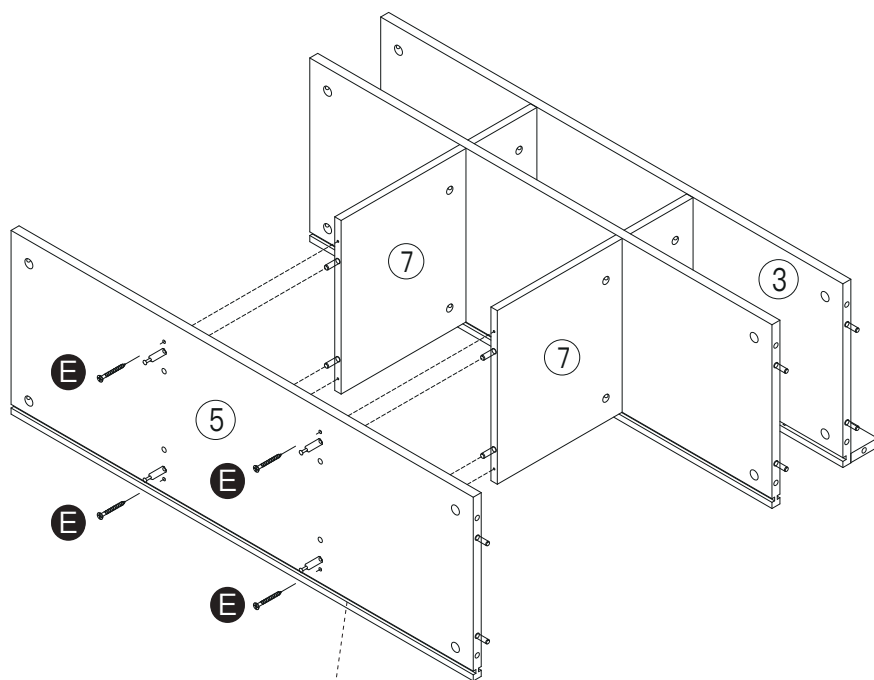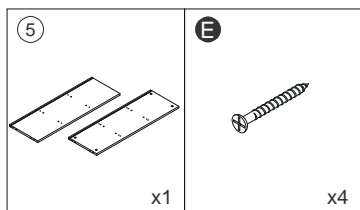

**Notice**

The groove of part ( ⑤ ) need to be parallel with that of part ( ③ ).



**Step 9** Install remaining part ( ⑦ ) on part ( ⑤ ) by part ( B ).

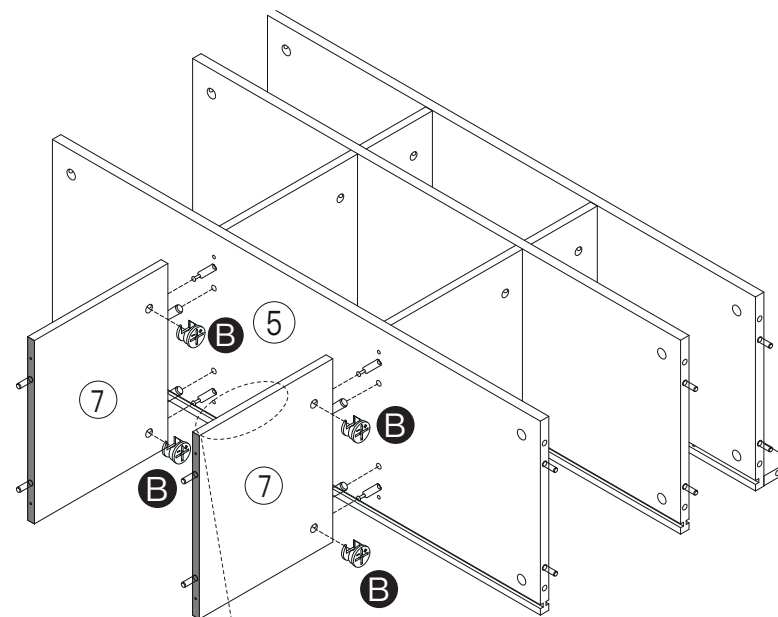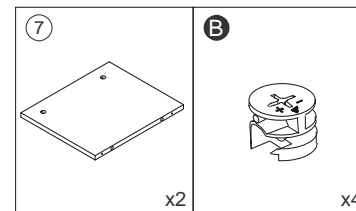

**Notice**

The white profile of part ( ⑦ ) need to face up.



**Step 10** Install part ( ④ ) on part ( ⑦ ) by part ( E ).

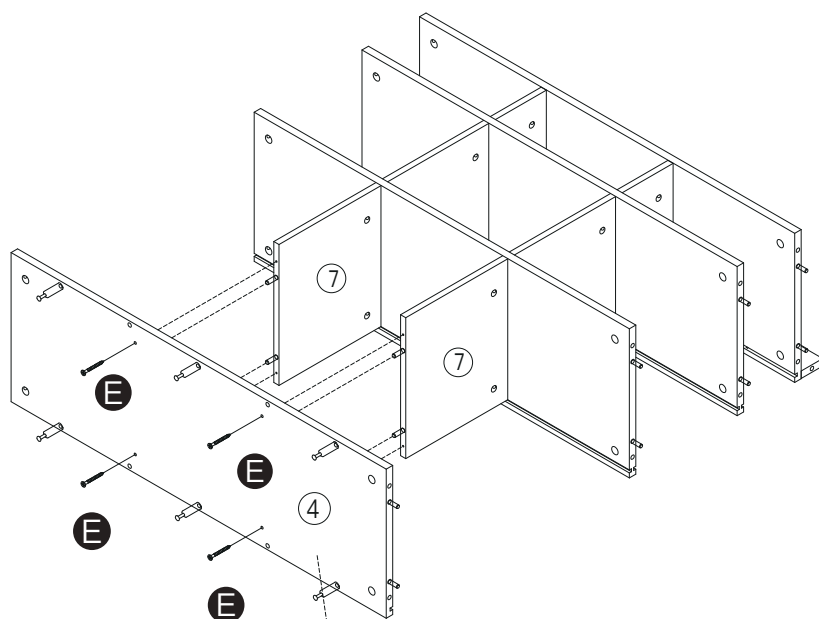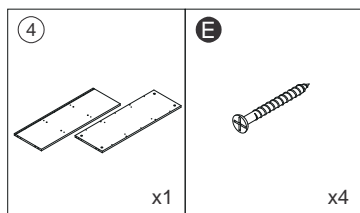

**Notice**



The back of part ( ④ ) need to be put outwards.

**Step 11** Install part ( ⑨ ) on part ( ④ ) by part ( B ).

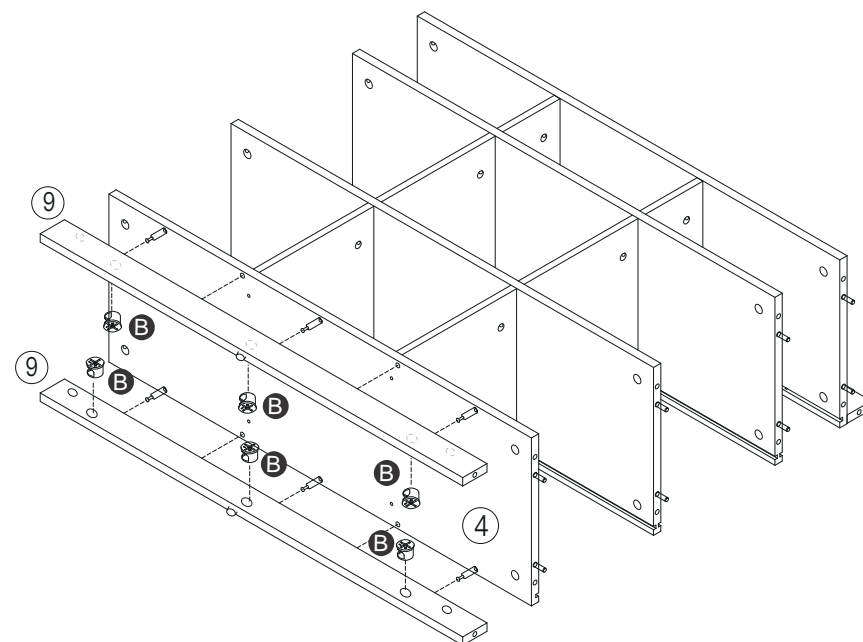
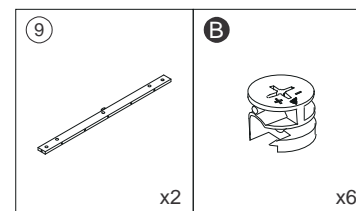






**Step 12** Install part (2) on part (3&5 & 4) by part (B).

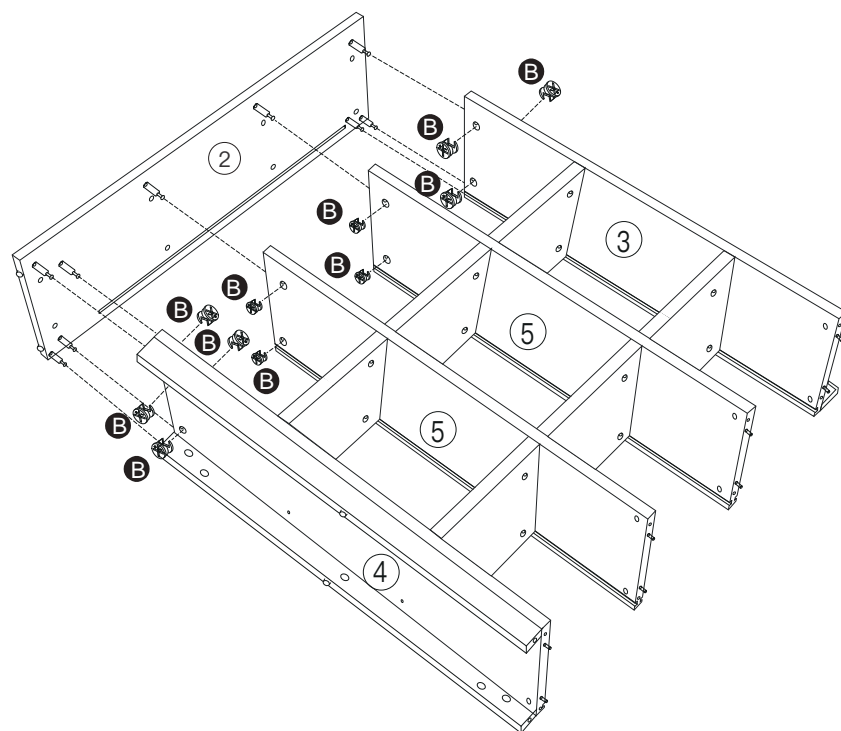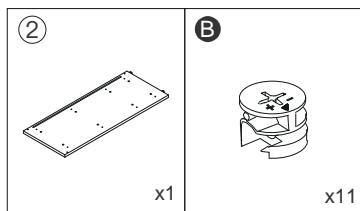

**Step 13** Insert part (10 & 11) into grooves to connect with part (2).

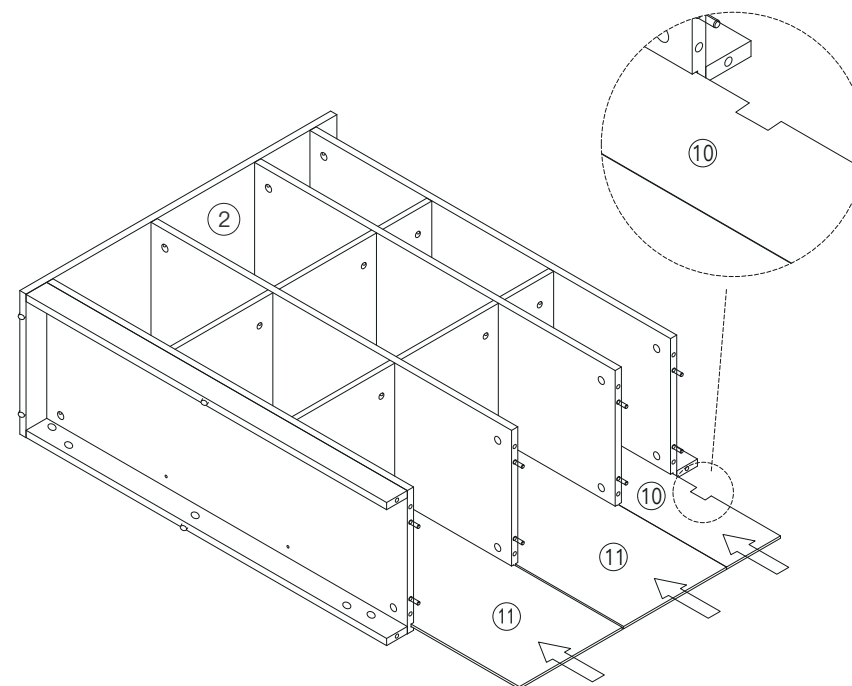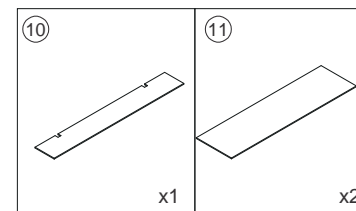



**Step 14** Install part (①) on part (③&⑤&④) by part (Ⓑ).

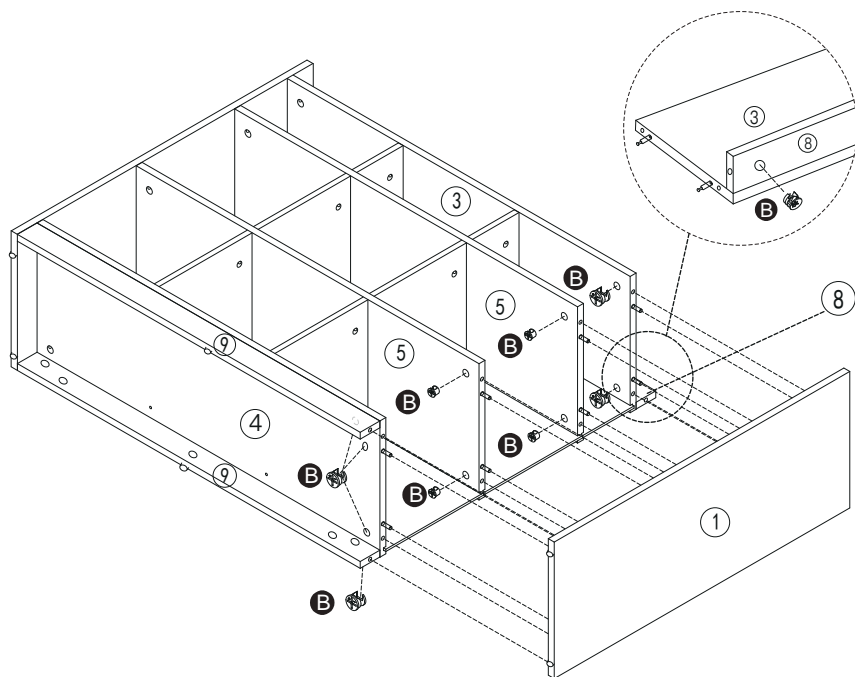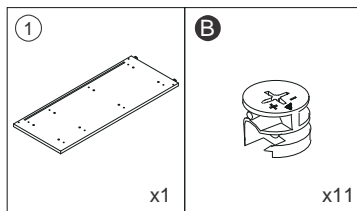

**Notice**


Holes on the back of part (⑧&⑨) also need to be installed.

**Step 15** Insert part (Ⓕ) into part (⑩) and screw part (Ⓖ).

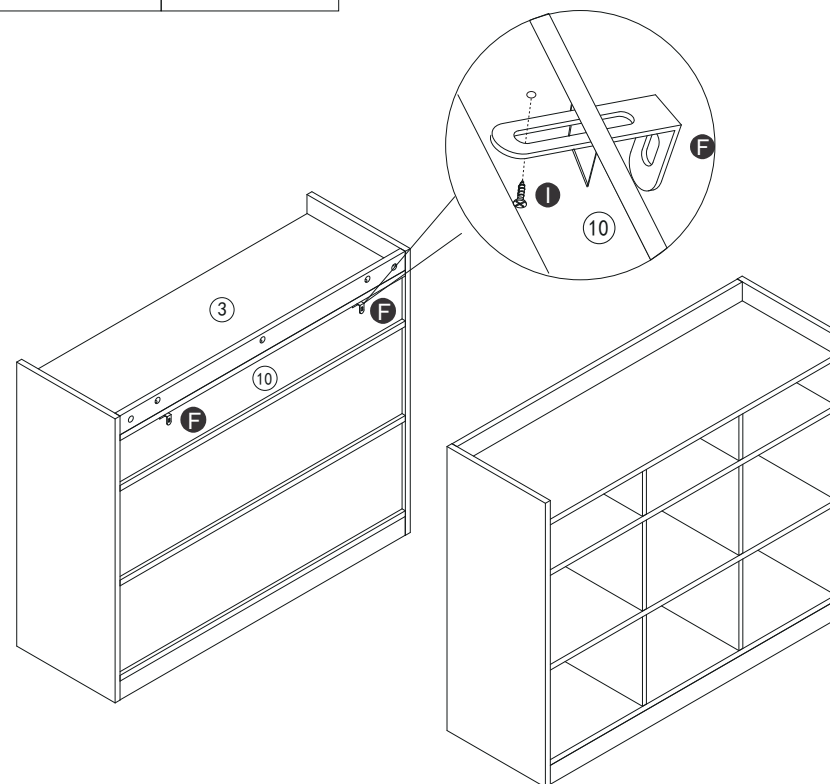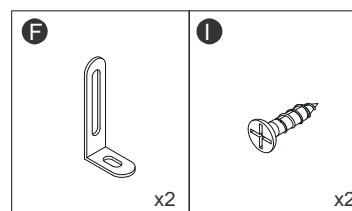

## Step 16

Remark the wall and drill them. Put part (H) in holes and screw part (G) in part (H).

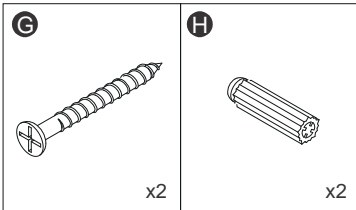


### NOTICE:

Electric drill and hammer do not included in the box.


①

Place the organizer against the wall, locate and mark out two holes.

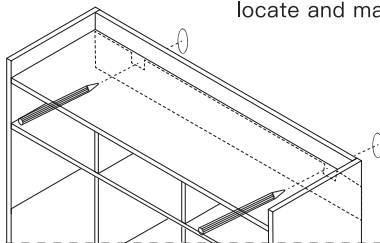

②

WALL

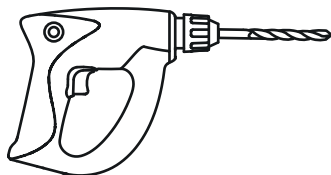


③

WALL





④

WALL

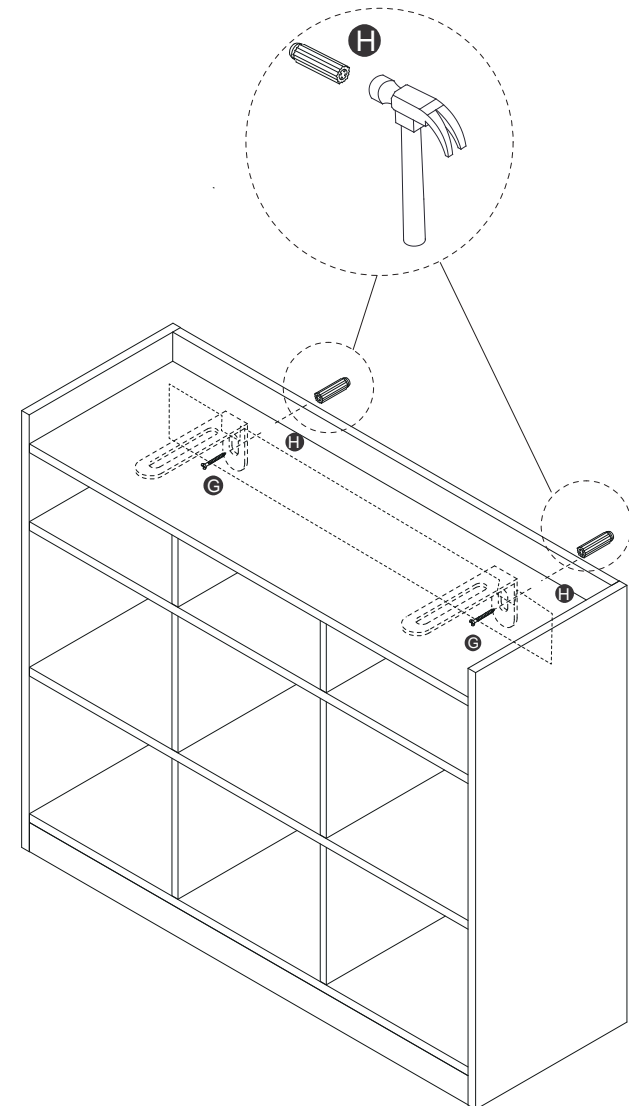

**Step 17** Open part ( 12 ) & ( 14 ) and put part ( 13 ) inside.

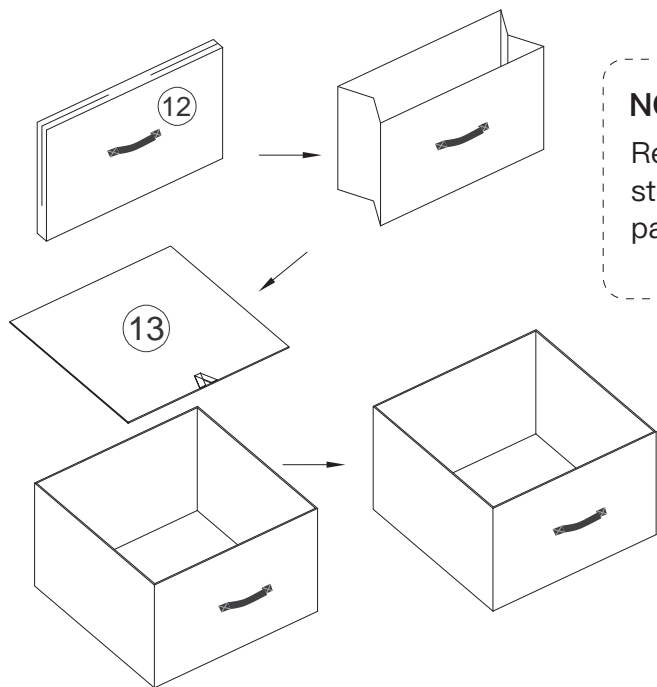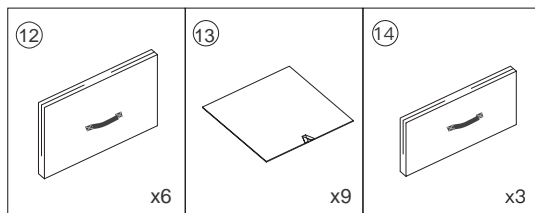

**NOTICE**  
Repeating these steps to install part ( 14 ).

**Step 18** Put all drawers inside the cube storage organizer.

