



Installation guide for placing SCOPS OAG in front of the Falcon Rotator.


- 1. Remove the 6 x M3 set screws from the rotator** (keep them in a safe place as you don't need them anymore)

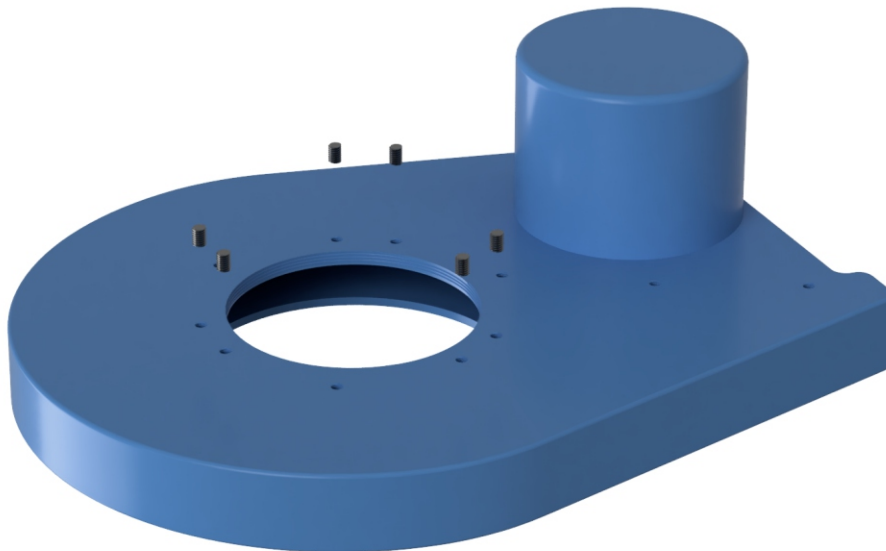


- 2. Disassemble the M54 ring adapter from SCOPS body by removing the 6 x M4 bolts.**

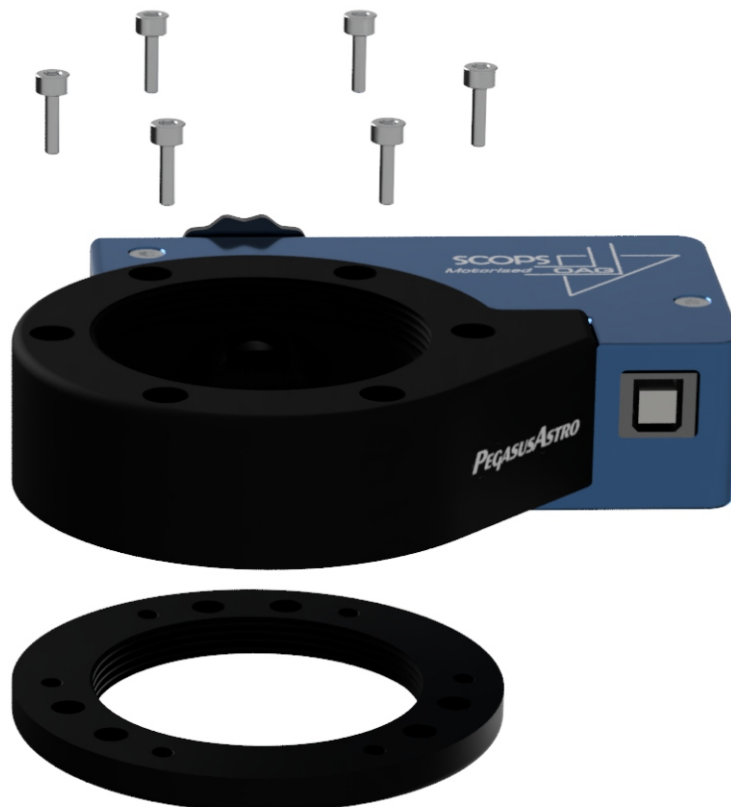

3. Use the 6 x M3 bolts (that were included with the SCOPS OAG) to tight down the M54 ring adapter on the Falcon Rotator body.

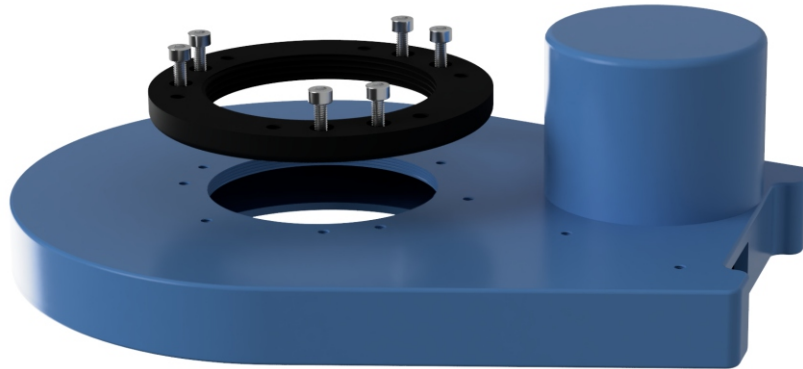

4. Place the SCOPS body with the preferable orientation on the M54 ring adapter and tight back the 6 x M4 bolts.

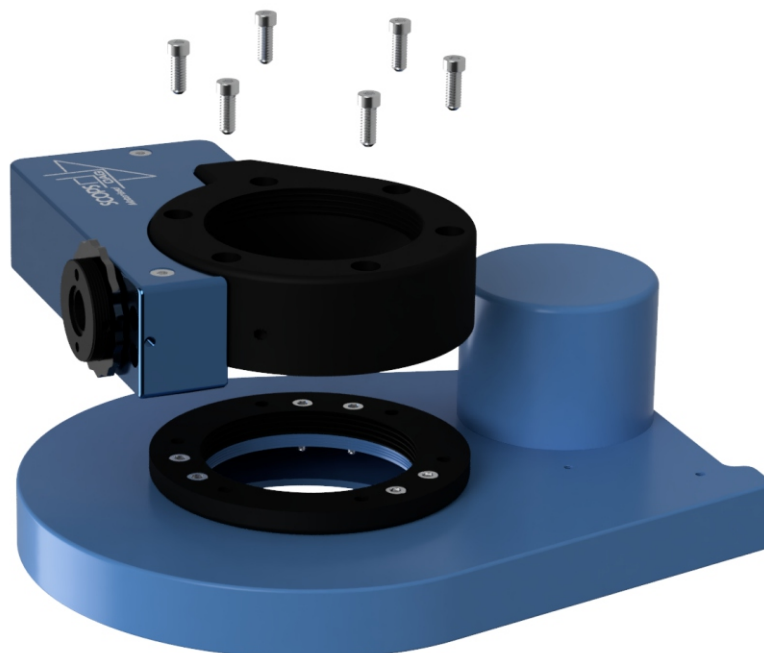

You are ready to go!!!

